

IX20

User Guide

Firmware version 25.2

Revision history—90002381

Revisio n	Date	Description
W	April	Release of Digi IX20 LTS firmware version 25.2.
	2025	We've adopted a Long-Term Support (LTS) release strategy. What does this mean for you?
		 Increased stability and security. Our LTS firmware is aligned with the Linux kernel LTS firmware, which means it is based on a stable and long-term supported version of the Linux kernel. This allows for regular security updates and bug fixes ensuring that the firmware benefits from the reliability and performance improvements provided by the LTS kernel.
		Note To see how we plan to respond to known security vulnerabilities in products that use the DAL OS firmware, see DAL Vulnerability Patch Policy on the digi.com website.
		 Fewer releases. Plan your updates without the pressure of a quarterly timebox. This is the first release of the LTS firmware. Patch releases for security or bug fixes will be released and announced throughout the year. Feature updates will be released and announced as they are ready.
		"Premium features" has been renamed to "Subscriptions". The word Subscriptions more accurately describes the services in which you have enrolled and the ongoing payments associated with them.
		 Assign a static address to a network interface on a device with IPv6 enabled. When using IPv6, you can now assign a static address to a network interface on your device, ensuring consistent identification and connectivity of devices on the network.
		Improved disconnect/reconnect to Digi Remote Manager for a device when upgrading cellular modem firmware over the air (OTA). Device downtime is minimized so service is minimally interrupted.
		■ New banner notification in the Web UI and CLI. A new banner notice has been added to the web UI and CLI to indicate when the configuration of a device is being managed by a template in Digi Remote Manager. This is useful so that configuration changes to that device are not made locally. If there are issues with the device, then it is important to know that the configuration is enforced

remotely and any changes you may make to the device for testing purposes or fixes may be overwritten by the template.

- Regional cellular modem firmware bundles are now available.

 Certain modems Sierra EM9191 (Asia PAC) and EM7690 (worldwide) have a lot of carrier-specific firmware images. Due to size constraints of the file system on the IX20, not all of these images could be included. Now you can choose the firmware bundle for your specific cellular modem.
- IPsec is now supported in FIPS mode. It's now easier for you to meet the federal security standards required by FIPS and keep sensitive data safe during transmission.
- FIPS mode is automatically enabled when PR mode is enabled.

 When in PR mode, It's now easier for you to meet the federal security standards required by FIPS and keep sensitive data safe during transmission.

Tip For more information about this release, see the digi.com blog post, New Features in Digi Remote Manager and Our First LTS Firmware Release for DAL OS.

V February 2025


Release of Digi IX20 firmware version 24.12.

- New user guide There's a new Modem firmware user guide! With added functionality in DAL OS 24.12.x firmware and Remote Manager, there's now even more ways to upgrade the modems in or attached to your Digi routers. Make sure to review the Before you begin topic too because the options available to you depend on the DAL OS firmware version you are running.
- Additional query state categories added Are you running DAL OS firmware 24.9 or newer on your devices? See the new categories added to the device-specific query state view in Remote Manager. Monitor device status in real time for Watchdog, Location, DHCP leases, SureLink, WAN bonding, and many more groups!

Note The new query state metrics in the updated view do not replace datastream metrics. However, datastream metrics will be phased out later this year as we enhance query state metrics with additional categories.

How you see this new information depends on whether you using the legacy or new device details view.

 Click the **Details** tab and then select a group (for example, Ethernet) to see its status. The **New Device Details** toggle key must be on to see this view.

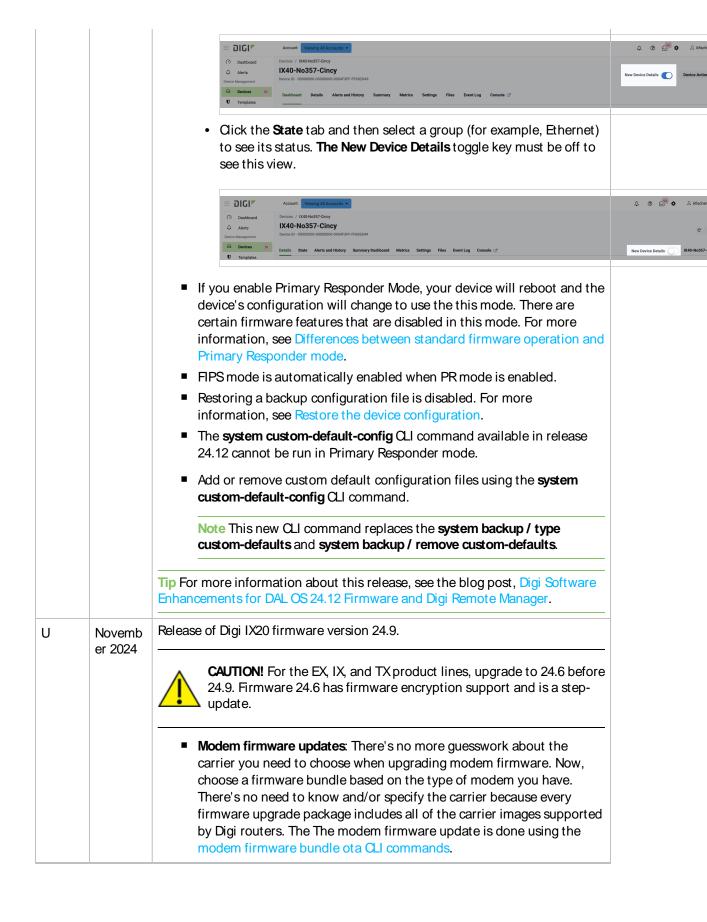

- New EDP client written in Rust: The new client connector for how devices establish their connections to Digi Remote Manager, provides a faster connection, reduces data consumption, and includes Watchdog support.
- Configuration validation and automated rollback to maintain remote access to your devices:

Maintain remote access to your devices that have DAL OS 24.9 firmware or newer. Any configuration changes made by a template that result in devices losing connection to Remote Manager are automatically rolled back. To see whether configuration changes were rolled back, you can view the history of a device. For more information, see the Templates user guide.

Cellular connectivity enhancements:

- Modem manager has been updated to version 1.22.0.
- · Modems are tracked by name instead of index.
- Default modem signal/status update interval changed from 30s to 10s.
- Default PDP context changed from 2 to 1.
- PDP context ID stored & read from mm.json to ensure stability when updating from 24.6 to 24.9.

Miscellaneous enhancements:

- No authentication SMTP option: Send emails without encryption.
- Download peer settings: If you are using a Digi device as a
 WireGuard server and you have a lot of client devices connected to
 it, you now have the option to download the template with all the
 settings and use it to configure other devices.
- Confirmation is now required to perform a system factory erase in the CLI.
- DefaultIP renamed to SetupIP in reporting metrics and CLI configuration.
- Network type, band, and signal strength are now included in speed test information reported from the device to Digi Remote Manager.
- Primary Responder mode:
 - SSH is disabled by default.
 - Users are now prompted to enable two-factor authentication when changing their password.
- Modbus hardening: Take a look at the new Modbus hardening topic and use case about enhancing the security and reliability of Modbus communications between devices over your network.
- Digi 360: See the new Digi 360 Home page and FAQs.

What's coming

When accessing the device locally through the Web UI or CLI, you will be able to see more metrics in **Settings** > **Status**, such as connection status and network details. Though not much else changes in this release, the work behind the scenes is foundational. Coming soon, data streams in Digi Remote Manager will be replaced with a comprehensive view about the status of your devices. What you see in the local Web UI or CLI is what you will see in Digi Remote Manager.

Tip For more information about this release, see the blog post called, "Announcing the Latest Digi Software Solutions for DAL OS 24.9 Firmware" on digi.com.

T July 2024

Release of DigiIX20 firmware version 24.6.

Note Firmware encryption support has been added. This release is a step update for the future 24.9+ release.

- System time synchronization:
 - You can now configure how often you want your IX20 to synchronize its system time. Configure the duration of the synchronization (default is set to 1 day), as well as continue to have it synchronize at start-up and when there is a change in the default route. See System time synchronization for more information.
- WAN bonding enhancements:
 - Enable the **Encryption** setting to encrypt the traffic between the client and the WAN bonding server.
 - Enable **SureLink** to validate the WAN Bonding interface connection.
 - See WAN bonding details and statistics for a device on the Metrics tab in Digi Remote Manager. See Show WAN bonding details and statistics for more information.
 - Configure multiple WAN bonding servers.
 See Configure WAN bonding on your local device or Use Digi Remote Manager to enable and configure WAN bonding on multiple devices for more information.
- New Device managed public key setting for WireGuard VPN: For server mode, enable the IX20 to generate a public and private key pair for a peer. See Configure the WireGuard VPN.
- New metrics views for the Watchdog service:
 View metrics in the local web Ul or use the new CLI command. See test failures in Digi Remote Manager. See Watchdog service.
- Isolate clients setting:

Now enabled by default in the **Network > SD-WAN > Wi-Fi > Access Points** configuration. This prevents all clients attached via Wi-Fi from communicating with other clients on the same access point.

Enable event log uploads setting:
 This setting (Monitoring > Device event logs) is now enabled by default.
 Uploading event logs to Digi Remote Manager now occurs

		 New default trusted zones: There were no default trusted zones set up by default. The service could be accessed from any zone. Now, it can be accessed via three trusted zones: Default, Edge, and IPsec. See Configure the Modbus gateway.
S	January	Release of Digi IX20 firmware version 23.12:
	2024	 Updated Active SIM slot definition: Configure cellular modem.
		■ FIPS feature is available for all DAL devices. Enable FIPS mode
		 Link OSPF routes through a DMVPN tunnel and allow for redirection of packets between spokes. Configure a DMVPN spoke.
		 Support for Rapid Spanning Tree Protocol (RSTP). Configure a bridge.
		 New setting which allows device to initiate a Realport connection to a remote server. Configure the RealPort service.
		 New After option for the SIM preference schedule. Configure cellular modem.
		 New WAN Bonding proxy and Client devices options. Use Digi Remote Manager to enable and configure WAN bonding on multiple devices or Configure WAN bonding on your local device.
		■ New BOOTP dynamic allocation option. Configure a DHCP server.
		 Renamed SureLink Attempts configuration setting to Surelink test failures to better indicate what this setting does.
		New Telnet Login setting to control whether a user must supply credentials when opening a Telnet connection to access a serial port on a service. Configure serial authentication.
		 New Advanced watchdog Modem check and recovery setting to control whether watchdog will monitor initialization of the IX20 cellular modem. Watchdog service.
		Tip For more information about this release, see Announcing the Latest Digi Software Solutions for DAL OS 23.12 Firmware and Digi Remote Manager on digi.com.
R	October	Release of DigilX20 firmware version 23.9:
	2023	Register a device to DRM:
		 Added a link to the Dashboard of the local web UI to register and add the device to Digi Remote Manager.
		Updated Dashboard:
		 Updated the layout of the Dashboard page of the web UI to combine the network interface and cellular modem details into a single Network Activity panel.
		■ Hotspot improvement:

		 Improved support for integration with HotspotSystems, including: PSD2 SessGarden Login/Logout URL Configurable remote webserver FQDN
		 Primary Responder: Added Primary Responder mode setting to lock down the device to comply with AT&T FirstNet and Verizon Response.
		 Domain allow list: Added a Domain allow list feature to control what domains are accessible through the Digi device. Fallback: Added a fallback server setting to control which DNS server is used
		as the fallback in the event that no configured or DHCP-obtained DNS servers are available. MACsec tunnel: Added information about adding a MACsec tunnel.
P	July 2023	Release of DigilX20 firmware version 23.6: Serial port options: For PPP Dial-in mode, added the Default Route option to control whether a default route gets added for the PPP interface. Documented the new Modem emulator mode, which allows serial ports to act as a dial-up modem emulator for handling incoming AT dial-ins. Advanced Watchdog options: Added System > Advanced Watchdog options to all devices. Digi Remote Manager support: Each time a device connects to Digi Remote Manager after the device boots (or re-boots), the device now immediately uploads all health metrics. VPN: Added new Enable open routing configuration setting (VPN > IP tunnels) to enable packets destined for an address which is not explicitly in the routing table to exit the IP tunnel. Networking: Added new TCP retries2 configuration setting (Network > Advanced) to control the number of times an unacknowledged TCP data packet will be retransmitted before the connection is considered lost.
N	May 2023	Release of Digi IX20 firmware version 23.3: ■ Surelink:

Redesigned Surelink configuration settings. Added show surelink state Admin CLI command to display the overall pass/fail status of enabled Surelink tests. WAN bonding Added options for WAN bonding configuration to set modes for the bonded tunnel and for each bonded interface. Added new show wan-bonding Admin CLI command. New configuration settings for LXC containers: • Start on boot to configure the container to start when the system boots. Restart timeout to configure the container to restart if it stops. Optional parameters to include optional parameters for the container. • Mounted directories to setup shared directories between the host filesystem and the container. Added a AT&T LWM2M support setting to enable or disable AT&T lightweight M2M on cellular modems. VPN: DMVPN phase 1 spoke support with NHRP or mGRE, including compatibility with Cisco DMVPN hubs. Added support for SHA2 ciphers for IKEv2 IPsec tunnels. Disabled mDNS by default for improved cellular performance. If the device has a configured **System > Name**, it is now displayed on the Dashboard. Release of Digi IX20 firmware version 22.11: M Decemb er 2022 Updated the Linux kernel to version 5.19. The intelliFlow feature now integrates with Digi Remote Manager to provide aggregated insights and analytics for all Digi devices in your environment. Added an MQTT broker service, including support for: Multiple MQTT clients with unique topics and authentication credentials. Pre-shared key encryption with multiple configurable keys. Pattern filtering for topic access control. Added FIPS mode, to provide Federal Information Processing Standards (FIPS) 140-2 compliance. Added support for Next-hop routing protocol (NHRP). Added support for mGRE tunnels. Added support for ICMP redirect messages. Added a polling interval to control how often the cellular modem is polled for signal strength and other status.

- New commands: tail and grep.
- Add Timeout option to modem Carrier Scan window in the Web UI.
- Added advanced watchdog to:
 - Monitor critical services and reboot the device if those services fail.
 - Monitor memory usage and log errors or reboot the device based on current memory usage.
- Added the ability to have serial port data written to the system log.
 - Removed options in the local web UI and Admin CLI for manually starting, stopping, and clearing serial logs. These actions are now controlled under the data logging configuration settings.

Trademarks and copyright

Digi, Digi International, and the Digi logo are trademarks or registered trademarks in the United States and other countries worldwide. All other trademarks mentioned in this document are the property of their respective owners.

© 2025 Digi International Inc. All rights reserved.

Disclaimers

Information in this document is subject to change without notice and does not represent a commitment on the part of Digi International. Digi provides this document "as is," without warranty of any kind, expressed or implied, including, but not limited to, the implied warranties of fitness or merchantability for a particular purpose. Digi may make improvements and/or changes in this manual or in the product(s) and/or the program(s) described in this manual at any time.

Warranty

To view product warranty information, go to the following website:

www.digi.com/howtobuy/terms

Customer support

Gather support information: Before contacting Digi technical support for help, gather the following information:

Product name and model

Product serial number (s)

Firmware version

Operating system/browser (if applicable)

Logs (from time of reported issue)

Trace (if possible)

Description of issue

Steps to reproduce

Contact Digi technical support: Digi offers multiple technical support plans and service packages. Contact us at +1 952.912.3444 or visit us at www.digi.com/support.

Feedback

To provide feedback on this document, email your comments to

techcomm@digi.com

Include the document title and part number (IX20 User Guide, 90002381 N) in the subject line of your email.

Contents

What's coming5	
IX20 User Guide	
DAL OS Vulnerability Patch Policy	
Frequently asked questions	
Digi IX20 Quick Start	
Step 1: Connect your device	3
Step 2: Connect DC power	5
Step 3: Set up access to Digi Remote Manager	
Step 4: Register your device	
Step 5: Complete setup	
Step 6: Configure cellular APN	õ
Digi IX20 hardware reference	
Digi IX20 features and specifications	7
IX20 accessories	
IX20 front view	7
IX20 LEDs	8
Power	8
INT	
Wi-Fi Service (IX20W model only)	
SIM1	
SIM2	
LTE	
Signal quality indicators	
Ethernet Link and Activity4	
Cellular signal quality explained	
IX20 power supply requirements	
IX20 serial port connector 4	
Pinout schematic and pin functions	
Configuration for extreme thermal conditions 4	

Digi IX20 hardware setup

Install SIM cards in the Plug-in LTE modem	49
Apply Dielectric Grease over SIM Contacts	
Tips for improving cellular signal strength	
Connect data cables	
Mount the IX20 device	
Attach to a mounting surface by using the mounting tabs	
Attach to DIN rail with clip	
Attach to DIN rail with bracket	52
Attachto Birtran Will Graciot	
Firmware configuration	
Review IX20 default settings	55
Local WebUI	
Digi Remote Manager	
Default interface configuration	
Other default configuration settings	
Primary Responder mode	
Differences between standard firmware operation and Primary Responder mode	
Enable Primary Responder mode	
Change the default password for the admin user	
Change the default SSID and pre-shared key for the preconfigured Wi-Fi access point	
Configuration methods	
Using Digi Remote Manager	
Access Digi Remote Manager	
Using the local web interface	
Review the dashboard	
Log out of the web interface	
Review the dashboard	
Use the local REST API to configure the IX20 device	
Use the GET method to return device configuration information	
Use the POST method to modify device configuration parameters and list arrays	
Use the DELETE method to remove items from a list array	
Using the command line	
Access the command line interface	
Log in to the command line interface	
Exit the command line interface	
Central management	
B. B. A. M.	_
Digi Remote Manager support	
Certificate-based enhanced security	
Configure your device for Digi Remote Manager support	
Collect device health data and set the sample interval	
Event log upload to Digi Remote Manager	84
Reach Digi Remote Manager on a private network	
Pinhole method	
Proxy server method	
VPN Tunnel method	86
Log in to Digi Remote Manager	86
Use Digi Remote Manager to view and manage your device	8
Add a device to Remote Manager	88
Add a device to Remote Manager using information from the label	88

Add a device to Remote Manager using your Remote Manager rogin credentials	
Configure multiple IX20 devices by using Digi Remote Manager configurations	
View Digi Remote Manager connection status	91
Learn more	92
Interfaces	
III. ET aces	
Wide Area Networks (WANs)	94
Wide Area Networks (WANs) and Wireless Wide Area Networks (WWANs)	
Configure WAN/WWAN priority and default route metrics	
WAN/WWAN failover	
Configure SureLink active recovery to detect WAN/WWAN failures	
Configure the device to reboot when a failure is detected	
Disable SureLink	
Example: Use a ping test for WAN failover from Ethernet to cellular	
Using Ethernet devices in a WAN	
Using cellular modems in a Wireless WAN (WWAN)	
Configure a Wide Area Network (WAN)	
Configure a Wireless Wide Area Network (WWAN)	.174
Show WAN and WWAN status and statistics	185
Delete a WAN or VWVAN	187
Default outbound WAN/WWAN ports	188
Local Area Networks (LANs)	
About Local Area Networks (LANs)	
Configure a Local Area Network (LAN)	
Configure the WAN/ETH1 port as a LAN or in a bridge	
Change the default LAN subnet	
Show LAN status and statistics	
Delete a LAN	
DHCP servers	
Default services listening on LAN ports	
Configure an interface to operate in passthrough mode	
Virtual LANs (VLANs)	
Create a trunked VLAN route	.235
Create a VLAN using switchport mode	237
Bridging	.240
Edit the preconfigured ETH2 bridge	.241
Configure a bridge	
Show SureLink status and statistics	
Show SureLink State	
Show SureLink status for all interfaces	
Show SureLink status for a specific interface	
Show SureLink status for all IPsec tunnels	
Show SureLink status for a specific IPsec tunnel	
Show SureLink status for all OpenVPN clients	
Show SureLink status for a specific OpenVPN client	
Configure a TCP connection timeout	.251
Serial port	
Default serial port configuration	253
Serial mode options	
View serial port information	
Default serial port configuration	.203

Configure Login mode for a serial port Configure Remote Access mode for a serial port Configure Application mode for a serial port Configure PPP dial-in mode for a serial port Configure UDP serial mode for a serial port Configure Modem emulator mode for a serial port Configure Modbus mode for a serial port Configure Real Port mode using the Digi Navigator	257 274 275 282 293 296 299
Installation and configuration process Digi Navigator features Install the Digi Navigator Configure RealPort on a Digi device from the Digi Navigator Install and configure RealPort on your computer Digi Navigator application features Advanced RealPort configuration without using the Digi Navigator	300 300 302 303 305
Windows Operating System Linux Operating System Download the RealPort driver Configure RealPort on your computer Configure the serial port for RealPort mode Configure the RealPort service	316 316 316 317 318
Disconnect a user from a serial port Show serial port status and statistics Serial Status page Review the serial port message log WI-FI	324 326 326
Wi-Fi configuration Default access point SSID and password Default Wi-Fi configuration Configure the Wi-Fi radio's channel Configure the Wi-Fi radio to support DFS channels in client mode Required configuration items Configure the Wi-Fi radio's band and protocol	331 331 333 335 335
Configure the W-Fi radio's transmit power Configure an open W-Fi access point Configure a W-Fi access point with personal security Configure a W-Fi access point with enterprise security Isolate W-Fi clients	338 340 346 353 360
Isolate clients connected to the same access point Isolate clients connected to different access points Configure a Wi-Fi client and add client networks Show Wi-Fi access point status and statistics Show Wi-Fi client status and statistics	361 367 376
Hotspot	379

Routing

IP routing	430
Configure a static route	431
Delete a static route	434
Policy-based routing	436
Configure a routing policy	
Example: Dual WAN policy-based routing	444
Example: Domain-based routing with dual WAN	
Example: Route traffic to a specific WAN interface based on the client MAC address	
Routing services	
Configure routing services	
Show the routing table	
Dynamic DNS	
Configure dynamic DNS	
Virtual Router Redundancy Protocol (VRRP)	
VRRP+	
Configure VRRP	
Configure VRRP+	
Example: VRRP/VRRP+ configuration	
Configure device one (master device)	
Configure device two (backup device)	
Show VRRP status and statistics	486
Virtual Private Networks (VPN)	400
IPsec data protection	
IPsec mode	
Internet Key Exchange (IKE) settings	
Authentication	
Configure an IPsec tunnel	
Configure IPsec failover	
Configure SureLink active recovery for IPsec	
Show IPsec status and statistics	
Debug an IPsec configuration	
Configure a Simple Certificate Enrollment Protocol client	
Example: SCEP client configuration with Fortinet SCEP server	
Show SCEP client status and information	
OpenVPN	
Configure an OpenVPN server	
Configure an OpenVPN Authentication Group and User	562
Configure an OpenVPN client by using an .ovpn file	
Configure an OpenVPN client without using an .ovpn file	
Configure SureLink active recovery for OpenVPN	
Show OpenVPN server status and statistics	
Show OpenVPN client status and statistics	
Generic Routing Encapsulation (GRE)	
Configuring a GRE tunnel	
Show GRE tunnels	597
Example: GRE tunnel over an IPSec tunnel	598
Dynamic Multipoint VPN (DMVPN)	612
Configure a DMVPN spoke	613
LATE	040

Configure a PPP-over-L2TP tunnel	
L2TP with IPsec	
Show L2TP tunnel status	
L2TPv3 Ethernet	
Configure an L2TPv3 tunnel	
Show L2TPV3 tunnel status	
MACsec	
Configure a MACsec tunnel	
NEMO	
Configure a NEMO tunnel	
Show NEMO status	
Configure the WireGuard VPN	
Configure the vire order verv	047
Services	
Allow remote access for web administration and SSH	656
Configure the web administration service	659
Configure SSH access	
Use SSH with key authentication	
Generating SSH key pairs	
Configure telnet access	
Configure DNS	
Show DNS server	
WAN bonding	
Use Digi Remote Manager to enable and configure WAN bonding on multiple devices	
Configure WAN bonding on your local device	
Show WAN bonding details and statistics	
Simple Network Management Protocol (SNMP)	
SNMP Security Configure Simple Network Management Protocol (SNMP)	
Download MIBs	
Location information	
Enable modem GNSS support	
Configure the device to use a user-defined static location	
Configure the device to accept location messages from external sources	
Forward location information to a remote host	
Configure geofencing	
Show location information	
Modbus gateway	743
Configure the Modbus gateway	
Modbus hardening	757
Show Modbus gateway status and statistics	758
System time synchronization	
Configure the system time synchronization	
Manually set the system date and time	
Network Time Protocol	
Configure the device as an NTP server	
Show status and statistics of the NTP server	
Configure a multicast route	
Ethernet network bonding	
Enable service discovery (mDNS)	
Use the MQTT broker service	
Use the iPerf service	
OSE THE HE ELL SELVICE	190

Example performance test using IPerf3	
Configure the ping responder service	
Example performance test using iPerf3	.803
Applications	
Applications	
Decides Difference Profession	005
Develop Python applications	
Install Python	
Set up the IX20 for Python development	
Create and test a Python application	
Python modules	
The use(led) function	
Releasing the LEDs to system control	
Use Python to control the color of multi-colored LEDs	
Example: Set the LTE connection indicator to flashing purple	
Set up the IX20 to automatically run your applications	.845
Configure scripts to run automatically	.846
Show script information	853
Stop a script that is currently running	854
Start an interactive Python session	
Run a Python application at the shell prompt	
Configure scripts to run manually	
Task one: Upload the application	
Task two: Configure the application to run automatically	
Start a manual script	
Python versions and corresponding DAL OS firmware versions	864
User authentication IX20 user authentication	966
User authentication methods	
Add a new authentication method	
Delete an authentication method	
Rearrange the position of authentication methods	
Authentication groups	
Change the access rights for a predefined group	
Add an authentication group	
Delete an authentication group	
Delete an authentication group	.883
Delete an authentication group Local users Change a local user's password	.883 884
Delete an authentication group Local users Change a local user's password Configure a local user	883 884 886
Delete an authentication group Local users Change a local user's password Configure a local user Delete a local user	883 884 886 893
Delete an authentication group Local users Change a local user's password Configure a local user Delete a local user Terminal Access Controller Access-Control System Plus (TACACS+)	883 884 886 893 896
Delete an authentication group Local users Change a local user's password Configure a local user Delete a local user Terminal Access Controller Access-Control System Plus (TACACS+) TACACS+ user configuration	883 884 886 893 896 897
Delete an authentication group Local users Change a local user's password Configure a local user Delete a local user Terminal Access Controller Access-Control System Plus (TACACS+) TACACS+ user configuration TACACS+ server failover and fallback to local authentication	883 884 886 893 896 897 898
Delete an authentication group Local users Change a local user's password Configure a local user Delete a local user Terminal Access Controller Access-Control System Plus (TACACS+) TACACS+ user configuration TACACS+ server failover and fallback to local authentication Configure your IX20 device to use a TACACS+ server	883 884 886 893 896 897 898
Delete an authentication group Local users Change a local user's password Configure a local user Delete a local user Terminal Access Controller Access-Control System Plus (TACACS+) TACACS+ user configuration TACACS+ server failover and fallback to local authentication	883 884 886 893 896 897 898
Delete an authentication group Local users Change a local user's password Configure a local user Delete a local user Terminal Access Controller Access-Control System Plus (TACACS+) TACACS+ user configuration TACACS+ server failover and fallback to local authentication Configure your IX20 device to use a TACACS+ server Remote Authentication Dial-In User Service (RADIUS) RADIUS user configuration	883 884 886 893 896 897 898 904 905
Delete an authentication group Local users Change a local user's password Configure a local user Delete a local user Terminal Access Controller Access-Control System Plus (TACACS+) TACACS+ user configuration TACACS+ server failover and fallback to local authentication Configure your IX20 device to use a TACACS+ server Remote Authentication Dial-In User Service (RADIUS)	883 884 886 893 896 897 898 904 905
Delete an authentication group Local users Change a local user's password Configure a local user Delete a local user Terminal Access Controller Access-Control System Plus (TACACS+) TACACS+ user configuration TACACS+ server failover and fallback to local authentication Configure your IX20 device to use a TACACS+ server Remote Authentication Dial-In User Service (RADIUS) RADIUS user configuration RADIUS server failover and fallback to local configuration	883 884 886 893 896 898 904 905 905
Delete an authentication group Local users Change a local user's password Configure a local user Delete a local user Terminal Access Controller Access-Control System Plus (TACACS+) TACACS+ user configuration TACACS+ server failover and fallback to local authentication Configure your IX20 device to use a TACACS+ server Remote Authentication Dial-In User Service (RADIUS) RADIUS user configuration RADIUS server failover and fallback to local configuration Configure your IX20 device to use a RADIUS server	883 884 886 893 896 897 898 904 905 905
Delete an authentication group Local users Change a local user's password Configure a local user Delete a local user Terminal Access Controller Access-Control System Plus (TACACS+) TACACS+ user configuration TACACS+ server failover and fallback to local authentication Configure your IX20 device to use a TACACS+ server Remote Authentication Dial-In User Service (RADIUS) RADIUS user configuration RADIUS server failover and fallback to local configuration Configure your IX20 device to use a RADIUS server	883 884 886 893 896 897 898 904 905 906 909
Delete an authentication group Local users Change a local user's password Configure a local user Delete a local user Terminal Access Controller Access-Control System Plus (TACACS+) TACACS+ user configuration TACACS+ server failover and fallback to local authentication Configure your IX20 device to use a TACACS+ server Remote Authentication Dial-In User Service (RADIUS) RADIUS user configuration RADIUS server failover and fallback to local configuration Configure your IX20 device to use a RADIUS server LDAP	883 884 886 893 896 897 898 904 905 906 909 911

Configure serial authentication91	
Disable shell access	
Set the idle timeout for IX20 users 92	21
Example user configuration 92	
Example 1: Administrator user with local authentication	23
Example 2: RADIUS, TACACS+, and local authentication for one user92	25
Firewall	
THOWAIT	
Firewall configuration93	33
Create a custom firewall zone	
Configure the firewall zone for a network interface 93	
Delete a custom firewall zone	
Port forwarding rules	
Configure port forwarding 93	
Delete a port forwarding rule	
Packet filtering 94	
Configure packet filtering94	
Enable or disable a packet filtering rule94	
Delete a packet filtering rule	
Configure custom firewall rules	
Configure captive portals 95	
Delete captive portals95	
Configure Quality of Service options 96	
Web filtering97	
Configure web filtering with Cisco Umbrella	71
Configure web filtering with manual DNS servers97	73
Verify your web filtering configuration97	76
Show web filter service information97	78
Containers	
Use Digi Remote Manager to deploy and run containers	81
Use an automation to start the container98	
Upload a new LXC container 98	
Configure a container 98	
Starting and stopping the container	
Starting the container 99	
Stopping the container	
View the status of containers	
Show status of all containers 99	
Show status of a specific container 99	
Schedule a script to run in the container	
Create a custom container 99	
Create the custom container file	
Test the custom container file99	91
System administration	
Review device status	
Configure system information100	
Update system firmware	
Manage firmware updates using Digi Remote Manager)3

Python and DAL OS firmware updates	
Certificate management for firmware images	
Downgrading	
Dual boot behavior	
Upgrade cellular modem firmware	1009
Update modem firmware over the air (OTA)	1010
Update modem firmware by using a local firmware file	1011
Reboot your IX20 device	
Reboot your device immediately	1013
Schedule reboots of your device	
Erase device configuration and reset to factory defaults	
Custom factory default settings	
Locate the device by using the Find Me feature	1021
Configure a power profile	
Enable FIPS mode	
Configuration files	
Save configuration changes	
Save configuration to a file	
Restore the device configuration	
Schedule system maintenance tasks	
Disable device encryption	
Re-enable cryptography after it has been disabled.	
Configure the speed of your Ethernet ports	
Watchdog service	
Configure the Watchdog service	
View Watchdog metrics	
· · · · · · · · · · · · · · · · · · ·	
	4040
intelliFlow	
intelliFlow Enable intelliFlow	1050
intelliFlowEnable intelliFlowConfigure service types	1050
intelliFlow Enable intelliFlow Configure service types Configure domain name groups	1050 1052 1054
intelliFlow Enable intelliFlow Configure service types Configure domain name groups Use intelliFlow to display average CPU and RAM usage	1050 1052 1054 1057
intelliFlow Enable intelliFlow Configure service types Configure domain name groups Use intelliFlow to display average CPU and RAM usage Use intelliFlow to display top data usage information	1050 1052 1054 1057 1058
intelliFlow Enable intelliFlow Configure service types Configure domain name groups Use intelliFlow to display average CPU and RAM usage Use intelliFlow to display top data usage information Use intelliFlow to display data usage by host over time	1050 1052 1054 1057 1058 1060
Configure service types Configure domain name groups Use intelliFlow to display average CPU and RAM usage Use intelliFlow to display top data usage information	1050 1052 1054 1057 1058 1060
intelliFlow Enable intelliFlow Configure service types Configure domain name groups Use intelliFlow to display average CPU and RAM usage Use intelliFlow to display top data usage information Use intelliFlow to display data usage by host over time Configure NetFlow Probe File system	1050 1052 1054 1057 1058 1060
intelliFlow Enable intelliFlow Configure service types Configure domain name groups Use intelliFlow to display average CPU and RAM usage Use intelliFlow to display top data usage information Use intelliFlow to display data usage by host over time Configure NetFlow Probe File system The IX20 local file system	1050 1054 1057 1058 1060 1061
intelliFlow Enable intelliFlow Configure service types Configure domain name groups Use intelliFlow to display average CPU and RAM usage Use intelliFlow to display top data usage information Use intelliFlow to display data usage by host over time Configure NetFlow Probe File system The IX20 local file system Display directory contents	1050 1054 1057 1058 1060 1061
intelliFlow Enable intelliFlow Configure service types Configure domain name groups Use intelliFlow to display average CPU and RAM usage Use intelliFlow to display top data usage information Use intelliFlow to display data usage by host over time Configure NetFlow Probe File system The IX20 local file system Display directory contents Create a directory	1050 1054 1057 1058 1060 1061 1067 1067
intelliFlow Enable intelliFlow Configure service types Configure domain name groups Use intelliFlow to display average CPU and RAM usage Use intelliFlow to display top data usage information Use intelliFlow to display data usage by host over time Configure NetFlow Probe File system The IX20 local file system Display directory contents Create a directory Display file contents	1050 1054 1057 1058 1060 1061 1067 1068 1069
intelliFlow Enable intelliFlow Configure service types Configure domain name groups Use intelliFlow to display average CPU and RAM usage Use intelliFlow to display top data usage information Use intelliFlow to display data usage by host over time Configure NetFlow Probe File system The IX20 local file system Display directory contents Create a directory Display file contents Copy a file or directory	1050 1054 1057 1058 1060 1067 1067 1068 1069 1069
intelliFlow Enable intelliFlow Configure service types Configure domain name groups Use intelliFlow to display average CPU and RAM usage Use intelliFlow to display top data usage information Use intelliFlow to display data usage by host over time Configure NetFlow Probe File system The IX20 local file system Display directory contents Create a directory Display file contents Copy a file or directory Move or rename a file or directory	1050 1052 1054 1057 1068 1067 1067 1069 1069 1070
intelliFlow Enable intelliFlow Configure service types Configure domain name groups Use intelliFlow to display average CPU and RAM usage Use intelliFlow to display top data usage information Use intelliFlow to display data usage by host over time Configure NetFlow Probe File system The IX20 local file system Display directory contents Create a directory Display file contents Copy a file or directory Move or rename a file or directory Delete a file or directory	1050 1054 1057 1058 1060 1061 1067 1068 1069 1069 1070
intelliFlow Enable intelliFlow Configure service types Configure domain name groups Use intelliFlow to display average CPU and RAM usage Use intelliFlow to display top data usage information Use intelliFlow to display data usage by host over time Configure NetFlow Probe File system The IX20 local file system Display directory contents Create a directory Display file contents Copy a file or directory Move or rename a file or directory Delete a file or directory Upload and download files	1050 1054 1057 1058 1060 1061 1067 1069 1069 1070 1071
intelliFlow Enable intelliFlow Configure service types Configure domain name groups Use intelliFlow to display average CPU and RAM usage Use intelliFlow to display top data usage information Use intelliFlow to display data usage by host over time Configure NetFlow Probe File system The IX20 local file system Display directory contents Create a directory Display file contents Copy a file or directory Move or rename a file or directory Delete a file or directory Upload and download files Upload and download files by using the WebUI	10501054105710581060106110671069107010721072
intelliFlow Enable intelliFlow Configure service types Configure domain name groups Use intelliFlow to display average CPU and RAM usage Use intelliFlow to display top data usage information Use intelliFlow to display data usage by host over time Configure NetFlow Probe File system The IX20 local file system Display directory contents Create a directory Display file contents Copy a file or directory Move or rename a file or directory Delete a file or directory Upload and download files	10501054105710581060106110671069107010721072

Diagnostics

Perform a speedtest	1077	
Generate a support report		
Support report overview		
View system and event logs		
View System Logs		
View Event Logs		
Configure syslog servers		
Configure options for the event and system logs		
Configure an email notification for a system event		
Configure an SNMP trap for a system event		
Analyze network traffic		
Configure packet capture for the network analyzer		
Example filters for capturing data traffic		
Capture packets from the command line		
Stop capturing packets		
Show captured traffic data		
Save captured data traffic to a file		
Download captured data to your PC		
Gear captured data		
Use the ping command to troubleshoot network connections		
Ping to check internet connection		
Stop ping commands		
Use the traceroute command to diagnose IP routing problems	1113	
ose the traceroute command to diagnose in routing problems		
Digi IX20 regulatory and safety statements	1115	
RF exposure statement		
Federal Communication (FCC) Part 15 Class B	1115	
Federal Communication (FCC) Part 15 Class B Radio Frequency Interference (RFI) (FCC 15.105)	1115	
Federal Communication (FCC) Part 15 Class B Radio Frequency Interference (RFI) (FCC 15.105) European Community - CE Mark Declaration of Conformity (DoC)	.1115	
Federal Communication (FCC) Part 15 Class B Radio Frequency Interference (RFI) (FCC 15.105) European Community - CE Mark Declaration of Conformity (DoC) IFETEL	. 1115 . 1116 . 1116	
Federal Communication (FCC) Part 15 Class B Radio Frequency Interference (RFI) (FCC 15.105) European Community - CE Mark Declaration of Conformity (DoC) IFETEL Maximum transmit power for radio frequencies	1115 1116 1116 1117	
Federal Communication (FCC) Part 15 Class B Radio Frequency Interference (RFI) (FCC 15.105) European Community - CE Mark Declaration of Conformity (DoC) IFETEL Maximum transmit power for radio frequencies Innovation, Science, and Economic Development Canada (IC) certifications	. 1115 . 1116 . 1116 . 1117	
Federal Communication (FCC) Part 15 Class B Radio Frequency Interference (RFI) (FCC 15.105) European Community - CE Mark Declaration of Conformity (DoC) IFETEL Maximum transmit power for radio frequencies Innovation, Science, and Economic Development Canada (IC) certifications RoHS compliance statement	1115 1116 1116 1117 1117	
Federal Communication (FCC) Part 15 Class B Radio Frequency Interference (RFI) (FCC 15.105) European Community - CE Mark Declaration of Conformity (DoC) IFETEL Maximum transmit power for radio frequencies Innovation, Science, and Economic Development Canada (IC) certifications RoHS compliance statement Special safety notes for wireless routers	. 1115 . 1116 . 1116 . 1117 . 1117 . 1118	
Federal Communication (FCC) Part 15 Class B Radio Frequency Interference (RFI) (FCC 15.105) European Community - CE Mark Declaration of Conformity (DoC) IFETEL Maximum transmit power for radio frequencies Innovation, Science, and Economic Development Canada (IC) certifications RoHS compliance statement	. 1115 . 1116 . 1116 . 1117 . 1117 . 1118	
Federal Communication (FCC) Part 15 Class B Radio Frequency Interference (RFI) (FCC 15.105) European Community - CE Mark Declaration of Conformity (DoC) IFETEL Maximum transmit power for radio frequencies Innovation, Science, and Economic Development Canada (IC) certifications RoHS compliance statement Special safety notes for wireless routers	. 1115 . 1116 . 1116 . 1117 . 1117 . 1118	
Federal Communication (FCC) Part 15 Class B Radio Frequency Interference (RFI) (FCC 15.105) European Community - CE Mark Declaration of Conformity (DoC) IFETEL Maximum transmit power for radio frequencies Innovation, Science, and Economic Development Canada (IC) certifications RoHS compliance statement Special safety notes for wireless routers Product disposal instructions	. 1115 . 1116 . 1116 . 1117 . 1117 . 1118 . 1118	
Federal Communication (FCC) Part 15 Class B Radio Frequency Interference (RFI) (FCC 15.105) European Community - CE Mark Declaration of Conformity (DoC) IFETEL Maximum transmit power for radio frequencies Innovation, Science, and Economic Development Canada (IC) certifications RoHS compliance statement Special safety notes for wireless routers Product disposal instructions Safety warnings English	. 1115 . 1116 . 1116 . 1117 . 1117 . 1118 . 1118	
Federal Communication (FCC) Part 15 Class B Radio Frequency Interference (RFI) (FCC 15.105) European Community - CE Mark Declaration of Conformity (DoC) IFETEL Maximum transmit power for radio frequencies Innovation, Science, and Economic Development Canada (IC) certifications RoHS compliance statement Special safety notes for wireless routers Product disposal instructions Safety warnings English Bulgarianбългарски	. 1115 . 1116 . 1116 . 1117 . 1117 . 1118 . 1118 . 1119	
Federal Communication (FCC) Part 15 Class B Radio Frequency Interference (RFI) (FCC 15.105) European Community - CE Mark Declaration of Conformity (DoC) IFETEL Maximum transmit power for radio frequencies Innovation, Science, and Economic Development Canada (IC) certifications RoHS compliance statement Special safety notes for wireless routers Product disposal instructions Safety warnings English Bulgarianбългарски CroatianHrvatski	. 1115 . 1116 . 1116 . 1117 . 1117 . 1118 . 1118 . 1119	
Federal Communication (FCC) Part 15 Class B Radio Frequency Interference (RFI) (FCC 15.105) European Community - CE Mark Declaration of Conformity (DoC) IFETEL Maximum transmit power for radio frequencies Innovation, Science, and Economic Development Canada (IC) certifications RoHS compliance statement Special safety notes for wireless routers Product disposal instructions Safety warnings English Bulgarianбългарски CroatianHrvatski FrenchFrançais	. 1115 . 1116 . 1116 . 1117 . 1117 . 1118 . 1118 . 1119 . 1120 . 1121 . 1121	
Federal Communication (FCC) Part 15 Class B Radio Frequency Interference (RFI) (FCC 15.105) European Community - CE Mark Declaration of Conformity (DoC) IFETEL Maximum transmit power for radio frequencies Innovation, Science, and Economic Development Canada (IC) certifications RoHS compliance statement Special safety notes for wireless routers Product disposal instructions Safety warnings English Bulgarian6ългарски CroatianHrvatski FrenchFrançais GreekΕλληνικά	. 1115 . 1116 . 1116 . 1117 . 1117 . 1118 . 1118 . 1119 . 1120 . 1121 . 1122 . 1122	
Federal Communication (FCC) Part 15 Class B Radio Frequency Interference (RFI) (FCC 15.105) European Community - CE Mark Declaration of Conformity (DoC) IFETEL Maximum transmit power for radio frequencies Innovation, Science, and Economic Development Canada (IC) certifications RoHS compliance statement Special safety notes for wireless routers Product disposal instructions Safety warnings English Bulgarian6ъπгарски CroatianHrvatski FrenchFrançais GreekΕλληνικά HungarianMagyar	1115 1116 1116 1117 1117 1118 1119 1120 1121 1122 1123	
Federal Communication (FCC) Part 15 Class B Radio Frequency Interference (RFI) (FCC 15.105) European Community - CE Mark Declaration of Conformity (DoC) IFETEL Maximum transmit power for radio frequencies Innovation, Science, and Economic Development Canada (IC) certifications RoHS compliance statement Special safety notes for wireless routers Product disposal instructions Safety warnings English Bulgarian6ъπгарски CroatianHrvatski FrenchFrançais GreekΕλληνικά HungarianMagyar ItalianItaliano	1115 1116 1116 1117 1117 1118 1119 1120 1121 1122 1123	
Federal Communication (FCC) Part 15 Class B Radio Frequency Interference (RFI) (FCC 15.105) European Community - CE Mark Declaration of Conformity (DoC) IFETEL Maximum transmit power for radio frequencies Innovation, Science, and Economic Development Canada (IC) certifications RoHS compliance statement Special safety notes for wireless routers Product disposal instructions Safety warnings English Bulgarian6ългарски CroatianHrvatski FrenchFrançais GreekΕλληνικά HungarianMagyar ItalianItaliano LatvianLatvietis	1115 1116 1117 1117 1118 1118 1119 1120 1121 1123 1123	
Federal Communication (FCC) Part 15 Class B Radio Frequency Interference (RFI) (FCC 15.105) European Community - CE Mark Declaration of Conformity (DoC) IFETEL Maximum transmit power for radio frequencies Innovation, Science, and Economic Development Canada (IC) certifications RoHS compliance statement Special safety notes for wireless routers Product disposal instructions Safety warnings English Bulgarian6ългарски CroatianHrvatski FrenchFrançais GreekΕλληνικά HungarianMagyar ItalianItaliano LatvianLatvietis LithuanianLietuvis	1115 1116 1117 1117 1118 1118 1119 1121 1122 1123 1124 1125	
Federal Communication (FCC) Part 15 Class B Radio Frequency Interference (RFI) (FCC 15.105) European Community - CE Mark Declaration of Conformity (DoC) IFETEL Maximum transmit power for radio frequencies Innovation, Science, and Economic Development Canada (IC) certifications RoHS compliance statement Special safety notes for wireless routers Product disposal instructions Safety warnings English Bulgarian6ългарски CroatianHrvatski FrenchFrançais GreekΕλληνικά HungarianMagyar ItalianItaliano LatvianLatvietis LithuanianLietuvis PolishPolskie	1115 1116 1117 1117 1118 1118 1119 1120 1121 1123 1124 1125 1125	
Federal Communication (FCC) Part 15 Class B Radio Frequency Interference (RFI) (FCC 15.105) European Community - CE Mark Declaration of Conformity (DoC) IFETEL Maximum transmit power for radio frequencies Innovation, Science, and Economic Development Canada (IC) certifications RoHS compliance statement Special safety notes for wireless routers Product disposal instructions Safety warnings English Bulgarian6ългарски CroatianHrvatski FrenchFrançais GreekΕλληνικά HungarianMagyar ItalianItaliano LatvianLatvietis LithuanianLietuvis	. 1115 . 1116 . 1116 . 1117 . 1117 . 1118 . 1118 . 1119 . 1120 . 1121 . 1123 . 1124 . 1125 . 1125 . 1126	

SpanishEspañol	1128
Digi IX20 Certifications	
International EMC (Electromagnetic Compatibility) and safety standards	1128
Command line interface	
Access the command line interface	1131
Log in to the command line interface	1131
Exit the command line interface	
Execute a command from the web interface	
Display help for commands and parameters	
The help command	
The question mark (?) command	
Display help for individual commands	
Use the Tab key or the space bar to display abbreviated help	
Auditable agreements	
Available commands	
Use the scp command	
Display status and statistics using the show command	
show config show system	
show network	
Device configuration using the command line interface	
Execute configuration commands at the root Admin CLI prompt	
Display help for the config command from the root Admin CLI prompt	
Configuration mode	
Enable configuration mode	
Enter configuration commands in configuration mode	
Save changes and exit configuration mode	
Exit configuration mode without saving changes	
Configuration actions	
Display command line help in configuration mode	1145
Move within the configuration schema	1148
Manage elements in lists	1148
The revert command	
Enter strings in configuration commands	
Example: Create a new user by using the command line	
Command line reference	
ain calibrate	
ain calibration-reset	
analyzer clear	
analyzer save	
analyzer start analyzer stop	
cat	
clear dhcp-lease ip-address	
clear dhcp-lease mac	
container create	
container delete	
cp	
dio state	
grep	

help	1158
ls	
mkdir	
modem at	
modem at-interactive	
modem firmware bundle ota check	
modem firmware bundle ota download	
modem firmware bundle ota list	
modem firmware bundle ota update	
modem firmware check	
modem firmware list	
modem firmware ota check	
modem firmware ota download	
modem firmware ota list	
modem firmware ota update	
modem firmware update	
modem pin change	
modem pin disable	
modem pin enable	
modem pin status	
modem pin unlock	
modem puk status	
modem puk unlock	
modem reset	
modem scan	
modem sim-slot	
modem sms send	
modem sms send-binary	
monitoring metrics upload	
monitoring	1167
monitoring metrics upload	
more	
mv	1167
ping	1167
poweroff	
pyinstall	
reboot	
rm	
scp	
config directory: show command	
show ain	
show analyzer	
show arp	
show bluetooth-scanner log	
show bluetooth-scanner nearby	
show bluetooth-scanner static-candidate show bluetooth-scanner static-confirmed	
show cloud	
show config	
show containers	
show dhcp-lease show dio	
show dis	
show eth	
show event	
- 31 OVV CVG1t	1170

show hotspot	
show ipsec	
show I2tp Iac	
show I2tp Ins	
show I2tpeth	
show location	
show log	
show manufacture	
show modbus-gateway	
show modem	
show mqtt	
show nemo	
show network	
show ntp	
show openvpn client	
show openvpn server	
show route	
show scep-client	
show scripts	
show serial	
show surelink interface	
show surelink ipsec	
show surelink openvpn	
show surelink state	
show system	
show version	
show vrrp	
show wan-bonding	
show web-filter	
show wifi ap	
show wifi client	
show wifi-scanner	
show wifi-scanner blocklist	
show wifi-scanner candidates show wifi-scanner log	
iperf	
ssh	
system backup	
system cloud register	
system custom-default-config current	1103
system custom-default-config file	1183
system custom-default-config remove	
system disable-cryptography	
system duplicate-firmware	
system factory-erase	
system find-me	
system firmware ota check	
system firmware ota check	
system firmware ota nst	
system firmware ota update	
system power ignition off_delay	
system restore	
system script start	
system script stop	
system serial clear	

system serial copy	1187
system serial ipport	
system serial restart	1187
system serial save	1188
system serial show	1188
system storage format	1188
system storage mount	1188
system storage show	1189
system storage unmount	1189
system support-report	1189
system time set	1189
system time sync	1189
system time test	1190
tail	1190
telnet	1190
traceroute	1190
vtvsh	1191

The Digi IX20 is a rugged, secure and reliable LTE industrial router powered by an enhanced operating system that supports any utility or industrial application.

This online guide helps site administrators configure and manage Digi IX20 devices. This guide assumes administrators are familiar with network basics, such as network terminology, architecture, interfaces, and related concepts.

DAL OS Vulnerability Patch Policy

Digi has created a vulnerability patch policy to document the guidelines and procedures we plan to take to identify, assess, and remediate security vulnerabilities in our DAL OS firmware integrated into Enterprise (EX), Industrial (IX) and Transportation routers (TX), device and serial servers (Connect EZ), console servers and USB-connected devices. Specifically, this policy outlines how quickly and effectively patches need to be applied to mitigate risks from potential threats. The policy protects against cyberattacks but also ensures that out firmware is in compliance with regulatory standards.

The DAL Vulnerability Patch Policy is documented on the digi.com website, and covers the following topics:

- Objective
- Scope
- Audience
- Introduction
- Reporting Potential Vulnerabilities
- Assessing Potential Vulnerabilities
- Information and Resolution Timelines
- Resolution of Potential Vulnerabilities
- Receiving Information on Potential Vulnerabilities

Digi 360

Digi 360 is a subscription-based solution that includes software, services, and device support for your cellular network and IoT ecosystem. The main components of Digi 360 include:

- **Digi Remote Manager software**: Configuration, deployment, management, protection, and analysis of your IX20 routers and network. Go to the Digi Remote Manager product page on the Digi website for more information.
- Customer Care service: Help that is always available: all day, every day, for the duration of your Digi 360 subscription.
- IX20 router: Hardware with DAL OS firmware to support your network infrastructure.
- Limited lifetime warranty service: IX20 protection for the length of your Digi 360 subscription.

For more information, see the Digi 360 FAQs.

A **CONGRATULATIONS!** sticker is now included on the outside of EX, IX, and TX router boxes. This sticker means you have the Digi 360 subscription and all of your devices have Digi 360 licenses. Scan that QR code or go to the Digi 360 page on digi.com for information about your subscription, including benefits and warranty. You can also access your Customer Portal from that same page to register new routers to your Digi account.



Frequently asked questions

Where do I register my Digi 360 routers?

If you are a Digi customer, register your devices in the Digi Customer Portal, https://my.digi.com.

What information do I need to register my Digi 360 routers?

- Item number found on your Digi purchase order.
- Serial number for each device you need to register.
- Reseller or Distributor from whom you purchased your devices, if applicable.
- Extended contract and length terms, if applicable.

 Remote Manager Primary Account Administrator Username and Email or Customer ID#, if needed

How long do I have to register my Digi 360 routers in the Customer portal?

You have 48 hours to register your routers in the Customer portal, https://my.digi.com.

Do I need to register my Digi 360 s in the Customer Portal or Digi Remote Manager?

Digi Customer Operations or your Reseller will register the routerss for you. Though rare, you may have to register your own routerss in the Customer portal and/or Digi Remote Manager. For information about how to do so, see Digi IX20 Quick Start.

Will I be notified when my routers are registered?

Yes, you will receive an email confirming registration. You will also receive Digi Remote Manager login credentials.

What are the available durations of a Digi 360 subscription?

Digi 360 is available in one-, two-, or 4-year subscriptions.

When will I be notified that my Digi 360 subscription will expire?

Yes. You will be notified at least 60 days before and then again 30 days before your Digi 360 subscription expires.

Can I update my current Digi Remote Manager license to a Digi 360 subscription?

Yes. You can update your current Digi Remote Manager license to a Digi 360 subscription as long as you are running DAL OS and the warranty on those devices has not yet expired.

What are the advantages of a Digi 360 subscription?

The advantages of a Digi 360 subscription include the following:

- Faster deployment of devices and network.
- Manage a complex ecosystem of IoT devices.
- Update multiple devices simultaneously.
- Accurately predict operating expenses.
- Manage your device and network lifecycle.
- Enhance the value of your network.
- Protect your investments.
- Achieve ROI.

Can I renew a suspended Digi 360 subscription during the suspension period?

You may renew your suspended subscription during the suspension period. If you renew during this period and Digi receives payment before this period is over, the renewed subscription will be backdated. The renewed subscription will start on the first day after your original subscription ended.

Does Digi offer planning and deployment services?

Yes. Digi Professional Services can help you set up your IoT network from start to finish, including:

- Project planning
- Web app, mobile app, Python, and bash script development
- Device retrofits
- Deployment

Are there additional value-added services available?

Yes. You can expand your Digi 360 subscription to include the following services:

- Containers
- WAN bonding
- Mobile VPN

Go to the Digi website, https://www.digi.com/products/iot-software-services/value-added-services, for more information.

Does my Digi 360 subscription and my value-added services subscription terms, like start and end dates, have to be the same?

No. The start and end dates of your Digi 360 subscription and your value-add services do not have to be the same.

If I do not plan to purchase a Digi 360 subscription, can I still renew my current license?

Yes. You can renew your current license.

Digi IX20 Quick Start

Migrating from a WR-series device? Click here for information and tools to set up your new IX-series router.

Welcome to the IX20 router quick start guide. In this guide, we will outline the essential steps to set up your routers, which are the foundation of your cellular network and IoT ecosystem.

You're here because you scanned the QR code on the Welcome card that came inside the router box.



WELCOME




To start using your device visit: **WWW.DIGI.COM**



CAUTION! Do not lose the extra product label card that comes with each IX20 router! Every router you receive from Digi has a unique password. This password appears on the product label on the bottom of the router, and on the extra product label card. You must use this password to add and then configure the router. You can change the password, but if you factory reset the router, you will need to use this unique password again.

A CONGRATULATIONS! sticker is now included on the outside of EX, IX, and TX router boxes. This stickers means you have the Digi 360 subscription and all your devices have Digi 360 licenses. Scan the QR code or go to the Digi 360 page on digi.com for information about your subscription, including benefits and warranty. You can also access your Customer Portal from that same page to activate new routers and link them to your Digi account.

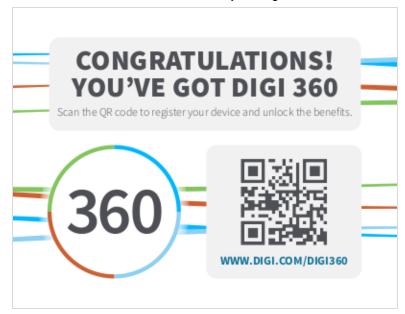

For a majority of customers, your new routers may already be linked to your Digi customer account, as well as to Digi Remote Manager. If they are, then you do not need to activate them. If you have any questions about whether you need to activate or register your routers, contact your Reseller or visit Digi Technical Support.

To get your routers set up and connected to the internet and registered in Digi Remote Manager:

Step 1: Connect your device

- 1. Insert your activated SIM (2FF) card(s) provided by your cellular carrier into the CORE modem, and insert the CORE modem device:
 - a. Identify the SIM 1 and SIM 2 slots on the CORE modern. If using only one SIM card, insert it into SIM 1. A second SIM may be inserted into slot SIM 2 for an alternate wireless carrier.
 - b. For high-vibration environments, apply a thin layer of dielectric grease to the SIM contacts.

Note If the IX20 device is used in an environment with high vibration levels, SIM card contact fretting may cause unexpected SIM card failures. To protect the SIM cards, Digi strongly recommends that you apply a thin layer of dielectric grease to the SIM contacts prior to installing the SIM cards. See Apply Dielectric Grease over SIM Contacts for instructions.

c. Insert the SIM cards into the CORE modem.



d. On the IX20 back panel, remove the CORE modem cover by loosening the cover plate thumb screw and removing the cover plate.



e. With the antennas SMA connectors pointing outward, slide the CORE modem into the IX20 device. A clicking sound will indicate it is properly inserted.




- f. Secure the CORE modem with the supplied anchor screw. Use either a Philips #0 or a Torx T10 driver. Torque screw to 2 in lbs (225 mN m) maximum.
- g. Cover the installed Digi1002-CM unit with the CORE modem cover and secure the coverplate by tightening the thumb screw.



Apply Dielectric Grease over SIM Contacts

Note Digi recommends using either the Loctite®LB 8423 Dielectric Grease or Synco Lube® Silicone Dielectric Grease.

- a. Use a sheet of paper or cardboard over the area where you intend to work.
- Use isopropyl alcohol and a cotton-tipped applicator to gently clean the SIM contacts.
 Using isopropyl alcohol requires a well vented environment. Demineralized water can also be used as an alternative.

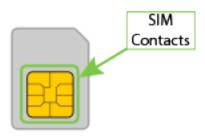

- c. Once the surface is clean and dry, apply a small amount of dielectric grease in a thin layer over the contacts. Use a new cotton-tipped applicator to work the grease smoothy over the contacts. Apply gentle pressure.
- d. When the dielectric grease has been applied, insert the SIM into the SIM slot as described above.
- 2. Attach cellular antennas.

Securely finger tighten each antenna to the threaded barrel using the nut at the base of the antenna.



3. Use an Ethernet cable connect the IX20's **WAN/ETH1** port to the internet, such as a home internet router or LAN Ethernet port in an office environment.



Step 2: Connect DC power



Step 3: Set up access to Digi Remote Manager

- If you already have a Digi Remote Manager account, skip to Register your device.
- If you prefer to configure the device locally rather than using Remote Manager, see Firmware configuration in the *IX20 User Quide*.

To set up access to Remote Manager:

- Go to my.digi.com to create a new Remote Manager account.
 You will receive an email from Remote Manager after your registration is complete.
- 2. Click the link in the email to go to Remote Manager and click **Forgot Password** to set up your login and password.
- 3. Log into Remote Manager.

Step 4: Register your device

1. Register the device as instructed by the Remote Manager Getting Started wizard.

Step 5: Complete setup

1. The device should connect within a couple of minutes.

Connection Status



If newer firmware is available, Remote Manager will prompt you to update the device. Click
 Update to update the firmware. Remote Manager will perform the update in the background and let you know when the device is up to date.



3. Click **Done** when the firmware update is complete.

Step 6: Configure cellular APN

If you installed a SIM in Step 1: Connect DC power, the device will attempt to setup the APN automatically. However, if your SIM was set up with a custom APN, you will need to configure it manually:

- 1. Navigate to the **Settings** tab in the Remote Manager **Device Details** view.
- 2. Expand the **Config** menu item and click on the **Network** settings menu.
- 3. Expand Interfaces > Modem > modem > APN list > APN list 1.
- 4. For **APN**, enter the custom APN provided by your cellular provider.
- 5. Click Apply.
- 6. Navigate back to the **Details** tab and watch for confirmation of cellular connectivity.

Digi IX20 hardware reference

Digi IX20 features and specifications

The Digi IX20 key features include:

- Industrial grade components.
- Operating temperatures:
 - IX20W (Wi-Fi enabled version): -20Cto +70C/-4Fto +158F.
 - IX20 (non-Wi-Fi version): -40C to +70C/-40F to +158F.
- Plug-in LTE modem (1002-CM).
- 802.11b/g/n/ac 2.4/5Ghz Wi-Fi (Wi-Fi enabled IX20W model only).
- Two 10/100 BaseT Ethernet ports for high-speed connectivity.

For a detailed list of IX20 hardware specifications, see

https://www.digi.com/products/networking/cellular-routers/industrial/digi-ix20#specifications.

IX20 accessories

When accessories are purchased with the IX20 device, the following are provided:

- Cellular antennas.
- Wi-Fi antennas (for the IX20W device only).
- Power supply.
- Ethernet cable.
- DIN rail mounting bracket,
- DIN rail mounting clip,

IX20 front view

The following figure shows the front view of the IX20W enabled model.



Item	Decription
WFI antenna connector	Wi-Fi enabled model only.
WAN/ETH1	Ethernet port, WAN-enabled by default.
ETH2	Ethernet port, LAN-enabled by default
Serial port	See IX20 serial port connector for information about the serial port pin-out.
SIM button	The SIM button is used to manually toggle between the two SIM slots included in the CM module.
ERASE button	See Erase device configuration and reset to factory defaults.
LEDs	See IX20 LEDs.
Power suppy	Reverse polarity protection. IX20 power supply requirements.

IX20 LEDs

The IX20 LEDs are located on the top front panel. The number of LEDs varies by model. During bootup, the front-panel LEDs light up in sequence to indicate boot progress.




Power





INT

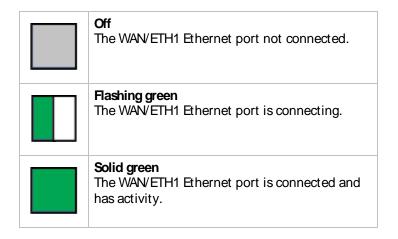

Wi-Fi Service (IX20W model only)

Off No Wi-Fi access points or Wi-Fi clients are enabled.
Solid green WI-FI access points or WI-FI clients are enabled.

SIM1

Indicates that SIM1 is in use.

Off SIM1 not in use.
Solid green SIM1 is in use.

SIM2

Indicates that SIM2 is in use.

Off SIM2 not in use.
Solid green SIM2 is in use.

LTE

Indicates that the status of the cellular module and the ETH2 Ethernet port connection:

Solid yellow (or orange) Initializing or starting up.		
Flashing yellow (or orange) In the process of connecting to the cellular network and to a device on its ETH2 port.		Flashing white ETH2 port connection established and in the process of connecting to the cellular network.
Flashing green Connected to 2G or 3G1 and is in the process of connecting to any device on its ETH2 port, or nothing is connected to the port.		Solid green Connected to 2G or 3G and also has a device linked to its ETH2 port.
Flashing blue Connected to 4G LTE and in the process of connecting to a device on its ETH2 port.		Solid blue Connected to the 4G LTE and also has a device link to its ETH2 port.
Alternating Red/yellow (or orange) Upgrading firmware.		
WARNING! DO NOT POWER	OFF DURIN	G FIRMWARE UPGRADE.

Signal quality indicators

LEDs labeled 1 through 5 Indicate the cellular service quality level.

Signal bars	Weighted dBm	Signal strength %	Quality
I	-113 to -99	0% to 23%	Bad
II	-98 to -87	24% to 42%	Marginal
Ш	-86 to -76	43% to 61%	OK
Ш	-75 to -64	62% to 80%	Good
IIIII	-63 to -51	81% to 100%	Excellent

The weighted dBm measurements are negative numbers, meaning values closer to zero denote a larger number. For example, a -85 is a better signal than -90.

Note See Cellular signal quality explained for more information regarding how signal strength is calculated and subsequently displayed via the LED indicators.

Ethernet Link and Activity

The LEDs on the **WAN/ETH1** and **ETH2** ports indicate that the Ethernet network interface is up and there is activity on the network interface.



Left LED (on top of port connector)

- Off: No Ethernet link detected.
- Solid amber: Ethernet link detected.
- Blinking amber: Indicates Ethernet traffic.

Right LED (on top of port connector)

- Off: No Ethernet link detected.
- Solid green: 10/100 Mbps link detected.

Cellular signal quality explained

Cellular signal quality refers to the strength and reliability of the signal from a cellular network to the IX20. The quality of the signal is visually represented using LED bars on the front of the router: the more bars that are lit the better the signal quality. An algorithm is used to determine the signal quality, with each cellular network using a different algorithm.

2Galgorithm

For the 2G cellular network, the algorithm is determined using one parameter to calculate signal strength: RSSI1.

```
RSSI > -80, bars=5
-89 < RSSI <= -80, bars=4
-98 < RSSI <= -89, bars=3
-104 < RSSI <= -98, bars=2
RSSI <= -104, if we're connected to the cellular network, bars=1, if not bars=0
```

3G algorithm

For the 3G cellular network (including HSPA+), the algorithm is determined using one parameter to calculate signal strength: RSSI.

```
RSSI > -80, bars=5
-90 < RSSI <= -80, bars=4
-100 < RSSI <= -90, bars=3
-106 < RSSI <= -100, bars=2
RSSI <= -106, if we're connected to the cellular network, bars=1, if not bars=0
```

4GLTE algorithm

For the 4G LTE cellular network, the algorithm is determined using three parameters to calculate signal strength: RSSI, RSRP2, and SNR3.

```
RSRP > -85, rsrp_bars=5
-95 < RSRP <= -85, rsrp_bars=4
-105 < RSRP <= -95, rsrp_bars=3
-115 < RSRP <= -105, rsrp_bars=2
-199 < RSRP <= -115, if we're connected to the cellular network, rsrp_bars=1, if not rsrp_bars=0
```

If RSRP <= -199, the device uses the RSSI as the value with the same algorithm:

```
SNR >= 13, snr_bars=5
4.5 <= SNR < 13, snr_bars=4
1 <= SNR < 4, snr_bars=3
-3 < SNR < 1, snr_bars=2
-99 < SNR <= -3, if we're connected to the cellular network, snr_bars=1, if not snr_bars=0
```

Once the values are determined, the IX20 router uses the lesser of the two ranges, which is then visually represented by the signal bars.

5G algorithm

For the 5G cellular network, the algorithm is determined using three parameters to calculate signal strength: RSRP, RSRQ4, and SINR5.

```
1Received Signal Strength Indicator
2Referenced Signal Received Power
3Signal-to-Noise Ratio
4Reference Signal Received Quality
5Signal-to-Interface + Noise Ratio
```

```
RSRP >= -65, rsrp_bars=5
-80 <= RSRP < -65, rsrp_bars=4
-90 <= RSRP < -80, rsrp_bars=3
-110 <= RSRP < -90, rsrp_bars=2
-140 <= RSRP < -110, rsrp_bars=1
RSRP < -140, rsrp_bars=0
RSRQ >= 6, rsrq_bars=5
-7 <= RSRQ < 6, rsrq_bars=4
-19 <= RSRQ < -7, rsrq_bars=3
-31 <= RSRQ < -19, rsrq_bars=2
-43 <= RSRQ < -31, rsrq_bars=1
RSRQ < -43, rsrq_bars=0
SINR >= 30, sinr_bars=5
15 <= SINR < 30, sinr_bars=4
5 <= SINR < 15, sinr_bars=3
-5 <= SINR < 5, sinr_bars=2
-23 <= SINR < -5, sinr_bars=1
SINR < -23, sinr_bars=0
```

Once the **sinr_bars**, **rsrq_bars**, and **rsrp_bars** values are determined, the IX20 router uses the lesser of the three ranges, which is then visually represented by the signal bars.

IX20 power supply requirements


IX20 is intended to be powered by a certified power supply with output rated at either 12 VDC/0.75 A or 24 VDC/0.375 A minimum.

- Use the included power supply (part number 24000154).
- If you are providing the DC power source with a non-Digi power supply, you must use a certified LPS power supply rated at either 12 VDC/0.75 A or 24 VDC/0.375 A minimum. The voltage tolerance supports +/- 10% (9 VDC to 30 VDC) at 9 Watts minimum.
- For installations requiring protective earth grounding, connect the -ve terminal of the power connector to the system protective earth with a minimum 1mm2 stranded single insulated cable. Crimp terminals should be used for all connections.

IX20 serial port connector

The IX20 is a DTE serial device capable of supporting the RS-232 electrical signaling mode.

Pinout schematic and pin functions

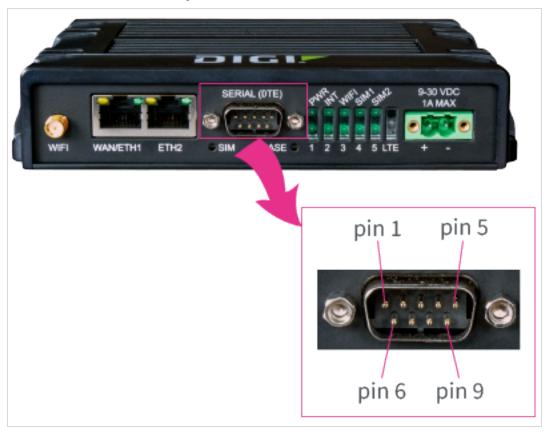

		RS232	Dire	ction
DB9 pin number	Signal name	signal	DTE	DCE
1	Data Carrier Detect	DCD	In	Out
2	Receive Data	RxD	In	Out
3	Transmit Data	TxD	Out	In
4	Data Terminal Ready	DTR	Out	In
5	Ground	GND	N/A	N/A
6	Data Set Ready	DSR	In	Out
7	Ready To Send	RTS	Out	In
8	Clear to Send	CTS	In	Out
9	Ring Indicate	RI	In	Out

Configuration for extreme thermal conditions

The IX20 has been verified to operate in the following temperate ranges:

- IX20W (Wi-Fi enabled version): -20C to +70C/-4F to +158F.
- IX20 (non-Wi-Fi version): -40Cto +70C/-40Fto +158F.

However, in extreme temperature conditions (up to +70C/+158F), you must add a Quality of Service (QOS) rule that limits the upload speed of the modem to 1 Mpbs. For less extreme temperatures, a modem upload speed of up to 10 Mpbs is acceptable.



- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

- 3. Click Firewall > Quality of Service.
- 4. For Add Binding, click Yo



- 5. For Interface, select Modem.
- 6. For Interface bandwidth (Mbit), type 1.
- 7. Click to expand Policy.
- 8. For Add Policy, click Yo
- 9. Click to expand Rule.
- 10. For **Add Rule**, click **1**/₀

The default settings for the policy and rule are sufficient.

11. Click **Apply** to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

> config (config)>

3. Add a binding:

(config)> add firewall qos end (config firewall qos 2)>

4. Set the interface to the modem interface:

(config firewall qos 2)> interface /network/interface/modem (config firewall qos 2)>

5. Set the maximum egress bandwidth of the interface to 1:

(config firewall qos 2)> bandwidth 1 (config firewall qos 2)>

6. Create a policy:

(config firewall qos 2)> add policy end (config firewall qos 2 policy 0)>

7. Add a rule to the policy:

(config firewall qos 2 policy 0)> add rule end (config firewall qos 2 policy 0 rule 0)>

The default settings for the policy and rule are sufficient.

8. Save the configuration and apply the change.

(config firewall qos 2 policy 0 rule 09)> save Configuration saved.

9. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

QR code definition

A QR code is printed on the label attached to the device and on the loose label included in the box with the device components. The QR code contains information about the device.



QR code items

Semicolon separated list of:

Product Name; Device ID; Password; Serial Number; SKUPart Number-SKUPart Revision

Example

IX20;00000000-00000000-112233FF-FF445566;PW1234567890;50001001-00

Digi IX20 hardware setup

This chapter contains the following topics:

Install SIM cards in the Plug-in LTE modem	49
Connect data cables	.5
Mount the IX20 device	51

Install SIM cards in the Plug-in LTE modem

There is a label on the bottom of the CORE modem that indicates the plug-in modem IMEI number. The modem is referred to as 1002-CM.



WARNING! Are you using consumer-grade SIM cards in a device that is subject to shock, vibration, or material expansion/contraction due to seasonal temperature variations? If so, these extreme conditions can lead to contact fretting and unexpected SIM card failure. Digi strongly recommends using industrial-grade SIMs instead of consumer-grade SIMs. Industrial-grade SIMs are designed for extreme environments and are constructed of heavier-gauge materials and extended-temperature electronic components.

To install SIM cards:

- 1. Identify the SIM 1 and SIM 2 slots on the CORE modern. If using only one SIM card, insert it into SIM 1. A second SIM may be inserted into slot SIM 2 for an alternate wireless carrier.
- 2. For high-vibration environments, apply a thin layer of dielectric grease to the SIM contacts.

Note If the IX20 device is used in an environment with high vibration levels, SIM card contact fretting may cause unexpected SIM card failures. To protect the SIM cards, Digi strongly recommends that you apply a thin layer of dielectric grease to the SIM contacts prior to installing the SIM cards. See Apply Dielectric Grease over SIM Contacts for instructions.

3. Insert the SIM cards into the CORE modem.



4. On the IX20 back panel, remove the CORE modern cover by loosening the cover plate thumb screw and removing the cover plate.



5. With the antennas SMA connectors pointing outward, slide the CORE modem into the IX20 device. A clicking sound will indicate it is properly inserted.



- 6. Secure the CORE modem with the supplied anchor screw. Use either a Philips #0 or a Torx T10 driver. Torque screw to 2 in lbs (225 mN m) maximum.
- 7. Cover the installed Digi1002-CM unit with the CORE modern cover and secure the coverplate by tightening the thumb screw.




8. Affix the cellular antennas to the two connectors protruding from the device.

Apply Dielectric Grease over SIM Contacts

Note Digi recommends using either the Loctite®LB 8423 Dielectric Grease or Synco Lube®Silicone Dielectric Grease.

- 1. Use a sheet of paper or cardboard over the area where you intend to work.
- 2. Use isopropyl alcohol and a cotton-tipped applicator to gently clean the SIM contacts. Using isopropyl alcohol requires a well vented environment. Demineralized water can also be used as an alternative.

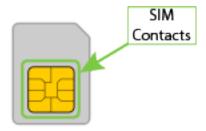

- Once the surface is clean and dry, apply a small amount of dielectric grease in a thin layer over the contacts. Use a new cotton-tipped applicator to work the grease smoothy over the contacts. Apply gentle pressure.
- 4. When the dielectric grease has been applied, insert the SIM into the SIM slot as described above.

To remove the CORE modem:

- 1. Remove the anchor screw.
- 2. Pinch the two vertical sides of the white clip.



3. Slide the CORE modem out of the IX20 device.

Tips for improving cellular signal strength

If the signal strength LEDs or the signal quality for your device indicate **Poor** or **No service**, try the following things to improve signal strength:

- Move the device to another location.
- Try connecting a different set of antennas, if available.
- Purchase a Digi Antenna Extender Kit: Antenna Extender Kit, 1m.

Connect data cables

The IX20 supports two types of data ports:

- Ethernet (RJ-45): Use a Cat 5e or Cat 6 Ethernet cable.
- Serial (9-pin RS-232): Use a serial cable with a 9-pin RS-232 connector.

Mount the IX20 device

There are three options for mounting the IX20 device:

- Attach to a mounting surface by using the mounting tabs.
- Attach to DIN rail with clip.
- Attach to DIN rail with bracket.

Attach to a mounting surface by using the mounting tabs



Attach to DIN rail with clip

The DIN rail clip is an optional accessory included when the IX20 is purchased with accessories.

1. Attach the DIN rail clip to the bottom of the device with the screws provided.



2. Set the IX20 device onto a DIN rail and gently press until the clip snaps into the rail.



Attach to DIN rail with bracket

1. Attach the DIN rail clip to the DIN rail mounting bracket with the screws provided.



2. Attach the IX20 device to the bracket with the screws provided.



3. Set the bracket with the clip onto a DIN rail and gently press until the clip snaps into the rail.





WARNING! If being installed above head height on a wall or ceiling, ensure the device is fitted securely to avoid the risk of personal injury. Digi recommends that this device be installed by an accredited contractor.

Firmware configuration

This chapter contains the following topics:

Review IX20 default settings	55
Primary Responder mode	
Change the default password for the admin user	
Change the default SSID and pre-shared key for the preconfigured Wi-Fi access point	
Configuration methods	
Using Digi Remote Manager	
Access Digi Remote Manager	
Using the local web interface	64
Review the dashboard	
Use the local REST API to configure the IX20 device	67
Using the command line	

Review IX20 default settings

You can review the default settings for your IX20 device by using the local WebUI or Digi Remote Manager:

Local WebUI

- 1. Log into the IX20 WebUI as a user with Admin access. See Using the local web interface for details.
- 2. On the menu, click **System > Device Configuration**.

Digi Remote Manager

- 1. If you have not already done so, connect to your Digi Remote Manager account.
- 2. From the menu, click **Devices**to display a list of your devices.
- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- 4. Click the Device ID.
- 5. Click Settings.
- 6. Click to expand Config.

The following tables list important factory default settings for the IX20.

Default interface configuration

Interface type	Preconfigured interfaces	Devices	Default configuration
Wide Area Network (WAN)	■ ETH1	■ Ethernet: ETH1	 Firewall zone: External WAN priority: Metric=1 IP Address: DHCP client Digi SureLinkTM enabled for IPv4
Wireless Wide Area Network (WWAN)	■ Modem	■ Modem	 Firewall zone: External WAN priority: Metric=3 SIM failover after 5 attempts SureLink enabled for IPv4

Interface type	Preconfigured interfaces	Devices	Default configuration
Local Area Network (LAN)	■ ETH2	 Ethernet: ETH2 (non-Wi-Fi models) Bridge: LAN (Wi-Fi models) 	 Firewall zone: Internal IP address: 192.168.2.1/24 DHCP server enabled LAN priority: Metric=5
	■ Loopback	■ Ethernet: Loopback	Firewall zone:LoopbackIP address:127.0.0.1/8
	■ Setup IP	■ Bridge: LAN	Firewall zone: SetupIP address 192.168.210.1/24
	Setup Link-local IP	■ Bridge: LAN	Firewall zone: SetupIP address 169.254.100.100/16
Wi-Fi (available with IX20W models only)	■ Wi-Fi access point: Digi AP	■ Wi-Fi radio	 Enabled SSID: Digi-IX20W-serial_number Encryption: WPA2 Personal (PSK) Pre-shared key: The unique password printed on the bottom label of the device.
Bridges (Wi-Fi model only)	■ Bridge: LAN	 Ethernet: ETH2 Wi-Fi access point: Digi AP 	EnabledUsed by the ETH1 interface

Other default configuration settings

Feature	Configuration
Central management	■ Digi Remote Manager enabled as the central management service.
Security policies	Packet filtering allows all outbound traffic.

Feature	Configuration
	 SSH and web administration: Enabled for local administration Firewall zone: Internal
Monitoring	 Device heath metrics uploaded to Digi Remote Manager at 60 minute interval. SNMP: Disabled
Serial port	 Enabled Serial mode: Remote Access Label: None Baud rate: Data bits: 8 Parity: None Stop bits: 1 Flow control: None

Primary Responder mode

You can use the Primary Responder mode configuration setting to manually enable the IX20 device to be in an AT&T FirstNet-compliant mode (Primary Responder mode). When a device is in Primary Responder mode, certain firmware features are disabled. See Differences between standard firmware operation and Primary Responder mode.

The Primary Responder mode configuration setting is available in the 23.9.x and newer firmware. This replaces the Primary Responder firmware that was available prior to the 23.9.x firmware release.

Primary Responder firmware prior to 23.9.x firmware release

You may have a device that has Primary Responder firmware prior to 23.9.x installed on it. When you update to 23.9, the device will change its device type to be a non-PR product. If you have a configuration template setup for your PR device running firmware older than 23.9.x, you will need to create a new configuration template after updating firmware on your device.

Enable Primary Responder Mode

If you enable Primary Responder Mode, your device will reboot and the device's configuration will change to use the new mode. There are certain firmware features that are disabled in this mode.

Disable Primary Responder Mode

If you disable Primary Responder mode, the device's configuration is erased and the device will reboot. You will then need to reconfigure the device to the desired configuration.

Differences between standard firmware operation and Primary Responder mode

The device firmware version 23.9 and later has a Primary Responder mode that can be enabled on any device. When enabled, the device acts as a Primary Responder (PR) device with a security hardened, feature-restricted firmware targeted to comply with AT&T, FirstNet, and Verizon ResponseVerify security requirements.

When Primary Responder mode is enabled, the following features are not available:

- Telnet access has been removed.
- Raw TCP listeners for serial ports have been removed.
- Wi-Fi:
 - WPA1 encryption has been removed.
 - Any preconfigured access points are disabled by default.
- SSH is disabled by default.
- Users are prompted to enable two-factor authentication.
- A notification will appear in both the Web UI and CLI if the DAL device has Primary Responder mode enabled, but there are local users who do not have two-factor authentication enabled.
- Internal serial console port is disabled by default.
- USB ports are disabled by default.
- FIPS mode is automatically enabled when PR mode is enabled.
- Restoring a backup configuration file is disabled (Restore the device configuration).
- The **system custom-default-config** CLI command available in release 24.12 cannot be run in Primary Responder mode.

Enable Primary Responder mode

You can manually enable the Primary Responder mode configuration setting to change your device to Primary Responder mode.

Note When Primary Responder mode is enabled, some features on your device will not be available. See Differences between standard firmware operation and Primary Responder mode.

To enable Primary Responder mode:



- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. On the Dashboard, verify the current firmware version installed on the device. In the Device section, look at the **Firmware Version** field and verify that the version is 23.9.x or above.

Note If the firmware version is not 23.9.x or above, you must update the firmware to 23.9.x before you can continue.

3. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand **Config**. Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

4. Click System.



5. Enable **Primary Responder mode**.

The device will reboot and the device's configuration will change to use the new mode.

6. Click **Apply** to save the configuration and apply the change.

Command line

Select the device in Remote Manager and click Actions > Open Console, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:



3. Enable Primary Responder mode:

```
(config)> system primaryresponder true (config)>
```

The device will reboot and the device's configuration will change to use the new mode.

4. Save the configuration and apply the change.

```
(config)> save
Configuration saved.
>
```

5. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Change the default password for the admin user

The unique, factory-assigned password for the default **admin** user account is printed on the bottom label of the device and on the loose label included in the package.

If you erase the device configuration or reset the device to factory defaults, the password for the **admin** user will revert to the original, factory-assigned default password.

To change the default password for the admin user:



- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- a. Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

- 3. Click Authentication > Users > admin.
- 4. Enter a new password for the admin user. The password must be at least eight characters long and must contain at least one uppercase letter, one lowercase letter, one number, and one special character.

Note If the Primary Responder feature is enabled, the password must be at least 10 characters long and must contain at least one uppercase letter, one lowercase letter, one number, and one special character.



5. Click **Apply** to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

 Set a new password for the admin user. The password must be at least eight characters long and must contain at least one uppercase letter, one lowercase letter, one number, and one special character.

```
(config)> auth user admin password new-password (config)>
```

4. Save the configuration and apply the change.

```
(config)> save
Configuration saved.
>
```

5. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Change the default SSID and pre-shared key for the preconfigured Wi-Fi access point

For the Wi-Fi enabled IX20W device, by default, the SSID and pre-shared key for the preconfigured Wi-Fi access point are:

- Enabled
- SSID: Digi-IX20W-serial_number
- Encryption: WAP2 Personal (PSK)
- Pre-shared key: The unique password printed on the bottom label of the device.

Note When Primary Responder mode is enabled, pre-configured access points are enabled by default. For more information about Primary Responder mode, see Differences between standard firmware operation and Primary Responder mode.



- Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- a. Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.


Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

3. Click Network > Wi-Fi > Digi AP.

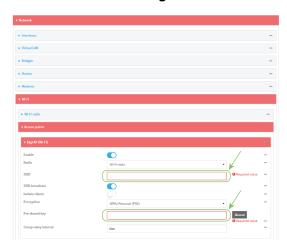

- 4. Enter a new SSID and Pre-shared key.
- 5. Click Apply to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

> config (config)>

3. Set a new SSID for the digi_ap access point:

(config)> network wifi ap digi_ap ssid new_ssid (config)>

4. Set a new pre-shared key:

(config)> network wifi ap digi_ap encryption key_psk2 new_key (config)>

5. Save the configuration and apply the change.

(config)> save
Configuration saved.

6. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configuration methods

There are two primary methods for configuring your IX20 device:

Web interface.

The web interface can be accessed in two ways:

- Central management using the Digi Remote Manager, a cloud-based device management
 and data enablement platform that allows you to connect any device to any application,
 anywhere. With the Remote Manager, you can configure your IX20 device and use the
 configuration as a basis for a Remote Manager configuration which can be applied to
 other similar devices. See Central management for more information about using the
 Remote Manager to manage and configure your IX20 device.
- The local web interface. See Using the local web interface for more information about using the local web interface to manage and configure your IX20 device.

Note Changes made to the device's configuration by using the local web interface will not be automatically reflected in Digi Remote Manager. You must manually refresh Remote Manager for the changes to be displayed.

Web-based instructions in this guide are applicable to both the Remote Manager and the local web interface.

Command line.

A robust command line allows you to perform all configuration and management tasks from within a command shell. Both the Remote Manager and the local web interface also have the option to open a terminal emulator for executing commands on your IX20 device. See Using the command line for more information about using the command line to manage and configure your IX20 device.

In this guide, task topics show how to perform tasks:



Shows how to perform a task by using the local web interface.

Command line

Shows how to perform a task by using the command line interface.

Using Digi Remote Manager

By default, your IX20 device is configured to use Digi Remote Manager as its central management server. Devices must be registered with Remote Manager using one of the following options:

- As part of the getting started process. See the Quick Start Guide for information.
- If you have not registered the device already, you can do so using the Device ID, MAC address, IMEI, or your Remote Manager Iogin credentials. See Add a device to Remote Manager.

For information about configuring central management for your IX20 device, see Central management.

Access Digi Remote Manager

To access Digi Remote Manager:

- 1. If you have not already done so, go to https://myaccount.digi.com/ to sign up for a Digi Remote Manager account.
- 2. Check your email for Digi Remote Manager login instructions.
- 3. Go to remotemanager.digi.com.
- 4. Enter your user name and password. The Digi Remote Manager Dashboard appears.


Using the local web interface

To connect to the IX20 local Web UI:

- 1. Use an Ethernet cable to connect the IX20's ETH2 port to a laptop or PC.
- 2. Open a browser and go to 192.168.2.1.
- Log into the device using a configured user name and password.
 The default user name is admin and the default password is the unique password printed on the label packaged with your device.

Review the dashboard

After logging in, the local web admin dashboard is displayed.

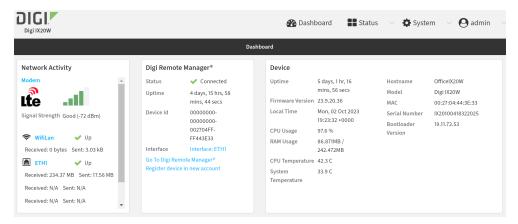

The dashboard shows the current state of the device.

Dashboard area	Description
Network activity	 Summarizes network statistics: the total number of bytes sent and received over all configured bridges and Ethernet devices.
	Displays the status of the network interfaces configured on the device.
	 Provides information about the signal strength and technology of the cellular modem(s).
Digi Remote Manager	Displays the device connection status for Digi Remote Manager, the amount of time the connection has been up, and the Digi Remote Manager device ID. See Using Digi Remote Manager. The links in this section enable you to do the following:
	 Launch Digi Remote Manager: Click Go To Digi Remote Manager to open the Digi Remote Manager login page.
	Add a device to Remote Manager: Click Register device in new account to add a device to Remote Manager using your Remote Manager login credentials.
Device	Displays the IX20 device's status, statistics, and identifying information.
Serial Ports	Displays information about the serial ports on the IX20. Each serial port is identified by port name or number, followed by the serial port mode configured for the port. The icons next to the port name or number shows the serial port status:
	■ Empty circle: Port is not connected.
	■ Green circle: Active connection on the port.
	■ Red X: No signal, which is an error state where the port is not available.
	 Down arrow: One of the control signals is not active. This icon may display For for ports configured in Remote Access serial port mode and that have a signal monitor enabled (CTS or DCD) in the Monitoring Settings section.
	You can click the icons at the top of the section to access other pages:
	■ Blue "i": Click to access the Serial Status page.
	Blue wrench: Click to access the Serial Configuration page.
Services	Displays an option for the Watchdog service if it has been enabled.


Log out of the web interface

■ On the main menu, click your user name. Click **Log out**.



Review the dashboard

After logging in, the local web admin dashboard is displayed.

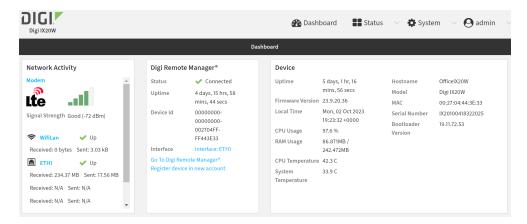

The dashboard shows the current state of the device.

Dashboard	
area	Description
Network activity	 Summarizes network statistics: the total number of bytes sent and received over all configured bridges and Ethernet devices.
	 Displays the status of the network interfaces configured on the device.
	 Provides information about the signal strength and technology of the cellular modem(s).
Digi Remote Manager	Displays the device connection status for Digi Remote Manager, the amount of time the connection has been up, and the Digi Remote Manager device ID. See Using Digi Remote Manager. The links in this section enable you to do the following:
	 Launch Digi Remote Manager: Click Go To Digi Remote Manager to open the Digi Remote Manager login page.
	Add a device to Remote Manager: Click Register device in new account to add a device to Remote Manager using your Remote Manager login credentials.
Device	Displays the IX20 device's status, statistics, and identifying information.
Serial Ports	Displays information about the serial ports on the IX20. Each serial port is identified by port name or number, followed by the serial port mode configured for the port. The icons next to the port name or number shows the serial port status:
	■ Empty circle: Port is not connected.
	■ Green circle: Active connection on the port.
	■ Red X: No signal, which is an error state where the port is not available.
	■ Down arrow : One of the control signals is not active. This icon may display For for ports configured in Remote Access serial port mode and that have a signal monitor enabled (CTS or DCD) in the Monitoring Settings section.
	You can click the icons at the top of the section to access other pages:

Dashboard area	Description
	■ Blue "i": Click to access the Serial Status page.
	Blue wrench: Click to access the Serial Configuration page.
Services	Displays an option for the Watchdog service if it has been enabled.

Use the local REST API to configure the IX20 device

Your IX20 device includes a REST API that can be used to return information about the device's configuration and to make modifications to the configuration. You can view the REST API specification from your web browser by opening the URL:

https://ip-address/cgi-bin/config.cgi

For example:

https://192.168.210.1/cgi-bin/config.cgi

Use the GET method to return device configuration information

To return device configuration, issue the GET method. For example, using curl:

\$ curl -k -u admin https://ip-address/cgi-bin/config.cgi/value/path -X GET

where:

- ip-address is the IP address of the IX20 device.
- path is the path location in the configuration for the information being returned.

To determine allowed values for *path* from the Admin CLI:

- Select the device in Remote Manager and click Actions > Open Console, or log into the IX20 local command line as a user with full Admin access rights.
 - Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
- 2. At the command line, type **config** to enter configuration mode:

> config (config)>

3. At the config prompt, type ?(question mark):

(config)>? auth Authentication cloud Central management firewall Firewall monitoring Monitoring Network network Serial serial service Services system System

vpn VPN (config)>

The allowed values for path are listed in the first (left) column.

4. To determine further allowed path location values by using the ?(question mark) with the path name:

```
(config> service?
Services
Additional Configuration
dns
              DNS
iperf
              IPerf
location
               Location
mdns
               Service Discovery (mDNS)
modbus_gateway
                      Modbus Gateway
multicast
                Multicast
              NTP
ntp
              Ping responder
ping
               SNMP
snmp
              SSH
ssh
telnet
              Telnet
web_admin
                  Web administration
```

For example, to use curl to return the ssh configuration:

(config)> service

```
"mdns.type": "_ssh._tcp."

"port": "22"

"protocol.0": "tcp"

}
}
}
```

You can also use the GET method to return the configuration parameters associated with an item:

```
curl -k -u admin https://192.168.210.1/cgi-bin/config.cgi/keys/service/ssh -X GET Enter host password for user 'admin': { "ok": true, "result": [ "acl", "custom", "enable", "key", "mdns", "port", "protocol" ] } $
```

Use the POST method to modify device configuration parameters and list arrays

Use the POST method to modify device configuration parameters

To modify configuration parameters, use the POST method with the path and value parameters.

\$ curl -k -u admin "https://ip-address/cgi-bin/config.cgi/value?path=path&value=new_value" -X POST

where:

- path is the path to the configuration parameter, in dot notation (for example, ssh.service.enable).
- new value is the new value for the parameter.

For example, to disable the ssh service using curl:

```
$ curl -k -u admin "https://192.168.210.1/cgi-bin/config.cgi/value?path=service.ssh.enable&value=false" -X POST
Enter host password for user 'admin':
{ "ok": true }
$
```

Use the POST method to add items to a list array

To add items to a list array, use the **POST** method with the **path** and **append** parameters. For example, to add the external firewall zone to the ssh service:

```
$ curl -k -u admin "https://192.168.210.1/cgi-bin/config.cgi/value?path=service.ssh.acl.zone&append=true&value=external" -X POST Enter host password for user 'admin': { "ok": true, "result": "service.ssh.acl.zone.4" }
```

Use the POST method to add objects to a list array

Objects in an array that require one or more underlying values can be set using the **collapsed** URI parameter. We recommend including the -g option as well, to instruct curl to turn off globbing. The

below example would add a new static route for the WAN interface for the 1.2.4.0/24 destination network:

```
$ curl -g -k -u admin "https://192.168.210.1/cgi-bin/config.cgi/value?path=network.route.static&append=true&collapsed[dst]=1.2.4.0/24&collapsed [interface]=/network/interface/wan" -X POST Enter host password for user 'admin': { "ok": true, "result": "network.route.static.1" }
```

Use the DELETE method to remove items from a list array

To remove items from a list array, use the **DELETE** method. For example, using **curl**:

```
$ curl -k -u admin "https://192.168.210.1/cgi-bin/config.cgi/value?path=path
```

where *path* is the path to the list item, including the list number, in dot notation (for example, **service.ssh.acl.zone.4**).

For example, to remove the external firewall zone to the ssh service:

1. Use the **GET** method to determine the SSH service's list number for the external zone:

```
$ curl -k -u admin "https://192.168.210.1/cgi-bin/config.cgi/value?path=service/ssh/acl/zone -X GET
{
    "ok": true,
    "result": {
        "type": "array",
        "path": "service.ssh.acl.zone"
,        "collapsed": {
    "0": "internal"
,
    "1": "edge"
,
    "3": "setup"
,
    "4": "external"
        }
    }
}
```

2. Use the **DELETE** method to remove the external zone (list item 4).

```
$ curl -k -u admin https://192.168.210.1/cgi-bin/config.cgi/value?path=service.ssh.acl.zone.4 -X DELETE
Enter host password for user 'admin':
{ "ok": true }
$
```

Using the command line

The Digi IX20 device provides a command-line interface that you can use to configure the device, display status and statistics, update firmware, and manage device files.

See Command line interface for detailed instructions on using the command line interface and see Command line reference for information on available commands.

Access the command line interface

You can access the IX20 command line interface using an SSH connection, a telnet connection, or a serial connection. You can use an open-source terminal software, such as PuTTY or TeraTerm, to access the device through one of these mechanisms.

You can also access the command line interface in the WebUI by using the **Terminal**, or the Digi Remote Manager by using the **Console**.

To access the command line, your device must be configured to allow access, and you must log in as a user who has been configured for the appropriate access.

For further information about configuring access to these services, see:

Serial: Serial port

WebUI: Configure the web administration service

■ SSH: Configure SSH access

■ Telnet: Configure telnet access

Log in to the command line interface

Command line

 Connect to the IX20 device by using a serial connection, SSH or telnet, or the Terminal in the WebUI or the Console in the Digi Remote Manager. See Access the command line interface for more information.

Note Telnet is not available when Primary Responder mode has been enabled for the device. For information about Primary Responder mode, see Differences between standard firmware operation and Primary Responder mode.

- For serial connections, the default configuration is:
 - 9600 baud rate
 - 8 data bits
 - no parity
 - 1 stop bit
 - no flow control
- For SSH and telnet connections, the Setup IP address of the device is 192.168.2.1 on the .

2. At the login prompt, enter the username and password of a user with Admin access:

The default username is **admin**. The default unique password for your device is printed on the device label.

3. Depending on the device configuration, you may be presented with another menu, for example:

Access selection menu:

- a: Admin CLI
- s: Shell
- q: Quit

Select access or quit [admin]:

Type a or admin to access the IX20 command line.

You will now be connected to the Admin CLI:

Connecting now...

Press Tab to autocomplete commands
Press '?' for a list of commands and details
Type 'help' for details on navigating the CLI
Type 'exit' to disconnect from the Admin CLI

>

See Command line interface for detailed instructions on using the command line interface.

Exit the command line interface

Command line

1. At the command prompt, type exit.

> exit

2. Depending on the device configuration, you may be presented with another menu, for example:

Access selection menu:

- a: Admin CLI
- s: Shell
- q: Quit

Select access or quit [admin]:

Type **q** or **quit** to exit.

Central management

This chapter contains the following topics:

Certificate-based enhanced security 72 Configure your device for Digi Remote Manager support 72 Reach Digi Remote Manager on a private network 86 Log in to Digi Remote Manager 86 Use Digi Remote Manager to view and manage your device 88 Add a device to Remote Manager 88 Configure multiple IX20 devices by using Digi Remote Manager configurations 90 View Digi Remote Manager connection status 91 Learn more 92	Digi Remote Manager support	74
Configure your device for Digi Remote Manager support 74 Reach Digi Remote Manager on a private network 86 Log in to Digi Remote Manager 86 Use Digi Remote Manager to view and manage your device 88 Add a device to Remote Manager 88 Configure multiple IX20 devices by using Digi Remote Manager configurations 90 View Digi Remote Manager connection status 91		
Reach Digi Remote Manager on a private network Log in to Digi Remote Manager Use Digi Remote Manager to view and manage your device Add a device to Remote Manager Configure multiple IX20 devices by using Digi Remote Manager configurations View Digi Remote Manager connection status	Configure your device for Digi Remote Manager support	74
Log in to Digi Remote Manager Use Digi Remote Manager to view and manage your device 88 Add a device to Remote Manager 88 Configure multiple IX20 devices by using Digi Remote Manager configurations 90 View Digi Remote Manager connection status	Reach Digi Remote Manager on a private network	86
Use Digi Remote Manager to view and manage your device		
Add a device to Remote Manager 88 Configure multiple IX20 devices by using Digi Remote Manager configurations 90 View Digi Remote Manager connection status 9		
Configure multiple IX20 devices by using Digi Remote Manager configurations 90 View Digi Remote Manager connection status 90		
View Digi Remote Manager connection status9		

Digi Remote Manager support

Digi Remote Manager is a hosted remote configuration and management system that allows you to remotely manage a large number of devices. Remote Manager includes a web-based interface that you can use to perform device operations, such as viewing and changing device configurations and performing firmware updates. Remote Manager servers also provide a data storage facility. The Digi Remote Manager is the default cloud-based management system, and is enabled by default.

To use Remote Manager, you must set up a Remote Manager account. To set up a Remote Manager account and learn more about Digi Remote Manager, go to

http://www.digi.com/products/cloud/digi-remote-manager.

To learn more about Remote Manager features and functions, see the *Digi Remote Manager User Quide*.

Certificate-based enhanced security

Beginning with firmware version 22.2.9.x, the default URL for the device's Remote Manager connection is edp12.devicecloud.com. This URL is required to utilize the client-side certificate support. Prior to release 22.2.9.x, the default URL was my.devicecloud.com.

- If your Digi device is configured to use a non-default URL to connect to Remote Manager, updating the firmware will not change your configuration. However, if you erase the device's configuration, the Remote Manager URL will change to the default of edp12.devicecloud.com.
- If you perform a factory reset by pressing the ERASE twice, the client-side certificate will be erased and you must use the Remote Manager interface to reset the certificate. Select the device in Remote Manager and select Actions > Reset Device Certificate.
- The certificate that is provided to the client by Remote Manager is signed by a specific certificate authority, and the device is expecting that same certificate authority. If your IT infrastructure uses its own certificate-based authentication, this might cause the device to interpret the certificate provided by Remote Manager as being from an incorrect certificate authority. If this is the case, you need to include an exception to allow edp12.devicecloud.com to authenticate using its own certificate.

The new URL of edp12.devicecloud.com is for device communication only. Use https://remotemanager.digi.com for user interaction with remote manager.

Firewall issues

To utilize the certificate-based security, you may need to open a port through your firewall for egress connectivity to edp12.devicecloud.com. TCP port 3199 is used for communication with Remote Manager.

Configure your device for Digi Remote Manager support

By default, your IX20 device is configured to use for central management.

Additional configuration options

These additional configuration settings are not typically configured, but you can set them as needed:

- Disable the Digi Remote Manager connection if it is not required. You can also configure an alternate cloud-based central management application.
- Change the reconnection timer.
- The non-cellular keepalive timeout.
- The cellular keepalive timeout.
- The keepalive count before the Remote Manager connection is dropped.
- SMS support.
- HTTP proxy server support.

To configure your device's Digi Remote Manager support:



- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- a. Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:


a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

3. Click Central management.

The Central management configuration window is displayed.

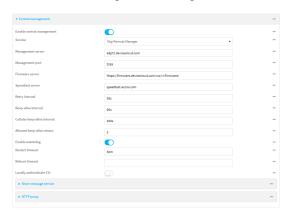

Digi Remote Manager support is enabled by default. To disable, toggle off **Enable central** management.

- 4. For Service, select Digi Remote Manager.
- 5. (Optional) For **Management server**, type the URL for the central management server. The default varies depending on firmware versions:
 - Firmware version 22.2.9.x and newer, the default is the edp12.devicecloud.com. This server is for device-connectivity only, and uses enhanced security through certificate-based communication. See Digi Remote Manager support for further infomation.
 - Firmware prior to version 22.2.9.x, the default is the Digi Remote Manager server, https://remotemanager.digi.com.
- 6. (Optional) For **Management port**, type the destination port for the remote cloud services connection. The default is **3199**.
- 7. Firmware server should normally be left at the default location.
- 8. (Optional) For **Speedtest server**, type the name or IP address of the server to use to test the speed of the device's internet connection(s).
- (Optional) For Retry interval, type the amount of time that the IX20 device should wait before
 reattempting to connect to remote cloud services after being disconnected. The default is 30
 seconds.
 - Allowed values are any number of hours, minutes, or seconds, and take the format *number* {h|m|s}.
 - For example, to set Retry interval to ten minutes, enter 10m or 600s.
- 10. (Optional) For Keep-alive interval, type the amount of time that the IX20 device should wait between sending keep-alive messages to remote cloud services when using a non-cellular interface. The default is 60 seconds.
 - Allowed values are any number of hours, minutes, or seconds, and take the format *number* {h|m|s}.
 - For example, to set **Keep-alive interval** to ten minutes, enter **10m** or **600s**.
- 11. (Optional) For **Cellular keep-alive interval**, type the amount of time that the IX20 device should wait between sending keep-alive messages to remote cloud services when using a cellular interface. The default is 290 seconds.

Allowed values are any number of hours, minutes, or seconds, and take the format *number* {h|m|s}.

For example, to set Cellular keep-alive interval to ten minutes, enter 10m or 600s.

- 12. (Optional) For **Allowed keep-alive misses**, type the number of allowed keep-alive misses. The default is **3**.
- 13. Enable watchdog is used to monitor the connection to Digi Remote Manager. If the connection is down, you can configure the device to restart the connection, or to reboot. The watchdog is enabled by default. To configure the Watchdog service and view metrics, see Watchdog service.
- 14. If Enable watchdog is enabled:
 - a. (Optional) For **Restart Timeout**, type the amount of time to wait before restarting the connection to the remote cloud services, once the connection is down.
 - Allowed values are any number of hours, minutes, or seconds, and take the format **number(himis)**.

For example, to set **Restart Timeout** to ten minutes, enter **10m** or **600s**.

The minimum value is 30 minutes and the maximum is 48 hours. If not set, this option is disabled. The default is 30 minutes.

b. (Optional) For **Reboot Timeout**, type the amount of time to wait before rebooting the device, once the connection to the remote cloud services down. By default, this option is not set, which means that the option is disabled.

Allowed values are any number of hours, minutes, or seconds, and take the format **number(h|m|s)**.

For example, to set Reboot Timeout to ten minutes, enter 10m or 600s.

The minimum value is 30 minutes and the maximum is 48 hours. If not set, this option is disabled. The default is disabled.

- 15. (Optional) Enable **Locally authenticate CLI** to require a login and password to authenticate the user from the remote cloud services CLI. If disabled, no login prompt will be presented and the user will be logged in as **admin**. The default is disabled.
- 16. (Optional) Configure the IX20 device to communicate with remote cloud services by using SMS:
 - a. Click to expand Short message service.
 - b. **Enable** SMS messaging.
 - c. For **Destination phone number**, type the phone number for the remote cloud services:
 - Within the US: 12029823370
 - International: 447537431797
 - d. (Optional) Type the **Service identifier**.
- 17. (Optional) Configure the IX20 device to communicate with remote cloud services via one of two methods: Pinhole or Proxy server.

If using the Pinhole method, refer to the following

If using the Proxy server method:

- a. Click to expand HTTP Proxy.
- b. **Enable** the use of an HTTP proxy server.
- c. For **Server**, type the hostname of the HTTP proxy server.

- d. For **Port**, type or select the port number on the HTTP proxy server that the device should connect to. The default is **2138**.
- 18. Click **Apply** to save the configuration and apply the change.

Command line

Select the device in Remote Manager and click Actions > Open Console, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Digi Remote Manager support is enabled by default. To disable Remote Manager support:

```
(config)> cloud enable false (config)>
```

4. (Optional) Set the URL for the central management server.

```
(config)> cloud drm drm_url url
(config)>
```

The default varies depending on firmware versions:

- Firmware version 22.2.9.x and newer, the default is the edp12.devicecloud.com. This server is for device-connectivity only, and uses enhanced security through certificate-based communication. See Digi Remote Manager support for further infomation.
- Firmware prior to version 22.2.9.x, the default is the Digi Remote Manager server, https://remotemanager.digi.com.
- (Optional) Set the amount of time that the IX20 device should wait before reattempting to connect to the remote cloud services after being disconnected. The minimum value is ten seconds. The default is 30 seconds.

```
(config)> cloud drm retry_interval value
```

where *value* is any number of hours, minutes, or seconds, and takes the format *number* {h|m|s}.

For example, to set the retry interval to ten minutes, enter either 10m or 600s:

```
(config)> cloud drm retry_interval 600s
(config)>
```

 (Optional) Set the amount of time that the IX20 device should wait between sending keepalive messages to the Digi Remote Manager when using a non-cellular interface. Allowed values are from 30 seconds to two hours. The default is 60 seconds.

```
(config)> cloud drm keep_alive value
(config)>
```

where *value* is any number of hours, minutes, or seconds, and takes the format *number* {h|m|s}.

For example, to set the keep-alive interval to ten minutes, enter either 10m or 600s:

(config)> cloud drm keep_alive 600s (config)>

 (Optional) Set the amount of time that the IX20 device should wait between sending keepalive messages to the Digi Remote Manager when using a cellular interface. Allowed values are from 30 seconds to two hours. The default is 290 seconds.

(config)> cloud drm cellular_keep_alive value
(config)>

where *value* is any number of hours, minutes, or seconds, and takes the format *number* {h|m|s}.

For example, to set the cellular keep-alive interval to ten minutes, enter either 10m or 600s:

(config)> cloud drm cellular_keep_alive 600s (config)>

8. Set the number of allowed keep-alive misses. Allowed values are any integer between 2 and 64. The default is 3.

(config)> cloud drm keep_alive_misses integer (config)>

9. The watchdog is used to monitor the connection to remote cloud services. If the connection is down, you can configure the device to restart the connection, or to reboot. The watchdog is enabled by default. To disable:

(config)> cloud drm watchdog false (config)>

- 10. If watchdog is enabled:
 - a. (Optional) Set the amount of time to wait before restarting the connection to the remote cloud services, once the connection is down.

where *value* is any number of hours, minutes, or seconds, and takes the format *number* {h|m|s}.

For example, to set restart timeout to ten minutes, enter either 10m or 600s:

(config)> cloud drm restart_timeout 600s
(config)>

The minimum value is 30 minutes and the maximum is 48 hours. If not set, this option is disabled. The default is 30 minutes.

b. (Optional) Set the amount of time to wait before rebooting the device, once the connection to the remote cloud servicesis down. By default, this option is not set, which means that the option is disabled.

where *value* is any number of hours, minutes, or seconds, and takes the format *number* {h|m|s}.

For example, to set reboot_timeout to ten minutes, enter either 10m or 600s:

(config)> cloud drm reboot_timeout 600s
(config)>

The minimum value is 30 minutes and the maximum is 48 hours. If not set, this option is disabled. The default is disabled.

11. **firmware_url** should normally be left at the default location. To change:

(config)> cloud drm firmware_url url
(config)>

12. (Optional) Set the hostname or IP address of the speedtest server. The default is speedtest accns.com.

(config)> cloud drm speedtest_server name (config)>

13. (Optional) Determine whether to require a login and password to authenticate the user from the remote cloud services CLI:

(config)> cloud drm cli_local_auth true (config)>

If set to **false**, no login prompt will be presented and the user will be logged in as **admin**. The default is **false**.

- 14. (Optional) Configure the IX20 device to communicate with remote cloud services by using SMS:
 - a. Enable SMS messaging:

(config)> cloud drm sms enable true (config)>

b. Set the phone number for Digi Remote Manager:

(config)> cloud drm sms destination *value* (config)>

where value is either:

- Within the US: 12029823370
- International: 447537431797
- c. (Optional) Set the service identifier:

(config)> cloud drm sms sercice_id id (config)>

15. (Optional) Configure the IX20 device to communicate with remote cloud services by using an HTTP proxy server:

a. **Enable** the use of an HTTP proxy server:

(config)> cloud drm proxy enable true (config)>

b. Set the hostname of the proxy server:

(config)> cloud drm proxy host hostname
(config)>

c. (Optional) Set the port number on the proxy server that the device should connect to.
 The default is 2138.

(config)> cloud drm proxy port *integer* (config)>

16. Save the configuration and apply the change.

(config)> save Configuration saved.

17. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Collect device health data and set the sample interval

You can enable or disable the collection of device health data to upload to Digi Remote Manager, and configure the interval between health sample uploads. By default, device health data upload is enabled, and the health sample interval is set to 60 minutes. Each time a device connects to Digi Remote Manager after the device boots (or re-boots), the device immediately uploads all health metrics.

To avoid a situation where several devices are uploading health metrics information to Remote Manager at the same time, the IX20 device includes a preconfigured randomization of two minutes for uploading metrics. For example, if **Health sample interval** is set to five minutes, the metrics will be uploaded to Remote Manager at a random time between five and seven minutes.

To disable the collection of device health data or enable it if it has been disabled, or to change the health sample interval:



- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- a. Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.

d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

3. Click Monitoring > Device Health.



4. (Optional) Click to expand Data point tuning.

Data point tuning options allow to you configure what data are uploaded to the Digi Remote Manager. All options are enabled by default.

5. Only report changed values to Digi Remote Manager is enabled by default.

When enabled:

- The device only reports device health metrics that have changed health metrics were last uploaded. This is useful to reduce the bandwidth used to report health metrics.
- All metrics are uploaded once every hour.

When disabled, all metrics are uploaded every **Health sample interval**.

- 6. Device health data upload is enabled by default. To disable, toggle off **Enable Device Health** samples upload.
- 7. For **Health sample interval**, select the interval between health sample uploads.
- 8. Click Apply to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

> config (config)>

- 3. Device health data upload is enabled by default. To enable or disable:
 - To enable:

```
(config)> monitoring devicehealth enable true (config)>
```

To disable:

```
(config)> monitoring devicehealth enable false (config)>
```

4. The interval between health sample uploads is set to 60 minutes by default. To change:

```
(config)> monitoring devicehealth interval value
(config)>
```

where *value* is one of **1**, **5**, **15**, **30**, or **60**, and represents the number of minutes between uploads of health sample data.

5. By default, the device will only report health metrics values to Digi Remote Manager that have changed health metrics were last uploaded. This is useful to reduce the bandwidth used to report health metrics. This is useful to reduce the bandwidth used to report health metrics. Even if enabled, all metrics are uploaded once every hour.

To disable:

```
(config)> monitoring devicehealth only_send_deltas false (config)>
```

When disabled, all metrics are uploaded every Health sample interval.

(Optional) Tuning parameters allow to you configure what data are uploaded to the Digi Remote Manager. By default, all tuning parameters are enabled.

To view a list of all available tuning parameters, use the **show** command:

```
(config)> show monitoring devicehealth tuning
all
   cellular
        rx
            bytes
                enable true
        tx
            bytes
                enable true
   eth
        rx
            bytes
                enable true
        tx
            bytes
                enable true
   serial
        rx
```

```
bytes
enable true

tx
bytes
enable true

cellular

1

rx
bytes
enable true
packets
enable true

...
(config)>
```

To disable a tuning parameter, set its value to false. For example, to turn off all reporting for the serial port:

```
(config)> monitoring devicehealth tuning all serial rx bytes enabled false (config)> monitoring devicehealth tuning all serial tx bytes enabled false (config)>
```

7. Save the configuration and apply the change.

```
(config)> save
Configuration saved.
>
```

8. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Event log upload to Digi Remote Manager

Your device is automatically configured to upload the event log to Digi Remote Manager. These logs are uploaded every 60 minutes.

Change the upload interval

To change how often the event logs are uploaded to Digi Remote Manager:



- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- a. Locate your device as described in Use Digi Remote Manager to view and manage your device
- b. Click the Device ID.
- c. Click Settings.

d. Click to expand Config.


Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

3. Click Monitoring > Device event logs.

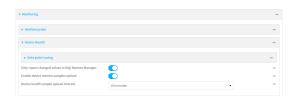

- For Device event log upload interval, change the interval between health sample uploads.
 The default is 60 minutes.
- 5. Click **Apply** to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. The interval between event log uploads is set to 60 minutes by default. To change:

```
(config)> monitoring events interval value (config)>
```

where *value* is one of **1**, **5**, **15**, **30**, or **60**, and represents the number of minutes between uploads of health sample data.

4. Save the configuration and apply the change.

```
(config)> save
Configuration saved.
>
```

5. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Reach Digi Remote Manager on a private network

If your company has a private network and you have devices that need to reach Digi Remote Manager, there are several methods available:

- **Pinhole**: a communication port on your network not protected by the firewall which allows the application on the device to reach Digi Remote Manager.
- **Proxy server**: a dedicated software system equipped with its own IP address that runs on your network and acts as an intermediary between the device and Digi Remote Manager.
- VPN Tunnel: a virtual private network that offers a secure, encrypted connection between a
 device and the internet.

Pinhole method

Using the pinhole method requires your network administrator to remove the firewall connection on a communication port. For more information, see Firewall concerns for outbound EDP connections to Digi Remote Manager.

Proxy server method

The device is capable of connecting through an HTTP proxy, such as Squid, but it is up to the network administrator to decide which HTTP proxy type to use.

To enable a proxy server and enter the server and port in Digi Remote Manager, see step 17 in Configure your device for Digi Remote Manager support.

Tip To see instructions for setting up Squid and then configuring a device (not DAL) to reach Digi Remote Manager, see the Digi Quick Note, Connecting to Digi Remote Manager Through Web Proxy. Though this Quick Note references older technology and device types, it may provide a network administrator with concrete examples from which they can draw correlations to newer technology and devices.

VPN Tunnel method

Configuring a VPN tunnel to communicate with Digi Remote Manager is a two-step process. One step is done by your organization's network administrator and the other by Digi Support.

Step 1: Set up the VPN tunnel

Your organization's network administrator needs to set up a VPN tunnel on your network, which will be used to communicate with Digi Remote Manager through the Digi cloud service.

Step 2. Contact Digi Support.

Digi Support configures the Digi cloud service to allow your VPN to communicate with Digi Remote Manager. Contact Digi Support at https://www.digi.com/contactus.

Log in to Digi Remote Manager

To log in to Remote Manager:

- 1. In a web browser, go to remotemanager.digi.com.
- 2. Type your username.
- 3. Click Continue.

- 4. Type your password.
- 5. Click Login.


If you used the same browser tab/window to log in again, you will see the page you were on in your previous session. If you opened a new browser tab/window to log in, you will see the default fleet Dashboard page.

Tip If you cannot remember your password, go to remotemanager.digi.com, type your username and then click **Forgot username?**. You will be asked to provide your email address associated with your user account. If you are not sure that you have a user account, talk with your Remote Manager administrator.

Use Digi Remote Manager to view and manage your device

To view and manage your device:

- 1. If you have not already done so, connect to your Digi Remote Manager account.
- 2. From the menu, click **Devices** to display a list of your devices.
- Use the Filter bar to locate the device you want to manage. For example, to search by type of device:
 - a. Click the Advanced Search button ()
 - b. Click in the filter bar.

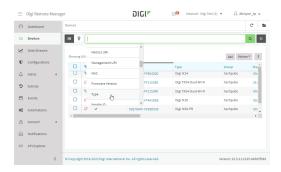

c. Type the type of device (for example, IX20).

Add a device to Remote Manager

There are several options for adding a device to Remote Manager.


- Quick Start process. Use this process to both install a device and then add it to Remote Manager. See the IX20 Quick Start Guide.
- Device label information. Use the information on the device label (e.g., Device ID, MAC address, Password) to add a new device to Remote Manager. See Add a device to Remote Manager using information from the label.
- Digi Remote Manager credentials. Use your Remote Manager credentials to add a device to Remote Manager when you do not have the device password. See Add a device to Remote Manager using your Remote Manager login credentials.

Add a device to Remote Manager using information from the label

Tip If you do not have access to the device label, you can add the device using your Remote Manager login credentials. See Add a device to Remote Manager using your Remote Manager login credentials.

- 1. If you have not already done so, connect to your Digi Remote Manager account.
- 2. From the menu, click **Devices**to display a list of your devices.

3. Click Add.

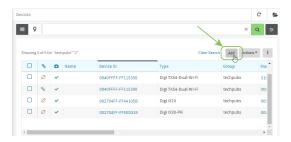

- 4. Type the Device ID, MAC Address, or IMEI.
- For **Device Default Password**, enter the default password on the printed label packaged with your device. The same default password is also shown on the label affixed to the bottom of the device.
- 6. (Optional) Complete the other fields.
- Click Add Device.
 Remote Manager adds the IX20 device to your account and it appears in the Device Management view.

Add a device to Remote Manager using your Remote Manager login credentials

If you want to add a device to Remote Manager, and you do not have its password, you can add it using your Remote Manager login credentials.

To add a device using your Remote Manager credentials:



- 1. Log into the IX20 WebUI as a user with full Admin access rights.
- On the dashboard, in Digi Remote Manager status pane, click Register device in new account.



3. The Register Device in New Account page displays.



- 4. For **Digi Remote Manager Username**, type your Remote Manager username.
- 5. For **Digi Remote Manager Password**, type your Remote Manager password.
- 6. For **Digi Remote Manager Group (optional)**, type the group to which the device will be added, if needed.
- 7. Click Register.

The device is added to Remote Manager.

Command line

- 1. Log into the IX20 local command line as a user with full Admin access rights.
- 2. Register a device.

(register) [group STRING] password STRING username STRING

where:

- group: group to add device in Digi Remote Manager.
- password: Digi Remote Manager password (required).
- username: Digi Remote Manager username (required).
- 1. Click **Apply** to save the configuration and apply the change.
- 2. Save the configuration and apply the change.

(config)> save Configuration saved.

3. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configure multiple IX20 devices by using Digi Remote Manager configurations

Digi recommends you take advantage of Remote Manager configurations to manage multiple IX20 devices. A Remote Manager configuration is a named set of device firmware, settings, and file system options. You use the configuration to automatically update multiple devices and to periodically scan devices to check for compliance with the configuration. See the Digi Remote Manager User Quide for more information about Remote Manager configurations.

Typically, if you want to provision multiple IX20 routers:

- 1. Using the IX20 local WebUI, configure one IX20 router to use as the model configuration for all subsequent IX20s you need to manage.
- 2. Register the configured IX20 device in your Remote Manager account.

- 3. In Remote Manager, create a configuration:
 - a. From the Dashboard, select Configurations.



b. Click Create.



- Enter a Name and an optional Description for the configuration, and select the Groups,
 Device Type, and Firmware Version.
- d. Click Save and continue.
- e. Click **Import from device** and select the device configured above.
- f. Click Import.
- g. At the Settings page, configure any desired configuration overrides and click Continue.
- h. At the **File System** page, make any desired changes to the files that were imported from the device and click **Continue**.
- i. At the Automations page, click **Enable Scanning**, make any other desired changes, and click **Save**.

Digi Remote Manager provides multiple methods for applying configurations to registered devices. You can also include site-specific settings with a profile to override settings on a device-by-device basis.


View Digi Remote Manager connection status

To view the current Digi Remote Managerconnection status from the local device:



Central management Learn more

Log into the IX20 WebUI as a user with full Admin access rights.
 The dashboard includes a Digi Remote Manager status pane:

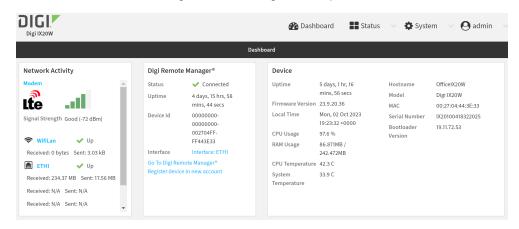

Command line

- 1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.
 - Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
- Use the show cloud command to view the status of your device's connection to Remote Manager:



1. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Learn more

To learn more about Digi Remote Manager features and functions, see the Digi Remote Manager User Quide.

Interfaces

IX20 devices have several physical communications interfaces. These interfaces can be bridged in a Local Area Network (LAN) or assigned to a Wide Area Network (WAN).

This chapter contains the following topics:

Wide Area Networks (WANs)	94
Local Area Networks (LANs)	189
Virtual LANs (VLANs)	
Bridging	
Show SureLink status and statistics	247
Configure a TCP connection timeout	251

Wide Area Networks (WANs)

The IX20 device is preconfigured with one Wide Area Network (WAN), named **ETH1**, and oneWireless Wide Area Network (WWAN), named **Modem**.

Interface type	Preconfigured interfaces	Devices	Default configuration
Wide Area Network (WAN)	■ ETH1	■ Ethernet: ETH1	 Firewall zone: External WAN priority:
Wireless Wide Area Network (WWAN)	■ Modem	■ Modem	 Firewall zone: External WAN priority:

You can modify configuration settings for the existing WAN and WWANs, and you can create new WANs and WWANs.

This section contains the following topics:

Wide Area Networks (WANs) and Wireless Wide Area Networks (WWANs)	95
Configure WAN/WWAN priority and default route metrics	
WAN/WWAN failover	
Configure SureLink active recovery to detect WAN/WWAN failures	99
Configure the device to reboot when a failure is detected	115
Disable SureLink	128
Example: Use a ping test for WAN failover from Ethernet to cellular	
Using Ethernet devices in a WAN	
Using cellular modems in a Wireless WAN (WWAN)	
Configure a Wide Area Network (WAN)	
Configure a Wireless Wide Area Network (WWAN)	
Show WAN and WWAN status and statistics	
Delete a WAN or WWAN	

Default (outbound	WAN/WWAN I	oorts	18	88
-----------	----------	------------	-------	----	----

Wide Area Networks (WANs) and Wireless Wide Area Networks (WWANs)

A Wide Area Network (WAN) provides connectivity to the internet or a remote network. A WAN configuration consists of the following:

- A physical device, such as an Ethernet device or a cellular modem.
- Several networking parameters for the WAN, such as firewall configuration and IPv4 and IPv6 support.
- Several parameters controlling failover.

Configure WAN/WWAN priority and default route metrics

The IX20 device is preconfigured with one Wide Area Network (WAN), named **ETH1**, and oneWireless Wide Area Network (WWAN), named **Modem**. You can also create additional WANs and WWANs.

When a WAN is initialized, the IX20 device automatically adds a Setup IP route for the WAN. The priority of the WAN is based on the metric of the default route, as configured in the WAN's IPv4 and IPv6 metric settings.

Assigning priority to WANs

By default, the IX20 device's WAN (**ETH1**) is configured with the lowest metric (1), and is therefor the highest priority WAN. By default, the Wireless WAN (**Modem**) is configured with a metric of 3, which means it has a lower priority than **ETH1**. You can assign priority to WANs based on the behavior you want to implement for primary and backup WAN interfaces. For example, if you want a cellular connection to be your primary WAN, with an Ethernet interface as backup, configure the metric of the WWAN to be lower than the metric of the WAN.

Example: Configure cellular connection as the primary WAN, and the Ethernet connection as backup

Required configuration items

- Configured WAN and WWAN interfaces. This example uses the preconfigured ETH1 and Modem interfaces.
- The metric for each WAN.



- Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- a. Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.

- c. Click Settings.
- d. Click to expand Config.


Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.




The Configuration window is displayed.

- 3. Set the metrics for Modem:
 - a. Click Network > Interfaces > Modem > IPv4.
 - b. For Metric, type 1.
 - c. Click IPv6.
 - d. For Metric, type 1.

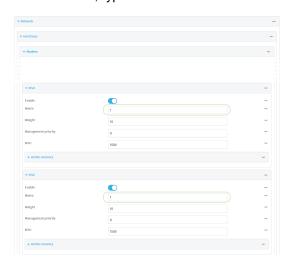

- 4. Set the metrics for **ETH1**:
 - a. Click Network > Interfaces > ETH1 > IPv4.
 - b. For Metric, type 2.
 - c. Click IPv6.
 - d. For Metric, type 2.

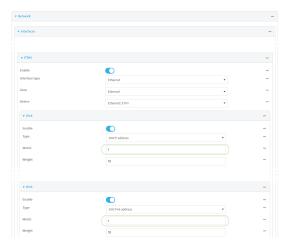

5. Click Apply to save the configuration and apply the change.

The IX20 device is now configured to use the cellular modem WWAN, **Modem**, as its highest priority WAN, and its Ethernet WAN, **ETH1**, as its secondary WAN.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

- 3. Set the metrics for Modem:
 - a. Set the IPv4 metric for **Modem** to **1**. For example:

```
(config)> network interface modem ipv4 metric 1 (config)>
```

b. Set the IPv6 metric for **Modem** to 1:

(config)> network interface modem ipv6 metric 1 (config)>

- 4. Set the metrics for ETH1:
 - a. Set the IPv4 metric for ETH1 to 2:

```
(config)> network interface eth1 ipv4 metric 2 (config)>
```

b. Set the IPv6 metric for **ETH1** to **1**:

(config)> network interface eth1 ipv6 metric 2 (config)>

5. Save the configuration and apply the change.

(config)> save Configuration saved.

6. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

The IX20 device is now configured to use the cellular modem WWAN, **Modem**, as its highest priority WAN, and its Ethernet WAN, **ETH1**, as its secondary WAN.

WAN/WWAN failover

If a connection to a WAN interface is lost for any reason, the IX20 device will immediately fail over to the next WAN or WWAN interface, based on WAN priority. See Configure WAN/WWAN priority and default route metrics for more information about WAN priority.

Active vs. passive failure detection

There are two ways to detect WAN or WWAN failure: active detection and passive detection.

- Active detection uses Digi SureLinkTM technology to send probe tests to a target host or to test the status of the interface. The WAN/WWAN is considered to be down if there are no responses for a configured amount of time. See Configure SureLink active recovery to detect WAN/WWAN failures for more information about active failure detection.
- Passive detection involves detecting the WAN going down by monitoring its link status by some means other than active detection. For example, if an Ethernet cable is disconnected or the state of a cellular interface changes from on to off, the WAN is down.

Default Digi SureLink configuration

Surelink is enabled by default for IPv4 on all WAN and WWAN interfaces, and is configured to perform two tests on these interfaces:

- Interface connectivity.
- DNS query to the DNS servers for interface's the network connection.
 DNS servers are typically received as part of the interface's DHCP client connection, although you can manually configure the DNS servers that will be used by SureLink.

Note If your device is operating on a private APN or on wired network with firewall restrictions, ensure that the DNS servers on your private network allow DNS lookups for https://remotemanager.digi.com; otherwise, the SureLink DNS query test will fail and the IX20 device will determine that the interface is down.

By default, these tests will be performed every 15 minutes, with a response timeout of 15 seconds. If the tests fail three consecutive times, the device will reset the network interface to attempt to recover the connection.

Configure SureLink active recovery to detect WAN/WWAN failures

Problems can occur beyond the immediate WAN/WWAN connection that prevent some IP traffic from reaching its destination. Normally this kind of problem does not cause the IX20 device to detect that the WAN has failed, because the connection continues to work while the core problem exists somewhere else in the network.

Using Digi SureLink, you can configure the IX20 device to regularly probe connections through the WAN to determine if the WAN has failed, and to perform recovery actions, such as changing the interface metric to use a new default gateway.

Required configuration items

- Enable SureLink.
 - By default, SureLink is enabled for the preconfigured WAN (**ETH1**) and WWAN (**Modem**). The default configuration tests the DNS servers configured for the interface.
 - When SureLink is configured for Wireless WANs, SureLink tests are only run if the cellular modem is connected and has an IP address. Use the **SIM failover** options to configure the IX20 device to automatically recover the modem in the event that it cannot obtain an IP address. See Configure a Wireless Wide Area Network (WWAN) for details about **SIM failover**.
- The type of tests to be performed:
 - Ping test: Uses ICMP to determine connectivity. The default behavior is to ping the
 interface gateway, which means that an initial traceroute is sent to the hostname or IP
 address configured in the SureLink advanced settings, and then the first hop in that route
 is used for the ping test.
 - DNS test: Performs a DNS query to the named DNS server.
 - HTTP test: Uses HTTP(s) GET requests to determine connectivity to the configured web server.
 - Test DNS servers configured for this interface: Tests communication with DNS servers that are either provided by DHCP, or statically configured for this interface.
 - **Test the interface status**: Tests the current status of the interface. The test fails if the interface is down. Failing this test infers that all other tests fail.
 - Custom test: Tests the interface with custom commands.
 - **TCP connection test**: Tests that the interface can reach a destination port on the configured host.
 - Test another interface's status: Tests the status of another interface.
- The actions to take to recover connectivity in the event of failed tests:
 - Change default gateway: Increases the interface's metric to change the default gateway.
 This recovery action is enabled by default for the preconfigured WAN and WWAN interfaces.
 - Restart interface This recovery action is enabled by default for the preconfigured WAN and WWAN interfaces.
 - Reset modem: This recovery action is enabled by default for the preconfigured WWAN interface.
 - **Switch to alternate SIM**: Switches to an alternate SIM. This recovery action is enabled by default for the preconfigured WWAN interface.
 - Reboot device.

- Execute custom Recovery commands.
- **Powercycle the modem**. This recovery action is enabled by default for the preconfigured WWAN interface.
- Two options also apply to every type of action:
 - SureLink test failures: The number of failures for this recovery action to perform, before moving to the next recovery action.
 - Override wait interval before performing the next recovery action: The time to wait before the next test is run. If set to the default value of 0s, the Test interval is used.

Additional configuration items

- The Test interval between connectivity tests.
- If more than one tests is configured, determine whether the interface should fail over based on the failure of one of the tests, or all of the tests.
- The number of test that must pass before the interface is considered to be working and its default route and DNS servers are reinstated.
- The amount of time that the device should wait for a response from an individual test before considering it to have failed.
- Advanced configuration items:
 - **Delayed Start**: The amount of time to wait while the device is starting before SureLink testing begins. This setting is bypassed when the interface is determined to be up.
 - Backoff interval: The time to add to the test interval when restarting the list of actions.
 - Test interface gateway by pinging: Used by the Interface gateway Ping test as the
 endpoint for traceroute to use to determine the interface gateway.

Order of precedence for SureLink actions

SureLink recovery actions are preformed in the order that they are configured. As a result, if you include the **Reboot Device** with other SureLink recovery actions, it should be the last action in the recovery action list. Otherwise, the device will reboot and all recovery actions listed after the **Reboot Device** action will be ignored.



- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.


Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

- 3. Click Network > Interfaces.
- 4. Create a new WAN or WWAN or select an existing one:
 - To create a new WAN or WWAN, see Configure a Wide Area Network (WAN) or Configure a Wireless Wide Area Network (WWAN).
 - To edit an existing WAN or WWAN, click to expand the appropriate WAN or WWAN.
- 5. After creating or selecting the WAN or WWAN, click SureLink.

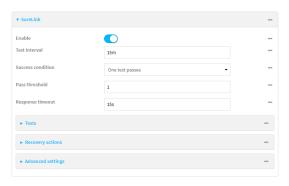

By default, SureLink is enabled for the preconfigured WAN (**ETH1**) and WWAN (**Modem**). The default configuration tests the DNS servers configured for the interface.

When SureLink is configured for Wireless WANs, SureLink tests are only run if the cellular modem is connected and has an IP address. Use the **SIM failover** options to configure the IX20 device to automatically recover the modem in the event that it cannot obtain an IP address. See Configure a Wireless Wide Area Network (WWAN) for details about **SIM failover**.

6. (Optional) Change the **Test interval** between connectivity tests.

Allowed values are any number of weeks, days, hours, minutes, or seconds, and take the format *number*{w|d|h|m|s}.

For example, to set Interval to ten minutes, enter 10m or 600s.

The default is 15 minutes.

- 7. (Optional) If more than one test target is configured, for Success condition, select either:
 - One test passes: Only one test needs to pass for Surelink to consider an interface to be up.
 - All test pass: All tests need to pass for SureLink to consider the interface to be up.
- 8. (Optional) For **Pass threshold**, type or select the number of times that the test must pass after failure, before the interface is determined to be working and is reinstated.
- 9. (Optional) For **Response timeout**, type the amount of time that the device should wait for a response to a test failure before considering it to have failed.

Allowed values are any number of weeks, days, hours, minutes, or seconds, and take the format *number*{w|d|h|m|s}.

For example, to set **Response timeout** to ten minutes, enter **10m** or **600s**.

The default is 15 seconds.

Click to expand Tests.

By default, **Test DNS servers configured for this interface** is automatically configured and enabled. This test communication with DNS servers that are either provided by DHCP, or statically configured for this interface.

a. Click 1/2



New tests are enabled by default. To disable, click to toggle off **Enable**.

- b. Type a Label for the test.
- c. Click to toggle on IPv6 if the test should apply to both IPv6 rather than IPv4.
- d. Select the Test type.

Available test types:

Ping test: Uses ICMP to determine connectivity.

If **Ping test** is selected, complete the following:

- Ping target: The type of target for the ping, one of:
 - Hostname or IP address of an external server.
 - Ping host: hostname or IP address of the server.
 - The Interface gateway. If Interface gateway is selected, an initial traceroute is sent to the hostname or IP address configured in the SureLink advanced settings, and then the first hop in that route is used for the ping test.
 - The Interface address.
 - The Interface DNS server.
- Ping payload size: The number of bytes to send as part of the ping payload.
- **DNS test**: Performs a DNS query to the named DNS server.

If **DNS test** is selected, complete the following:

- **DNS server**: The IP address of the DNS server.
- HTTP test: Uses HTTP(s) GET requests to determine connectivity to the configured web server.

If **HTTP test** is selected, complete the following:

- Web server: The URL of the web server.
- Test DNS servers configured for this interface: Tests communication with DNS servers that are either provided by DHCP, or statically configured for this interface.
- Test the interface status: Tests the current status of the interface. The test fails if the interface is down. Failing this test infers that all other tests fail.

If **Test the interface status** is selected, complete the following:

• **Down time**: The amount of time that the interface is down before the test can be considered to have failed.

Allowed values are any number of weeks, days, hours, minutes, or seconds, and take the format *number*{w|d|h|m|s}.

For example, to set **Down time** to ten minutes, enter **10m** or **600s**.

• Initial connection time: The amount of time to wait for the interface to connect for the first time before the test is considered to have failed.

Allowed values are any number of weeks, days, hours, minutes, or seconds, and take the format *number*{w|d|h|m|s}.

For example, to set Initial connection time to ten minutes, enter 10m or 600s.

Custom test: Tests the interface with custom commands.

If **Custom test** is selected, complete the following:

- The Commands to run to test.
- **TCP connection test**: Tests that the interface can reach a destination port on the configured host.

If **TCP** connection test is selected, complete the following:

- TCP connect host: The hostname or IP address of the host to create a TCP connection to.
- TCP connect port: The TCP port to create a TCP connection to.
- Test another interface's status: Tests the status of another interface.

If **Test another interface's status** is selected, complete the following:

- Test interface: The interface to test.
- **IP version**: The type of IP connection, one of:
 - Any: Either the IPv4 or IPv6 connection must be up.
 - Both: Both the IPv4 or IPv6 connection must be up.
 - **IPv4**: The IPv4 connection must be up.
 - IPv6: The IPv6 connection must be up.
- Expected status: The status required for the test to past.
 - Up: The test will pass only if the referenced interface is up and passing its own SureLink tests (if applicable).
 - Down: The test will pass only if the referenced interface is down or failing its own SureLink tests (if applicable).
- e. Repeat for each additional test.
- 11. Add recovery actions:
 - a. Click to expand Recovery actions.

By default, there are two preconfigured recovery actions:

- Update routing: Uses the Change default gateway action, which increases the interface's metric by 100 to change the default gateway.
- Restart interface.

b. Click 1/2



New recovery actions are enabled by default. To disable, click to toggle off Enable.

- c. Type a Label for the recovery action.
- d. For Recovery type, select Reboot device.
- For Recovery type, select the type of recovery action. If multiple recovery actions are configured, they are performed in the order that they are listed.
 - Change default gateway: Increases the interface's metric to change the default gateway.

If Change default gateway is selected, complete the following:

- **SureLink test failures**: The number of failures for this recovery action to perform, before moving to the next recovery action.
- Increase metric to change active default gateway: Increase the interface's
 metric by this amount. This should be set to a number large enough to change
 the routing table to use another default gateway. The default is 100.
- Override wait interval before performing the next recovery action: The time to
 wait before the next test is run. If set to the default value of 0s, the Test
 interval is used.
- Restart interface.

If **Restart interface** is selected, complete the following:

- **SureLink test failures**: The number of failures for this recovery action to perform, before moving to the next recovery action.
- Override wait interval before performing the next recovery action: The time to
 wait before the next test is run. If set to the default value of 0s, the Test
 interval is used.
- Reset modem: This recovery action is available for WWAN interfaces only.

If **Reset modem** is selected, complete the following:

- **SureLink test failures**: The number of failures for this recovery action to perform, before moving to the next recovery action.
- Override wait interval before performing the next recovery action: The time to
 wait before the next test is run. If set to the default value of 0s, the Test
 interval is used.
- **Switch to alternate SIM**: Switches to an alternate SIM. This recovery action is available for WWAN interfaces only.

If Switch to alternate SIM is selected, complete the following:

- **SureLink test failures**: The number of failures for this recovery action to perform, before moving to the next recovery action.
- Override wait interval before performing the next recovery action: The time to
 wait before the next test is run. If set to the default value of 0s, the Test
 interval is used.

Reboot device.

If **Reboot device** is selected, complete the following:

- **SureLink test failures**: The number of failures for this recovery action to perform, before moving to the next recovery action.
- Override wait interval before performing the next recovery action: The time to
 wait before the next test is run. If set to the default value of 0s, the Test
 interval is used.
- Execute custom Recovery commands.

If **Recovery commands** is selected, complete the following:

- SureLink test failures: The number of failures for this recovery action to perform, before moving to the next recovery action.
- The Commands to run to recovery connectivity.
- Override wait interval before performing the next recovery action: The time to
 wait before the next test is run. If set to the default value of 0s, the Test
 interval is used.
- Powercycle the modem. This recovery action is available for WWAN interfaces only.

If **Powercycle the modem** is selected, complete the following:

- **SureLink test failures**: The number of failures for this recovery action to perform, before moving to the next recovery action.
- Override wait interval before performing the next recovery action: The time to
 wait before the next test is run. If set to the default value of 0s, the Test
 interval is used.
- f. Repeat for each additional recovery action.
- 12. (Optional) Configure advanced SureLink parameters:
 - a. Click to expand Advanced settings.
 - b. For **Delayed Start**, type the amount of time to wait while the device is starting before SureLink testing begins. This setting is bypassed when the interface is determined to be up.

Allowed values are any number of weeks, days, hours, minutes, or seconds, and take the format *number*{w|d|h|m|s}.

For example, to set **Delayed start** to ten minutes, enter **10m** or **600s**.

The default is 300 seconds.

c. For **Backoff interval**, type the time to add to the test interval when restarting the list of actions. This option is capped at 15 minutes.

Allowed values are any number of weeks, days, hours, minutes, or seconds, and take the format *number*{w|d|h|m|s}.

For example, to set Backoff interval to ten minutes, enter 10m or 600s.

The default is 300 seconds.

d. Test interface gateway by pinging is used by the Interface gateway Ping test as the endpoint for traceroute to use to determine the interface gateway. The default is 8.8.8.8, and should only be changed if this IP address is not accessible due to networking issues.

13. Click Apply to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

- 3. Create a new WAN or WWAN, or edit an existing one:
 - To create a new WAN or WWAN, see Configure a Wide Area Network (WAN) or Configure a Wireless Wide Area Network (WWAN).
 - To edit an existing WAN or WWAN, change to the WAN or WWAN's node in the configuration schema. For example, for a WAN or WWAN named my_wan, change to the my_wan node in the configuration schema:

(config)> network interface my_wan
(config network interface my_wan)>

4. Enable SureLink.

By default, SureLink is enabled for the preconfigured WAN (eth1) and WWAN (modemwwan2). The default configuration tests the DNS servers configured for the interface.

When SureLink is configured for Wireless WANs, SureLink tests are only run if the cellular modem is connected and has an IP address. Use the **SIM failover** options to configure the IX20 device to automatically recover the modem in the event that it cannot obtain an IP address. See Configure a Wireless Wide Area Network (WWAN) for details about **SIM failover**.

```
(config network interface my_wan)> surelink enable true (config network interface my_wan)>
```

 By default, the **Test DNS servers configured for this interface** test is automatically configured and enabled. This tests communication with DNS servers that are either provided by DHCP, or statically configured for this interface.

To add additional tests:

a. Add a test:

(config network interface my_wan)> add surelink tests end (config network interface my_wan surelink tests 1)>

b. New tests are enabled by default. To disable:

(config network interface my_wan surelink tests 1)> enable false (config network interface my_wan surelink tests 1)>

c. Create a label for the test:

(config network interface my_wan surelink tests 1)> label *string* (config network interface my_wan surelink tests 1)>

d. if the test should apply to both IPv6 rather than IPv4, enable IPv6:

(config network interface my_wan surelink tests 1)> ipv6 true (config network interface my_wan surelink tests 1)>

e. Set the test type:

(config network interface my_wan surelink tests 1)> test *value* (config network interface my_wan surelink tests 1)>

where value is one of:

ping: Uses ICMP to determine connectivity.
If ping is selected, complete the following:

• Set the ping_method:

(config network interface my_wan surelink tests 1)> ping_method *value* (config network interface my_wan surelink tests 1)>

where value is one of:

- o hostname: The hostname or IP address of an external server.
 - Set ping_host to the hostname or IP address of the server:

(config network interface my_wan surelink tests 1)> ping_host hostname/IP_address
(config network interface my_wan surelink tests 1)>

- interface_gateway. If set, an initial traceroute is sent to the hostname or IP address configured in the SureLink advanced settings, and then the first hop in that route is used for the ping test.
- o interface_address.
- o interface_dns: The interface's DNS server.
- Set the number of bytes to send as part of the ping payload:

(config network interface my_wan ipsec tunnel ipsec_example surelink tests 1)> ping_size *int* (config network interface my_wan surelink tests 1)>

dns: Performs a DNS query to the named DNS server.

If dns is set, set the IPv4 or IPv6 address of the DNS server:

(config network interface my_wan surelink tests 1)> dns_server *IP_address* (config network interface my_wan surelink tests 1)>

http: Uses HTTP(s) GET requests to determine connectivity to the configured web server.

If **http** is set, set the URL of the web server.

(config network interface my_wan surelink tests 1)> http *url* (config network interface my_wan surelink tests 1)>

- dns_configured: Tests communication with DNS servers that are either provided by DHCP, or statically configured for this interface.
- interface_up: Tests the current status of the interface. The test fails if the interface is down. Failing this test infers that all other tests fail.

If interface_up is set, complete the following:

 Set the amount of time that the interface is down before the test can be considered to have failed.

(config network interface my_wan surelink tests 1)> interface_down_time value (config network interface my_wan surelink tests 1)>

where *value* is any number of weeks, days, hours, minutes, or seconds, and takes the format *number*{w|d|h|m|s}.

For example, to set **interface_down_time** to ten minutes, enter either **10m** or **600s**:

(config network interface my_wan surelink tests 1)> interface_down_time 600s (config)>

• Set the amount of time to wait for the interface to connect for the first time before the test is considered to have failed.

(config network interface my_wan surelink tests 1)> interface_timeout *value* (config network interface my_wan surelink tests 1)>

where *value* is any number of weeks, days, hours, minutes, or seconds, and takes the format *number*{w|d|h|m|s}.

For example, to set **interface_timeout** to ten minutes, enter either **10m** or **600s**:

(config network interface my_wan surelink tests 1)> interface_timeout 600s (config)>

custom_test: Tests the interface with custom commands.

If **custom_test** is set, set the commands to run to perform the test:

(config network interface my_wan surelink tests 1)> custom_test_commands "string" (config network interface my_wan surelink tests 1)>

tcp_connection: Tests that the interface can reach a destination port on the configured host.

If **tcp_connection** is selected, complete the following:

• Set the hostname or IP address of the host to create a TCP connection to:

(config network interface my_wan surelink tests 1)> tcp_host hostname/IP_address (config network interface my_wan surelink tests 1)>

Set the TCP port to create a TCP connection to.

(config network interface my_wan surelink tests 1)> tcp_port port (config network interface my_wan surelink tests 1)>

other: Tests the status of another interface.

If **other** is selected, complete the following:

- · Set the interface to test.
 - i. Use the ?to determine available interfaces:

(config network interface my_wan surelink tests 1)> other_interface ?

Test interface: Test the status of this other interface.

Format:

/network/interface/setupip

/network/interface/setuplinklocalip

/network/interface/eth1

/network/interface/eth2

/network/interface/loopback

Current value:

(config network interface my_wan surelink tests 1)> other_interface

ii. Set the interface. For example:

(config network interface my_wan surelink tests 1)> other_interface /network/interface/eth1 (config network interface my_wan surelink tests 1)>

Set the type of IP connection:

(config network interface my_wan surelink tests 1)> other_ip_version *value* (config network interface my_wan surelink tests 1)>

where value is one of:

- o any: Either the IPv4 or IPv6 connection must be up.
- both: Both the IPv4 or IPv6 connection must be up.
- **ipv4** The IPv4 connection must be up.
- **ipv6**: The IPv6 connection must be up.
- The status required for the test to past.

(config network interface my_wan surelink tests 1)> other_status *value* (config network interface my_wan surelink tests 1)>

where value is one of:

- up: The test will pass only if the referenced interface is up and passing its own SureLink tests (if applicable).
- down: The test will pass only if the referenced interface is down or failing its own SureLink tests (if applicable).
- Repeat for each additional test.
- 6. Add recovery actions:
 - a. Type ... to return to the root of the configuration:

(config network interface my_wan surelink tests 1)> ... (config)>

b. Add a recovery action:

(config)> add network interface my_wan surelink actions end (config network interface my_wan surelink actions 0)>

c. New actions are enabled by default. To disable:

(config network interface my_wan surelink actions 0)> enable false (config network interface my_wan surelink actions 0)>

d. Create a label for the action:

(config network interface my_wan surelink actions 0)> label *string* (config network interface my_wan surelink actions 0)>

- e. Set the type of recovery action. If multiple recovery actions are configured, they are performed in the order that they are listed. The command varies depending on whether the interface is a WAN or WWAN:
 - WAN interfaces:

(config network interface my_wan surelink actions 0)> action value (config network interface my_wan surelink actions 0)>

WWAN interfaces:

(config network interface my_wan surelink actions 0)> modem_action *value* (config network interface my_wan surelink actions 0)>

where value is one of:

 update_routing_table: Increases the interface's metric to change the default gateway.

If **update_routing_table** is selected, complete the following:

 Set the number of failures for this recovery action to perform, before moving to the next recovery action:

(config network interface my_wan surelink actions 0)> test_failures *int* (config network interface my_wan surelink actions 0)>

The default is 3.

 Set the amount that the interface's metric should be increased. This should be set to a number large enough to change the routing table to use another default gateway.

(config network interface my_wan surelink actions 0)> metric_adjustment_modem int

(config network interface my_wan surelink actions 0)>

The default is 100.

 Set the time to wait before the next test is run. If set to the default value of 0s, the test interval is used.

(config network interface my_wan surelink actions 0)> override_interval *int* (config network interface my_wan surelink actions 0)>

restart interface.

If restart_interface is selected, complete the following:

 Set the number of failures for this recovery action to perform, before moving to the next recovery action:

(config network interface my_wan surelink actions 0)> test_failures *int* (config network interface my_wan surelink actions 0)>

The default is 3.

 Set the time to wait before the next test is run. If set to the default value of 0s, the test interval is used.

(config network interface my_wan surelink actions 0)> override_interval int (config network interface my_wan surelink actions 0)>

reset_modem: This recovery action is available for WWAN interfaces only.

If reset_modem is selected, complete the following:

• Set the number of failures for this recovery action to perform, before moving to the next recovery action:

(config network interface my_wan surelink actions 0)> test_failures *int* (config network interface my_wan surelink actions 0)>

The default is 3.

 Set the time to wait before the next test is run. If set to the default value of 0s, the test interval is used.

(config network interface my_wan surelink actions 0)> override_interval int (config network interface my_wan surelink actions 0)>

 switch_sim: Switches to an alternate SIM. This recovery action is available for WWAN interfaces only.

If **switch** sim is selected, complete the following:

 Set the number of failures for this recovery action to perform, before moving to the next recovery action:

(config network interface my_wan surelink actions 0)> test_failures *int* (config network interface my_wan surelink actions 0)>

The default is 3.

 Set the time to wait before the next test is run. If set to the default value of 0s, the test interval is used.

(config network interface my_wan surelink actions 0)> override_interval *int* (config network interface my_wan surelink actions 0)>

modem_power_cycle: This recovery action is available for WWAN interfaces only.
If modem_power_cycle is selected, complete the following:

 Set the number of failures for this recovery action to perform, before moving to the next recovery action:

(config network interface my_wan surelink actions 0)> test_failures *int* (config network interface my_wan surelink actions 0)>

The default is 3.

 Set the time to wait before the next test is run. If set to the default value of 0s, the test interval is used.

(config network interface my_wan surelink actions 0)> override_interval int (config network interface my_wan surelink actions 0)>

reboot device.

If **reboot** device is selected, complete the following:

 Set the number of failures for this recovery action to perform, before moving to the next recovery action:

(config network interface my_wan surelink actions 0)> test_failures *int* (config network interface my_wan surelink actions 0)>

The default is 3.

 Set the time to wait before the next test is run. If set to the default value of 0s, the test interval is used.

(config network interface my_wan surelink actions 0)> override_interval int (config network interface my_wan surelink actions 0)>

custom_action: Execute custom recovery commands.

If **custom action** is selected, complete the following:

 Set the number of failures for this recovery action to perform, before moving to the next recovery action:

(config network interface my_wan surelink actions 0)> test_failures *int* (config network interface my_wan surelink actions 0)>

The default is 3.

Set the commands to run to attempt to recovery connectivity.

(config network interface my_wan surelink actions 0)> custom_action_commands_ modem "string" (config network interface my_wan surelink actions 0)>

 Set the time to wait before the next test is run. If set to the default value of 0s, the test interval is used.

(config network interface my_wan surelink actions 0)> override_interval int (config network interface my_wan surelink actions 0)>

- f. Repeat for each additional recovery action.
- 7. Optional SureLink configuration parameters:
 - a. Type ... to return to the root of the configuration:

(config network interface my_wan surelink actions 0)> ... (config)>

b. Set the test interval between connectivity tests:

(config)> network interface my_wan surelink interval *value* (config)>

where *value* is any number of weeks, days, hours, minutes, or seconds, and takes the format *number*{w|d|h|m|s}.

For example, to set interval to ten minutes, enter either 10m or 600s:

(config)> network interface my_wan surelink interval 600s (config)>

The default is 15m.

c. If more than one test target is configured, set the success condition:

(config)> network interface my_wan surelink success_condition *value* (config)>

where value is either:

- one: Only one test needs to pass for Surelink to consider an interface to be up.
- all: All tests need to pass for SureLink to consider the interface to be up.
- d. Set the number of times that the test must pass after failure, before the interface is determined to be working and is reinstated.

(config)> network interface my_wan surelink pass_threshold int (config)>

The default is 1.

e. Set the amount of time that the device should wait for a response to a test failure before considering it to have failed:

(config)> network interface my_wan surelink timeout value (config)>

where *value* is any number of weeks, days, hours, minutes, or seconds, and takes the format *number*{w|d|h|m|s}.

For example, to set timeout to ten minutes, enter either 10m or 600s:

(config)> network interface my_wan surelink timeout 600s (config)>

The default is 15s.

f. Set the amount of time to wait while the device is starting before SureLink testing begins. This setting is bypassed when the interface is determined to be up.

(config)> network interface my_wan surelink advanced delayed_start *value* (config)>

where *value* is any number of weeks, days, hours, minutes, or seconds, and takes the format *number*{w|d|h|m|s}.

For example, to set **delayed_start** to ten minutes, enter either **10m** or **600s**:

(config)> network interface my_wan surelink advanced delayed_start 600s (config)>

The default is 300s.

g. Set the time to add to the test interval when restarting the list of actions. This option is capped at 15 minutes.

(config)> network interface my_wan surelink advanced backoff_interval *value* (config)>

where *value* is any number of weeks, days, hours, minutes, or seconds, and takes the format *number*{w|d|h|m|s}.

For example, to set **backoff_interval** to ten minutes, enter either **10m** or **600s**:

(config)> network interface my_wan surelink advanced backoff_interval 600s (config)>

The default is 300 seconds.

h. The **interface_gateway** parameter is used by the Interface gateway Ping test as the endpoint for traceroute to use to determine the interface gateway. The default is **8.8.8.8**, and should only be changed if this IP address is not accessible due to networking issues. To set to an alternate host:

(config)> network interface my_wan surelink advanced interface_gateway *hostname/IP_address* (config)>

8. Save the configuration and apply the change.

(config network interface my_wan ipv4 surelink)> save Configuration saved.

9. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configure the device to reboot when a failure is detected

Using SureLink, you can configure the IX20 device to reboot when it has determined that an interface has failed.

Required configuration items

■ Enable SureLink.

By default, SureLink is enabled for the preconfigured WAN (**ETH1**) and WWAN (**Modem**). The default configuration tests the DNS servers configured for the interface.

When SureLink is configured for Wireless WANs, SureLink tests are only run if the cellular modem is connected and has an IP address. Use the **SIM failover** options to configure the IX20 device to automatically recover the modem in the event that it cannot obtain an IP address. See Configure a Wireless Wide Area Network (WWAN) for details about **SIM failover**.

- Enable device reboot upon interface failure.
- The type of tests to be performed:
 - **Ping test**: Uses ICMP to determine connectivity. The default behavior is to ping the interface gateway, which means that an initial traceroute is sent to the hostname or IP address configured in the SureLink advanced settings, and then the first hop in that route is used for the ping test.
 - DNS test: Performs a DNS query to the named DNS server.
 - HTTP test: Uses HTTP(s) GET requests to determine connectivity to the configured web server.
 - Test DNS servers configured for this interface: Tests communication with DNS servers that are either provided by DHCP, or statically configured for this interface.
 - **Test the interface status**: Tests the current status of the interface. The test fails if the interface is down. Failing this test infers that all other tests fail.
 - Custom test: Tests the interface with custom commands.
 - **TCP connection test**: Tests that the interface can reach a destination port on the configured host.
 - Test another interface's status: Tests the status of another interface.

Additional configuration items

 See Configure SureLink active recovery to detect WAN/WWAN failures for optional SureLink configuration parameters.

To configure the IX20 device to reboot when an interface has failed:

₹ Web

- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- a. Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.


Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

- 3. Click Network > Interfaces.
- 4. Create a new interface or select an existing one:
 - To create a new interface, see Configure a Local Area Network (LAN), Configure a Wide Area Network (WAN), or Configure a Wireless Wide Area Network (WWAN).
 - To edit an existing interface, click to expand the appropriate interface.
- 5. After creating or selecting the interface, click SureLink.

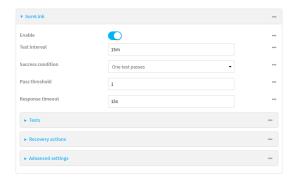

By default, SureLink is enabled for the preconfigured WAN (**ETH1**) and WWAN (**Modem**). The default configuration tests the DNS servers configured for the interface.

When SureLink is configured for Wireless WANs, SureLink tests are only run if the cellular modem is connected and has an IP address. Use the **SIM failover** options to configure the IX20 device to automatically recover the modem in the event that it cannot obtain an IP address. See Configure a Wireless Wide Area Network (WWAN) for details about **SIM failover**.

6. (Optional) Change the **Test interval** between connectivity tests.

Allowed values are any number of weeks, days, hours, minutes, or seconds, and take the format *number*{w|d|h|m|s}.

For example, to set Interval to ten minutes, enter 10m or 600s.

The default is 15 minutes.

- 7. (Optional) If more than one test target is configured, for Success condition, select either:
 - One test passes: Only one test needs to pass for Surelink to consider an interface to be up.
 - All test pass: All tests need to pass for SureLink to consider the interface to be up.
- 8. (Optional) For **Pass threshold**, type or select the number of times that the test must pass after failure, before the interface is determined to be working and is reinstated.
- 9. (Optional) For **Response timeout**, type the amount of time that the device should wait for a response to a test failure before considering it to have failed.

Allowed values are any number of weeks, days, hours, minutes, or seconds, and take the format *number*{w|d|h|m|s}.

For example, to set Response timeout to ten minutes, enter 10m or 600s.

The default is 15 seconds.

Click to expand Tests.

By default, **Test DNS servers configured for this interface** is automatically configured and enabled. This test communication with DNS servers that are either provided by DHCP, or statically configured for this interface.

a. Click %



New tests are enabled by default. To disable, click to toggle off **Enable**.

- b. Type a Label for the test.
- c. Click to toggle on IPv6 if the test should apply to both IPv6 rather than IPv4.
- d. Select the **Test type**.

Available test types:

Ping test: Uses ICMP to determine connectivity.

If **Ping test** is selected, complete the following:

- **Ping target:** The type of target for the ping, one of:
 - Hostname or IP address of an external server.
 - **Ping host**: hostname or IP address of the server.
 - The Interface gateway. If Interface gateway is selected, an initial traceroute is sent to the hostname or IP address configured in the SureLink advanced settings, and then the first hop in that route is used for the ping test.
 - The Interface address.
 - The Interface DNS server.

- Ping payload size: The number of bytes to send as part of the ping payload.
- DNS test: Performs a DNS query to the named DNS server.

If **DNS test** is selected, complete the following:

- **DNS server**: The IP address of the DNS server.
- HTTP test: Uses HTTP(s) GET requests to determine connectivity to the configured web server.

If **HTTP test** is selected, complete the following:

- Web server: The URL of the web server.
- Test DNS servers configured for this interface: Tests communication with DNS servers that are either provided by DHCP, or statically configured for this interface.
- Test the interface status: Tests the current status of the interface. The test fails if the interface is down. Failing this test infers that all other tests fail.

If **Test the interface status** is selected, complete the following:

 Down time: The amount of time that the interface is down before the test can be considered to have failed.

Allowed values are any number of weeks, days, hours, minutes, or seconds, and take the format *number*{w|d|h|m|s}.

For example, to set Down time to ten minutes, enter 10m or 600s.

• Initial connection time: The amount of time to wait for the interface to connect for the first time before the test is considered to have failed.

Allowed values are any number of weeks, days, hours, minutes, or seconds, and take the format *number*{w|d|h|m|s}.

For example, to set **Initial connection time** to ten minutes, enter **10m** or **600s**.

Custom test: Tests the interface with custom commands.

If **Custom test** is selected, complete the following:

- . The Commands to run to test.
- **TCP connection test**: Tests that the interface can reach a destination port on the configured host.

If **TCP connection test** is selected, complete the following:

- TCP connect host: The hostname or IP address of the host to create a TCP connection to.
- **TCP connect port**: The TCP port to create a TCP connection to.
- Test another interface's status: Tests the status of another interface.

If **Test another interface's status** is selected, complete the following:

- Test interface: The interface to test.
- IP version: The type of IP connection, one of:
 - Any: Either the IPv4 or IPv6 connection must be up.
 - **Both**: Both the IPv4 or IPv6 connection must be up.

- **IPv4**: The IPv4 connection must be up.
- **IPv6**: The IPv6 connection must be up.
- Expected status: The status required for the test to past.
 - Up: The test will pass only if the referenced interface is up and passing its own SureLink tests (if applicable).
 - Down: The test will pass only if the referenced interface is down or failing its own SureLink tests (if applicable).
- e. Repeat for each additional test.
- 11. Add recovery actions:
 - a. Click to expand Recovery actions.

By default, there are two preconfigured recovery actions:

- Update routing: Uses the Change default gateway action, which increases the interface's metric by 100 to change the default gateway.
- Restart interface.
- b. Click %



New recovery actions are enabled by default. To disable, click to toggle off **Enable**.

- c. Type a Label for the recovery action.
- d. For Recovery type, select Reboot device.
- e. For **Recovery type**, select the type of recovery action. If multiple recovery actions are configured, they are performed in the order that they are listed.
 - Change default gateway: Increases the interface's metric to change the default gateway.

If Change default gateway is selected, complete the following:

- **SureLink test failures**: The number of failures for this recovery action to perform, before moving to the next recovery action.
- Increase metric to change active default gateway: Increase the interface's
 metric by this amount. This should be set to a number large enough to change
 the routing table to use another default gateway. The default is 100.
- Override wait interval before performing the next recovery action: The time to
 wait before the next test is run. If set to the default value of 0s, the Test
 interval is used.
- Restart interface.

If **Restart interface** is selected, complete the following:

- SureLink test failures: The number of failures for this recovery action to perform, before moving to the next recovery action.
- Override wait interval before performing the next recovery action: The time to
 wait before the next test is run. If set to the default value of 0s, the Test
 interval is used.

• Reset modem: This recovery action is available for WWAN interfaces only.

If **Reset modem** is selected, complete the following:

- SureLink test failures: The number of failures for this recovery action to perform, before moving to the next recovery action.
- Override wait interval before performing the next recovery action: The time to
 wait before the next test is run. If set to the default value of 0s, the Test
 interval is used.
- Switch to alternate SIM: Switches to an alternate SIM. This recovery action is available for WWAN interfaces only.

If **Switch to alternate SIM** is selected, complete the following:

- SureLink test failures: The number of failures for this recovery action to perform, before moving to the next recovery action.
- Override wait interval before performing the next recovery action: The time to
 wait before the next test is run. If set to the default value of 0s, the Test
 interval is used.
- Reboot device.

If **Reboot device** is selected, complete the following:

- SureLink test failures: The number of failures for this recovery action to perform, before moving to the next recovery action.
- Override wait interval before performing the next recovery action: The time to
 wait before the next test is run. If set to the default value of 0s, the Test
 interval is used.
- Execute custom Recovery commands.

If **Recovery commands** is selected, complete the following:

- **SureLink test failures**: The number of failures for this recovery action to perform, before moving to the next recovery action.
- The Commands to run to recovery connectivity.
- Override wait interval before performing the next recovery action: The time to
 wait before the next test is run. If set to the default value of 0s, the Test
 interval is used.
- Powercycle the modem. This recovery action is available for WWAN interfaces only.

If **Powercycle the modem** is selected, complete the following:

- **SureLink test failures**: The number of failures for this recovery action to perform, before moving to the next recovery action.
- Override wait interval before performing the next recovery action: The time to
 wait before the next test is run. If set to the default value of 0s, the Test
 interval is used.
- f. Repeat for each additional recovery action.
- 12. (Optional) Configure advanced SureLink parameters:

- a. Click to expand Advanced settings.
- b. For **Delayed Start**, type the amount of time to wait while the device is starting before SureLink testing begins. This setting is bypassed when the interface is determined to be up.

Allowed values are any number of weeks, days, hours, minutes, or seconds, and take the format *number*(w|d|h|m|s).

For example, to set **Delayed start** to ten minutes, enter **10m** or **600s**.

The default is 300 seconds.

c. For **Backoff interval**, type the time to add to the test interval when restarting the list of actions. This option is capped at 15 minutes.

Allowed values are any number of weeks, days, hours, minutes, or seconds, and take the format *number*{w|d|h|m|s}.

For example, to set **Backoff interval** to ten minutes, enter **10m** or **600s**.

The default is 300 seconds.

- d. Test interface gateway by pinging is used by the Interface gateway Ping test as the endpoint for traceroute to use to determine the interface gateway. The default is 8.8.8.8, and should only be changed if this IP address is not accessible due to networking issues.
- 13. Click Apply to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

> config (config)>

- 3. Create a new interface, or edit an existing one:
 - To create a new interface, see Configure a Local Area Network (LAN), Configure a Wide Area Network (WAN), or Configure a Wide Area Network (WAN) or Configure a Wireless Wide Area Network (WWAN).
 - To edit an existing interface, change to the interface's node in the configuration schema. For example, for a interface named my_wan, change to the my_wan node in the configuration schema:

(config)> network interface my_wan (config network interface my_wan)>

4. Enable SureLink.

By default, SureLink is enabled for the preconfigured WAN (eth1) and WWAN (modemwwan2). The default configuration tests the DNS servers configured for the interface.

When SureLink is configured for Wireless WANs, SureLink tests are only run if the cellular modem is connected and has an IP address. Use the **SIM failover** options to configure the

IX20 device to automatically recover the modem in the event that it cannot obtain an IP address. See Configure a Wireless Wide Area Network (WWAN) for details about **SIM failover**.

(config network interface my_wan)> surelink enable true (config network interface my_wan)>

5. By default, the **Test DNS servers configured for this interface** test is automatically configured and enabled. This tests communication with DNS servers that are either provided by DHCP, or statically configured for this interface.

To add additional tests:

a. Add a test:

(config network interface my_wan)> add surelink tests end (config network interface my_wan surelink tests 1)>

b. New tests are enabled by default. To disable:

(config network interface my_wan surelink tests 1)> enable false (config network interface my_wan surelink tests 1)>

c. Create a label for the test:

(config network interface my_wan surelink tests 1)> label *string* (config network interface my_wan surelink tests 1)>

d. if the test should apply to both IPv6 rather than IPv4, enable IPv6:

(config network interface my_wan surelink tests 1)> ipv6 true (config network interface my_wan surelink tests 1)>

e. Set the test type:

(config network interface my_wan surelink tests 1)> test *value* (config network interface my_wan surelink tests 1)>

where value is one of:

ping: Uses ICMP to determine connectivity.
If ping is selected, complete the following:

• Set the ping_method:

(config network interface my_wan surelink tests 1)> ping_method *value* (config network interface my_wan surelink tests 1)>

where value is one of:

- hostname: The hostname or IP address of an external server.
 - Set ping_host to the hostname or IP address of the server:

(config network interface my_wan surelink tests 1)> ping_host hostname/IP_address

(config network interface my_wan surelink tests 1)>

- interface_gateway. If set, an initial traceroute is sent to the hostname or IP address configured in the SureLink advanced settings, and then the first hop in that route is used for the ping test.
- interface address.
- interface dns: The interface's DNS server.
- Set the number of bytes to send as part of the ping payload:

(config network interface my_wan ipsec tunnel ipsec_example surelink tests 1)> ping_size *int*

(config network interface my_wan surelink tests 1)>

dns: Performs a DNS query to the named DNS server.

If dns is set, set the IPv4 or IPv6 address of the DNS server:

(config network interface my_wan surelink tests 1)> dns_server *IP_address* (config network interface my_wan surelink tests 1)>

 http: Uses HTTP(s) GET requests to determine connectivity to the configured web server.

If **http** is set, set the URL of the web server.

(config network interface my_wan surelink tests 1)> http *url* (config network interface my_wan surelink tests 1)>

- dns_configured: Tests communication with DNS servers that are either provided by DHCP, or statically configured for this interface.
- interface_up: Tests the current status of the interface. The test fails if the interface is down. Failing this test infers that all other tests fail.

If interface_up is set, complete the following:

 Set the amount of time that the interface is down before the test can be considered to have failed.

(config network interface my_wan surelink tests 1)> interface_down_time value (config network interface my_wan surelink tests 1)>

where *value* is any number of weeks, days, hours, minutes, or seconds, and takes the format *number*{w|d|h|m|s}.

For example, to set **interface_down_time** to ten minutes, enter either **10m** or **600s**:

(config network interface my_wan surelink tests 1)> interface_down_time 600s (config)>

• Set the amount of time to wait for the interface to connect for the first time before the test is considered to have failed.

(config network interface my_wan surelink tests 1)> interface_timeout *value* (config network interface my_wan surelink tests 1)>

where *value* is any number of weeks, days, hours, minutes, or seconds, and takes the format *number*{w|d|h|m|s}.

For example, to set **interface_timeout** to ten minutes, enter either **10m** or **600s**:

(config network interface my_wan surelink tests 1)> interface_timeout 600s (config)>

custom_test: Tests the interface with custom commands.

If **custom_test** is set, set the commands to run to perform the test:

(config network interface my_wan surelink tests 1)> custom_test_commands "string" (config network interface my_wan surelink tests 1)>

tcp_connection: Tests that the interface can reach a destination port on the configured host.

If tcp_connection is selected, complete the following:

Set the hostname or IP address of the host to create a TCP connection to:

(config network interface my_wan surelink tests 1)> tcp_host *hostname/IP_address* (config network interface my_wan surelink tests 1)>

Set the TCP port to create a TCP connection to.

(config network interface my_wan surelink tests 1)> tcp_port port (config network interface my_wan surelink tests 1)>

other: Tests the status of another interface.

If other is selected, complete the following:

- · Set the interface to test.
 - i. Use the ?to determine available interfaces:

(config network interface my_wan surelink tests 1)> other_interface ?

Test interface: Test the status of this other interface.

Format:

/network/interface/setupip

/network/interface/setuplinklocalip

/network/interface/eth1

/network/interface/eth2

/network/interface/loopback

Current value:

(config network interface my_wan surelink tests 1)> other_interface

ii. Set the interface. For example:

(config network interface my_wan surelink tests 1)> other_interface /network/interface/eth1 (config network interface my_wan surelink tests 1)>

Set the type of IP connection:

(config network interface my_wan surelink tests 1)> other_ip_version *value* (config network interface my_wan surelink tests 1)>

where value is one of:

- o any: Either the IPv4 or IPv6 connection must be up.
- both: Both the IPv4 or IPv6 connection must be up.
- **ipv4** The IPv4 connection must be up.
- **ipv6**: The IPv6 connection must be up.
- · The status required for the test to past.

(config network interface my_wan surelink tests 1)> other_status *value* (config network interface my_wan surelink tests 1)>

where value is one of:

- up: The test will pass only if the referenced interface is up and passing its own SureLink tests (if applicable).
- down: The test will pass only if the referenced interface is down or failing its own SureLink tests (if applicable).
- f. Repeat for each additional test.
- 6. Add recovery actions:
 - a. Type ... to return to the root of the configuration:

(config network interface my_wan surelink tests 1)> ... (config)>

b. Add a recovery action:

(config)> add network interface my_wan surelink actions end (config network interface my_wan surelink actions 0)>

c. New actions are enabled by default. To disable:

(config network interface my_wan surelink actions 0)> enable false (config network interface my_wan surelink actions 0)>

d. Create a label for the action:

(config network interface my_wan surelink actions 0)> label *string* (config network interface my_wan surelink actions 0)>

e. Set the type of recovery action to reboot_device:

(config network interface my_wan surelink actions 0)> action reboot_device (config network interface my_wan surelink actions 0)>

Set the number of failures for this recovery action to perform, before moving to the next recovery action:

(config network interface my_wan surelink actions 0)> test_failures *int* (config network interface my_wan surelink actions 0)>

The default is 3.

Set the time to wait before the next test is run. If set to the default value of 0s, the test interval is used.

(config network interface my_wan surelink actions 0)> override_interval *int* (config network interface my_wan surelink actions 0)>

- 7. Optional SureLink configuration parameters:
 - a. Type ... to return to the root of the configuration:

(config network interface my_wan surelink actions 0)> ... (config)>

b. Set the test interval between connectivity tests:

(config)> network interface my_wan surelink interval *value* (config)>

where *value* is any number of weeks, days, hours, minutes, or seconds, and takes the format *number*{w|d|h|m|s}.

For example, to set interval to ten minutes, enter either 10m or 600s:

(config)> network interface my_wan surelink interval 600s (config)>

The default is 15m.

c. If more than one test target is configured, set the success condition:

(config)> network interface my_wan surelink success_condition *value* (config)>

where value is either:

- one: Only one test needs to pass for Surelink to consider an interface to be up.
- all: All tests need to pass for SureLink to consider the interface to be up.
- d. Set the number of times that the test must pass after failure, before the interface is determined to be working and is reinstated.

(config)> network interface my_wan surelink pass_threshold int (config)>

The default is 1.

e. Set the amount of time that the device should wait for a response to a test failure before considering it to have failed:

(config)> network interface my_wan surelink timeout value (config)>

where *value* is any number of weeks, days, hours, minutes, or seconds, and takes the format *number*{w|d|h|m|s}.

For example, to set timeout to ten minutes, enter either 10m or 600s:

(config)> network interface my_wan surelink timeout 600s (config)>

The default is 15s.

f. Set the amount of time to wait while the device is starting before SureLink testing begins. This setting is bypassed when the interface is determined to be up.

(config)> network interface my_wan surelink advanced delayed_start *value* (config)>

where *value* is any number of weeks, days, hours, minutes, or seconds, and takes the format *number*{w|d|h|m|s}.

For example, to set delayed_start to ten minutes, enter either 10m or 600s:

(config)> network interface my_wan surelink advanced delayed_start 600s (config)>

The default is 300s.

g. Set the time to add to the test interval when restarting the list of actions. This option is capped at 15 minutes.

(config)> network interface my_wan surelink advanced backoff_interval *value* (config)>

where *value* is any number of weeks, days, hours, minutes, or seconds, and takes the format *number*{w|d|h|m|s}.

For example, to set **backoff_interval** to ten minutes, enter either **10m** or **600s**:

(config)> network interface my_wan surelink advanced backoff_interval 600s (config)>

The default is 300 seconds.

h. The interface_gateway parameter is used by the Interface gateway Ping test as the endpoint for traceroute to use to determine the interface gateway. The default is 8.8.8.8, and should only be changed if this IP address is not accessible due to networking issues. To set to an alternate host:

(config)> network interface my_wan surelink advanced interface_gateway *hostname/IP_address* (config)>

8. Save the configuration and apply the change.

(config network interface my_wan ipv4 surelink)> save
Configuration saved.
>

9. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Disable SureLink

If your device uses a private APN with no Internet access or has a restricted WAN connection that doesn't allow DNS resolution, you can disable SureLink connectivity tests. You can also reconfigure SureLink to disable the DNS test and use one or more other tests.



- Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- a. Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

- 3. Click Network > Interfaces.
- 4. Select the appropriate WAN or WWAN on which SureLink should be disabled...

▼ SureLink

Enable

Test Interval

J5m

Success condition

One test passes

Pass threshold

1

Response timeout

J5s

▼ TestS

5. After selecting the WAN or WWAN, click SureLink.

- 6. Toggle off **Enable** to disable SureLink.
- 7. Click **Apply** to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

> config (config)>

Change to the WAN or WWAN's node in the configuration schema. For example, to disable SureLink for the Modem interface:

(config)> network interface modem (config network interface modem)>

4. Disable SureLink:

(config network interface modem> surelink enable false (config network interface modem)>

5. Save the configuration and apply the change.

(config network interface my_wwan surelink)> save Configuration saved.

6. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Disable the default DNS test

Alternatively, you can disable the default DNS test for devices that use a private APN with no Internet access, or that have restricted wired WAN connections that do not allow DNS resolution, and configure alternate test.

₹ Web

- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.


Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

- 3. Click Network > Interfaces.
- 4. Select the appropriate WAN or WWAN on which the default DNS test should be disabled..
- 5. After selecting the WAN or WWAN, click SureLink.

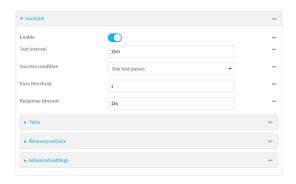

- 6. Click to expand Tests.
- 7. Click to expand the default **DNS configured** test.
- 8. Click to toggle off Enable.

9. Click Yoto add a new test.



- 10. Type a Label for the test.
- 11. Click to toggle on IPv6 if the test should apply to both IPv6 rather than IPv4.
- 12. Select the Test type.

Available test types:

■ Ping test: Uses ICMP to determine connectivity.

If Ping test is selected, complete the following:

- Ping target: The type of target for the ping, one of:
 - Hostname or IP address of an external server.
 - Ping host: hostname or IP address of the server.
 - The Interface gateway. If Interface gateway is selected, an initial traceroute is sent to the hostname or IP address configured in the SureLink advanced settings, and then the first hop in that route is used for the ping test.
 - The Interface address.
 - The Interface DNS server.
- Ping payload size: The number of bytes to send as part of the ping payload.
- DNS test: Performs a DNS query to the named DNS server.

If **DNS test** is selected, complete the following:

- **DNS server**: The IP address of the DNS server.
- HTTP test: Uses HTTP(s) GET requests to determine connectivity to the configured web server.

If **HTTP test** is selected, complete the following:

- Web server: The URL of the web server.
- **Test DNS servers configured for this interface**: Tests communication with DNS servers that are either provided by DHCP, or statically configured for this interface.
- Test the interface status: Tests the current status of the interface. The test fails if the interface is down. Failing this test infers that all other tests fail.

If **Test the interface status** is selected, complete the following:

 Down time: The amount of time that the interface is down before the test can be considered to have failed.

Allowed values are any number of weeks, days, hours, minutes, or seconds, and take the format *number*{w|d|h|m|s}.

For example, to set **Down time** to ten minutes, enter **10m** or **600s**.

• **Initial connection time**: The amount of time to wait for the interface to connect for the first time before the test is considered to have failed.

Allowed values are any number of weeks, days, hours, minutes, or seconds, and take the format *number*{w|d|h|m|s}.

For example, to set Initial connection time to ten minutes, enter 10m or 600s.

• Custom test: Tests the interface with custom commands.

If Custom test is selected, complete the following:

- The Commands to run to test.
- **TCP connection test**: Tests that the interface can reach a destination port on the configured host.

If **TCP connection test** is selected, complete the following:

- TCP connect host: The hostname or IP address of the host to create a TCP connection to.
- TCP connect port: The TCP port to create a TCP connection to.
- Test another interface's status: Tests the status of another interface.

If Test another interface's status is selected, complete the following:

- Test interface: The interface to test.
- IP version: The type of IP connection, one of:
 - Any: Either the IPv4 or IPv6 connection must be up.
 - Both: Both the IPv4 or IPv6 connection must be up.
 - **IPv4**: The IPv4 connection must be up.
 - **IPv6**: The IPv6 connection must be up.
- Expected status: The status required for the test to past.
 - Up: The test will pass only if the referenced interface is up and passing its own SureLink tests (if applicable).
 - Down: The test will pass only if the referenced interface is down or failing its own SureLink tests (if applicable).
- 13. Click Apply to save the configuration and apply the change.

Command line

Select the device in Remote Manager and click Actions > Open Console, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

> config (config)>

3. Change to WAN or WWAN's node in the configuration schema. For example, to disable the default DNS test for an interface named my_wan:

(config)> network interface my_wan (config network interface my_wan)>

4. Disable the default DNS test:

(config network interface my_wan)> surelink tests 0 enable false (config network interface my_wan)>

- 5. Add a new test:
 - a. Add a test:

(config network interface my_wan)> add surelink tests end (config network interface my_wan surelink tests 1)>

b. Create a label for the test:

(config network interface my_wan surelink tests 1)> label string (config network interface my_wan surelink tests 1)>

c. if the test should apply to both IPv6 rather than IPv4, enable IPv6:

(config network interface my_wan surelink tests 1)> ipv6 true (config network interface my_wan surelink tests 1)>

d. Set the test type:

(config network interface my_wan surelink tests 1)> test value (config network interface my_wan surelink tests 1)>

where value is one of:

- ping: Uses ICMP to determine connectivity. If **ping** is selected, complete the following:
 - Set the ping_method:

(config network interface my_wan surelink tests 1)> ping_method value (config network interface my_wan surelink tests 1)>

where value is one of:

- hostname: The hostname or IP address of an external server.
 - Set ping_host to the hostname or IP address of the server:

(config network interface my_wan surelink tests 1)> ping_host hostname/IP_ address

(config network interface my_wan surelink tests 1)>

- interface_gateway. If set, an initial traceroute is sent to the hostname or IP address configured in the SureLink advanced settings, and then the first hop in that route is used for the ping test.
- interface address.
- interface_dns: The interface's DNS server.

Set the number of bytes to send as part of the ping payload:

(config network interface my_wan ipsec tunnel ipsec_example surelink tests 1)> ping_size int

(config network interface my_wan surelink tests 1)>

dns: Performs a DNS query to the named DNS server.

If dns is set, set the IPv4 or IPv6 address of the DNS server:

(config network interface my_wan surelink tests 1)> dns_server *IP_address* (config network interface my_wan surelink tests 1)>

 http: Uses HTTP(s) GET requests to determine connectivity to the configured web server.

If http is set, set the URL of the web server.

(config network interface my_wan surelink tests 1)> http *url* (config network interface my_wan surelink tests 1)>

- dns_configured: Tests communication with DNS servers that are either provided by DHCP, or statically configured for this interface.
- interface_up: Tests the current status of the interface. The test fails if the interface is down. Failing this test infers that all other tests fail.

If interface_up is set, complete the following:

 Set the amount of time that the interface is down before the test can be considered to have failed.

(config network interface my_wan surelink tests 1)> interface_down_time *value* (config network interface my_wan surelink tests 1)>

where *value* is any number of weeks, days, hours, minutes, or seconds, and takes the format *number*{w|d|h|m|s}.

For example, to set **interface_down_time** to ten minutes, enter either **10m** or **600s**:

(config network interface my_wan surelink tests 1)> interface_down_time 600s (config)>

 Set the amount of time to wait for the interface to connect for the first time before the test is considered to have failed.

(config network interface my_wan surelink tests 1)> interface_timeout *value* (config network interface my_wan surelink tests 1)>

where *value* is any number of weeks, days, hours, minutes, or seconds, and takes the format *number*{w|d|h|m|s}.

For example, to set **interface_timeout** to ten minutes, enter either **10m** or **600s**:

(config network interface my_wan surelink tests 1)> interface_timeout 600s (config)>

custom_test: Tests the interface with custom commands.

If **custom_test** is set, set the commands to run to perform the test:

(config network interface my_wan surelink tests 1)> custom_test_commands "string" (config network interface my_wan surelink tests 1)>

tcp_connection: Tests that the interface can reach a destination port on the configured host.

If tcp_connection is selected, complete the following:

• Set the hostname or IP address of the host to create a TCP connection to:

(config network interface my_wan surelink tests 1)> tcp_host hostname/IP_address (config network interface my_wan surelink tests 1)>

• Set the TCP port to create a TCP connection to.

(config network interface my_wan surelink tests 1)> tcp_port port (config network interface my_wan surelink tests 1)>

other: Tests the status of another interface.

If other is selected, complete the following:

- · Set the interface to test.
 - i. Use the ?to determine available interfaces:

(config network interface my_wan surelink tests 1)> other_interface ?

Test interface: Test the status of this other interface.

Format:

/network/interface/setupip

/network/interface/setuplinklocalip

/network/interface/eth1

/network/interface/eth2

/network/interface/loopback

Current value:

(config network interface my_wan surelink tests 1)> other_interface

ii. Set the interface. For example:

(config network interface my_wan surelink tests 1)> other_interface /network/interface/eth1 (config network interface my_wan surelink tests 1)>

· Set the type of IP connection:

(config network interface my_wan surelink tests 1)> other_ip_version *value* (config network interface my_wan surelink tests 1)>

where value is one of:

- o any: Either the IPv4 or IPv6 connection must be up.
- o both: Both the IPv4 or IPv6 connection must be up.
- **ipv4** The IPv4 connection must be up.
- **ipv6**: The IPv6 connection must be up.
- The status required for the test to past.

(config network interface my_wan surelink tests 1)> other_status *value* (config network interface my_wan surelink tests 1)>

where value is one of:

- up: The test will pass only if the referenced interface is up and passing its own SureLink tests (if applicable).
- down: The test will pass only if the referenced interface is down or failing its own SureLink tests (if applicable).
- 6. Save the configuration and apply the change.

(config network interface my_wan ipv4 surelink)> save Configuration saved.

>

7. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Example: Use a ping test for WAN failover from Ethernet to cellular

In this example configuration, the **ETH1** interface serves as the primary WAN, while the cellular **Modem** interface serves as the backup WAN.



In this example configuration, SureLink is used over for the **ETH1** interface to send a probe packet of size **256** bytes to the IP host **43.66.93.111** every **10** seconds. If there are three consecutive failed responses, the default **Update Routing** recovery action will increase the metric for the **ETH1** interface by 100, which will cause the IX20 device to start using the **Modem** interface as the default route. It continues to regularly test the connection to **ETH1**, and when tests on **ETH1** succeed, the device falls back to that interface.

To achieve this WAN failover from the **ETH1** to the **Modem**interface, the WAN failover configuration is:

₹ Web

- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- a. Locate your device as described in Use Digi Remote Manager to view and manage your device
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.


Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

- 3. Configure active recovery on ETH1:
 - a. Click Network > Interface > ETH1 > SureLink.

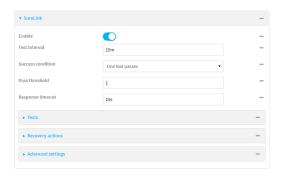

- b. For **Test interval**, type **10s**.
- c. Click to expand Tests.
- d. Disable the default DNS test:
 - i. Click to expand the default DNS configured test.
 - ii. Click to toggle off Enable.

e. Click Yoto add a new test.



- f. For Test type, select Ping test.
- g. For **Ping host**, type **43.66.93.111**.
- h. For Ping payload size, type 256.



- 4. Repeat the above step for **Modem** to enable SureLink on that interface.
- 5. Click Apply to save the configuration and apply the change.

Command line

Select the device in Remote Manager and click Actions > Open Console, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type config to enter configuration mode:

> config (config)>

- 3. Configure SureLink on ETH1:
 - a. Set the interval to ten seconds:

(config)> network interface eth1 surelink interval 10s (config)>

b. Disable the default DNS test:

(config)> network interface eth1 surelink tests 0 enable false (config)>

c. Add a test:

(config)> add network interface eth1 surelink tests end (config network interface eth1 surelink tests 1)>

d. Set the probe type to ping:

(config network interface eth1 ipv4 surelink tests 1)> test ping (config network interface eth1 ipv4 surelink tests 1)>

e. Set the packet size to 256 bytes:

(config network interface eth1 ipv4 surelink tests 1)> ping_size 256 (config network interface eth1 ipv4 surelink tests 1)>

f. Set the host to ping:

(config network interface eth1 ipv4 surelink tests 1)> ping_host 43.66.93.111 (config network interface eth1 ipv4 surelink tests 1)>

- Repeat the above step for the cellular **Modem** (modem) interface to enable SureLink on that interface. Note that this will cause the interface to send a ping every 10 seconds, which will incur data costs.
- 4. Save the configuration and apply the change.


```
(config)> save
Configuration saved.
```

5. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Using Ethernet devices in a WAN

The IX20 device has Ethernet devices, named **ETH1ETH2**. You can use these Ethernet interfaces as a WAN when connecting to the Internet, through a device such as a cable modem:

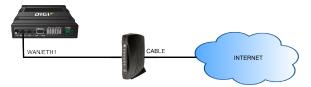

By default, the **WAN/ETH1** Ethernet device is configured as a WAN, named **ETH1**, with both DHCP and NAT enabled and using the **External** firewall zone. This means you should be able to connect to the Internet by connecting the **WAN/ETH1** Ethernet port to another device that already has an internet connection.

Using cellular modems in a Wireless WAN (WWAN)

The IX20 supports one cellular modem, named **Modem**, which is included in a preconfigured Wireless WAN, also named **Modem**.

The cellular modem can have only one active SIM slot at any one time. For example, **Modem** can have either SIM1 or SIM2 up at one time.

Typically, you configure SIM1 of the cellular modem as the primary cellular interface, and SIM2 as the backup cellular interface. In this way, if the IX20 device cannot connect to the network using

SIM1, it automatically fails over to SIM2. IX20 devices automatically use the correct cellular module firmware for each carrier when switching SIMs.

Configure cellular modem

To configure your IX20's cellular modem, you need to modify the network and SIM settings.

Required configuration items

- Enable the cellular modem.
 - The cellular modem is enabled by default.
- Configure the criteria used to determine which modem this modem configuration applies to.
- Determine the SIM slot that will be used when connecting to the cellular network.
- Configure the maximum number of interfaces that can use the modem.
- Enable carrier switching, which allows the modem to automatically match the carrier for the active SIM.
 - Carrier switching is enabled by default.
- Configure the access technology.
- Determine which cellular antennas to use.

Additional configuration items

■ If **Active SIM slot** is set to **Any**, by default the device uses the SIM slot that was last used or was operational. As an alternative, you can specify a preferred SIM slot.

In the event of a failover to a non-preferred SIM, or if manual SIM switching is used to switch to a non-preferred SIM, the modem will attempt to reconnect to the SIM in the preferred SIM slot.

To configure the modem:



- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.


Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

- 3. For single-cellular models, click **Network > Modems > WWAN cellular modem** or **Modem**.
- 4. Click Network > Modems > Modem.

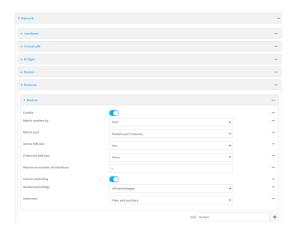

- 5. Modem configurations are enabled by default. Click to toggle **Enable** to off to disable.
- 6. For **Match modem by**, select the matching criteria used to determine if this modem configuration applies to the currently attached modem:
 - Any modem: Applies this configuration to any modem that is attached.
 - IME: Applies this configuration only to a modem that matches the identified IMEI.
 - If **IME** is selected, for **Match IME**, type the IMEI of the modem that this configuration should be applied to.
 - Port: Applies this configuration to a modem attached to the identified physical port.
 - If **Port** is selected, for **Match Port**, select the modem's port.

The default is **Any modem**.

- 7. The **Active SIM slot** selection is used to determine which SIM slot the modem will attempt to connect with. For **Active SIM slot**, select one of the following options:
 - Any: Use the SIM slot that was last used or was last operational. The default is Any.
 - SIM1: Only use SIM slot 1 with the modem
 - SIM2: Only use SIM slot 2 with the modem
- 8. If you set the **Active SIM slot** to **Any**, the **Preferred SIM slot** option displays. Options for **Preferred SIM slot** are:
 - None: The modem attempts to connect to the SIM in the SIM slot that was last used or was last operational. None is the default.
 - SIM slot: Select the SIM slot that should be considered the preferred slot for this modem. If a preferred SIM is configured, the Preferred SIM slot check schedule displays in the configuration settings. In the event of a SIM failover, or if manual SIM

switching is used to switch SIM slots, the modern attempts to reconnect to the preferred SIM at the interval or schedule configured in the **Preferred SIM slot check** schedule settings. If a **Preferred SIM slot** is selected, you can choose the type of schedule:

- On boot Runs task when device starts.
- Interval Runs task once per hour.
- Set time Runs task at a set time.
- **During system maintenance window** Runs task only during the period of time designated for system maintenance.
- Manual Task is not performed automatically.
- After Task runs for a fixed time interval on a different SIM and then goes back to the preferred SIM.
- 9. For **Maximum number of interfaces**, type the number of interfaces that can be configured to use this modem. This is used when using dual-APN SIMs. The default is 1.
- 10. For **Signal strength query interval**, type or select the amount of time the system waits before polling the modem for signal information.
 - Allowed values are any number of weeks, days, hours, minutes, or seconds, and take the format *number*{w|d|h|m|s}.
 - For example, to set **Signal strength query interval** to ten minutes, enter **10m** or **600s**. The default is **10s**.
- 11. Enable **Carrier switching** to allow the modem to automatically match the carrier for the active SIM. **Carrier switching** is enabled by default.
- 12. For Access technology, select the type of cellular technology that this modem should use to access the cellular network, or select All technologies to configure the modem to use the best available technology. The default is All technologies.
- 13. For **Antennas**, select whether the modem should use the main antenna, the auxiliary antenna, or both the main and auxiliary antennas.

Note For **4G** bands, specify the frequency bands you want to include or exclude. By default, all bands are used. To only use certain bands, separate each band in the list with a space (for example, *B1 B3 B5*). To exclude certain bands, separate each band in the list with a space and precede each band with an exclamation point (for example, *!B1 !B5*).



CAUTION! Make sure to confirm with your service provider that the bands you want to include or exclude are accurate. Connection issues may occur if a service provider changed any of the frequency bands they use for their network and you have set limitations on the bands to which the IX20 can connect.

- 14. (Optional) For 4G bands, specify the 4G bands.
- 15. Click **Apply** to save the configuration and apply the change.

Command line

Select the device in Remote Manager and click Actions > Open Console, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type config to enter configuration mode:

```
> config
(config)>
```

3. Modem configurations are enabled by default. To disable:

```
(config)> network modem modem enable false (config)>
```

4. Set the matching criteria used to determine if this modem configuration applies to the currently attached modem:

```
(config)> network modem modem match value (config)>
```

where value is one of the following:

- any: Applies this configuration to any modem that is attached.
- imei: Applies this configuration only to a modem that matches the identified IMEI.
 - If imei is used, set the IMEI of the modem that this configuration should be applied to:

```
(config)> network modem modem imei value (config)>
```

where value is the IMEI of the modem.

- port: Applies this configuration to a modem attached to the identified physical port.
 - If port is used, set modem's port:
 - a. Determine available ports and correct syntax by using the ?.

```
(config)> network modem modem port ?
```

Match port: The physical port that the modem device is attached to.

Format:

/device/usb/modem/module

Default value: /device/usb/modem/module Current value: /device/usb/modem/module

(config)> network modem modem port

b. Set the port:

(config)> network modem modem port /device/usb/modem/module (config)>

The default is any.

5. Set the SIM slot that should be used by the modem:

(config)> network modem modem sim_slot value (config)>

where value is one of the following:

- any: Uses either SIM slot.
- 1: Uses the first SIM slot.
- 2. Uses the second SIM slot.

The default is any.

6. If **sim_slot** is set to **any**, set the SIM slot that should be considered the preferred slot for this modem:

(config)> network modem modem sim_slot_preference *value* (config)>

where value is one of the following:

- none: Does not consider either SIM slot to be the preferred slot.
- 1: Configures the first SIM slot as the preferred SIM slot.
- 2. Configures the second SIM slot as the preferred SIM slot.

In the event of a failover to a non-preferred SIM, or if manual SIM switching is used to switch to a non-preferred SIM, the modem will attempt to reconnect to the SIM in the preferred SIM slot. The default is **none**.

7. To set the preferred SIM slot check schedule:

(config)> network modem modem sim_slot_preference_value

where value is one of the following:

- 1: SIM slot 1.
- 2. SIM slot 2.

(config)> ...run-time when value

where value is one of the following:

- after
- boot
- interval
- maintenance_window
- manual
- set_time

The default is set_time.

8. Set the amount of time the system waits before polling the modem for signal information:

(config)> network modem modem query_interval *value* (config)>

where *value* is any number of weeks, days, hours, minutes, or seconds, and takes the format *number*{w|d|h|m|s}.

For example, to set query_interval to ten minutes, enter either 10m or 600s:

(config)> network modem wan query_interval 600s (config)>

The default is 10s.

9. Set the maximum number of interfaces. This is used when using dual-APN SIMs. The default is 1.

(config)> network modem modem max_intfs int (config)>

10. Carrier switching allows the modem to automatically match the carrier for the active SIM. Carrier switching is enabled by default. To disable:

(config)> network modem modem carrier_switch false (config)>

11. Set the type of cellular technology that this modem should use to access the cellular network:

(config)> network modem modem access_tech value
(config)>

Available options for *value* vary depending on the modem type. To determine available options:

(config)> network modem modem access_tech?

Access technology: The cellular network technology that the modem may use.

Format:

2G

3G

4G

4GM

4GT

all

Default value: all Current value: all

(config)>

The default is **all**, which uses the best available technology.

12. Set whether the modern should use the main antenna, the auxiliary antenna, or both the main and auxiliary antennas:

(config)> network modem modem antenna *value* (config)>

where value is one of the following:

- main
- aux
- both
- 13. (Optional) To specify the 4G bands you want to include or exclude:

(config)> network modem modem 4g_bands (config)>

14. Save the configuration and apply the change.

(config)> save Configuration saved.

15. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Cellular modem APNs

The IX20 device uses a preconfigured list of Access Point Names (APNs) when attempting to connect to a cellular carrier for the first time. You can find the serviceproviders-local.txt and serviceproviders.txt files in the filesystem of the IX20. The order of the APNs for a specific carrier in these text files corresponds to the order in which the IX20 will try those APNS until it makes a successful connection. After the device has successfully connected, it will remember the correct APN. As a result, it is not necessary to configure APNs. However, you can configure the system to use a specified APN if you choose to do so.

Configure cellular modem APNs

To configure the APN:



- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

3. For your single-cellular IX20, click Network > Interfaces > Modem > modem > APN Selection.



- 4. For **APN Selection**, select whether you want your IX20 to use the preconfigured APNs, custom APNs, or both.
 - a. If you selected either the *Qustom APN list only* or the *Both custom list and builtin list*, click %to add an APN.
 - b. (Optional) For APN, add a name.
 - c. (Optional) For IP version, select one of the following settings:
 - Automatic: Requests both IPv4 and IPv6 address.
 - IPv4: Requests only an IPv4 address.
 - IPv6: Requests only an IPv6 address.

The default is Automatic.

- d. (Optional) For Authentication method, select one of the following settings:
 - None: No authentication is required.
 - Automatic: The device will attempt to connect using CHAP first, and then PAP.
 - CHAP: Uses the Challenge Handshake Authentication Profile (CHAP) to authenticate.
 - PAP: Uses the Password Authentication Profile (PAP) to authenticate.

If **Automatic**, **CHAP**, or **PAP** is selected, enter the **Username** and **Password** required to authenticate.

The default is None.

- e. (Optional)For **PDP context index**, type the number for the index of the SIM card that the APN is programmed into. The default is **0** so the index is set automatically.
- f. Lightweight M2M support is enabled by default. Disable if you are using an AT&T SIM that does not support AT&T lightweight M2M.
- g. Repeat these steps to add additional APNs, if needed.
- 5. Click **Apply** to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

> config (config)>

3. At the config prompt, type:

(config)> network interface modem modem apn 0 apn *value* (config)>

where value is the APN for the SIM card.

- 4. (Optional) To add additional APNs:
 - a. Use the add command to add a new APN entry. For example:

(config)> add network interface modem modem apn end (config network interface modem modem apn 1)>

b. Set the value of the APN:

(config network interface modem modem apn 1)> apn *value* (config network interface modem modem apn 1)>

where value is the APN for the SIM card.

5. (Optional) Set the IP version:

(config)> network interface modem modem apn 0 ip_version *version* (config)>

where version is one of the following:

- auto: Requests both IPv4 and IPv6 address.
- ipv4: Requests only an IPv4 address.
- ipv6: Requests only an IPv6 address.

The default is auto.

6. (Optional) Set the PDP context index:

(config network interface wwan1 modem apn 0) > cid *value* (config network interface wwan1 modem apn 0) >

where *value* is the index number of the SIM that the APN is programmed into. *0* means the index will be automatically set.

7. (Optional) Set the authentication method:

(config)> network interface modem modem apn 0 auth *method* (config)>

where method is one of the following:

- none: No authentication is required.
- auto: The device will attempt to connect using CHAP first, and then PAP.
- chap: Uses the Challenge Handshake Authentication Profile (CHAP) to authenticate.
- pap: Uses the Password Authentication Profile (PAP) to authenticate.

If auto, chap, or pap is selected, enter the Username and Password required to authenticate:

(config)> network interface modem modem apn 0 username *name* (config)> network interface modem modem apn 0 password *pwd* (config)>

The default is none.

8. Disable Lightweight M2M support if you are using an AT&T SIM that does not support AT&T lightweight M2M:

(config)> network interface modem modem apn 0 attm2mglobal false (config)>

(Optional) To configure the device to use either the preconfigured APNs, custom APNs, or both:

(config)> network interface modem modem apn_selection *value* (config)>

Where value is one of the following:

- apn_list_only
- both_lists
- built-in-list-only
- 10. Save the configuration and apply the change.

(config)> save Configuration saved. >

Type exit to exit the Admin CLI.


Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configure dual APNs

Some cellular carriers offer a dual APN feature that allows a SIM card to be provisioned with two separate APNs that can be used simultaneously. For example, Verizon offers this service as its Split Data Routing feature. This feature provides two separate networking paths through a single cellular modem and SIM card, and allows for configurations such as:

- Segregating public and private traffic, including policy-based routes to ensure that your internal network traffic always goes through the private connection.
- Separation of untrusted Internet traffic from trusted internal network traffic.
- Secure connection to internal customer network without using a VPN.
- Separate billing structures for public and private traffic.
- Site-to-site networking, without the overhead of tunneling for each device.

In the following example configuration, all traffic on LAN1 is routed through the public APN to the internet, and all traffic on LAN2 is routed through the private APN to the customer's data center:

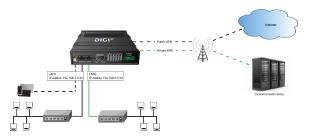

To accomplish this, we will create separate WWAN interfaces that use the same modem but use different APNs, and then use routing roles to forward traffic to the appropriate WWAN interface.

Note Dual-APN connections with the Telit LE910-NAv2 module when using a Verizon SIM are not supported. Using an AT&T SIM with the Telit LE910-NAv2 module is supported. The Telit LE910-NAv2 module is used in the 1002-CM04 CORE modem.



- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- a. Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

- 3. Increase the maximum number of interfaces allowed for the modem:
 - a. Click Network > Modems > Modem.
 - b. For Maximum number of interfaces, type 2.



4. Create the WWAN interfaces:

In this example, we will create two interfaces named WWAN_Public and WWAN_Private.

- a. Click Network > Interfaces.
- b. For Add Interface, type WWAN_Public and click 1/5



- c. For Interface type, select Modem.
- d. For **Zone**, select **External**.
- e. For Device, select Modem .
- f. (Optional) For **APN selection**, select whether you want to configure the device to use the preconfigured APNs, custom APNs, or both.
- g. For Add Interface, type WWAN_Private and click 1/5




- h. For Interface type, select Modem.
- i. For **Zone**, select **External**.
- j. For **Device**, select **Modem**.

This should be the same modem selected for the WWAN_Public WWAN.

- k. For **APN selection**, select whether you want to configure the device to use the preconfigured APNs, custom APNs, or both.
- 5. Create the routing policies. For example, to route all traffic from LAN1 through the public APN, and LAN2 through the private APN:
 - a. Click Network > Routes > Policy-based routing.
 - b. Click the Yoto add a new route policy.




- c. For Label, enter Route through public APN.
- d. For Interface, select Interface: WWAN_Public.
- e. Configure the source address:
 - i. Click to expand Source address.
 - ii. For Type, select Interface.
 - iii. For Interface, select LAN1.
- f. Configure the destination address:
 - i. Click to expand **Destination address**.
 - ii. For Type, select Interface.
 - iii. For Interface, select Interface: WWAN_Public.

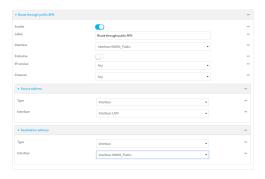

- g. Click the 1/2 to add another route policy.
- h. For Label, enter Route through private APN.
- i. For Interface, select Interface: WWAN_Private.
- j. Configure the source address:
 - i. Click to expand Source address.
 - ii. For Type, select Interface.
 - iii. For Interface, select LAN2.

- k. Configure the destination address:
 - i. Click to expand Destination address.
 - ii. For Type, select Interface.
 - iii. For Interface, select Interface: WWAN_Private.

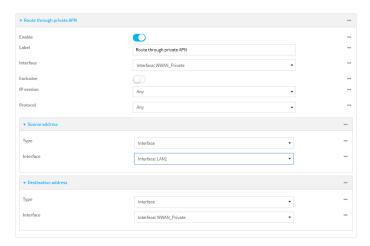

6. Click **Apply** to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

> config (config)>

3. Set the maximum number of interfaces for the modem:

(config)> network modem modem max_intfs 2 (config)>

- 4. Create the WWAN interfaces:
 - a. Create the WWANPublic interface:

(config)> add network interface WWANPublic (config network interface WWANPublic)>

b. Set the interface type to modem:

(config network interface WWANPublic)> type modem (config network interface WWANPublic)>

c. Set the modem device:

(config network interface WWANPublic)> modem device modem (config network interface WWANPublic)>

d. Configure whether you want the device to use the preconfigured APNs, custom APNs, or both. For more information, see Cellular modem APNs.

(config network interface WWANPublic)> modem apn *public_apn* (config network interface WWANPublic)>

e. Use to periods (...) to move back one level in the configuration:

(config network interface WWANPublic)> .. (config network interface)>

f. Create the **WWANPrivate** interface:

(config network interface)> add WWANPrivate (config network interface WWANPrivate)>

g. Set the interface type to modem:

(config network interface WWANPrivate)> type modem (config network interface WWANPrivate)>

h. Set the modem device:

(config network interface WWANPrivate)> modem device modem (config network interface WWANPrivate)>

i. Enable APN list only:

(config network interface WWANPrivate)> modem apn_selection apn_list_only (config network interface WWANPrivate)>

j. Set the private APN:

(config network interface WWANPublic)> modem apn *private_apn* (config network interface WWANPublic)>

- 5. Create the routing policies. For example, to route all traffic from LAN1 through the public APN, and LAN2 through the private APN:
 - a. Add a new routing policy:

(config)> add network route policy end (config network route policy 0)>

b. Set the label that will be used to identify this route policy:

(config network route policy 0)> label "Route through public apn" (config network route policy 0)>

c. Set the interface:

(config network route policy 0)> interface /network/interface/WWANPublic (config network route policy 0)>

- d. Configure the source address:
 - i. Set the source type to interface:

(config network route policy 0)> src type interface (config network route policy 0)>

ii. Set the interface to LAN1:

(config network route policy 0)> src interface LAN1 (config network route policy 0)>

- e. Configure the destination address:
 - i. Set the type to **interface**:

(config network route policy 0)> dst type interface (config network route policy 0)>

ii. Set the interface to WWANPublic:

(config network route policy 0)> interface /network/interface/WWANPublic (config network route policy 0)>

f. Use to periods (...) to move back one level in the configuration:

(config nnetwork route policy 0)> .. (config nnetwork route policy)>

g. Add a new routing policy:

(config network route policy)> add end (config network route policy 1)>

h. Set the label that will be used to identify this route policy:

(config network route policy 1)> label "Route through private apn" (config network route policy 1)>

i. Set the interface:

(config network route policy 1)> interface /network/interface/WWANPrivate (config network route policy 1)>

- j. Configure the source address:
 - Set the source type to interface:

(config network route policy 1)> src type interface (config network route policy 1)>

ii. Set the interface to LAN2:

(config network route policy 1)> src interface LAN2 (config network route policy 1)>

- k. Configure the destination address:
 - i. Set the type to **interface**:

(config network route policy 1)> dst type interface (config network route policy 1)>

ii. Set the interface to WWANPrivate:

(config network route policy 1)> interface /network/interface/WWANPrivate (config network route policy 1)>

6. Save the configuration and apply the change.

(config network route policy 1)> save Configuration saved.

_

7. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configure manual carrier selection

By default, your IX20 automatically selects the most appropriate cellular carrier based on the SIM that is in use and the status of available carriers in your area.

Alternatively, you can configure the devices to manually select the carrier, based on the Network PLMN ID. You can also configure the device to use manual carrier selection and fall back to automatic carrier selection if connecting to the manually-configured carrier fails.

You can use also use the modem scan command at the command line to scan for available carriers and determine their PLMN ID.

Required configuration items

- Select Manual or Manual/Automatic carrier selection mode.
- The **Network PLMN ID**.



- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.

- c. Click Settings.
- d. Click to expand Config.


Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

- 3. Click Network > Interfaces > Modem.
- 4. For Carrier selection mode, select one of the following:
 - Automatic—The device automatically selects the carrier based on your SIM and cellular network status.
 - Manual—The device will only connect to the carrier identified in the **Network PLMN ID**. If the carrier is not available, no cellular connection will be established.
 - Manual/Automatic—The device will attempt to connect to the carrier identified in the Network PLMN ID. If the carrier is not available, the device will fall back to using automatic carrier selection.
- 5. If Manual or Manual/Automatic are selected for Carrier section mode, enter the Network PLMN ID.

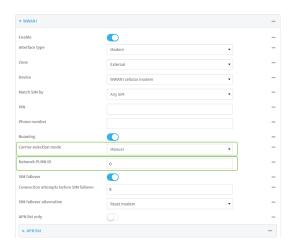

Note You can use the modem scan command at the Admin CLI to scan for available carriers and determine their PLMN ID. See Scan for available cellular carriers for details.

6. Click **Apply** to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

> config (config)>

3. At the config prompt, type:

(config)> network interface modem modem operator_mode *value* (config)>

where value is one of:

- automatic—The device automatically selects the carrier based on your SIM and cellular network status.
- manual—The device will only connect to the carrier identified in the Network PLMN ID.
 If the carrier is not available, no cellular connection will be established.
- manual_automatic—The device will attempt to connect to the carrier identified in the Network PLMN ID. If the carrier is not available, the device will fall back to using automatic carrier selection.
- 4. If carrier section mode is set to manual or manual_automatic, set the network PLMN ID:

(config)> network interface modem modem operator *plmn_ID* (config)>

Note You can use the modem scan command at the Admin CLI to scan for available carriers and determine their PLMN ID. See Scan for available cellular carriers for details.

5. Save the configuration and apply the change.

(config)> save
Configuration saved.

6. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Scan for available cellular carriers

You can scan for available carriers and determine their network PLMN ID by using the modem scan command at the Admin CLI.

Note For devices using Unitac modems (such as devices with the 1002-CM45 core module), carrier scanning will not work if the modem has an active cellular connection.



Log into the IX20 WebUI as a user with full Admin access rights.

1. From the main menu, click **Status > Modems**.

2. Scroll to the Connection Status section and click SCAN.



The Carrier Scan window opens.



- 3. (Optional) Change the **Timeout** for the carrier scan. The default is **300** seconds.
- 4. When the **Carrier Scan** window opens, the results of the most recent previous scan are displayed. If there is no previous scan available, or to refresh the list, click **SCAN**.
- 5. The current carrier is highlighted in green. To switch to a different carrier:
 - a. Highlight the appropriate carrier and click **SELECT**.

The Carrier selection dialog opens.



- b. For Carrier selection mode, select one of the following:
 - Manual/Automatic: The device will use automatic carrier selection if this carrier is not available.
 - Manual: Does not allow the device to use automatic carrier selection if this carrier is not available.

Note If Manual is selected, your modem must support the Network technology or the modem will lose cellular connectivity. If you are using a cellular connection to perform this procedure, you may lose your connection and the device will no longer be accessible.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the Admin CLI prompt, type:

```
Issuing network scan, this may take some time...

Status Carrier PLMN ID Technology

--------

Available T-Mobile 310260 4G

Available T-Mobile 310260 3G

Available AT&T 310410 4G

Available Verizon 311480 4G

Available 311 490 311490 4G

Available 313 100 313100 4G
```

Show cellular status and statistics

You can view a summary status for all cellular modems, or view detailed status and statistics for a specific modem.



Log into the IX20 WebUI as a user with full Admin access rights.

- 1. On the menu, click Status.
- 2. Under Connections, click Modems.

The modem status window is displayed

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

- 2. Use the show modern command:
 - To view a status summary for the modem:

```
> show modem

Modem SIM Status APN Signal Strength
----- modem 1 (ready) connected 1234 Good (-84 dBm)
>
```

■ To view detailed status and statistics, use the show modern name name command:

> show modem name modem

modem: [Telit] LM940

IMEI : 781154796325698

Model : LM940

FW Version : 24.01.541_ATT Revision : 24.01.541

Status

State : connected

Signal Strength : Good (-85 dBm)

Bars : 2/5 Access Mode : 4G

Network Technology (CNTI): LTE

Band : B2 Temperature : 34C

wwan1 Interface

APN : 1234
IPv4 surelink : passing
IPv4 address : 189 232

IPv4 address : 189.232.229.47 IPv4 gateway : 189.232.229.1

IPv4 MTU : 1500

IPv4 DNS server(s) : 245.144.162.207, 245.144.162.208

IPv6 surelink : passing

IPv6 address : 11f6:4680:0d67:59d2:552b:3429:81a8:f1ea IPv6 gateway : ff50:d95d:7e98:abe8:3030:9138:4f25:f51b

IPv6 MTU : 1500

TX bytes : 127941 RX bytes : 61026

Uptime : 10 hrs, 56 mins (39360s)

SIM

SIM Slot : 1 SIM Status : ready

IMSI : 61582122197895

ICCID : 26587628655003992180

SIM Provider : AT&T

4G

--

RSRQ : Good (-11.0 dB) RSRP : Good (-93.0 dBm)

RSSI : Excellent (-64.0 dBm)
SNR : Good (6.4 dB)

Unlock a SIM card

A SIM card can be locked if a user tries to set an invalid PIN for the SIM card too many times. In addition, some cellular carriers require a SIM PIN to be added before the SIM card can be used. If the SIM card is locked, the IX20 device cannot make a cellular connection.

Command line

To unlock a SIM card:

Select the device in Remote Manager and click Actions > Open Console, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

At the Admin CLI prompt, use the modem puk unlock command to set a new PIN for the SIM card:

```
> modem puk unlock puk_code new_pin modem_name
>
```

For example, to unlock a SIM card in the modem named **modem** with PUK code **12345678**, and set the new SIM PIN to **1234**:

```
> modem puk unlock 12345678 1234 modem
>
```

3. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Note If the SIM remains in a locked state after using the unlock command, contact your cellular carrier.

Signal strength for cellular connections

See Show cellular status and statistics for procedures to view this information.

Signal strength for 4G connections

For 4G connections, the **RSRP** value determines signal strength.

Excellent: > -90 dBm
 Good: -90 dBm to -105 dBm
 Fair: -106 dBm to -115 dBm
 Poor: -116 dBm to -120 dBm

■ No service: < -120 dBm

Signal strength for 3G and 2G connections

For 3G and 2G cellular connections, the current **RSSI** value determines signal strength.

■ Excellent: > -70 dBm

Good: -70 dBm to -85 dBm
 Fair: -86 dBm to -100 dBm

■ Poor: < -100 dBm to -109 dBm

■ No service: -110 dBm

Tips for improving cellular signal strength

If the signal strength LEDs or the signal quality for your device indicate **Poor** or **No service**, try the following things to improve signal strength:

- Move the IX20 device to another location.
- Try connecting a different set of antennas, if available.
- Purchase a Digi Antenna Extender Kit:
 - Antenna Extender Kit, 1m

AT command access

To run AT commands from the IX20 command line:

Command line

- 1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.
 - Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
- At the Admin CLI prompt, type modem at-interactive and press Enter. Type n if you do not
 want exclusive access. This allows you to send AT commands to the device while still
 allowing the device to connect, disconnect, and/or reconnect to the cellular network.
- 3. At the Admin CLI prompt, use the modem at-interactive command to begin an interactive AT command session:

> modem at-interactive

Do you want exclusive access to the modem? (y/n) [y]:

Type n if you do not want exclusive access. This allows you to send AT commands to the
device while still allowing the device to connect, disconnect, and/or reconnect to the cellular
network.

The following is an example interactive AT command:

> modem at-interactive

Do you want exclusive access to the modem? (y/n) [y]: n Starting terminal access to modem AT commands.

Note that the modem is still in operation.

To quit enter '~.' ('~~.' if using an ssh client) and press ENTER

Connected

ati

Manufacturer: Sierra Wireless, Incorporated

Model: MC7455

Revision: SWI9X30C_02.24.03.00 r6978 CARMD-EV-FRMWR2 2017/03/02 13:36:45

MEID: 35907206045169 IMEI: 359072060451693

IMEI SV: 9

FSN: LQ650551070110 +GCAP: +CGSM

OK

5. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configure a Wide Area Network (WAN)

Configuring a Wide Area Network (WAN) involves configuring the following items:

Required configuration items

A name for the interface.

Note If the interface name is more than eight characters, the name will be truncated in the underlying network interface to the first six characters followed by three digits, incrementing from 000. This affects any custom scripts or firewall rules that may be trying to adjust the interface or routing table entries.

- The interface type: **Ethernet**.
- The firewall zone: External.
- The network device or bridge that is used by the WAN.
- Configure the WAN as a DHCP client.

Additional configuration items

- Active recovery configuration. See Configure SureLink active recovery to detect WAN/WWAN failures for further information.
- Additional IPv4 configuration:
 - The type being the way to control how the modem in the Digi device obtains an IP address from the cellular network.
 - The metric for IPv4 routes associated with the WAN.
 - The relative weight for IPv4 routes associated with the WAN.
 - The IPv4 management priority of the WAN. The active interface with the highest management priority will have its address reported as the preferred contact address for central management and direct device access.
 - The IPv4 Maximum Transmission Unit (MTU) of the WAN.
 - Whether to assign a static IPv4 address to the WAN.
 - When to use DNS: always, never, or only when this interface is the primary default route.
 - When to use DNS servers for this interface.
 - Whether to include the IX20 device's hostname in DHCP requests.
- IPv6 configuration:
 - The type being the way to control how the modem in the Digi device obtains an IP address from the cellular network.
 - The metric for IPv6 routes associated with the WAN.
 - The relative weight for IPv6 routes associated with the WAN.
 - The IPv6 management priority of the WAN. The active interface with the highest management priority will have its address reported as the preferred contact address for central management and direct device access.
 - The IPv6 Maximum Transmission Unit (MTU) of the WAN.

- · Whether to assign a static IPv6 address to the WAN.
- When to use DNS: always, never, or only when this interface is the primary default route.
- · When to use DNS servers for this interface.
- Whether to include the IX20 device's hostname in DHCP requests.
- MAC address denylist and allowlist.

To create a new WAN or edit an existing WAN:



- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- a. Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.


Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The Configuration window is displayed.

- 3. Click Network > Interfaces.
- 4. Create the WAN or select an existing WAN:
 - To create a new WAN, for **Add interface**, type a name for the WAN and click **1**/2

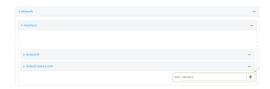

To edit an existing WAN, click to expand the WAN.

The Interface configuration window is displayed.



New WANs are enabled by default. To disable, toggle off Enable.

- 5. For Interface type, leave at the default setting of Ethernet.
- 6. For **Zone**, select **External**.
- 7. For **Device**, select an Ethernet device, a Wi-Fi client, or a bridge. See Bridging for more information about bridging.
- 8. (Optional) Click to expand **802.1x** to configure 802.1x port based network access control. The IX20 can function as an 802.1x authenticator; it does not function as an 802.1x supplicant.
 - a. Click to expand Authentication.
 - b. Click **Enable server** to enable the 802.1x authenticator on the IX20 device.
 - c. Set the Reauth period.
- 9. Configure IPv4 settings:
 - a. Click to expand IPv4.
 IPv4 support is enabled by default.
 - b. For Type, select DHCP address.
 - c. Optional IPv4 configuration items:
 - Set the Metric.
 - See Configure WAN/WWAN priority and default route metrics for further information about metrics.
 - ii. For Weight, type the relative weight for default routes associated with this interface. For multiple active interfaces with the same metric, Weight is used to load balance traffic to the interfaces.
 - iii. Set the Management priority. This determines which interface will have priority for central management activity. The interface with the highest number will be used.
 - iv. Set the MTU.
 - v. For **Use DNS**, select one of the following:
 - Always: DNS will always be used for this WAN; when multiple interfaces have the same DNS server, the interface with the lowest metric will be used for DNS requests.
 - When primary default route: Only use the DNS servers provided for this interface when the interface is the primary route.
 - Never: Never use DNS servers for this interface.
 - vi. Enable **DHCP Hostname** to instruct the IX20 device to include the device's system name with DHCP requests as the Client FQDN option. The DHCP server can then be configured to register the device's hostname and IP address with an associated DNS

server.

- See RFC4702 for further information about DHCP server support for the Client FQDN option.
- See Configure system information for information about setting the IX20 device's system name.
- d. Enable Force link to keep the network interface active even when the device link is down.
- 10. (Optional) Configure IPv6 settings:
 - a. Click to expand IPv6.
 - b. **Enable** IPv6 support.
 - c. For Type, select DHCPv6 address.
 - d. For **Prefix length**, type the minimum length of the prefix to assign to this LAN. If the minimum length is not available, then a longer prefix will be used.
 - e. For **Prefix ID**, type the identifier used to extend the prefix to the assigned length. Leave blank to use a random identifier.
 - f. Set the Metric.
 - See Configure WAN/WWAN priority and default route metrics for further information about metrics.
 - g. For Weight, type the relative weight for default routes associated with this interface. For multiple active interfaces with the same metric, Weight is used to load balance traffic to the interfaces.
 - h. Set the **Management priority**. This determines which interface will have priority for central management activity. The interface with the highest number will be used.
 - i. Set the MTU.
 - i. For Use DNS:
 - Always: DNS will always be used for this WAN; when multiple interfaces have the same DNS server, the interface with the lowest metric will be used for DNS requests.
 - When primary default route: Only use the DNS servers provided for this interface when the interface is the primary route.
 - Never: Never use DNS servers for this interface.
 - k. Enable **DHCP Hostname** to instruct the IX20 device to include the device's system name with DHCP requests as the Client FQDN option. The DHCP server can then be configured to register the device's hostname and IP address with an associated DNS server.
 - See RFC4702 for further information about DHCP server support for the Client FQDN option.
 - See Configure system information for information about setting the IX20 device's system name.
 - (Optional) To assign a static address to a network interface, click to expand Static address.
 - i. Click the slider to enable.
 - ii. For **Address**, type the name of the static address you want to use (for example, *tree::squirrel:tail/64*).
- 11. (Optional) Click to expand MAC address denylist.

Incoming packets will be dropped from any devices whose MAC addresses is included in the **MAC address denylist**.

- a. Click to expand MAC address denylist.
- b. For Add MAC address, click Yo
- c. Type the MAC address.
- 12. (Optional) Click to expand MAC address allowlist.

If allowlist entries are specified, incoming packets will only be accepted from the listed MAC addresses.

- a. Click to expand MAC address allowlist.
- b. For Add MAC address, click Yo
- c. Type the MAC address.
- See Configure SureLink active recovery to detect WAN/WWAN failures for information about configuring SureLink.
- 13. Click **Apply** to save the configuration and apply the change.

Command line

Select the device in Remote Manager and click Actions > Open Console, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

- 3. Create a new WAN or edit an existing one:
 - To create a new WAN named my_wan:

```
(config)> add network interface my_wan
(config network interface my_wan)>
```

■ To edit an existing WAN named **my_wan**, change to the **my_wan** node in the configuration schema:

```
(config)> network interface my_wan
(config network interface my_wan)>
```

4. Set the appropriate firewall zone:

```
(config network interface my_wan)> zone zone (config network interface my_wan)>
```

See Firewall configuration for further information.

5. Select an Ethernet device, a Wi-Fi device, or a bridge. See Bridging for more information about bridging.

a. Enter device ?to view available devices and the proper syntax.

(config network interface my_wan)> device?

Device: The network device used by this network interface.

Format:

/network/device/eth1 /network/device/eth2

/network/device/loopback

/network/bridge/hotspot_bridge

/network/bridge/lan

/network/wireless/ap/digi_ap

/network/wireless/ap/digi_hotspot_ap

Current value:

(config network interface my_wan)> device

b. Set the device for the LAN:

(config network interface my_wan)> device *device* (config network interface my_wan)>

- 6. Configure IPv4 settings:
 - IPv4 support is enabled by default. To disable:

(config network interface my_wan)> ipv4 enable false (config network interface my_wan)>

Configure the WAN to be a DHCP client:

(config network interface my_wan)> ipv4 type dhcp (config network interface my_wan)>

- a. Optional IPv4 configuration items:
 - i. Set the IP metric:

(config network interface my_wan)> ipv4 metric *num* (config network interface my_wan)>

See Configure WAN/WWAN priority and default route metrics for further information about metrics.

ii. Set the relative weight for default routes associated with this interface. For multiple active interfaces with the same metric, the weight is used to load balance traffic to the interfaces.

(config network interface my_wan)> ipv4 weight *num* (config network interface my_wan)>

iii. Set the management priority. This determines which interface will have priority for central management activity. The interface with the highest number will be used.

(config network interface my_wan)> ipv4 mgmt *num* (config network interface my_wan)>

iv. Set the MTU:

(config network interface my_wan)> ipv4 mtu *num* (config network interface my_wan)>

v. Configure how to use DNS:

(config network interface my_wan)> ipv4 use_dns *value* (config network interface my_wan)>

where value is one of:

- always: DNS will always be used for this WAN; when multiple interfaces have the same DNS server, the interface with the lowest metric will be used for DNS requests.
- primary: Only use the DNS servers provided for this interface when the interface is the primary route.
- never: Never use DNS servers for this interface.
- vi. Enable DHCP Hostname to instruct the IX20 device to include the device's system name with DHCP requests as the Client FQDN option. The DHCP server can then be configured to register the device's hostname and IP address with an associated DNS server.

(config network interface my_wan)> ipv4 dhcp_hostname true (config network interface my_wan)>

- See RFC4702 for further information about DHCP server support for the Qient FQDN option.
- See Configure system information for information about setting the IX20 device's system name.
- See Configure WAN priority and default route metrics for further information about metrics.
- 7. (Optional) Configure IPv6 settings:
 - a. Enable IPv6 support:

(config network interface my_wan)> ipv6 enable true (config network interface my_wan)>

b. Set the IPv6 type to DHCP:

(config network interface my_wan)> ipv6 type dhcpv6 (config network interface my_wan)>

c. Generally, the default settings for IPv6 support are sufficient. You can view the default IPv6 settings by using the question mark (?):

(config network interface my_wan)> ipv6?

IPv6

Parameters Current Value DHCP Hostname dhcp_hostname false enable true Enable 0 Metric metric mgmt 0 Management priority mtu 1500 MTU dhcpv6 type Type Use DNS always use_dns 10 Weight weight Additional Configuration

Active recovery

(config network interface my_wan)>

connection_monitor

d. Modify any of the remaining default settings as appropriate. For example, to change the metric:

```
(config network interface my_wan)> ipv6 metric 1
(config network interface my_wan)>
```

If the minimum length is not available, then a longer prefix will be used.

See Configure WAN/WWAN priority and default route metrics for further information about metrics.

e. (Optional) To assign a static address to a network interface:

(config)> network interfacemy_wan ipv6 static?

Static address: IPv6 static address.

Parameters Current value address Address enable Enable false

(config)> network interface my_wan ipv6 static address?

Address: The IPv6 address to use.

Format: IPv6_address/prefix_length

Current value:

(config)>

8. (Optional) To configure 802.1x port based network access control:

Note The IX20 can function as an 802.1x authenticator; it does not function as an 802.1x supplicant.

a. Enable the 802.1x authenticator on the IX20 device:

(config network interface my_wan)> 802_1x authentication enable true (config network interface my_wan)>

b. Set the frequency period for reauthorization:

(config network interface my_wan)> 802_1x authentication reauth_period *value* (config network interface my_wan)>

where value is an integer between 0 and 86400. The default is 3600.

9. (Optional) Configure the MAC address deny list.

Incoming packets will be dropped from any devices whose MAC addresses is included in the MAC address denylist.

a. Add a MAC address to the denylist:

(config network interface my_wan)> add mac_denylist end *mac_address* (config network interface my_wan)>

where mac_address is a hyphen-separated MAC address, for example, 32-A6-84-2E-81-58.

- b. Repeat for each additional MAC address.
- (Optional) Configure the MAC address allowlist.

If allowlist entries are specified, incoming packets will only be accepted from the listed MAC addresses.

a. Add a MAC address to the allowlist:

(config network interface my_wan)> add mac_allowlist end *mac_address* (config network interface my_wan)>

where mac_address is a hyphen-separated MAC address, for example, 32-A6-84-2E-81-58.

- b. Repeat for each additional MAC address.
- See Configure SureLink active recovery to detect WAN/WWAN failures for information about configuring SureLink for active recovery.
- 12. Save the configuration and apply the change.

(config network interface my_wan)> save Configuration saved.

>

13. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configure a Wireless Wide Area Network (WWAN)

Configuring a Wireless Wide Area Network (WWAN) involves configuring the following items:

Required configuration items

- The interface type: **Modem**.
- The firewall zone: External.
- The cellular modem that is used by the WWAN.

Additional configuration items

- SIM selection for this WWAN.
- The SIM PIN.
- The SIM phone number for SMS connections.
- Enable or disable roaming.
- SIM failover configuration.
- APN configuration.
- The custom gateway/netmask.
- IPv4 configuration:
 - The type being the way to control how the modem in the Digi device obtains an IP address from the cellular network.
 - The metric for IPv4 routes associated with the WAN.
 - The relative weight for IPv4 routes associated with the WAN.
 - The IPv4 management priority of the WAN. The active interface with the highest management priority will have its address reported as the preferred contact address for central management and direct device access.
 - The IPv4 Maximum Transmission Unit (MTU) of the WAN.
 - Whether to assign a static IPv4 address to the WAN.
 - When to use DNS: always, never, or only when this interface is the primary default route.
 - SureLink active recovery configuration. See Configure SureLink active recovery to detect WAN/WWAN failures for further information.
- IPv6 configuration:
 - The type being the way to control how the modem in the Digi device obtains an IP address from the cellular network.
 - The metric for IPv6 routes associated with the WAN.
 - The relative weight for IPv6 routes associated with the WAN.
 - The IPv6 management priority of the WAN. The active interface with the highest management priority will have its address reported as the preferred contact address for central management and direct device access.

- The IPv6 Maximum Transmission Unit (MTU) of the WAN.
- · Whether to assign a static IPv6 address to the WAN.
- When to use DNS: always, never, or only when this interface is the primary default route.
- SureLink active recovery configuration. See Configure SureLink active recovery to detect WAN/WWAN failures for further information.



- Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:


a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

- 3. Click Network > Interfaces.
- 4. Create the WWAN or select an existing WWAN:
 - To create a new WWAN:
 - a. For **Add interface**, type a name for the WWAN and click %



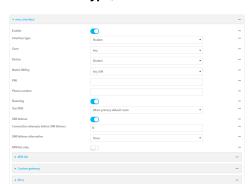

b. For Interface type, select Modem.

New WWANs are enabled by default. To disable, toggle off **Enable**.

- To edit an existing WWAN, click to expand the WWAN.
- 5. For **Zone**, select **External**.
- 6. For **Device**, select the cellular modem.
- 7. For **Match SIM by**, select a SIM matching criteria to determine when this WWAN should be used:
 - If SIM slot is selected, for Match SIM slot, select which SIM slot must be in active for this WWAN to be used.
 - If Carrier is selected, for Match SIM carrier, select which cellular carrier must be in active for this WWAN to be used.
 - If PLMN identifier is selected, for Match PLMN identifier, type the PLMN id that must be in active for this WWAN to be used.
 - If **IMSI** is selected, for **Match IMSI**, type the International Mobile Subscriber Identity (IMSI) that must be in active for this WWAN to be used.
 - If ICCID is selected, for Match ICCID, type the unique SIM card ICCID that must be in active for this WWAN to be used.
- 8. Type the **PIN** for the SIM. Leave blank if no PIN is required.
- Type the **Phone number** for the SIM, for SMS connections.
 Normally, this should be left blank. It is only necessary to complete this field if the SIM does not have a phone number or if the phone number is incorrect.
- Roaming is enabled by default. Click to disable.
- 11. For Carrier selection mode, select one of the following:
 - Automatic: The cellular carrier is selected automatically by the device.
 - Manual: The cellular carrier must be manually configured. If the configured network is not available, no cellular connection will be established.
 - Manual/Automatic: The carrier is manually configured. If the configured network is not available, automatic carrier selection is used.

If Manual or Manual/Automatic is selected:

- a. For **Network PLMN ID**, type the PLMN ID for the cellular network.
- b. For **Network technology**, select the technology that should be used. The default is **All technologies**, which means that the best available technology will be used.

Note If **Manual** is configured for **Carrier selection mode** and a specific network technology is selected for the **Network technology**, your modem must support the selected technology or no cellular connection will be established. If you are using a cellular connection to perform this procedure, you may lose your connection and the device will no longer be accessible.

- 12. **SIM failover** is enabled by default, which means that the modem will automatically fail over from the active SIM to the next available SIM when the active SIM fails to connect. If enabled:
 - For Connection attempts before SIM failover, type the number of times that the device should attempt to connect to the active SIM before failing over to the next available SIM.
 - b. For **SIM** failover alternative, configure how SIM failover will function if automatic SIM switching is unavailable:
 - None: The device will perform no alternative action if automatic SIM switching is unavailable.
 - Reset modem: The device will reset the modem if automatic SIM switching is unavailable.
 - Reboot device: The device will reboot if automatic SIM switching is unavailable.
- For APN Selection, select whether you want to configure the IX20 to use the preconfigured APNs, custom APNs, or both. See Cellular modem APNs for information and instructions for setting an APN.
- 14. (Optional) To configure the IP address of a custom gateway or a custom netmask:
 - a. Click Custom gateway to expand.
 - b. Click Enable.
 - c. For Gateway/Netmask, enter the IP address and netmask of the custom gateway. To override only the gateway netmask, but not the gateway IP address, use all zeros for the IP address. For example, 0.0.0.0/32 will use the network-provided gateway, but with a /32 netmask.
- 15. Optional IPv4 configuration items:
 - a. Click IPv4 to expand.
 - b. IPv4 support is **Enabled** by default. Click to disable.
 - c. Set the Type.
 - Static IP address Digi device obtains the static IP address from the cellular network.
 - DHCP address Digi device obtains IP address through a DHCP server on the cellular network.
 - a. Set the Metric.
 - See Configure WAN/WWAN priority and default route metrics for further information about metrics.
 - b. For Weight, type the relative weight for default routes associated with this interface. For multiple active interfaces with the same metric, Weight is used to load balance traffic to the interfaces.

- c. Set the **Management priority**. This determines which interface will have priority for central management activity. The interface with the highest number will be used.
- d. Set the MTU.
- e. For Use DNS:
 - Always: DNS will always be used for this WWAN; when multiple interfaces have the same DNS server, the interface with the lowest metric will be used for DNS requests.
 - When primary default route: Only use the DNS servers provided for this WWAN when the WWAN is the primary route.
 - Never: Never use DNS servers for this WWAN.

The default setting is When primary default route.

- 16. Optional IPv6 configuration items:
 - a. Click IPv6 to expand.
 - b. IPv6 support is **Enabled** by default. Click to disable.
 - c. Set the Type.
 - Static IP address Digi device obtains the static IP address from the cellular network.
 - DHCP address Digi device obtains IP address through a DHCP server on the cellular network.
 - a. Set the Metric.

See Configure WAN/WWAN priority and default route metrics for further information about metrics.

- b. For Weight, type the relative weight for default routes associated with this interface. For multiple active interfaces with the same metric, Weight is used to load balance traffic to the interfaces.
- c. Set the **Management priority**. This determines which interface will have priority for central management activity. The interface with the highest number will be used.
- d. Set the MTU.
- e. For Use DNS:
 - Always: DNS will always be used for this WWAN; when multiple interfaces have the same DNS server, the interface with the lowest metric will be used for DNS requests.
 - When primary default route: Only use the DNS servers provided for this WWAN when the WWAN is the primary route.
 - Never: Never use DNS servers for this WWAN.

The default setting is When primary default route.

- See Configure SureLink active recovery to detect WAN/WWAN failures for information about configuring SureLink.
- 17. Click Apply to save the configuration and apply the change.

Command line

Select the device in Remote Manager and click Actions > Open Console, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

> config (config)>

- 3. Create a new WWAN or edit an existing one:
 - To create a new WWAN named my_wwan:

(config)> add network interface my_wwan (config network interface my_wwan)>

■ To edit an existing WWAN named **my_wwan**, change to the my_wwan node in the configuration schema:

(config)> network interface my_wwan (config network interface my_wwan)>

4. Set the appropriate firewall zone:

(config network interface my_wwan)> zone zone (config network interface my_wwan)>

See Firewall configuration for further information.

- 5. Select a cellular modem:
 - Enter modem device ?to view available modems and the proper syntax.

(config network interface my_wwan)> modem device ?

Device: The modem used by this network interface.

Format: modem

Current value:

(config network interface my_wwan)> device

b. Set the device:

(config network interface my_wwan)> modem device modem (config network interface my_wwan)>

6. Set the SIM matching criteria to determine when this WWAN should be used:

(config network interface my_wwan)> modem match *value* (config network interface my_wwan)>

Where value is one of:

- any
- carrier

Set the cellular carrier must be in active for this WWAN to be used:

a. Use ?to determine available carriers:

(config network interface my_wwan)> modem carrier

Match SIM carrier: The SIM carrier match criteria. This interface is applied when the SIM card is

provisioned from the carrier.

Format:

AT&T

Rogers

Sprint

T-Mobile

Telstra

Verizon

Vodafone

other

Default value: AT&T Current value: AT&T

(config network interface my_wwan)>

b. Set the carrier:

(config network interface my_wwan)> modem carrier *value* (config network interface my_wwan)>

iccid

Set the unique SIM card ICCID that must be in active for this WWAN to be used:

(config network interface my_wwan)> modem iccid ICCID (config network interface my_wwan)>

imsi

Set the International Mobile Subscriber Identity (IMSI) that must be in active for this WWAN to be used:

(config network interface my_wwan)> modem imsi *IMSI* (config network interface my_wwan)>

plmn id

Set the PLMN id that must be in active for this WWAN to be used:

(config network interface my_wwan)> modem plmn_id PLMN_ID (config network interface my_wwan)>

■ sim_slot

Set which SIM slot must be in active for this WWAN to be used:

(config network interface my_wwan)> modem sim_slot value (config network interface my_wwan)>

where value is either 1 or 2.

7. Set the PIN for the SIM. Leave blank if no PIN is required.

(config network interface my_wwan)> modem pin value (config network interface my_wwan)>

8. Set the phone number for the SIM, for SMS connections:

(config network interface my_wwan)> modem phone *num* (config network interface my_wwan)>

Normally, this should be left blank. It is only necessary to complete this field if the SIM does not have a phone number or if the phone number is incorrect.

9. Roaming is enabled by default. To disable:

(config network interface my_wwan)> modem roaming false (config network interface my_wwan)>

10. Set the carrier selection mode:

(config network interface my_wwan)> modem operator_mode *value* (config network interface my_wwan)>

where value is one of:

- automatic: The cellular carrier is selected automatically by the device.
- manual: The cellular carrier must be manually configured. If the configured network is not available, no cellular connection will be established.
- manual_automatic: The carrier is manually configured. If the configured network is not available, automatic carrier selection is used.

If manual or manual automatic is set:

a. Set the Network PLMN ID:

(config network interface my_wwan)> modem operator *PLMN_ID* (config network interface my_wwan)>

b. Set the cellular network technology:

(config network interface my_wwan)> modem operator_technology *value* (config network interface my_wwan)>

where value is one of:

- all: The best available technology will be used.
- 2G: Only 2G technology will be used.
- **3G**: Only 3G technology will be used.
- 4G: Only 4G technology will be used.
- NR5G-NSA: Only 5G non-standalone technology will be used.
- NR5G-SA: Only 5G standalone technology will be used.

The default is all.

Note If manual is configured for the carrier selection mode and a specific network technology is selected for the cellular network technology, your modem must support the selected technology or no cellular connection will be established. If you are using a cellular connection to perform this procedure, you may lose your connection and the device will no longer be accessible.

11. SIM failover is enabled by default, which means that the modem will automatically fail over from the active SIM to the next available SIM when the active SIM fails to connect. To disable:

(config network interface my_wwan)> modem sim_failover false (config network interface my_wwan)>

If enabled:

a. Set the number of times that the device should attempt to connect to the active SIM before failing over to the next available SIM:

(config network interface my_wwan)> modem sim_failover_retries *num* (config network interface my_wwan)>

The default setting is 5.

b. Configure how SIM failover will function if automatic SIM switching is unavailable:

(config network interface my_wwan)> modem sim_failover_alt *value* (config network interface my_wwan)>

where value is one of:

- none: The device will perform no alternative action if automatic SIM switching is unavailable.
- reset: The device will reset the modem if automatic SIM switching is unavailable.
- reboot: The device will reboot if automatic SIM switching is unavailable.
- (Optional) To configure the device to use either the preconfigured APNs, custom APNs, or both:

(config)> network interface modem modem apn_selection value (config)>

Where value is one of the following:

- apn list only
- both lists
- built-in-list-only
- 13. (Optional) To configure the IP address of a custom gateway or a custom netmask:
 - a. Enable the custom gateway:

(config network interface my_wwan)> modem custom_gw enable true (config network interface my_wwan)>

b. Set the IP address and netmask of the custom gateway:

(config network interface my_wwan)> modem custom_gw gateway *ip_address*/*netmask* (config network interface my_wwan)> modem custom_gw

To override only the gateway netmask, but not the gateway IP address, use all zeros for the IP address. For example, **0.0.0.0/32** will use the network-provided gateway, but with a /32 netmask.

- 14. Optional IPv4 configuration items:
 - a. IPv4 support is enabled by default. To disable:

(config network interface my_wwan)> ipv4 enable false (config network interface my_wwan)>

b. Set the type, which determines how the modem in the device obtains an IP address from the cellular network.

(config network interface my_wwan)> ipv4 modem_type *value* (config network interface my_wwan)>

Where value is one of:

- static: Digi device obtains the static IP address from the cellular network.
- **dhcp**: Digi device obtains IP address via a DHCP server on the cellular network.
- c. Set the metric:

(config network interface my_wwan)> ipv4 metric *num* (config network interface my_wwan)>

See Configure WAN/WWAN priority and default route metrics for further information about metrics.

d. Set the relative weight for default routes associated with this interface. For multiple active interfaces with the same metric, the weight is used to load balance traffic to the interfaces.

(config network interface my_wwan)> ipv4 weight *num* (config network interface my_wwan)>

e. Set the management priority. This determines which interface will have priority for central management activity. The interface with the highest number will be used.

(config network interface my_wwan)> ipv4 mgmt *num* (config network interface my_wwan)>

f. Set the MTU:

(config network interface my_wwan)> ipv4 mtu *num* (config network interface my_wwan)>

g. Configure when the WWAN's DNS servers will be used:

(config network interface my_wwan)> ipv4 dns value (config network interface my_wwan)>

Where value is one of:

- always: DNS will always be used for this WWAN; when multiple interfaces have the same DNS server, the interface with the lowest metric will be used for DNS requests.
- never: Never use DNS servers for this WWAN.
- primary: Only use the DNS servers provided for this WWAN when the WWAN is the primary route.

The default setting is primary.

- 15. Optional IPv6 configuration items:
 - a. IPv6 support is enabled by default. To disable:

(config network interface my_wwan)> ipv4 enable false (config network interface my_wwan)>

b. Set the type, which determines how the modem in the device obtains an IP address from the cellular network.

(config network interface my_wwan)> ipv4 modem_type *value* (config network interface my_wwan)>

Where value is one of:

- static: Digi device obtains the static IP address from the cellular network.
- **dhcp**: Digi device obtains IP address via a DHCP server on the cellular network.
- c. Set the metric:

(config network interface my_wwan)> ipv4 metric *num* (config network interface my_wwan)>

See Configure WAN/WWAN priority and default route metrics for further information about metrics.

d. Set the relative weight for default routes associated with this interface. For multiple active interfaces with the same metric, the weight is used to load balance traffic to the interfaces.

(config network interface my_wwan)> ipv4 weight *num* (config network interface my_wwan)>

e. Set the management priority. This determines which interface will have priority for central management activity. The interface with the highest number will be used.

(config network interface my_wwan)> ipv4 mgmt *num* (config network interface my_wwan)>

f. Set the MTU:

(config network interface my_wwan)> ipv4 mtu num (config network interface my_wwan)>

g. Configure when the WWAN's DNS servers will be used:

(config network interface my_wwan)> ipv4 dns value (config network interface my_wwan)>

Where value is one of:

- always: DNS will always be used for this WWAN; when multiple interfaces have the same DNS server, the interface with the lowest metric will be used for DNS requests.
- never: Never use DNS servers for this WWAN.
- primary: Only use the DNS servers provided for this WWAN when the WWAN is the primary route.

The default setting is primary.

- See Configure SureLink active recovery to detect WAN/WWAN failures for information about configuring active recovery.
- 17. Save the configuration and apply the change.

(config network interface my_wan)> save Configuration saved.

Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an Access selection menu. Type quit to disconnect from the device.

Show WAN and WWAN status and statistics



Log into the IX20 WebUI as a user with full Admin access rights.

- 1. From the menu, click Status.
- Under Networking, click Interfaces.

Command line

1. Select the device in Remote Manager and click Actions > Open Console, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an Access selection menu. Type admin to access the Admin CLI.

2. Enter the show network command at the Admin CLI prompt:

```
> show network
Interface
           Proto Status Address
setupip
          IPv4 up 192.168.210.1/24
setuplinklocalip IPv4 up 169.254.100.100/16
          IPv4 up 10.10.10.10/24
eth1
eth1
          IPv6 up fe00:2404::240:f4ff:fe80:120/64
          IPv4 up 192.168.2.1/24
eth2
eth2
          IPv6 up fd00:2704::1/48
loopback
            IPv4 up 127.0.0.1/8
                       10.200.1.101/30
modem
            IPv4 up
modem
            IPv6 down
```

3. Additional information can be displayed by using the show network verbose command:

```
> show network verbose
Interface
           Proto Status Type Zone Device Metric Weight
setupip
         IPv4 up static setup eth2 10 10
setuplinklocalip IPv4 up static setup eth2 0 10
         IPv4 up dhcp external eth1 1
eth1
eth1
         IPv6 up dhcp external eth1
                                         10
eth2
         IPv4 up static internal eth2
                                         10
eth2
         IPv6 up static internal eth2 5
                                         10
loopback
           IPv4 up static loopback loopback 0
           IPv4 up modem external wwan1 3
modem
modem
           IPv6 down modem external wwan1 3
```

4. Enter show network interface name at the Admin CLI prompt to display additional information about a specific WAN. For example, to display information about ETH1, enter show network interface eth1:

```
> show network interface eth1

wan1 Interface Status
------
Device : eth1
Zone : external

IPv4 Status : up
IPv4 Type : dhcp
IPv4 Address(es) : 10.10.10.10/24
IPv4 Gateway : 10.10.10.1
```

 IPv4 MTU
 : 1500

 IPv4 Metric
 : 1

 IPv4 Weight
 : 10

IPv4 DNS Server(s): 10.10.10.2, 10.10.10.3

IPv6 Status : up IPv6 Type : dhcpv6

IPv6 Address(es) : fe00:2404::240:f4ff:fe80:120/64

IPv6 Gateway : ff80::234:f3ff:ff0e:4320

IPv6 MTU : 1500IPv6 Metric : 1IPv6 Weight : 10

IPv6 DNS Server(s): fd00:244::1, fe80::234:f3f4:fe0e:4320

>

5. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Delete a WAN or WWAN

Follow this procedure to delete any WANs and WWANs that have been added to the system. You cannot delete the preconfigured WAN, **ETH1**, or the preconfigured WWAN, **Modem**.



- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

Qick Network > Interfaces.

4. Click the menu icon (...) next to the name of the WAN or WWAN to be deleted and select **Delete**.



5. Click **Apply** to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:



3. Use the **del** command to delete the WAN or WWAN. For example, to delete a WWAN named my_wwan:

(config)> del network interface my_wwan

4. Save the configuration and apply the change.

```
(config)> save
Configuration saved.
```

5. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Default outbound WAN/WWAN ports

The following table lists the default outbound network communications for IX20 WAN/WWAN interfaces:

Description	TCP/UDP	Port number
Digi Remote Manager connection to edp12.devicecloud.com	TOP	3199
NTP date/time sync to time.devicecloud.com	UDP	123
DNS resolution using WAN-provided DNS servers.	UDP	53
HTTPS for modem firmware downloads from firmware.devicecloud.com	TCP	443

Local Area Networks (LANs)

The IX20 device is preconfigured with the following Local Area Networks (LANs):

Interface type	Preconfigured interfaces	Devices	Default configuration
Local Area Network (LAN)	■ ETH2	 Ethernet: ETH2 (non-Wi-Fi models) Bridge: LAN (Wi-Fi models) 	 Firewall zone: Internal IP address: 192.168.2.1/24 DHCP server enabled LAN priority: Metric=5
	■ Loopback	■ Ethernet: Loopback	Firewall zone: LoopbackIP address: 127.0.0.1/8
	■ Setup IP	■ Bridge: LAN	■ Firewall zone: Setup ■ IP address 192.168.210.1/24
	Setup Link-local IP	■ Bridge: LAN	Firewall zone: SetupIP address 169.254.100.100/16


You can modify configuration settings for **ETH2**, and you can create new LANs. This section contains the following topics:

About Local Area Networks (LANs)	190
Configure a Local Area Network (LAN)	
Configure the WAN/ETH1 port as a LAN or in a bridge	
Change the default LAN subnet	
Show LAN status and statistics	208
Delete a LAN	210
DHCP servers	211
Default services listening on LAN ports	228
Configure an interface to operate in passthrough mode	228

About Local Area Networks (LANs)

A Local Area Network (LAN) connects network devices together, such as Ethernet or Wi-Fi, in a logical Layer-2 network.

The following diagram shows a LAN connected to the **ETH2** Ethernet device and the **Digi AP** access point (available for Wi-Fi enabled models only). Once the LAN is configured and enabled, the devices connected to the network interfaces can communicate with each other, as demonstrated by the **ping** commands.

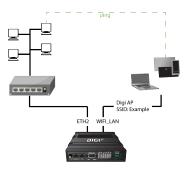

Configure a Local Area Network (LAN)

Configuring a Local Area Network (LAN) involves configuring the following items:

Required configuration items

A name for the interface.

Note If the interface name is more than eight characters, the name will be truncated in the underlying network interface to the first six characters followed by three digits, incrementing from 000. This affects any custom scripts or firewall rules that may be trying to adjust the interface or routing table entries.

- The interface type: either Ethernet, IP Passthrough, or PPPoE.
- The firewall zone: Internal.
- The network device or bridge that is used by the LAN.
- The IPv4 address and subnet mask for the LAN. While it is not strictly necessary for a LAN to have an IP address, if you want to send traffic from other networks to the LAN, you must configure an IP address.

Note By default, **ETH2** is set to an IP address of 192.168.2.1 and uses the IP subnet of 192.168.2.0/24. If the **WAN/ETH1** Ethernet device is being used by a WAN with the same IP subnet, you should change the Setup IP address and subnet of LAN1.

Additional configuration items

- Additional IPv4 configuration:
 - The type being the way to control how the modem in the Digi device obtains an IP address from the cellular network.
 - The metric for IPv4 routes associated with the LAN.

- The relative weight for IPv4 routes associated with the LAN.
- The IPv4 management priority of the LAN. The active interface with the highest management priority will have its address reported as the preferred contact address for central management and direct device access.
- The IPv4 Maximum Transmission Unit (MTU) of the LAN.
- Whether to assign a static IPv4 address to the LAN.
- When to use DNS: always, never, or only when this interface is the primary default route.
- IPv4 DHCP server configuration. See DHCP servers for more information.
- IPv6 configuration:
 - The type being the way to control how the modem in the Digi device obtains an IP address from the cellular network.
 - The metric for IPv6 routes associated with the LAN.
 - The relative weight for IPv6 routes associated with the LAN.
 - The IPv6 management priority of the LAN. The active interface with the highest management priority will have its address reported as the preferred contact address for central management and direct device access.
 - The IPv6 Maximum Transmission Unit (MTU) of the LAN.
 - · Whether to assign a static IPv6 address to the LAN.
 - When to use DNS: always, never, or only when this interface is the primary default route.
 - The IPv6 prefix length and ID.
 - IPv6 DHCP server configuration. See DHCP servers for more information.
- MAC address denylist and allowlist.

To create a new LAN or edit an existing LAN:



- Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.


Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

- 3. Click Network > Interfaces.
- 4. Create the LAN or select an existing LAN:
 - To create a new LAN, for **Add interface**, type a name for the LAN and click 1/20

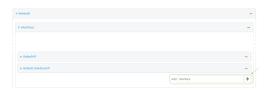

To edit an existing LAN, click to expand the LAN.

The Interface configuration window is displayed.



New LANs are enabled by default. To disable, toggle off **Enable**.

- 5. For **Interface type**, leave at the default setting of **Ethernet**.
- For **Zone**, select the appropriate firewall zone. See Firewall configuration for further information.
- 7. For **Device**, select an Ethernet device, a Wi-Fi access point, or a bridge. See Bridging for more information about bridging.
- 8. (Optional) Click to expand 802.1x to configure 802.1x port based network access control.

The IX20 can function as an 802.1x authenticator; it does not function as an 802.1x supplicant.

- a. Click to expand Authentication.
- b. Click **Enable server** to enable the 802.1x authenticator on the IX20 device.
- c. Set the Reauth period.
- 9. Configure IPv4 settings:
 - a. Click to expand IPv4.IPv4 support is enabled by default.
 - b. For Type, select Static IP address.
 - c. For **Address**, type the IP address and subnet of the LAN interface. Use the format *IPv4_address*/ netmask, for example, 192.168.2.1/24.

- d. Optional IPv4 configuration items:
 - i. Set the Metric.
 - ii. For Weight, type the relative weight for default routes associated with this interface. For multiple active interfaces with the same metric, Weight is used to load balance traffic to the interfaces.
 - iii. Set the Management priority. This determines which interface will have priority for central management activity. The interface with the highest number will be used.
 - iv. Set the MTU.
- e. Enable the DHCP server:
 - i. Click to expand DHCP server.
 - ii. Click Enable.

See DHCP servers for information about configuring the DHCP server.

- f. Enable Force link to keep the network interface active even when the device link is down.
- See Configure DHCP relay for information about configuring DHCP relay.
- 11. (Optional) Configure IPv6 settings:
 - a. Click to expand IPv6.
 - b. **Enable** IPv6 support.
 - c. For Type, select IPv6 prefix delegration.
 - d. For **Prefix length**, type the minimum length of the prefix to assign to this LAN. If the minimum length is not available, then a longer prefix will be used.
 - e. For **Prefix ID**, type the identifier used to extend the prefix to the assigned length. Leave blank to use a random identifier.
 - f. Set the Metric.
 - g. For Weight, type the relative weight for default routes associated with this interface. For multiple active interfaces with the same metric, Weight is used to load balance traffic to the interfaces.
 - h. Set the **Management priority**. This determines which interface will have priority for central management activity. The interface with the highest number will be used.
 - i. Set the MTU.
 - j. (Optional) To assign a static address to a network interface, click to expand Static address.
 - i. Click the slider to enable.
 - ii. For **Address**, type the name of the static address you want to use (for example, *tree::squirrel:tail/64*).
- 12. (Optional) Click to expand MAC address denylist.

Incoming packets will be dropped from any devices whose MAC addresses is included in the **MAC address denylist**.

- a. Click to expand MAC address denylist.
- b. For Add MAC address, click Yo
- c. Type the MAC address.
- 13. (Optional) Click to expand MAC address allowlist.

If allowlist entries are specified, incoming packets will only be accepted from the listed MAC addresses.

- a. Click to expand MAC address allowlist.
- b. For Add MAC address, click 1/20
- c. Type the MAC address.
- 14. Click **Apply** to save the configuration and apply the change.

Command line

Select the device in Remote Manager and click Actions > Open Console, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

- 3. Create a new LAN or edit an existing one:
 - To create a new LAN named my_lan:

```
(config)> add network interface my_lan (config network interface my_lan)>
```

■ To edit an existing LAN named **my_lan**, change to the **my_lan** node in the configuration schema:

```
(config)> network interface my_lan
(config network interface my_lan)>
```

4. Set the appropriate firewall zone:

```
(config network interface my_lan)> zone zone (config network interface my_lan)>
```

See Firewall configuration for further information.

- 5. Select an Ethernet device, a Wi-Fi device, or a bridge. See Bridging for more information about bridging.
 - a. Enter device? to view available devices and the proper syntax.

```
(config network interface my_lan)> device ?
```

Device: The network device used by this network interface.

Format:

/network/device/eth1
/network/device/eth2
/network/device/loopback
/network/bridge/hotspot_bridge
/network/bridge/lan
/network/wireless/ap/digi_ap

/network/wireless/ap/digi_hotspot_ap Current value:

(config network interface my_lan)> device

b. Set the device for the LAN:

(config network interface my_lan)> device *device* (config network interface my_lan)>

- 6. Configure IPv4 settings:
 - IPv4 support is enabled by default. To disable:

(config network interface my_lan)> ipv4 enable false (config network interface my_lan)>

■ The LAN is configured by default to use a static IP address for its IPv4 configuration. To configure the LAN to be a DHCP client, rather than using a static IP addres:

(config network interface my_lan)> ipv4 type dhcp (config network interface my_lan)>

These instructions assume that the LAN will use a static IP address for its IPv4 configuration.

a. Set the IPv4 address and subnet of the LAN interface. Use the format *IPv4_address/netmask*, for example, 192.168.2.1/24.

(config network interface my_lan)> ipv4 address *ip_address/netmask* (config network interface my_lan)>

- b. Optional IPv4 configuration items:
 - i. Set the IP metric:

(config network interface my_lan)> ipv4 metric *num* (config network interface my_lan)>

ii. Set the relative weight for default routes associated with this interface. For multiple active interfaces with the same metric, the weight is used to load balance traffic to the interfaces.

(config network interface my_lan)> ipv4 weight *num* (config network interface my_lan)>

iii. Set the management priority. This determines which interface will have priority for central management activity. The interface with the highest number will be used.

(config network interface my_lan)> ipv4 mgmt *num* (config network interface my_lan)>

iv. Set the MTU:

(config network interface my_lan)> ipv4 mtu *num* (config network interface my_lan)>

c. Enable the DHCP server:

(config network interface my_lan)> ipv4 dhcp_server enable true

See DHCP servers for information about configuring the DHCP server.

- d. See Configure WAN priority and default route metrics for further information about metrics.
- 7. (Optional) Configure IPv6 settings:
 - a. Enable IPv6 support:

```
(config network interface my_lan)> ipv6 enable true (config network interface my_lan)>
```

b. Set the IPv6 type to DHCP:

```
(config network interface my_lan)> ipv6 type dhcpv6 (config network interface my_lan)>
```

c. Generally, the default settings for IPv6 support are sufficient. You can view the default IPv6 settings by using the question mark (?):

```
(config network interface my_lan)> ipv6?
```

IPv6

Parameters	Current Value		
enable	true	Enable	
metric	0	Metric	
mgmt	0	Management priority	
mtu	1500	MTU	
prefix_id	1	Prefix ID	
prefix_length	48	Prefix length	
type	prefix_delegation Type		
weight	10	Weight	

Additional Configuration

connection_monitor Active recovery dhcpv6_server DHCPv6 server

(config network interface my_lan)>

View default settings for the IPv6 DHCP server:

(config network interface my_lan)> ipv6 dhcpv6_server?

DHCPv6 server: The DHCPv6 server settings for this network interface.

Parameters Current Value
----enable true Enable

d. Modify any of the remaining default settings as appropriate. For example, to change the minimum length of the prefix:

(config network interface my_lan)> ipv6 prefix_length 60 (config network interface my_lan)>

If the minimum length is not available, then a longer prefix will be used.

See Configure WAN/WWAN priority and default route metrics for further information about metrics.

e. (Optional) To assign a static address to a network interface:

>config

(config)> network interfacemy_lan ipv6 static?

Static address: IPv6 static address.

(config network interface my_lan)>

Parameters Current value
-----address Address
enable false Enable

(config)> network interface my_lan ipv6 static address?

Address: The IPv6 address to use.

Format: IPv6_address/prefix_length

Current value:

(config)>

8. (Optional) To configure 802.1x port based network access control:

Note The IX20 can function as an 802.1x authenticator; it does not function as an 802.1x supplicant.

a. Enable the 802.1x authenticator on the IX20 device:

(config network interface my_lan)> 802_1x authentication enable true (config network interface my_lan)>

b. Set the frequency period for reauthorization:

(config network interface my_lan)> 802_1x authentication reauth_period *value* (config network interface my_lan)>

where value is an integer between 0 and 86400. The default is 3600.

9. (Optional) Configure the MAC address deny list.

Incoming packets will be dropped from any devices whose MAC addresses is included in the MAC address denylist.

a. Add a MAC address to the denylist:

(config network interface my_lan)> add mac_denylist end *mac_address* (config network interface my_lan)>

where mac_address is a hyphen-separated MAC address, for example, 32-A6-84-2E-81-58.

- b. Repeat for each additional MAC address.
- 10. (Optional) Configure the MAC address allowlist.

If allowlist entries are specified, incoming packets will only be accepted from the listed MAC addresses.

a. Add a MAC address to the allowlist:

(config network interface my_lan)> add mac_allowlist end *mac_address* (config network interface my_lan)>

where mac_address is a hyphen-separated MAC address, for example, 32-A6-84-2E-81-58.

- b. Repeat for each additional MAC address.
- 11. Save the configuration and apply the change.

(config network interface my_lan)> save Configuration saved.

Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configure the WAN/ETH1 port as a LAN or in a bridge

By default, the WAN/ETH1 Ethernet port on your IX20 is configured to function as a WAN port, which means that it:

- Uses the External firewall zone.
- Receives its IPv4 address from an upstream DHCP server.
- Has SureLink enabled to test the quality of its internet connection.

Alternatively, you can configure the WAN/ETH1 port to function as a LAN port, or you can include the WAN/ETH1 port in the default LAN bridge or create a bridge that includes the WAN/ETH1 port with and ETH2 ports and/or Wi-Fi access points.

Configure the WAN/ETH1 Ethernet port as a LAN

This procedure reconfigures the WAN/ETH1 port to serve as port for a LAN, which will result in the device having two separate LANs: the default **ETH2** LAN, and the LAN created in this procedure. To utilize both LANs, you will need to have a device connected to the WAN/ETH1 port, and a separate device connected to the ETH2 port to the default ETH2, and these devices will be on separate LANs. If instead, you want the WAN/ETH1 port to be bridged with the ETH2 portincluded in the default ETH2, see Create a bridge that includes the WAN/ETH1 port, or if you want to create a new bridge that includes the WAN/ETH1 port an other devices, see Create a bridge that includes the WAN/ETH1 port.

To configure the WAN/ETH1 Ethernet port as a LAN:



- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

- 3. Click Network > Interfaces > ETH1.
- 4. For **Zone**, select **Internal**.



- 5. Configure IPv4 settings:
 - a. Click to expand IPv4.
 - b. For Type, select Static IP address.
 - c. For **Address**, type the IPv4 address and netmask, using the format *IPv4_address*/ netmask, for example, 192.168.3.1/24.



- d. Enable the DHCP server:
 - i. Click to expand DHCP server.
 - ii. Click to toggle on Enable.
- e. Disable SureLink:
 - i. Click to expand SureLink.
 - ii. Click to toggle off Enable.
- 6. (Optional) Configure IPv6 settings:
 - a. Click to expand IPv6.
 - b. For Type, select IPv6 prefix delegation.
- 7. Click **Apply** to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type config to enter configuration mode:

```
> config
(config)>
```

3. Set the zone to internal:

(config)> network interface eth1 zone internal (config)>

- 4. Configure IPv4 settings:
 - a. Set the type to static:

```
(config)> network interface eth1 ipv4 type static (config)>
```

b. Set the address IPv4 address and netmask, using the format *IPv4_address*/ *netmask*, for example:

(config)> network interface eth1 ipv4 address 192.168.3.1/24 (config)>

c. Enable the DHCP server:

(config)> network interface eth1 ipv4 dhcp_server enable true (config)>

d. Disable SureLink:

(config)> network interface eth1 ipv4 surelink enable false (config)>

- 5. (Optional) Configure IPv6:
 - a. Set the type to prefix_delegation:

(config)> network interface eth1 ipv6 type prefix_delegation (config)>

6. Save the configuration and apply the change.

(config)> save Configuration saved. >

7. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Add the WAN/ETH1 Ethernet port to the default LAN bridge

This procedure will add the WAN/ETH1 port to the default LAN bridge, which will configure Ethernet ports on the device to function as a hub.

To add the WAN/ETH1 port to the LAN bridge:



- Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- a. Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

- 3. Click Network > Bridges > LAN.
- 4. Click to expand Devices.
- 5. Click Add Device Yo
- 6. For the new device, select **Device: ETH1**.
- 7. (Optional) Configure IPv6 settings:
 - a. Click to expand IPv6.
 - b. For Type, select IPv6 prefix delegation.
- 8. Disable the ETH1 interface:
 - a. Click Network > Interfaces > ETH1.
 - b. Click to toggle off Enable.
- 9. Click Apply to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type config to enter configuration mode:

```
> config
(config)>
```

3. Add the device to the lan1 bridge:

(config)> add network bridge lan1 device end /network/device/eth1 (config)>

4. Disable the eth1 interface:

(config)> network interface eth1 enable false (config)>

5. Save the configuration and apply the change.

```
(config)> save
Configuration saved.
>
```

6. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Create a bridge that includes the WAN/ETH1 port

This procedure will bridge the WAN/ETH1 port with the ETH2 port, which will configure the two Ethernet ports other devices or Wi-Fi access points, which will configure the included devices to function as a hub.

To create a new bridge, and bridge the IX20 device's WAN/ETH1 Ethernet port with or Wi-Fi access points:



- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

- 3. Create the bridge and add devices:
 - a. Click Network > Bridges.
 - b. For **Add Bridge**, type a name for the bridge and click %



- c. Click to expand Devices.
- d. Click Add Device Yo



e. For **Device**, select **Device: ETH1**.

f. Click Add Device Ybagain and select or access point to add to the bridge.

Note If you are adding a port or access point that is already part of the default LAN bridge, you should either disable the default bridge, or remove the port or access point:

- i. Click Network > Bridges > LAN.
 - To disable the bridge, click to toggle off **Enable**.
 - To remove a port or access point from the bridge:
 - i. Click to expand Devices.
 - ii. Click next to a device.
 - iii. Select Delete.
- g. Repeat for additional access points.
- 4. Create a LAN interface for the bridge:
 - a. Click Network > Interfaces.
 - b. For **Add Interface**, type a name for the interface and click %



- c. For Zone, select Internal.
- d. For **Device**, select the new bridge.



- e. Click to expand IPv4.
- f. For **Address**, type the IPv4 address and netmask, using the format *IPv4_address*/ netmask, for example, 192.168.3.1/24.



- g. Enable the DHCP server:
 - i. Click to expand DHCP server.
 - ii. Click to toggle on Enable.
- 5. Disable the ETH1 interface:
 - a. Click Network > Interfaces > ETH1.
 - b. Click to toggle off Enable.
- 6. Click Apply to save the configuration and apply the change.

Command line

Select the device in Remote Manager and click Actions > Open Console, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

- 3. Create the bridge and add devices:
 - a. Create the bridge:

```
(config)> add network bridge bridge_name (config network bridge bridge_name)>
```

where *bridge_name* is the name of the new bridge. For example, to create a bridge named LAN_bridge:

```
(config)> add network bridge LAN_bridge (config network bridge LAN_bridge)>
```

b. Add the eth1 device:

```
(config network bridge LAN_bridge)> add device end /network/device/eth1 (config network bridge LAN_bridge)>
```

c. Add the eth2 device:

```
(config network bridge LAN_bridge)> add device end /network/device/eth2 (config network bridge LAN_bridge)>
```

- d. Add or access points:
 - i. Use the tab key twice to determine available devices:

```
(config network bridge LAN_bridge)> add device end [TAB]
(config network bridge LAN_bridge)> add device end /network/[TAB]
/network/device/eth1 /network/device/eth2
/network/device/loopback /network/bridge/lan1 /network/sdwan/wan_bonding
```

/network/wifi/ap/digi_ap/network/wifi/ap/digi_hotspot_ap

ii. Add the device:

(config network bridge LAN_bridge)> add device end *device-path-and-name* (config network bridge LAN_bridge)>

iii. Repeat for additional access points.

Note If you are adding a port or access point that is already part of the default LAN bridge, you should either disable the default bridge, or remove the port or access point:

To disable the bridge:

(config network bridge LAN_bridge)> .. lan1 enable false (config network bridge LAN_bridge)>

- To remove a port or access point from the bridge:
 - i. Use the show keyword to display the devices:

(config network bridge LAN_bridge)> show .. lan1 device 0 /network/device/eth1 /network/wifi/ap/digi_ap (config network bridge LAN_bridge)>

ii. Use the device's index number to delete the device. For example, to delete **eth1**, use the **0** index number:

(config network bridge LAN_bridge)> del .. lan1 device 0 (config network bridge LAN_bridge)>

- 4. Create a LAN interface for the bridge:
 - a. Type ... to return to the root of the configuration:

(config network bridge LAN_bridge)> ... (config)>

b. Create the bridge:

(config)> add network interface interface_name (config network interface interface_name)>

where *interface_name* is the name of the new interface. For example, to create a interface named LAN_bridge_interface:

(config)> add network interface LAN_bridge_interface (config network interface LAN_bridge_interface)>

c. Set the zone to internal:

(config network interface LAN_bridge_interface)> zone internal (config network interface LAN_bridge_interface)>

d. Set the **device** to the new bridge:

(config network interface LAN_bridge_interface)> device /network/bridge/LAN_bridge (config network interface LAN_bridge_interface)>

 Set the IPv4 address and netmask for the interface, using the format IPv4_ address/ netmask, for example, 192.168.3.1/24:

(config network interface LAN_bridge_interface)> ipv4 address 192.168.3.1/24 (config network interface LAN_bridge_interface)>

f. Enable the DHCP server:

(config network interface LAN_bridge_interface)> ipv4 dhcp_server enable true (config network interface LAN_bridge_interface)>

5. Disable the eth1 interface:

(config)> network interface eth1 enable false (config)>

6. Save the configuration and apply the change.

(config network interface LAN_bridge_interface)> save Configuration saved.

>

7. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Change the default LAN subnet

You can change the IX20 default LAN subnet—192.168.2.1/24—to any range of private IPs. The local DHCP server range will also change to the range of the LAN subnet.

To change the LAN subnet:



- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.

- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

- 3. Click Network > Interfaces > LAN > IPv4.
- 4. For **Address**, change the IP address to an alternate private IP. You must also specify the subnet mask. It must have the syntax of *IPv4_address*/ netmask.
- 5. Click **Apply** to save the configuration and apply the change.

Command line

Select the device in Remote Manager and click Actions > Open Console, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. At the config prompt, set the IP address to an alternate private IP:

(config)> network interface lan ipv4 address *IPv4_address*/netmask (config)>

4. Save the configuration and apply the change.

```
(config)> save
Configuration saved.
```

5. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Show LAN status and statistics



Log into the IX20 WebUI as a user with full Admin access rights.

- 1. From the menu, click Status.
- 2. Under Networking, click Interfaces.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. Enter the show network command at the Admin CLI prompt:

```
> show network
Interface
          Proto Status Address
-----
setupip
         IPv4 up 192.168.210.1/24
setuplinklocalip IPv4 up 169.254.100.100/16
        IPv4 up 10.10.10.10/24
eth1
        IPv6 up fe00:2404::240:f4ff:fe80:120/64
eth1
        IPv4 up 192.168.2.1/24
eth2
        IPv6 up fd00:2704::1/48
eth2
loopback IPv4 up 127.0.0.1/8
          IPv4 up 10.200.1.101/30
modem
          IPv6 down
modem
```

3. Additional information can be displayed by using the show network verbose command:

```
> show network verbose
Interface
          Proto Status Type Zone Device Metric Weight
       ---- ---- ----- ----- -----
         IPv4 up static setup eth2 10 10
setupip
setuplinklocalip IPv4 up static setup eth2 0
                                           10
eth1
        IPv4 up dhcp external eth1 1 10
eth1
         IPv6 up dhcp external eth1 1 10
eth2
         IPv4 up static internal eth2 5
                                       10
         IPv6 up static internal eth2 5
eth2
                                       10
loopback
          IPv4 up static loopback loopback 0
          IPv4 up modem external wwan1 3
modem
modem
          IPv6 down modem external wwan1 3
```

4. Enter show network interface name at the Admin CLI prompt to display additional information about a specific LAN. For example, to display information about ETH2, enter show network interface eth2:

> show network interface eth2

lan1 Interface Status

Device : eth2
Zone : internal

IPv4 Status : up IPv4 Type : static

IPv4 Address(es) : 192.168.2.1/24

IPv6 Status : up IPv6 Type : prefix

IPv6 Address(es) : fd00:2704::1/48

>

5. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Delete a LAN

Follow this procedure to delete any LANs that have been added to the system. You cannot delete the preconfigured LAN, **LAN1**.



- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- a. Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.


Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

- 3. Click Network > Interfaces.
- 4. Click the menu icon (...) next to the name of the LAN to be deleted and select Delete.

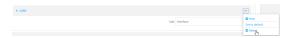

5. Click **Apply** to save the configuration and apply the change.

Command line

Select the device in Remote Manager and click Actions > Open Console, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Use the **del** command to delete the LAN. For example, to delete a LAN named my_lan:

```
(config)> del network interface my_lan
```

4. Save the configuration and apply the change.

```
(config)> save
Configuration saved.
>
```

5. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

DHCP servers

You can enable DHCP on your IX20 device to assign IP addresses to clients, using either:

■ The DHCP server for the device's local network, which assigns IP addresses to clients on the device's local network. Addresses are assigned from a specified pool of IP addresses. For a local network, the device uses the DHCP server that has the IP address pool in the same IP subnet as the local network.

When a host receives an IP configuration, the configuration is valid for a particular amount of time, known as the lease time. After this lease time expires, the configuration must be renewed. The host renews the lease time automatically.

■ A DHCP relay server, which forwards DHCP requests from clients to a DHCP server that is running on a separate device.

Configure a DHCP server

Note These instructions assume you are configuring the device to use its local DHCP server. For instructions about configuring the device to use a DHCP relay server, see Configure DHCP relay.

Required configuration items

■ Enable the DHCP server.

Additional configuration items

- The lease address pool: the range of IP addresses issued by the DHCP server to clients.
- Lease time: The length, in minutes, of the leases issued by the DHCP server.
- The Maximum Transmission Units (MTU).
- The domain name suffix appended to host names.
- The IP gateway address given to clients.
- The IP addresses of the preferred and alternate Domain Name Server (DNS), NTP servers, and WNS severs that are given to clients.
- The TFTP server name.
- The filepath and name of the bootfile on the TFTP server.
- Custom DHCP options. See Configure DHCP options for information about custom DHCP options.
- Static leases. See Map static IP addresses to hosts for information about static leases.

₹ Web

- Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

- 3. Click Network > Interfaces.
- 4. Click to expand an existing LAN, or create a new LAN. See Configure a Local Area Network (LAN).
- 5. Click to expand IPv4 > DHCP server.
- 6. Enable the DHCP server.
- 7. (Optional) For **Lease time**, type the amount of time that a DHCP lease is valid.

Allowed values are any number of weeks, days, hours, minutes, or seconds, and take the format *number*{w|d|h|m|s}.

For example, to set Lease time to ten minutes, enter 10m or 600s.

The default is 12 hours.

- By default, DHCP leases are persistent across reboots. You can disable persistent leases:
 - a. Click Network > Advanced.
 - b. Click to toggle off DHCP persistent leases.
- 8. (Optional) For **Lease range start** and **Lease range end**, type the lowest and highest IP address that the DHCP server will assign to a client. This value represents the low order byte of the address (the final triplet in an IPv4 address, for example, 192.168.2.xxx). The remainder of the IP address will be based on the LAN's static IP address as defined in the **Address** field.

Allowed values are between 1 and 254, and the default is 100 for Lease range start and 250 for Lease range end.

Sequential DHCP address allocation:

By default, DHCP addresses are assigned psuedo-randomly, using a hash of the client's MAC address to determine the IP address that gets assigned. You can configure the device to use sequential IP addresses instead:

- a. Click Network > Advanced.
- b. Click to enable Sequential DHCP address allocation.

Because sequential mode does not use a hash based on the client's MAC address, when DHCP lease expires, the client is not likely to get the same IP address assigned to it. Therefore, sentential DHCP address allocation generally should not be used.

- 9. Optional DHCP server settings:
 - a. Click to expand Advanced settings.
 - b. For Gateway, select either:
 - None: No gateway is broadcast by the DHCP server. Gient destinations must be resolvable without a gateway.
 - Automatic: Broadcasts the IX20 device's gateway.

 Custom: Allows you to identify the IP address of a Custom gateway to be broadcast.

The default is Automatic.

- c. For MTU,
 - None: An MTU of length 0 is broadcast. This is not recommended.
 - Automatic: No MTU is broadcast and clients will determine their own MTU.
 - Custom: Allows you to identify a Custom MTU to be broadcast.

The default is **Automatic**.

- d. For Domain name suffix, type the domain name that should be appended to host names.
- e. For **Primary** and **Secondary DNS**, **Primary** and **Secondary NTP server**, and **Primary** and **Secondary WNS server**, select either:
 - None: No server is broadcast.
 - Automatic: Broadcasts the IX20 device's server.
 - Custom: Allows you to identify the IP address of the server.
- f. Enable **BOOTP dynamic allocation** to automatically assign an IP address to a device on the server.



CAUTION! The IP address assigned to the device is leased forever and becomes permanently unavailable for other hosts to use.

- g. For **Bootfile name**, type the relative path and file name of the bootfile on the TFTP server.
- h. For **TFTP server** name, type the IP address or host name of the TFTP server.
- i. Enable
- 10. See Configure DHCP options for information about Custom DHCP options.
- 11. See Map static IP addresses to hosts for information about Static leases.
- 12. Click **Apply** to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

> config (config)>

Enable the DHCP server for an existing LAN. For example, to enable the DHCP server for a LAN named my_lan:

(config)> network interface my_lan ipv4 dhcp_server enable true (config)>

See Configure a Local Area Network (LAN) for information about creating a LAN.

4. (Optional) Set the amount of time that a DHCP lease is valid:

(config)> network interface my_lan ipv4 dhcp_server lease_time *value* (config)>

where *value* is any number of weeks, days, hours, minutes, or seconds, and takes the format *number*(w|d|h|m|s).

For example, to set **network interface my_lan ipv4 dhcp_server lease_time** to ten minutes, enter either **10m** or **600s**:

(config)> network interface my_lan ipv4 dhcp_server lease_time 600s (config)>

By default, DHCP leases are persistent across reboots. You can disable persistent leases:

(config)> network advanced dhcp_persistent_lease false (config)>

5. (Optional) Set the lowest IP address that the DHCP server will assign to a client. This value represents the low order byte of the address (the final triplet in an IPv4 address, for example, 192.168.2.xxx). The remainder of the IP address will be based on the LAN's static IP address as defined in the address parameter.

(config)> network interface my_lan ipv4 dhcp_server lease_start *num* (config)>

Allowed values are between 1 and 254, and the default is 100.

6. (Optional) Set the highest IP address that the DHCP server will assign to a client:

(config)> network interface my_lan ipv4 dhcp_server lease_end *num* (config)>

Allowed values are between 1 and 254, and the default is 250.

7. Sequential DHCP address allocation

By default, DHCP addresses are assigned psuedo-randomly, using a hash of the client's MAC address to determine the IP address that gets assigned. You can configure the device to use sequential IP addresses instead:

(config)> network advanced sequential_dhcp_allocation true (config)>

Because sequential mode does not use a hash based on the client's MAC address, when DHCP lease expires, the client is not likely to get the same IP address assigned to it. Therefore, sentential DHCP address allocation generally should not be used.

8. Optional DHCP server settings:

- a. Click to expand Advanced settings.
- b. Determine how the DHCP server should broadcast the gateway server:

(config)> network interface my_lan ipv4 dhcp_server advanced gateway *value* (config)>

where value is one of:

- none: No gateway is broadcast by the DHCP server. Client destinations must be resolvable without a gateway.
- auto: Broadcasts the IX20 device's gateway.
- custom: Allows you to identify the IP address of a custom gateway to be broadcast:

(config)> network interface my_lan ipv4 dhcp_server advanced gateway_custom ip_address (config)>

The default is auto.

Determine how the DHCP server should broadcast the the MTU:

(config)> network interface my_lan ipv4 dhcp_server advanced mtu *value* (config)>

where value is one of:

- none: An MTU of length 0 is broadcast. This is not recommended.
- auto: No MTU is broadcast and clients will determine their own MTU.
- custom: Allows you to identify a custom MTU to be broadcast:

(config)> network interface my_lan ipv4 dhcp_server advanced mtu_custom *mtu* (config)>

The default is auto.

d. Set the domain name that should be appended to host names:

(config)> network interface my_lan ipv4 dhcp_server advanced domain_suffix name (config)>

e. Set the IP address or host name of the primary and secondary DNS, the primary and secondary NTP server, and the primary and secondary WNS servers:

(config)> network interface my_lan ipv4 dhcp_server advanced primary_dns value (config)> network interface my_lan ipv4 dhcp_server advanced secondary_dns value (config)> network interface my_lan ipv4 dhcp_server advanced primary_ntp value (config)> network interface my_lan ipv4 dhcp_server advanced secondary_ntp value (config)> network interface my_lan ipv4 dhcp_server advanced primary_wins value (config)> network interface my_lan ipv4 dhcp_server advanced secondary_wins value (config)>

where value is one of:

- none: No server is broadcast.
- auto: Broadcasts the IX20 device's server.
- **custom**: Allows you to identify the IP address of the server. For example:

(config)> network interface my_lan ipv4 dhcp_server advanced primary_dns_custom ip_address (config)>

The default is auto.

f. Set the IP address or host name of the TFTP server:

(config)> network interface my_lan ipv4 dhcp_server advanced nftp_server ip_address (config)>

g. Set the relative path and file name of the bootfile on the TFTP server:

(config)> network interface my_lan ipv4 dhcp_server advanced bootfile *filename* (config)>

h. Enable **BOOTP dynamic allocation** to automatically assign an IP address to a device on the server:



CAUTION! The IP address assigned to the device is leased forever and becomes permanently unavailable for other hosts to use.

(config)> network interface my_lan ipv4 dhcp_server advanced bootp_dynamic *true* (config)>

- 9. See Configure DHCP options for information about custom DHCP options.
- See Map static IP addresses to hosts for information about static leases.
- 11. Save the configuration and apply the change.

(config network interface my_lan ipv4 dhcp_server advanced static_lease 0)> save Configuration saved.

>

12. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Map static IP addresses to hosts

You can configure the DHCP server to assign static IP addresses to specific hosts.

Required configuration items

- IP address that will be mapped to the device.
- MAC address of the device.

Additional configuration items

A label for this instance of the static lease.

To map static IP addresses:



- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

- 3. Click Network > Interfaces.
- Click to expand an existing LAN, or create a new LAN. See Configure a Local Area Network (LAN).
- 5. Click to expand IPv4 > DHCP server > Advanced settings > Static leases.
- 6. For Add Static lease, click Yo
- 7. Type the MAC address of the device associated with this static lease.
- 8. Type the **IP address** for the static lease.

Note The IP address here should be outside of the DHCP server's configured lease range. See Configure a DHCP server for further information about the lease range.

- 9. (Optional) For **Hostname**, type a label for the static lease. This does not have to be the device's actual hostname.
- 10. Repeat for each additional DHCP static lease.
- 11. Click **Apply** to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

> config (config)>

3. Add a static lease to the DHCP server configuration for an existing LAN. For example, to add static lease to a LAN named **my_lan**:

(config)> add network interface my_lan ipv4 dhcp_server advanced static_lease end (config network interface my_lan ipv4 dhcp_server advanced static_lease 0)>

See Configure a Local Area Network (LAN) for information about creating a LAN.

4. Set the MAC address of the device associated with this static lease, using the colon-separated format:

(config network interface my_lan ipv4 dhcp_server advanced static_lease 0)> mac 00:40:D0:13:35:36 (config network interface my_lan ipv4 dhcp_server advanced static_lease 0)>

5. Set the IP address for the static lease:

(config network interface my_lan ipv4 dhcp_server advanced static_lease 0)> ip 10.01.01.10 (network interface my_lan ipv4 dhcp_server advanced static_lease 0)>

Note The IP address here should be outside of the DHCP server's configured lease range. See Configure a DHCP server for further information about the lease range.

6. (Optional) Set a label for this static lease:

(config network interface my_lan ipv4 dhcp_server advanced static_lease 0)> name *label* (config network interface my_lan ipv4 dhcp_server advanced static_lease 0)>

7. Save the configuration and apply the change.

(config network interface my_lan ipv4 dhcp_server advanced static_lease 0)> save Configuration saved.

8. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Show current static IP mapping

To view your current static IP mapping:

₹ Web

Log into the IX20 WebUI as a user with full Admin access rights.

- 1. On the main menu, click Status
- 2. Under Networking, click DHCP Leases.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type config to enter configuration mode:

```
> config
(config)>
```

Show the static lease configuration. For example, to show the static leases for a lan named my_lan:

```
(config)> show network interface my_lan ipv4 dhcp_server advanced static_lease 0
ip 192.168.2.10
mac BF:C3:46:24:0E:D9
no name

ip 192.168.2.11
mac E3:C1:1F:65:C3:0E
no name
(config)>
```

4. Type cancel to exit configuration mode:

```
(config)> cancel >
```

5. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Delete static IP mapping entries

To delete a static IP entry:



- Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- a. Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

- 3. Click Network > Interfaces.
- 4. Click to expand an existing LAN.
- Click to expand IPv4 > DHCP server > Advanced settings > Static leases.
- 6. Click the menu icon (...) next to the name of the static lease to be deleted and select **Delete**.



7. Click **Apply** to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Show the static lease configuration. For example, to show the static leases for a lan named **my_lan**:

```
(config)> show network interface my_lan ipv4 dhcp_server advanced static_lease 0
ip 192.168.2.10
mac BF:C3:46:24:0E:D9
no name

ip 192.168.2.11
mac E3:C1:1F:65:C3:0E
no name
(config)>
```

4. Use the **del** *index_number* command to delete a static lease. For example, to delete the static lease for the device listed in the above output with a mac address of BF:C3:46:24:0E:D9 (index number **0**):

(config)> del network interface lan1 ipv4 dhcp_server advanced static_lease 0 (config)>

5. Save the configuration and apply the change.

(config)> save
Configuration saved.

6. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configure DHCP options

You can configure DHCP servers running on your IX20 device to send certain specified DHCP options to DHCP clients. You can also set the user class, which enables you to specify which specific DHCP clients will receive the option. You can also force the command to be sent to the clients.

DHCP options can be set on a per-LAN basis, or can be set for all LANs. A total of 32 DHCP options can be configured.

Required configuration items

- DHCP option number.
- Value for the DHCP option.

Additional configuration items

- The data type of the value.
- Force the option to be sent to the DHCP clients.
- A label for the custom option.

₹ Web

- Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- a. Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

- 3. Click Network > Interfaces.
- 4. Click to expand an existing LAN, or create a new LAN. See Configure a Local Area Network (LAN).
- 5. Click to expand IPv4 > DHCP server > Advanced settings > Custom DHCP option.
- For Add Custom option, click Υ₀

Oustom options are enabled by default. To disable, toggle off **Enable**.

- 7. For **Option number**, type the DHCP option number.
- 8. For Value, type the value of the DHCP option.
- 9. (Optional) For Label, type a label for the custom option.
- 10. (Optional) If **Forced send** is enabled, the DHCP option will always be sent to the client, even if the client does not ask for it.
- 11. (Optional) For **Data type**, select the data type that the option uses. If the incorrect data type is selected, the device will send the value as a string.
- 12. Click **Apply** to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

> config			
(config)>			

3. Add a custom DHCP option to the DHCP server configuration for an existing LAN. For example, to add static lease to a LAN named **my_lan**:

(config)> add network interface my_lan ipv4 dhcp_server advanced custom_option end (config network interface my_lan ipv4 dhcp_server advanced custom_option 0)>

See Configure a Local Area Network (LAN) for information about creating a LAN.

4. Custom options are enabled by default. To disable:

(config network interface my_lan ipv4 dhcp_server advanced custom_option 0)> enable false (config network interface my_lan ipv4 dhcp_server advanced custom_option 0)>

5. Set the option number for the DHCP option:

(config network interface my_lan ipv4 dhcp_server advanced custom_option 0)> option 210 (config network interface my_lan ipv4 dhcp_server advanced custom_option 0)>

6. Set the value for the DHCP option:

(config network interface my_lan ipv4 dhcp_server advanced custom_option 0)> value_str *value* (network interface my_lan ipv4 dhcp_server advanced custom_option 0)>

7. (Optional) Set a label for this custom option:

(config network interface my_lan ipv4 dhcp_server advanced custom_option 0)> name *label* (config network interface my_lan ipv4 dhcp_server advanced custom_option 0)>

8. (Optional) To force the DHCP option to always be sent to the client, even if the client does not ask for it:

(config network interface my_lan ipv4 dhcp_server advanced custom_option 0)> force true (config network interface my_lan ipv4 dhcp_server advanced custom_option 0)>

9. (Optional) Set the data type that the option uses.

If the incorrect data type is selected, the device will send the value as a string.

(config network interface my_lan ipv4 dhcp_server advanced custom_option 0)> datatype *value* (config network interface my_lan ipv4 dhcp_server advanced custom_option 0)>

where value is one of:

- 1byte
- 2byte
- 4byte
- hex
- ipv4
- str

The default is str.

10. Save the configuration and apply the change.

(config network interface my_lan ipv4 dhcp_server advanced custom_option 0)> save Configuration saved.

>

11. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configure DHCP relay

DHCP relay allows a router to forward DHCP requests from one LAN to a separate DHCP server, typically connected to a different LAN.

For the IX20 device, DHCP relay is configured by providing the IP address of a DHCP relay server, rather than an IP address range. If both the DHCP relay server and an IP address range are specified, DHCP relay is used, and the specified IP address range is ignored.

Multiple DHCP relay servers can be provided for each LAN. If multiple relay servers are provided, DHCP requests are forwarded to all servers without waiting for a response. Clients will typically use the IP address from the first DHCP response received.

Configuring DHCP relay involves the following items:

Required configuration items

- Disable the DHCP server, if it is enabled.
- IP address of the primary DHCP relay server, to define the relay server that will respond to DHCP requests.

Additional configuration items

■ IP address of additional DHCP relay servers.



- Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

- Gick Network > Interfaces.
- 4. Click to expand an existing LAN, or create a new LAN. See Configure a Local Area Network (LAN).
- 5. Disable the DHCP server, if it is enabled:
 - a. Click to expand IPv4 > DHCP server.
 - b. Click **Enable** to toggle off the DHCP server.
- 6. Click to expand DHCP relay.
- 7. For Add DHCP Server:, click 1/20
- 8. For **DHCP server address**, type the IP address of the relay server.

- 9. Repeat for each additional DHCP relay server.
- 10. Click **Apply** to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

> config (config)>

3. Add a DHCP relay server to an existing LAN. For example, to add a server to a LAN named **my lan**:

(config)> add network interface my_lan ipv4 dhcp_relay end (config network interface lan1 my_lan dhcp_relay 0)>

See Configure a Local Area Network (LAN) for information about creating a LAN.

4. Set the IP address of the DHCP relay server:

(config network interface my_lan ipv4 dhcp_relay 0)> address 10.10.10.10 (config network interface my_lan ipv4 dhcp_relay 0)>

- 5. (Optional) Add additional DHCP relay servers:
 - a. Move back one step in the configuration schema by typing two periods (..):

(config network interface my_lan ipv4 dhcp_relay 0)> .. (config network interface my_lan ipv4 dhcp_relay)>

b. Add the next server:

(config network interface lan1 ipv4 dhcp_relay)> add end (config network interface lan1 ipv4 dhcp_relay 1)>

c. Set the IP address of the DHCP relay server:

(config network interface my_lan ipv4 dhcp_relay 1)> address 10.10.10.11 (config network interface my_lan ipv4 dhcp_relay 1)>

- d. Repeat for each additional relay server.
- 1. Disable the DHCP server, if it is enabled:

(config network interface my_lan ipv4 dhcp_relay 1)> dhcp_server enable false (config network interface my_lan ipv4 dhcp_relay 1)>

6. Save the configuration and apply the change.

(config network interface lan1 ipv4 dhcp_relay 1)> save
Configuration saved.
>

7. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Show DHCP server status and settings

View DHCP status to monitor which devices have been given IP configuration by the IX20 device and to diagnose DHCP issues.



Log into the IX20 WebUI as a user with full Admin access rights.

- 1. On the main menu, click Status
- 2. Under Networking, click DHCP Leases.

Command line

Select the device in Remote Manager and click Actions > Open Console, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. Enter the show dhcp-lease command at the Admn CLI prompt:

3. Additional information can be returned by using the show dhcp-lease verbose command:

4. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Default services listening on LAN ports

The following table lists the default services listening on the specified ports on the IX20 LAN interfaces:

Description	TCP/UDP	Port numbers
DNS server	UDP	53
DHCP server	UDP	67 and 68
SSH server	TCP	22
Web UI	TCP	443 (also listens on port 80, then redirects to port 443

Configure an interface to operate in passthrough mode

You can configure interfaces on your IX20 device to operate in passthrough mode, which means that the device passes the IP address assigned to it on a WAN or cellular modem interface, to a client connected to a LAN interface.



- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:


a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

3. Click Network > Interfaces.

- 4. Create the interface or select an existing interface:
 - To create a new interface, for **Add interface**, type a name for the interface and click %

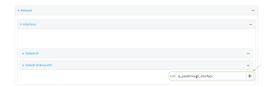

To edit an existing interface, click to expand the interface.

The Interface configuration window is displayed.



New Interfaces are enabled by default. To disable, toggle off **Enable**.

- 5. For Interface type, select IP Passthrough.
- 6. For **Zone**, select **Internal**.
- 7. For Device, select an Ethernet device or a Wi-Fi access point.
- 8. Add one or more interface that will be the source of the passed-through IP address:
 - a. Click to expand Source interfaces.
 - b. Click %to add a source interface.
 - c. Select the appropriate Interface.
 - d. Repeat for additional interfaces.
- 9. (Optional) **Packet filtering** is disabled by default. Toggle on to enable.

If packet filtering is disabled, traffic is allowed in both directions and it is the responsibility of the external device to provide its own firewall.

10. (Optional) Allow all addresses is disabled by default. Toggle on to enable.

When enabled, this option allows forwarding between the source interface and devices connected to this interface, which allows connected devices to forward and receive packets without network address translation (NAT). This should normally be disabled unless it is required for modem passthrough, because some cellular will disconnect modems that send packets that are not from the carrier-assigned IP address.

- Ancillary addressing is enabled by default, which provides an IPv4 address to the connected device when the source address is not available.
 - a. For **Ancillary address/ netmask**, type the IPv4 address and netmask to provide to the connected device when the source address is not available.
 - b. For **Ancillary gateway**, type the IPv4 address of the network gateway to be used when the connected device when the source address is not available.

- c. **Ancillary DNS redirect** is enabled by default, which means resolves all DNS requests to the connected device and redirects HTTP traffic to the device's web administration page.
- 12. For **Server type**, select the type of server to use to pass the IP address through to the client.
- If PPPoE server is selected for Server type:
 - a. Click to expand PPPoE server.
 - b. For **Service name**, type the name of service to offer to the client.
 - c. For Access concentrator name, type the name of the access concentrator to report to the client. If no name is provided, the host name is used.
 - d. For **Authentication method**, select the authentication method used to connect to the remote peer.
 - If an authentication method is selected, type the **Username** and **Password** required to authenticate the remote peer.
 - e. (Optional) Click to expand Custom PPP configuration.
 - f. Custom PPP configuration is disabled by default. Click toggle on **Enable**.
 - g. Enable **Override** to override the default configuration and use only the custom configuration file.
 - h. For **Configuration** file, type or paste configuration data using the format of a pppd options file.
- 14. (Optional) Click to expand 802.1x to configure 802.1x port based network access control.
 - The IX20 can function as an 802.1x authenticator; it does not function as an 802.1x supplicant.
 - a. Click to expand Authentication.
 - b. Click **Enable server** to enable the 802.1x authenticator on the IX20 device.
 - c. Set the Reauth period.
- 15. Configure IPv4 settings:
 - a. Click to expand IPv4.
 - IPv4 support is enabled by default.
 - b. Set the Metric.
 - c. For Weight, type the relative weight for default routes associated with this interface. For multiple active interfaces with the same metric, Weight is used to load balance traffic to the interfaces.
 - d. Set the **Management priority**. This determines which interface will have priority for central management activity. The interface with the highest number will be used.
 - e. Set the MTU.
 - f. For **Use DNS**, select one of the following:
 - Always: DNS will always be used for this WAN; when multiple interfaces have the same DNS server, the interface with the lowest metric will be used for DNS requests.
 - When primary default route: Only use the DNS servers provided for this interface when the interface is the primary route.
 - Never: Never use DNS servers for this interface.

- g. See Configure SureLink active recovery to detect WAN/WWAN failures for information about configuring **SureLink** for active recovery.
- 16. (Optional) Configure IPv6 settings:
 - a. Click to expand IPv6.
 - b. Enable IPv6 support.
 - c. Set the Metric.
 - d. For Weight, type the relative weight for default routes associated with this interface. For multiple active interfaces with the same metric, Weight is used to load balance traffic to the interfaces.
 - e. Set the **Management priority**. This determines which interface will have priority for central management activity. The interface with the highest number will be used.
 - f. Set the MTU.
 - g. For **Use DNS**, select one of the following:
 - Always: DNS will always be used for this WAN; when multiple interfaces have the same DNS server, the interface with the lowest metric will be used for DNS requests.
 - When primary default route: Only use the DNS servers provided for this interface when the interface is the primary route.
 - Never: Never use DNS servers for this interface.
 - h. See Configure SureLink active recovery to detect WAN/WWAN failures for information about configuring **SureLink** for active recovery.
- 17. Click Apply to save the configuration and apply the change.

Command line

- 1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.
 - Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
- 2. At the command line, type **config** to enter configuration mode:

>	config
(c	confia)>

- 3. Create a new interface or edit an existing one:
 - To create a new interface named ip_passthrough_interface:

(config)> add network interface ip_passthrough_interface (config network interface ip_passthrough_interface)>

To edit an existing interface named ip_passthrough_interface, change to the IP-passthrough-interface node in the configuration schema:

(config)> network interface ip_passthrough_interface (config network interface ip_passthrough_interface)>

4. Set the interface type to passthrough:

(config network interface ip_passthrough_interface)> type passthrough (config network interface ip_passthrough_interface)>

5. Set the firewall zone to internal:

(config network interface ip_passthrough_interface)> zone internal (config network interface ip_passthrough_interface)>

- 6. Select an Ethernet device or a Wi-Fi access point for this interface:
 - a. Enter device ?to view available devices and the proper syntax.

(config network interface my_wan)> device?

Device: The network device used by this network interface.

Format:

/network/device/eth1

/network/device/eth2

/network/device/loopback

/network/bridge/hotspot_bridge

/network/bridge/lan

/network/wireless/ap/digi_ap

/network/wireless/ap/digi_hotspot_ap

Current value:

(config network interface ip_passthrough_interface)> device

b. Set the device for the interface:

(config network interface ip_passthrough_interface)> device device (config network interface my_wan)>

- 7. Set passthrough options
- 8. Configure IPv4 settings:
 - IPv4 support is enabled by default. To disable:

(config network interface ip_passthrough_interface)> ipv4 enable false (config network interface ip_passthrough_interface)>

a. Set the IP metric:

(config network interface ip_passthrough_interface)> ipv4 metric *num* (config network interface ip_passthrough_interface)>

b. Set the relative weight for default routes associated with this interface. For multiple active interfaces with the same metric, the weight is used to load balance traffic to the interfaces.

(config network interface ip_passthrough_interface)> ipv4 weight *num* (config network interface ip_passthrough_interface)>

c. Set the management priority. This determines which interface will have priority for central management activity. The interface with the highest number will be used.

(config network interface ip_passthrough_interface)> ipv4 mgmt *num* (config network interface ip_passthrough_interface)>

d. Set the MTU:

(config network interface ip_passthrough_interface)> ipv4 mtu *num* (config network interface ip_passthrough_interface)>

e. Configure how to use DNS:

(config network interface ip_passthrough_interface)> ipv4 use_dns *value* (config network interface ip_passthrough_interface)>

where value is one of:

- always: DNS will always be used for this WAN; when multiple interfaces have the same DNS server, the interface with the lowest metric will be used for DNS requests.
- primary: Only use the DNS servers provided for this interface when the interface is the primary route.
- never: Never use DNS servers for this interface.
- See Configure SureLink active recovery to detect WAN/WWAN failures for information about configuring SureLink for active recovery.
- 9. (Optional) Configure IPv6 settings:
 - a. Enable IPv6 support:

(config network interface ip_passthrough_interface)> ipv6 enable true (config network interface ip_passthrough_interface)>

b. Generally, the default settings for IPv6 support are sufficient. You can view the default IPv6 settings by using the question mark (?):

(config network interface ip_passthrough_interface)> ipv6?

IPv6

Parameters	Current Value		
enable metric mgmt mtu use_dns weight	true 0 0 1500 always 10	Enable Metric Management priority MTU Use DNS Weight	

(config network interface ip_passthrough_interface)>

- c. Modify any of the remaining default settings as appropriate.
- 10. (Optional) To configure 802.1x port based network access control:

Note The IX20 can function as an 802.1x authenticator; it does not function as an 802.1x supplicant.

a. Enable the 802.1x authenticator on the IX20 device:

(config network interface ip_passthrough_interface)> 802_1x authentication enable true (config network interface ip_passthrough_interface)>

b. Set the frequency period for reauthorization:

(config network interface ip_passthrough_interface)> 802_1x authentication reauth_period *value* (config network interface ip_passthrough_interface)>

where value is an integer between 0 and 86400. The default is 3600.

11. Save the configuration and apply the change.

 $\label{lem:configuration} \mbox{(config network interface ip_passthrough_interface)> save Configuration saved.}$

12. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Virtual LANs (VLANs)

Virtual LANs (VLANs) allow splitting a single physical LAN into separate Virtual LANs. Each device on a VLAN can only access other devices on the same VLAN and each device is unaware of any other VLAN, which isolates networks from one another, even though they run over the same physical network.

Your IX20 device supports two VLANs modes:

- Trunking: Supports multiple VLANs per Ethernet port, which enables you to extend your VLAN across multiple switches through your entire network.
- Switchport: Each Ethernet port can have one or more VLAN IDs associated to it. Any untagged VLAN packets that come into a network interface are automatically tagged with the primary VLAN ID for that switchport. This allows devices on the network that aren't configured with a VLAN to act as if they are directly connected to the VLAN.

This section contains the following topics:

Create a trunked VLAN route	235
Create a VLAN using switchport mode	.237

Create a trunked VLAN route

Required configuration items

- Device to be assigned to the VLAN.
- The VLAN ID. The TCP header uses the VLAN ID to identify the destination VLAN for the packet.

To create a VLAN:



- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- a. Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

- 3. Click Network > Virtual LAN.
- 4. Type a name for the VLAN and click 1/2.
- 5. Select the Device.
- 6. Type or select a unique numeric ID for the VLAN ID.
- 7. Click Apply to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

> config (config)>

3. Add the VLAN:

(config)> add network vlan *name* (config)>

- 4. Set the device to be used by the VLAN:
 - a. View a list of available devices:

(config network vlan vlan1)> device?

Device: The Ethernet device to use for this virtual LAN

Format:

/network/device/eth1

/network/device/eth2

/network/device/loopback

/network/vlan/vlan1

/network/bridge/lan

/network/wireless/ap/digi_ap

Current value:

(config network vlan vlan1)>

b. Add the device:

(config network vlan vlan1)> device /network/device/ (config network vlan vlan1)>

5. Set the VLAN ID:

(config network vlan vlan1)> id value

where value is an integer between 1 and 4095.

6. Save the configuration and apply the change.

(config network vlan vlan1)> save Configuration saved.

>

7. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Create a VLAN using switchport mode

Required configuration items

- Device to be assigned to the VLAN.
- The VLAN ID. The TCP header uses the VLAN ID to identify the destination VLAN for the packet.

To create a VLAN using switchport mode:



- Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- a. Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

- 3. Click Network > Bridges.
- 4. For **Add Bridge**, type a name for the bridge and click %
- 5. Bridges are enabled by default. To disable, toggle off **Enable**.
- 6. For Bridge type, select Switchport.
- 7. (Optional) Enable Spanning Tree Protocol (STP).

STP is used when using multiple LANs on the same device, to prevent bridge loops and other routing conflicts.

- a. Click STP.
- b. Click Enable.
- c. For Forwarding delay, enter the number of seconds that the device will spend in each of the listening and learning states before the bridge begins forwarding data. The default is 2 seconds.
- 8. For **Port**, type a name for the VLAN port and click **1**/₂ Generally, numbers are used for VLAN ports.

- 9. Select the **Device** that the port uses.
- 10. Configure Man IDs:
 - a. Click to expand Vlan IDs.
 - b. Click Yofor Add Vlan ID.
 - c. Type or select a unique numeric Vlan ID.
 - d. Click Yofor Add Vian ID again to add additional VLAN IDs.
- 11. Click **Apply** to save the configuration and apply the change.

Command line

Select the device in Remote Manager and click Actions > Open Console, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Add the VLAN:

(config)> add network vlan *name* (config)>

- 4. Set the device to be used by the VLAN:
 - a. View a list of available devices:

(config network vlan vlan1)> device?

Device: The Ethernet device to use for this virtual LAN

Format:

/network/device/eth1

/network/device/eth2

/network/device/loopback

/network/vlan/vlan1

/network/bridge/lan

/network/wireless/ap/digi_ap

Current value:

(config network vlan vlan1)>

b. Add the device:

(config network vlan vlan1)> device /network/device/ (config network vlan vlan1)>

5. Set the VLAN ID:

(config network vlan vlan1)> id value

where value is an integer between 1 and 4095.

6. Save the configuration and apply the change.

(config network vlan vlan1)> save Configuration saved.

7. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Bridging

Bridging is a mechanism to create a single network consisting of multiple devices, such as Ethernet devices and wireless access points. You can also use bridging to create a Vitural LAN switchport bridge. See Create a VLAN using switchport mode for more information about switchport bridging for VLANs.

By default, the IX20 has the following preconfigured bridges:

Interface type	Preconfigured interfaces	Devices	Default configuration
Bridges (WI-FI model only)	■ Bridge: LAN	Ethernet: ETH2Wi-Fi access point: Digi AP	EnabledUsed by the ETH1 interface

You can modify configuration settings for the existing bridge, and you can create new bridges. This section contains the following topics:

Edit the preconfigured ETH2 bridge	241
Configure a bridge	. 244

Edit the preconfigured ETH2 bridge

Required configuration items

- Enable or disable the bridge.
- Modify the devices included in the bridge.

Additional configuration items

■ Enable Spanning Tree Protocol (STP).

To edit the preconfigured LAN bridge:



- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.




The **Configuration** window is displayed.

- 3. Click Network > Bridges > LAN.
- 4. The LAN bridge is enabled by default. To disable, toggle off Enable.
- 5. Modify the list of devices that are a part of the bridge. By default, the **LAN** bridge includes the following devices:
 - Ethernet: ETH2
 - Wi-Fi access point: Digi AP

Note The MAC address of the bridge is taken from the first available device in the list.

a. To delete a device from the bridge, click the down arrow (<) next to the field label and select **Delete**.

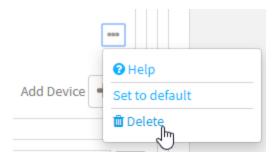

- b. To add a device, for **Add device**, click **Y** and select the **Device**.
- 6. (Optional) Enable Spanning Tree Protocol (STP).

STP is used when using multiple LANs on the same device, to prevent bridge loops and other routing conflicts.

- a. Click STP.
- b. Click Enable.
- c. For **Forwarding delay**, enter the number of seconds that the device will spend in each of the listening and learning states before the bridge begins forwarding data. The default is **2** seconds.
- 7. Click **Apply** to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

- 3. The LAN bridge is enabled by default.
 - To disable:

(config)> network bridge eth2 enable false (config)>

To enable if it has been disabled:

(config)> network bridge eth2 enable true (config)>

4. Modify the list of devices that are a part of the bridge. By default, the **LAN** bridge includes the following devices:

Ethernet: ETH2

Wi-Fi access point: Digi AP

Note The MAC address of the bridge is taken from the first available device in the list.

a. To delete a device from the bridge:

i. Determine the index numbers of the devices included with the bridge:

(config)> show network bridge eth2 device
0 /network/device/eth2
1 /network/wireless/ap/digi_ap
(config)>

ii. Use the index number to delete the appropriate device. For example, to delete the **Digi AP** Wi-Fi access point from the bridge:

(config)> del network bridge lan device 1 (config)>

Note If you are deleting multiple devices from the bridge, the device index may be reordered after each deletion. As a result, best practice is to perform a **show network bridge lan1 device** command after each device is deleted to determine the new index numbering.

- b. Add devices to the bridge:
 - Determine available devices:

(config network bridge my_bridge)> interface lan device ?

Device: The network device used by this network interface.

Format:

/network/device/eth1
/network/device/eth2
/network/device/loopback
/network/bridge/hotspot_bridge
/network/bridge/lan
/network/wireless/ap/digi_ap
/network/wireless/ap/digi_hotspot_ap

Default value: /network/bridge/lan Current value: /network/bridge/lan

(config network bridge my_bridge)>

ii. Add the appropriate device. For example, to add the **Digi AP** Wi-Fi access point:

(config network bridge my_bridge)> add device end /network/wireless/ap/digi_ap (config)>

(Optional) Enable Spanning Tree Protocol (STP).

STP is used when multiple LANs are configured on the same device, to prevent bridge loops and other routing conflicts.

a. Enable STP:

(config)> network bridge eth2 stp enable true

b. Set the number of seconds that the device will spend in each of the listening and learning states before the bridge begins forwarding data:

```
(config)> network bridge eth2 stp forward_delay num
(config)>
```

The default is 2 seconds.

6. Save the configuration and apply the change.

```
(config)> save
Configuration saved.
```

7. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configure a bridge

Required configuration items

- A name for the bridge.
 Bridges are enabled by default.
- Devices to be included in the bridge.

Additional configuration items

Enable Spanning Tree Protocol (STP).

To create a bridge:



- Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

- 3. Click Network > Bridges.
- 4. For **Add Bridge**, type a name for the bridge and click %
- 5. Bridges are enabled by default. To disable, toggle off **Enable**.
- 6. For Bridge type, select Standard.

See Create a VLAN using switchport mode for information about switchport bridging.

7. (Optional) Enable Spanning Tree Protocol (STP).

STP is used when using multiple LANs on the same device, to prevent bridge loops and other routing conflicts.

- a. Click STP.
- b. Click Enable.
- c. For **Forwarding delay**, enter the number of seconds that the device will spend in each of the listening and learning states before the bridge begins forwarding data. The default is **2** seconds.
- 8. (Optional) Enable Rapid Spanning Tree Protocol (RSTP) for faster response to topology changes on the network.
 - a. Click RSTP to enable.
 - b. For **Hello Time**, enter the number of seconds between bridge protocol units (BPDUs) sent on a port. The default is **2** seconds.
 - c. For **Max Age**, enter the maximum number of seconds before a bridge port saves its BDPU configuration. The default is **20** seconds.
 - d. For **Priority**, enter the system priority. The default priority number is **8**.
 - e. (Optional) For **Custom mstpd options**, enter the extra configuration options to pass to mspd daemon.
- 9. Add devices to the bridge:
 - a. Click to expand Devices.
 - b. For **Add device**, click **1**/₂o
 - c. Select the Device.
 - d. Repeat to add additional devices.

Note The MAC address of the bridge is taken from the first available device in the list.

10. Click **Apply** to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

> config (config)>

3. Create the bridge:

(config)> add network bridge my_bridge (config network bridge my_bridge)>

- 4. Bridges are enabled by default.
 - To disable:

(config network bridge my_bridge)> enable false (config network bridge my_bridge)>

To enable if it has been disabled:

(config network bridge my_bridge)> enable true (config network bridge my_bridge)>

5. Set the bridge **mode** to **standard**:

(config network bridge my_bridge)> mode standard (config network bridge my_bridge)>

- Add devices to the bridge:
 - a. Determine available devices:

(config network bridge my_bridge)> interface lan device ?

Device: The network device used by this network interface.

Format:

/network/device/eth1
/network/device/eth2
/network/device/loopback
/network/bridge/hotspot_bridge
/network/bridge/lan
/network/wireless/ap/digi_ap
/network/wireless/ap/digi_hotspot_ap

Default value: /network/bridge/lan Current value: /network/bridge/lan

(config network bridge my_bridge)>

b. Add the appropriate device. For example, to add the **Digi AP** Wi-Fi access point:

(config network bridge my_bridge)> add device end /network/wireless/ap/digi_ap (config)>

Note The MAC address of the bridge is taken from the first available device in the list.

7. (Optional) Enable Spanning Tree Protocol (STP).

STP is used when using multiple LANs on the same device, to prevent bridge loops and other routing conflicts.

a. Enable STP:

(config network bridge my_bridge)> stp enable true

b. Set the number of seconds that the device will spend in each of the listening and learning states before the bridge begins forwarding data:

(config network bridge my_bridge)> stp forward_delay *num* (config)>

The default is 2 seconds.

(Optional) Enable Rapid Spanning Tree Protocol (RSTP) for faster response to topology changes on the network.

(config network bridge my_bridge)> rstp enable true

9. Save the configuration and apply the change.

(config)> save Configuration saved.

10. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Show SureLink status and statistics

You can show SureLink status for all interfaces, or for an individual interface. You can also show Surelink status for ipsec tunnels and OpenVPN clients.

SureLink status is only available from the Admin CLI.

Command line

Show SureLink State

To show the current state of SureLink for the IX20 device, use the show surelink state command:

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the Admin CLI prompt, type:

```
> show surelink state
Test on network.interface.eth1.ipv6 with condition: one
dns_configured (n);
network.interface.eth1.ipv6; -> update_routing_table
               ATTEMPTS STATUS
ACTION
restart_interface 00/01 [FAILED]
update_routing_table 00/01
Test on network.interface.modem.ipv4 with condition: all
dns_configured (n);
network.interface.modem.ipv4; -> restart_interface
ACTION
               ATTEMPTS STATUS
update_routing_table 00/03 [BUSY]
 restart_interface 00/03
reset_modem
                  00/03
 switch sim
                00/03
 modem_power_cycle 00/03
 restart_interface 00/03
```

Show SureLink status for all interfaces

To show the SureLink status all interfaces, use the show surelink interface all command:

Select the device in Remote Manager and click Actions > Open Console, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the Admin CLI prompt, type:

```
> show surelink interface all
Interface Test
                         Proto Last Response Status
eth1
       Interface is up
                           IPv4 32 seconds Passing
eth1
       Interface's DNS servers (DNS) IPv4 28 seconds Passing
eth2
       Interface is up
                          IPv4 21 seconds Passing
eth2
     Interface's DNS servers (DNS) IPv4 20 seconds Passing
modem Interface is up
                             IPv4 115 seconds Passing
modem Interface's DNS servers (DNS) IPv4 114 seconds Passing
```

3. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Show SureLink status for a specific interface

To show the SureLink status a specific interface, use the show surelink interface name *name* command:

- 1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.
 - Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
- 2. Use the show surelink interface name *name* command to show the Surelink status of a specific interface, for example:

3. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Show SureLink status for all IPsec tunnels

To show the SureLink status all IPsec tunnels, use the show surelink ipsec all command:

- 1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.
 - Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
- 2. At the Admin CLI prompt, type:

```
> show surelink ipsec all

IPsec Test Last Response Status
-----test 194.43.79.74 (Ping) 29 seconds Passed
test 194.43.79.75 (Ping) 5 seconds Passed
test1 194.43.79.74 (Ping) 21 seconds Failed
test2 194.43.79.75 (Ping) 21 seconds Waiting for result
>
```

3. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Show SureLink status for a specific IPsec tunnel

To show the SureLink status a specific IPsec tunnel, use the show surelink ipsec tunnel *name* command:

- 1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.
 - Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
- 2. Use the show surelink ipsec tunnel *name* command to show the Surelink status of a specific tunnel, for example:

```
> show surelink ipsec tunnel test

IPsec Test Last Response Status
----- test 194.43.79.74 (Ping) 29 seconds Passed
test 194.43.79.75 (Ping) 5 seconds Passed
>
```

3. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Show SureLink status for all OpenVPN clients

To show the SureLink status all OpenVPN clients, use the show surelink openvpn client all command:

- 1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.
 - Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
- 2. At the Admin CLI prompt, type:

3. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Show SureLink status for a specific OpenVPN client

To show the SureLink status a specific OpenVPN client, use the show surelink openvpn client *name* command:

- 1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.
 - Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
- 2. Use the show surelink openvpn client *name* command to show the Surelink status of a specific OpenVPN client, for example:

```
> show surelink openvpn client test_client1

OpenVPN Client Test Last Response Status
-----test_client1 194.43.79.74 (Ping) 29 seconds Passed test_client1 194.43.79.75 (Ping) 5 seconds Passed
```

3. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configure a TCP connection timeout

You can configure the number of times an unacknowledged TCP data packet will be retransmitted before the connection is considered lost.

This feature is useful as it allows a backup system to control the serial port if the primary system goes offline, or for the primary system to be able to recover regardless of whether there has been a network disruption.

A low number of retries will end a "stale" connection more quickly that a larger number. The default is 15 retries.



- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.

- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The Configuration window is displayed.

- 3. Set the TCP retry attempts value:
 - a. Click Network > Advanced.
 - b. For **TCP retries2**, enter the number of times an unacknowledged TCP data packet will be transmitted before the connection is considered lost.

Minimum: 0 Maximum: 255 Default: 15

4. Click **Apply** to save the configuration and apply the change.

Serial port

IX20 devices have a single serial port that provides access to different features, depending on the serial port mode selection.

Default serial port configuration

You can review the default serial port configuration for your device.

Serial mode options

You can choose a serial mode option for each serial port, depending on the feature that you want to use.

- Login: Allows the port to be used to log into the CLI.
- Remote Access: Provides socket level access to ports.
- Application: Provides access to the serial device from Python applications.
- PPP dial-in: Allows the device to answer Point-to-Point Protocol (PPP) connections over serial ports.
- RealPort: Used in conjunction with the Digi RealPort driver.
- UDP serial: Provides access to the serial port using UDP.
- Modem emulator: Allows the device to act as a dial-up modem emulator for handling incoming AT dial-ins.
- Modbus: Allows the device to function as a Modbus protocol gateway.

View serial port information

- Show serial port status and statistics
- Review the serial port message log

Default serial port configuration

The IX20 default serial port configuration is:

■ Enabled

■ Serial mode: Remote Access

Label: NoneBaud rate: 9600

- Data bits: 8
- Parity: None
- Stop bits: 1
- Flow control: None

Configure Login mode for a serial port

Login mode allows the user to log into the device through the serial port.

To change the configuration to match the serial configuration of the device to which you want to connect:



- 1. Log into the IX20 WebUI as a user with full Admin access rights.
- 2. On the menu, click System. Under Configuration, click Serial Configuration.



The **Serial Configuration** page is displayed.



Note You can also configure the serial port by using **Device Configuration** > **Serial**. Changes made by using either **Device Configuration** or **Serial Configuration** will be reflected in both.

3. Click the name of the port that you want to configure.



The serial port is enabled by default. To disable, toggle off **Enable**.

- 4. For **Mode**, select **Login**. This is the default.
- 5. (Optional) For Label, enter a label that will be used when referring to this port.
- 6. Expand Serial Settings.

The entries in the following fields must match the information for the power controller. Refer to your power controller manual for the correct entries.

- a. Baud rate: For Baud rate, select the baud rate used by the device to which you want to connect. The default is 9600.
- b. **Data bits**: For **Data bits**, select the number of data bits used by the device to which you want to connect. The default is **8**.
- c. **Parity**: For **Parity**, select the type of parity used by the device to which you want to connect. The default is **None**.
- d. **Stop bits**: For **Stop bits**, select the number of stop bits used by the device to which you want to connect. The default is **1**.
- e. **Flow control**: For **Flow control**, select the type of flow control used by the device to which you want to connect. The default is **None**.
- 7. Expand **Logging Settings** to configure logging for this serial port.
 - a. To enable logging, click to toggle on Enable.
 - b. In the **Log file name** field, enter a descriptive name for the log file.
 - c. For **Log file size**, type the size of the log file. When the log file reaches the size limit, the current file is saved and a new file is created. The default is 65536 bytes.
 - d. From the **Type of data to log** list box, specify the type of data that should be saved.
 - Received
 - Transmitted
 - Both
 - Both with arrows. This is the default.
 - e. If you want to log the time at which date was received or transmitted, click the **Timestamps** toggle to **Enable**.
 - If you want to log the data as hexadecimal values, click the **Hexadecimal** toggle to Enable.

Note You can review the message log in the **Serial Port Log** page. See Review the serial port message log.

8. Click **Apply** to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

> config (config)>

3. The serial port is enabled by default. To disable:

(config)> serial port1 enable false (config)>

4. Set the mode:

(config)> serial port1 mode login (config)>

5. (Optional) Set a label that will be used when referring to this port.

(config)>path-paramlabel *label* (config)>

6. Set the baud rate used by the device to which you want to connect:

(config)> serial port1 baudrate *rate* (config)>

7. Set the number of data bits used by the device to which you want to connect:

(config)> serial port1 databits *bits* (config)>

8. Set the type of parity used by the device to which you want to connect:

(config)> serial port1 parity parity (config)>

Allowed values are:

- even
- odd
- none

The default is none.

9. Set the stop bits used by the device to which you want to connect:

(config)> serial port1 stopbits *bits* (config)>

10. Set the type of flow control used by the device to which you want to connect:

(config)> serial port1 flow *value* (config)>

where value is one of:

- none
- rts/cts
- xon/xoff
- 11. Configure serial port logging:
 - a. Enable serial port logging:

(config)>serial port1 logging enable true (config)>

b. Set the file name:

(config)>serial port1 logging filename *string* (config)>

c. Set the maximum allowed log size for the serial port log when starting the log:

(config)>serial port1 logging size *value* (config)>

where value is the size of the log file in bytes. The default is 65536.

d. Specify the data type:

(config)>serial port1 logging type *value* (config)>

where value is one of:

- received
- transmitted
- both
- arrows. This is the default.
- e. Log the time at which date was received or transmitted:

(config)>serial port1 logging hex true (config)>

f. Log data as hexadecimal values:

(config)>serial port1 logging timestamp true (config)>

12. Save the configuration and apply the change.

(config)> save
Configuration saved.

13. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configure Remote Access mode for a serial port

Remote Access mode allows for remote access to another device that is connected to the serial port. To change the configuration to match the serial configuration of the device to which you want to connect:



- 1. Log into the IX20 WebUI as a user with full Admin access rights.
- 2. On the menu, click System. Under Configuration, click Serial Configuration.



The **Serial Configuration** page is displayed.



Note You can also configure the serial port by using **Device Configuration** > **Serial**. Changes made by using either **Device Configuration** or **Serial Configuration** will be reflected in both.

3. Click the name of the port that you want to configure.



The serial port is enabled by default. To disable, toggle off **Enable**.

- 4. For Serial mode, select Remote access (TCP).
- 5. (Optional) For **Label**, enter a label that will be used when referring to this port.
- 6. Expand Serial Settings.

The entries in the following fields must match the information for the power controller. Refer to your power controller manual for the correct entries.

- a. **Baud rate**: For **Baud rate**, select the baud rate used by the device to which you want to connect. The default is **9600**.
- b. **Data bits**: For **Data bits**, select the number of data bits used by the device to which you want to connect. The default is **8**.
- c. **Parity**: For **Parity**, select the type of parity used by the device to which you want to connect. The default is **None**.
- d. **Stop bits**: For **Stop bits**, select the number of stop bits used by the device to which you want to connect. The default is **1**.
- e. **Flow control**: For **Flow control**, select the type of flow control used by the device to which you want to connect. The default is **None**.

7. Click to expand Data Framing.

- a. Click **Enable** to enable the data framing feature.
- b. For Maximum Frame Count, enter the maximum size of the packet. The default is 1024.
- c. For **Idle Time**, enter the length of time the device should wait before sending the packet.
- d. For **End Pattern**, enter the end pattern. The packet is sent when this pattern is received from the serial port.
- e. Click Strip End Pattern if you want to remove the end pattern from the packet before it is sent.

8. Expand Service Settings.

All service settings are disabled by default. Click available options to toggle them to enabled, and set the IP ports as appropriate.



Note If the Telnet service is enabled for the serial port, note that the **Telnet Login** option, when enabled, prompts the user to enter Telnet login credentials when accessing the serial port via Telnet. The **Telnet Login** option is enabled by default. To disable this option, navigate to **System > Device Configuration > Authentication > Serial** and disable **Telnet Login**.

For each type of service, you can also configure the access control.

To do this, you need to go to **Device Configuration**:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

- b. Access the configuration for the appropriate type of service:
 - i. Click to expand Serial.
 - ii. Click to expand the appropriate serial port.
 - iii. Click to expand the appropriate type of service.
 - iv. Click to expand Access Control List.

For example, to set the Access Control List for the SSH connection for serial port 1, click to expand **Serial** > **Port 1** > **SSH connection** > **Access Control List**:



- To limit access to specified IPv4 addresses and networks:
 - i. Click IPv4 Addresses.
 - ii. For Add Address, click Yo
 - iii. For Address, enter the IPv4 address or network that can access the device's service-type. Allowed values are:
 - A single IP address or host name.
 - A network designation in CIDR notation, for example, 192.168.1.0/24.
 - any: No limit to IPv4 addresses that can access the service-type.
 - iv. Click Ybagain to list additional IP addresses or networks.
- To limit access to specified IPv6 addresses and networks:
 - i. Click IPv6 Addresses.
 - ii. For Add Address, click Yo
 - iii. For **Address**, enter the IPv6 address or network that can access the device's service-type. Allowed values are:
 - A single IP address or host name.
 - A network designation in CIDR notation, for example, 2001:db8::/48.
 - any: No limit to IPv6 addresses that can access the service-type.
 - iv. Click Ybagain to list additional IP addresses or networks.
- To limit access to hosts connected through a specified interface on the device:
 - i. Click Interfaces.
 - ii. For Add Interface, click Yo
 - iii. For Interface, select the appropriate interface from the dropdown.
 - iv. Click Ybagain to allow access through additional interfaces.

- To limit access based on firewall zones:
 - i. Click **Zones**. By default, there are three firewall zones already configured: Internal, Edge, and IPsec.
 - ii. For Add Zone, click Yo
 - iii. For **Zone**, select the appropriate firewall zone from the dropdown. See Firewall configuration for information about firewall zones.
 - iv. Click \(\frac{1}{2}\) again to allow access through additional firewall zones.
- Expand Autoconnect Settings. The autoconnect feature is used to initiate a connection to a remote server to directly access the serial port.
 - a. Click Enable to enable the autoconnect feature.
 - b. For **Connection Trigger**, select the option that describes the type of event that should trigger the connection.

If you select the **Data received matches a string** option, additional fields display.

- a. In the **Data Match String** field, enter the received data string that should trigger the connection. The syntax is: *backslash escaped string*
- b. The **Flush String** option determines whether the match string data sent from the remote server is discarded.
 - Enable: Discard the match string data. This is the default.
 - **Disable**: Do not discard the match string data.
- c. For **Outbound Connection Type**, select the option that describes the method used to initiate the connection.
- d. For **Destination**, enter the host name or IP address of the remote server. When using SSH, this should be prefixed with the user name and followed by @, for example, admin@192.168.1.1.
- e. For **IP port**, enter the TCP port of the remote server (1-65535).
- f. Click Enable TCP keep-alive to enable TCP keepalive on the connection.
- g. Click **Enable TCP nodelay** to enable TCP nodelay on the connection.
- h. For **Socket ID string**, type text to be transmitted to the remote server when the socket connects.
- Expand Session Settings.



- Enable Exclusive access to limit access to the serial port to a single active session. This
 option is disabled by default. When it is disabled, multiple users can connect using
 Telnet, TCP, and SSH.
- b. For **Escape sequence**, type the characters used to start an escape sequence. If no characters are defined, the escape sequence is disabled. The default is **~b**.
- c. For **History size**, type or select the number of bytes of output from the serial port that are written to buffer. These bytes are redisplayed when a user connects to the serial port. The default is **4000** bytes.

- d. For **Idle timeout**, type the amount of time to wait before disconnecting due to user inactivity.
- 11. Expand Monitor Settings.
 - a. Enable CTS to monitor CTS (Clear to Send) changes on this port.
 - b. Enable **DCD** to monitor DCD (Data Carrier Detect) changes on this port.
- 12. Expand **Logging Settings** to configure logging for this serial port.
 - a. To enable logging, click to toggle on Enable.
 - b. In the **Log file name** field, enter a descriptive name for the log file.
 - c. For **Log file size**, type the size of the log file. When the log file reaches the size limit, the current file is saved and a new file is created. The default is 65536 bytes.
 - d. From the **Type of data to log** list box, specify the type of data that should be saved.
 - Received
 - Transmitted
 - Both
 - Both with arrows. This is the default.
 - e. If you want to log the time at which date was received or transmitted, click the **Timestamps** toggle to **Enable**.
 - f. If you want to log the data as hexadecimal values, click the **Hexadecimal** toggle to **Enable**.

Note You can review the message log in the **Serial Port Log** page. See Review the serial port message log.

13. Click **Apply** to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

> config (config)>

3. Serial ports is enabled by default. To disable:

(config)> serial port_number enable false
(config)>

Command line examples in this section will use port1 for the serial port. However, any port number can be used.

4. Set the mode:

(config)> serial port1 mode remoteaccess (config)>

5. (Optional) Set a label that will be used when referring to this port.

(config)>serial port1 label *label* (config)>

6. Set the baud rate used by the device to which you want to connect:

(config)> serial port1 baudrate *rate* (config)>

7. Set the number of data bits used by the device to which you want to connect:

(config)> serial port1 databits *bits* (config)>

8. Set the type of parity used by the device to which you want to connect:

(config)> serial port1 parity parity
(config)>

Allowed values are:

- even
- odd
- none

The default is none.

9. Set the stop bits used by the device to which you want to connect:

(config)> serial port1 stopbits *bits* (config)>

10. Set the type of flow control used by the device to which you want to connect:

(config)> serial port1 flow *value* (config)>

where value is one of:

- none
- rts/cts
- xon/xoff
- 11. Configure the session settings.
 - a. Set the characters used to start an escape sequence:

(config)>serial port1 escape *string* (config)

If no characters are defined, the escape sequence is disabled. The default is ~b.

b. Limit access to the serial port to a single active session:

(config)>serial port1 exclusive true (config)

c. Set the number of bytes of output from the serial port that are written to buffer. These bytes are redisplayed when a user connects to the serial port.

(config)>serial port1 history *bytes* (config)

The default is 4000 bytes.

d. Set the amount of time to wait before disconnecting due to user inactivity:

(config)>serial port1 idle_timeout value
(config)

where *value* is any number of weeks, days, hours, minutes, or seconds, and takes the format *number*{w|d|h|m|s}.

For example, to set idle_timeout to ten minutes, enter either 10m or 600s:

(config)>serial port1 idle_timeout 600s
(config)

The default is 15m.

- Configure monitor settings.
 - a. (Optional) Enable monitoring of CTS (Clear to Send) changes on this port:

(config)>serial port1 monitor cts true (config)

b. (Optional) Enable monitoring of DCD (Data Carrier Detect) changes on this port:

(config)>serial port1 monitor dcd true (config)

- 13. (Optional) Configure autoconnect:
 - a. Enable autoconnect:

(config)>serial port1 autoconnect enable true (config)>

b. Set the option that will trigger the connection:

(config)>serial port1 autoconnect trigger *value* (config)>

where value is one of:

- always
- data
- dcd
- destination
- dsr
- match

If match is selected:

i. Set the string that, when received, will trigger the connection:

(config)>serial port1 autoconnect match_string string
(config)>

ii. **flush_string** is enabled by default, which will discard the matched string from data sent to the server. To disable:

(config)>serial port1 autoconnect flush_string false (config)>

The default is always.

c. Set the option that initiates the connection:

(config)>serial port1 autoconnect conn_type value (config)>

where value is one of:

- ssh
- tcp
- telnet
- tls
- tls auth

The default is tls.

d. Set the host name or IP address of the destination server:

(config)>serial port1 autoconnect destination *hostname/IP_address* (config)>

When using SSH, this should be prefixed with the user name and followed by @, for example:

(config)>serial port1 autoconnect destination admin@192.168.1.1 (config)>

e. Set the TCP port of the destination server:

(config)>serial port1 autoconnect port int
(config)>

where int is any integer between 1 and 65535.

f. To enable TCP keepalive:

(config)>serial port1 autoconnect keepalive true (config)>

g. To enable TCP nodelay:

(config)>serial port1 autoconnect nodely true (config)>

h. Set the text to be transmitted to the remote server when the socket connects:

(config)>serial port1 socketid *string* (config)>

- 14. (Optional) Configure data framing:
 - a. Enable data framing:

(config)>serial port1 framing enable true (config)

b. Set the maximum size of the packet:

(config)>serial port1 framing max_count int (config)

The default is 1024.

c. Set the length of time the device should wait before sending the packet:

(config)>serial port1 framing idle_time value
(config)

where value is in milliseconds (ms) or seconds (s). The maximum value is 60s.

d. Set the end pattern. The packet is sent when this pattern is received from the serial port:

(config)>serial port1 framing end_pattern backslash-escaped-string (config)

e. Set the strip end pattern if you want to remove the end pattern from the packet before it is sent:

(config)>serial port1 framing strip_pattern true (config)

- 15. (Optional) Configure service settings:
 - a. Configure SSH settings:
 - i. Enable SSH:

(config)>serial port1 service ssh enable true (config)>

ii. Set the port to be used for ssh communications:

(config)>serial port1 service ssh port int (config)>

where int is any integer between 1 and 65535. The default is 3001.

iii. Enable TCP keep-alive messages:

(config)>serial port1 service ssh keepalive true (config)>

iv. Enable TCP nodelay messages:

(config)>serial port1 service ssh nodelay true (config)>

- v. (Optional) Configure access control:
 - To limit access to specified IPv4 addresses and networks:

(config)> add serial port1 service ssh acl address end value (config)>

Where value can be:

- A single IP address or host name.
- A network designation in CIDR notation, for example, 192.168.1.0/24.
- any: No limit to IPv4 addresses that can access the service-type.

Repeat this step to list additional IP addresses or networks.

To limit access to specified IPv6 addresses and networks:

(config)> add serial port1 service ssh acl address6 end value (config)>

Where value can be:

- A single IP address or host name.
- A network designation in CIDR notation, for example, 2001:db8::/48.
- any: No limit to IPv6 addresses that can access the service-type.

Repeat this step to list additional IP addresses or networks.

To limit access to hosts connected through a specified interface on the IX20 device:

(config)> add serial port1 service ssh acl interface end value (config)>

Where value is an interface defined on your device.

Display a list of available interfaces:

Use ... network interface ?to display interface information:

(config)> ... network interface ?

Interfaces

setupip

Additional Configuration

Setup IP Setup Link-local IP setuplinklocalip

eth1 ETH1 eth2 ETH2 loopback Loopback modem Modem

(config)>

Repeat this step to list additional interfaces.

■ To limit access based on firewall zones:

(config)> add serial port1 service ssh acl zone end *value* (config)>

Where value is a firewall zone defined on your device, or the any keyword.

Display a list of available firewall zones:

Type ... firewall zone ?at the config prompt:

(config)> ... firewall zone ?

Zones: A list of groups of network interfaces that can be referred to by packet

filtering rules and access control lists.

Additional Configuration

any

dynamic_routes

edge

external

hotspot

internal

ipsec

loopback

setup

(config)>

Repeat this step to include additional firewall zones.

vi. (Optional) Enable Multicast DNS (mDNS):

(config)>serial port1 service ssh mdns enable true (config)>

- b. Configure TCP settings:
 - i. Enable TCP:

(config)>serial port1 service tcp enable true (config)>

ii. Set the port to be used for ssh communications:

(config)>serial port1 service tcp port int
(config)>

where int is any integer between 1 and 65535. The default is 4001.

iii. Enable TCP keep-alive messages:

(config)>serial port1 service tcp keepalive true (config)>

iv. Set the option that initiates the connection:

(config)>serial port1 service tcp conn_type value
(config)>

where value is one of:

- tcp
- tls
- tls_auth

The default is tls.

v. Enable TOP nodelay messages:

(config)>serial port1 service tcp nodelay true (config)>

- vi. (Optional) Configure access control:
 - To limit access to specified IPv4 addresses and networks:

(config)> add serial port1 service tcp acl address end *value* (config)>

Where value can be:

- · A single IP address or host name.
- A network designation in CIDR notation, for example, 192.168.1.0/24.
- any: No limit to IPv4 addresses that can access the service-type.

Repeat this step to list additional IP addresses or networks.

To limit access to specified IPv6 addresses and networks:

(config)> add serial port1 service tcp acl address6 end *value* (config)>

Where value can be:

- A single IP address or host name.
- A network designation in CIDR notation, for example, 2001:db8::/48.
- any: No limit to IPv6 addresses that can access the service-type.

Repeat this step to list additional IP addresses or networks.

 To limit access to hosts connected through a specified interface on the IX20 device:

(config)> add serial port1 service tcp acl interface end *value* (config)>

Where value is an interface defined on your device.

Display a list of available interfaces:

Use ... network interface ?to display interface information:

(config)> ... network interface ?

Interfaces

Additional Configuration

setupip Setup IP

setuplinklocalip Setup Link-local IP

eth1 ETH1 eth2 ETH2 loopback Loopback modem Modem

(config)>

Repeat this step to list additional interfaces.

To limit access based on firewall zones:

(config)> add serial port1 service tcp acl zone end *value* (config)>

Where value is a firewall zone defined on your device, or the any keyword.

Display a list of available firewall zones:

Type ... firewall zone ?at the config prompt:

(config)> ... firewall zone ?

Zones: A list of groups of network interfaces that can be referred to by packet

filtering rules and access control lists.

Additional Configuration

any

dynamic_routes

edge

external

hotspot

internal

ipsec

loopback

setup

(config)>

Repeat this step to include additional firewall zones.

vii. (Optional) Enable Multicast DNS (mDNS):

(config)>serial port1 service tcp mdns enable true (config)>

c. Configure telnet settings:

i. Enable Telnet:

(config)>serial port1 service telnet enable true (config)>

ii. Set the port to be used for Telnet communications:

(config)>serial port1 service telnet port int (config)>

where int is any integer between 1 and 65535. The default is 3001.

iii. Enable TCP keep-alive messages:

(config)>serial port1 service telnet keepalive true (config)>

iv. Enable TCP nodelay messages:

(config)>serial port1 service telnet nodelay true (config)>

- v. (Optional) Configure access control:
 - To limit access to specified IPv4 addresses and networks:

(config)> add serial port1 service telnet acl address end *value* (config)>

Where value can be:

- · A single IP address or host name.
- A network designation in CIDR notation, for example, 192.168.1.0/24.
- any: No limit to IPv4 addresses that can access the service-type.

Repeat this step to list additional IP addresses or networks.

To limit access to specified IPv6 addresses and networks:

(config)> add serial port1 service telnet acl address6 end *value* (config)>

Where value can be:

- A single IP address or host name.
- A network designation in CIDR notation, for example, 2001:db8::/48.
- any: No limit to IPv6 addresses that can access the service-type.

Repeat this step to list additional IP addresses or networks.

 To limit access to hosts connected through a specified interface on the IX20 device:

(config)> add serial port1 service telnet acl interface end *value* (config)>

Where value is an interface defined on your device.

Display a list of available interfaces:

Use ... **network interface** ?to display interface information:

(config)> ... network interface ?

Interfaces

Additional Configuration

setupip Setup IP

setuplinklocalip Setup Link-local IP

eth1 ETH1 eth2 ETH2 loopback Loopback modem Modem

(config)>

Repeat this step to list additional interfaces.

To limit access based on firewall zones:

(config)> add serial port1 service telnet acl zone end *value* (config)>

Where value is a firewall zone defined on your device, or the **any** keyword.

Display a list of available firewall zones:

Type ... firewall zone ?at the config prompt:

(config)> ... firewall zone?

Zones: A list of groups of network interfaces that can be referred to by packet

filtering rules and access control lists.

Additional Configuration

any

dynamic_routes

edge

external

hotspot

internal

ipsec

loopback

16.

		setup	
		(config)>	
		Repeat this step to include additional firewall zones.	
	vi.	(Optional) Enable Multicast DNS (mDNS):	
		(config)>serial port1 service telnet mdns enable true (config)>	
Cor	nfigu	re serial port logging:	
a.	Ena	ble serial port logging:	
		nfig)>serial port1 logging enable true nfig)>	
b.	Set the file name:		
		nfig)>serial port1 logging filename <i>string</i> nfig)>	
C.	Set the maximum allowed log size for the serial port log when starting the log:		
	•	nfig)>serial port1 logging size <i>value</i> nfig)>	
	whe	ere value is the size of the log file in bytes. The default is 65536.	
d.	Spe	cify the data type:	
		nfig)>serial port1 logging type <i>value</i> nfig)>	
	whe	ere <i>value</i> is one of:	
		■ received	
		■ transmitted	
		■ both	
		arrows. This is the default.	
e.	Log	the time at which date was received or transmitted:	
	•	nfig)>serial port1 logging hex true nfig)>	
f.	Log	data as hexadecimal values:	
	•	nfig)>serial port1 logging timestamp true nfig)>	

17. Save the configuration and apply the change.

(config)> save
Configuration saved.
>

18. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configure Application mode for a serial port

Application mode provides access to the serial device from Python applications.


To change the configuration to match the serial configuration of the device to which you want to connect:



- 1. Log into the IX20 WebUl as a user with full Admin access rights.
- 2. On the menu, click System. Under Configuration, click Serial Configuration.



The **Serial Configuration** page is displayed.

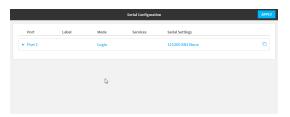

Note You can also configure the serial port by using **Device Configuration** > **Serial**. Changes made by using either **Device Configuration** or **Serial Configuration** will be reflected in both.

3. Click the name of the port that you want to configure.



The serial port is enabled by default. To disable, toggle off **Enable**.

- 4. For Mode, select Application. The default is Remote Access.
- 5. (Optional) For **Label**, enter a label that will be used when referring to this port.

6. Click **Apply** to save the configuration and apply the change.

Command line

Select the device in Remote Manager and click Actions > Open Console, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

> config (config)>

3. The serial port is enabled by default. To disable:

(config)> serial port1 enable false (config)>

4. Set the mode:

(config)> serial port1 mode application (config)>

5. (Optional) Set a label that will be used when referring to this port.

(config)>path-paramlabel *label* (config)>

6. Save the configuration and apply the change.

(config)> save Configuration saved.

7. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configure PPP dial-in mode for a serial port

PPP dial-in allows the device to answer Point-to-Point Protocol (PPP) connections over serial ports. To change the configuration to match the serial configuration of the device to which you want to connect:



- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- a. Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.


Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

- 3. Click to expand the name of the port that you want to configure, for example, **Port 1**. The serial port is enabled by default. To disable, toggle off **Enable**.
- 4. For Mode, select PPP-Dial-in. The default is Remote Access.

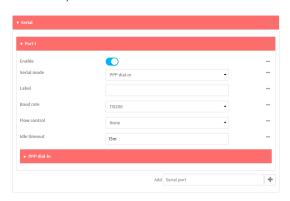

- 5. (Optional) For Label, enter a label that will be used when referring to this port.
- 6. For **Baud rate**, select the baud rate used by the device to which you want to connect. The default is **9600**.
- 7. For **Flow control**, select the type of flow control used by the device to which you want to connect. The default is **None**.
- 8. For **Idle timeout**, type the amount of time that the active session can be idle before the session is disconnected.

Allowed values are any number of weeks, days, hours, minutes, or seconds, and take the format *number*{w|d|h|m|s}.

For example, to set Idle timeout to ten minutes, enter 10m or 600s.

- 9. Click to expand PPP dial-in.
- 10. For Local IP address, type the IP address assigned to this interface.
- 11. For **Remote IP address**, type the IP address assigned to the remote peer.
- For Metric, set the priority of routes associated with this interface. If there are multiple active routes that match a destination, then the route with the lowest metric will be used.

- 13. For **Default route**, toggle to control whether a default route gets added for the PPP interface. This feature is disabled by default.
- 14. For **Zone**, select the firewall zone for this interface. This can be used by packet filtering rules and access control lists to restrict network traffic on this interface.
- 15. For Authentication method, select the method used to authenticate the remote peer. Allowed values are:
 - None: No authentication is required.
 - Automatic: Attempt to authenticate using CHAP first, and then PAP.
 - CHAP: Use Challenge Handshake Authentication Protocol (CHAP) to authenticate.
 - PAP: Use Password Authentication Protocol (PAP) to authenticate.

If Automatic, CHAP, or PAP are selected, type the **Username** and **Password** used to authenticate the remote peer.

- 16. (Optional) Configure the serial port to use a custom PPP configuration file:
 - a. Click to expand Custom PPP configuration.
 - b. Click **Enable** to enable the use of a custom PPP configuration file.
 - Cick Override to override the default PPP configuration and only use the custom configuration file.
 - If **Override** is not enabled, the custom PPP configuration file is used in addition to the default configuration.
 - d. For **Configuration file**, paste or type the configuration data in the format of a pppd options file. Because the options are passed directly to the pppd command line, they should all be entered on a single line. For example:

debug lcp-echo-interval 10 lcp-echo-failure 2

- 17. (Optional) Configure a script that will be run to prepare the link before PPP negotiations are started:
 - a. Click to expand Connect script.
 - b. Click **Enable** to enable the use of a connection script.
 - For Connect script filename, type the name of the script. Scripts are located in the /etc/config/serial directory. An example script, windows_dun.sh is provided.

Example windows_dun.sh file:

#!/bin/sh

Example connect script for connecting from a PC using a Windows dial-up # networking connection with built-in standard 33600 bps modem driver and phone # number 123.

The shell's 'read' builtin breaks on newline, so translate incoming carriage-# return to newline, and outgoing newline to carriage-return-newline. stty icrnl onlcr opost

Read input from the serial port, one line at a time. while read -r line; do case "\$line" in

```
ATDT123)
echo "CONNECT" # instruct the peer to start PPP
exit 0 # start up the local PPP session
;;
AT*)
echo "OK" # passively accept any other AT command
;;
esac
done
```

18. Click **Apply** to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. The serial port is enabled by default. To disable:

```
(config)> serial port1 enable false (config)>
```

4. Set the mode:

```
(config)> serial port1 mode ppp_dialin (config)>
```

5. (Optional) Set a label that will be used when referring to this port.

```
(config)> serial port1 label label (config)>
```

6. Set the baud rate used by the device to which you want to connect:

```
(config)> serial port1 baudrate rate (config)>
```

7. Set the type of flow control used by the device to which you want to connect:

```
(config)> serial port1 flow value (config)>
```

where value is one of:

- none
- rts/cts
- xon/xoff

8. Set the amount of time that the active session can be idle before the session is disconnected:

(config)> serial port1 idle_timeout value (config)>

where *value* is any number of weeks, days, hours, minutes, or seconds, and takes the format *number*(w|d|h|m|s).

For example, to set idle_timeout to ten minutes, enter either 10m or 600s:

(config)> serial port1 idle_timeout 600s
(config)>

9. Set the local IP address assigned to this interface:

(config)> serial port1 ppp_dialin local_address *IPv4_address* (config)>

10. Set the IP address assigned to the remote peer:

(config)> serial port1 ppp_dialin remote_address *IPv4_address* (config)>

11. The default route is added for the PPP interface is disabled by default. To enable:

(config)> serial port1 ppp_dialin default_route true config)>

12. Set the authentication method used to authenticate the remote peer:

(config)> serial port1 ppp_dialin auth value (config)>

where value is one of:

- none: No authentication is required.
- auto: Attempt to authenticate using CHAP first, and then PAP.
- chap: Use Challenge Handshake Authentication Protocol (CHAP) to authenticate.
- pap: Use Password Authentication Protocol (PAP) to authenticate.

The default is none.

If auto, chap, or pap are set, set the username and password used to authenticate the remote peer:

(config)> serial port1 ppp_dialin username username (config)> serial port1 ppp_dialin password password (config)>

13. Set the priority of routes associated with this interface. If there are multiple active routes that match a destination, then the route with the lowest metric will be used.

(config)> serial port1 ppp_dialin metric int
(config)>

The default is 10.

- 14. Set the firewall zone for this interface. This can be used by packet filtering rules and access control lists to restrict network traffic on this interface.
 - Use the ?to determine available zones:

(config)> serial port1 ppp_dialin zone?

Zone: The firewall zone assigned to this interface. This can be used by packet filtering rules and access control lists to restrict network traffic on this interface.

Format:

any

dynamic_routes

edge

external

hotspot

internal

ipsec

loopback

setup

Default value: internal Current value: internal

(config)>

b. Set the zone:

(config)> serial port1 ppp_dialin zone zone (config)>

- 15. (Optional) Configure the serial port to use a custom PPP configuration file:
 - a. Enable the use of a custom PPP configuration file:

(config)> serial port1 ppp_dialin custom enable true (config)>

b. Enable **override** to override the default PPP configuration and only use the custom configuration file:

(config)> serial port1 ppp_dialin custom override true (config)>

If **override** is not enabled, the custom PPP configuration file is used in addition to the default configuration.

c. Paste or type the configuration data in the format of a pppd options file:

(config)> serial port1 ppp_dialin custom config_file data (config)>

where data are one or more pppd command line options. Because the options are passed directly to the pppd command line, they should all be entered on a single line. For example:

```
(config)> serial port1 ppp_dialin custom config_file "debug lcp-echo-interval 10 lcp-echo-failure 2" (config)>
```

- 16. (Optional) Configure a script that will be run to prepare the link before PPP negotiations are started:
 - a. Enable the use of a connection script.

```
(config)> serial port1 ppp_dialin connect enable true (config)>
```

b. Set the name of the script:

```
(config)> serial port1 ppp_dialin connect script filename (config)>
```

Scripts are located in the /etc/config/serial directory. An example script, windows_dun.sh is provided.

Example windows_dun.sh file:

```
#!/bin/sh
```

Example connect script for connecting from a PC using a Windows dial-up # networking connection with built-in standard 33600 bps modem driver and phone # number 123.

The shell's 'read' builtin breaks on newline, so translate incoming carriage-# return to newline, and outgoing newline to carriage-return-newline. stty icrnl onlcr opost

Read input from the serial port, one line at a time.
while read -r line; do
 case "\$line" in
 ATDT123)
 echo "CONNECT" # instruct the peer to start PPP
 exit 0 # start up the local PPP session
 ;;

AT*)
echo "OK" # passively accept any other AT command
;;

esac done

17. Save the configuration and apply the change.

```
(config)> save
Configuration saved.
>
```

18. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configure UDP serial mode for a serial port

The **UDP** serial mode option in the serial port configuration provides access to the serial port using UDP.


To change the configuration to match the serial configuration of the device to which you want to connect:



- 1. Log into the IX20 WebUI as a user with full Admin access rights.
- 2. On the menu, click **System**. Under **Configuration**, click **Serial Configuration**.



The **Serial Configuration** page is displayed.

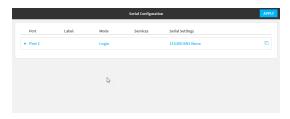

Note You can also configure the serial port by using **Device Configuration** > **Serial**. Changes made by using either **Device Configuration** or **Serial Configuration** will be reflected in both.

3. Click to expand the port that you want to configure for UDP serial mode.



The serial port is enabled by default. To disable, toggle off **Enable**.

4. For Mode, select UDP serial.


The default is Remote Access.

- 5. (Optional) For Label, enter a label that will be used when referring to this port.
- 6. Expand Serial Settings.



- a. For Baud rate, select the baud rate used by the device to which you want to connect.
- b. For **Data bits**, select the number of data bits used by the device to which you want to connect.
- c. For Parity, select the type of parity used by the device to which you want to connect.
- d. For **Stop bits**, select the number of stop bits used by the device to which you want to connect.
- e. For **Flow control**, select the type of flow control used by the device to which you want to connect.

7. Expand Data Framing Settings.

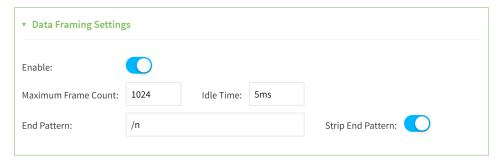

a. Click to expand Data Framing.

- i. Click **Enable** to enable the data framing feature.
- For Maximum Frame Count, enter the maximum size of the packet. The default is 1024.
- iii. For **Idle Time**, enter the length of time the device should wait before sending the packet.
- iv. For **End Pattern**, enter the end pattern. The packet is sent when this pattern is received from the serial port.
- v. Click **Strip End Pattern** if you want to remove the end pattern from the packet before it is sent.

8. Expand UDP Serial Settings.



a. For **Local port**, enter the UDP port. The default is 4001 or serial port 1, 4002 for serial port 2, etc.

- b. (Optional) For **Socket String ID**, enter a string that should be added at the beginning of each packet.
- c. For **Destinations**, you can configure the remote sites to which you want to send data. If you do not specify any destinations, the IX20 sends new data from the last IP address and port from which data was received. To add a destination:
 - i. Click Add Destination. A destination row is added.
 - ii. (Optional) For **Description**, enter a description of the destination.
 - iii. For **Hostname**, enter the host name or IP address of the remote site to which data should be sent.
- iv. For **Port**, enter the port number of the remote site to which data should be sent. You can also configure access control for the serial port.


To do this, you need to go to **Device Configuration**:

a. On the menu, click System. Under Configuration, click Device Configuration.



The Configuration window is displayed.

- b. Access the configuration for the appropriate type of service:
 - i. Click to expand Serial.
 - ii. Click to expand the appropriate serial port.
 - iii. Click to expand UDP serial.
 - iv. Click to expand Access Control List.

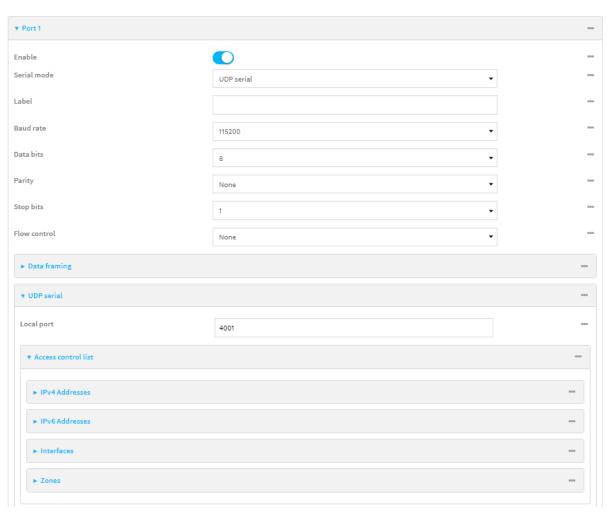

- To limit access to specified IPv4 addresses and networks:
 - i. Click IPv4 Addresses.
 - ii. For Add Address, click Yo
 - iii. For Address, enter the IPv4 address or network that can access the device's service-type. Allowed values are:
 - A single IP address or host name.
 - A network designation in CIDR notation, for example, 192.168.1.0/24.
 - any: No limit to IPv4 addresses that can access the service-type.
 - iv. Click Ybagain to list additional IP addresses or networks.
- To limit access to specified IPv6 addresses and networks:
 - i. Click IPv6 Addresses.
 - ii. For Add Address, click Yo
 - iii. For **Address**, enter the IPv6 address or network that can access the device's service-type. Allowed values are:

- A single IP address or host name.
- A network designation in CIDR notation, for example, 2001:db8::/48.
- any: No limit to IPv6 addresses that can access the service-type.
- iv. Click %again to list additional IP addresses or networks.
- To limit access to hosts connected through a specified interface on the device:
 - i. Click Interfaces.
 - ii. For Add Interface, click %
 - iii. For Interface, select the appropriate interface from the dropdown.
 - iv. Click Ybagain to allow access through additional interfaces.
- To limit access based on firewall zones:
 - i. Click **Zones**. By default, there are three firewall zones already configured: Internal, Edge, and IPsec.
 - ii. For Add Zone, click Yo
 - iii. For **Zone**, select the appropriate firewall zone from the dropdown. See Firewall configuration for information about firewall zones.
 - iv. Click Ybagain to allow access through additional firewall zones.
- 9. Expand Logging Settings to configure logging for this serial port.
 - a. To enable logging, click to toggle on **Enable**.
 - b. In the **Log file name** field, enter a descriptive name for the log file.
 - c. For **Log file size**, type the size of the log file. When the log file reaches the size limit, the current file is saved and a new file is created. The default is 65536 bytes.
 - d. From the **Type of data to log** list box, specify the type of data that should be saved.
 - Received
 - Transmitted
 - Both
 - Both with arrows. This is the default.
 - e. If you want to log the time at which date was received or transmitted, click the **Timestamps** toggle to **Enable**.
 - f. If you want to log the data as hexadecimal values, click the **Hexadecimal** toggle to **Enable**.

Note You can review the message log in the **Serial Port Log** page. See Review the serial port message log.

10. Click **Apply** to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2.	At the command line, type config to enter configuration mode:
	> config (config)>
3.	The serial port is enabled by default. To disable:
	(config)> serial port1 enable false (config)>
4.	Set the mode:
	(config)> serial port1 mode udp (config)>
5.	(Optional) Set a label that will be used when referring to this port.
	(config)>serial port1 label <i>label</i> (config)>
6.	Set the baud rate used by the device to which you want to connect:
	(config)>serial port1 label baudrate <i>rate</i> (config)>
7.	Set the number of data bits used by the device to which you want to connect:
	(config)>serial port1 label databits <i>bits</i> (config)>
8.	Set the type of parity used by the device to which you want to connect:
	(config)>serial port1 label parity parity (config)>
	Allowed values are:
	■ even
	■ odd
	none
	The default is none .
9.	Set the stop bits used by the device to which you want to connect:
	(config)>serial port1 label stopbits <i>bits</i> (config)>
10.	Set the type of flow control used by the device to which you want to connect:
	(config)>serial port1 label flow <i>type</i> (config)

Allowed values are:

- none
- rts/cts
- xon/xoff

The default is none.

- 11. (Optional) Configure data framing:
 - a. Enable data framing:

(config)>serial port1 framing enable true (config)

b. Set the maximum size of the packet:

(config)>serial port1 framing max_count int (config)

The default is 1024.

c. Set the length of time the device should wait before sending the packet:

(config)>serial port1 framing idle_time value (config)

where value is in milliseconds (ms) or seconds (s). The maximum value is 60s.

d. Set the end pattern. The packet is sent when this pattern is received from the serial port:

(config)>serial port1 framing end_pattern backslash-escaped-string (config)

e. Set the strip end pattern if you want to remove the end pattern from the packet before it is sent:

(config)>serial port1 framing strip_pattern true (config)

12. Set the UDP port:

(config)> serial port1 udp port port
(config)>

The default is 4001.

13. (Optional) Enter a string that should be added at the beginning of each packet:

(config)> serial port1 udp socketid *backslash-escaped-string* (config)>

14. Configure the remote sites to which you want to send data. If you do not specify any destinations, the IX20 send new data to the last hostname and port from which data was received. To add a destination:

i. Add a destination:

(config)> add serial port1 upd destination end (config serial port1 udp destination 0)>

ii. (Optional) Enter a description of the destination:

(config serial port1 udp destination 0)> description *string* (config serial port1 udp destination 0)>

iii. Set the host name or IP address of the remote site to which data should be sent:

(config serial port1 udp destination 0)>hostname *hostanme-or-IP-address* (config serial port1 udp destination 0)>

iv. Set the port number of the remote site to which data should be sent:

(config serial port1 udp destination 0)> port *port* (config serial port1 udp destination 0)>

- 15. (Optional) Configure access control:
 - a. Return to the root configuration prompt by typing ...:

(config serial port1 udp destination 0)> ... (config)>

- b. Set the Access Control List:
 - To limit access to specified IPv4 addresses and networks:

(config)> add serial port1 udp acl address end *value* (config)>

Where value can be:

- · A single IP address or host name.
- A network designation in CIDR notation, for example, 192.168.1.0/24.
- any: No limit to IPv4 addresses that can access the service-type.

Repeat this step to list additional IP addresses or networks.

To limit access to specified IPv6 addresses and networks:

(config)> add serial port1 udp acl address6 end *value* (config)>

Where value can be:

- A single IP address or host name.
- A network designation in CIDR notation, for example, 2001:db8::/48.
- any: No limit to IPv6 addresses that can access the service-type.

Repeat this step to list additional IP addresses or networks.

To limit access to hosts connected through a specified interface on the IX20 device:

(config)> add serial port1 udp acl interface end *value* (config)>

Where value is an interface defined on your device.

Display a list of available interfaces:

Use ... **network interface** ?to display interface information:

(config)> ... network interface ?

Interfaces

Additional Configuration

setupip Setup IP

setuplinklocalip Setup Link-local IP

eth1 ETH1 eth2 ETH2 loopback Loopback modem Modem

(config)>

Repeat this step to list additional interfaces.

To limit access based on firewall zones:

(config)> add serial port1 udp acl zone end *value* (config)>

Where value is a firewall zone defined on your device, or the **any** keyword.

Display a list of available firewall zones:

Type ... firewall zone ?at the config prompt:

(config)> ... firewall zone ?

Zones: A list of groups of network interfaces that can be referred to by packet

filtering rules and access control lists.

Additional Configuration

any

dynamic_routes

edge

external

hotspot

internal

ipsec

loopback

setup
(config)>

Repeat this step to include additional firewall zones.

To limit access to specified IPv4 addresses and networks:

(config)> add serial port1 udp acl address end value (config)>

Where value can be:

- · A single IP address or host name.
- A network designation in CIDR notation, for example, 192.168.1.0/24.
- any: No limit to IPv4 addresses that can access the service-type.

Repeat this step to list additional IP addresses or networks.

To limit access to specified IPv6 addresses and networks:

(config)> add serial port1 udp acl address6 end *value* (config)>

Where value can be:

- A single IP address or host name.
- A network designation in CIDR notation, for example, 2001:db8::/48.
- any: No limit to IPv6 addresses that can access the service-type.

Repeat this step to list additional IP addresses or networks.

To limit access to hosts connected through a specified interface on the IX20 device:

(config)> add serial port1 udp acl interface end *value* (config)>

Where value is an interface defined on your device.

Display a list of available interfaces:

Use ... network interface ?to display interface information:

(config)> ... network interface ?

Interfaces

Additional Configuration

setupip Setup IP

setuplinklocalip Setup Link-local IP

eth1 ETH1 eth2 ETH2 loopback Loopback modem Modem

(config)>

Repeat this step to list additional interfaces.

To limit access based on firewall zones:

(config)> add serial port1 udp acl zone end *value* (config)>

Where value is a firewall zone defined on your device, or the any keyword.

Display a list of available firewall zones:

Type ... firewall zone ?at the config prompt:

(config)> ... firewall zone?

Zones: A list of groups of network interfaces that can be referred to by packet filtering rules and access control lists.

Additional Configuration

any

dynamic_routes

edge

external

hotspot

internal

ipsec

loopback

setup

(config)>

Repeat this step to include additional firewall zones.

- 16. Configure serial port logging:
 - a. Enable serial port logging:

(config)>serial port1 logging enable true (config)>

b. Set the file name:

(config)>serial port1 logging filename *string* (config)>

c. Set the maximum allowed log size for the serial port log when starting the log:

(config)>serial port1 logging size *value* (config)>

where value is the size of the log file in bytes. The default is 65536.

d. Specify the data type:

(config)>serial port1 logging type *value* (config)>

where value is one of:

- received
- transmitted
- both
- arrows. This is the default.
- e. Log the time at which date was received or transmitted:

(config)>serial port1 logging hex true (config)>

f. Log data as hexadecimal values:

(config)>serial port1 logging timestamp true (config)>

17. Save the configuration and apply the change.

(config)> save
Configuration saved.
>

18. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configure Modem emulator mode for a serial port

Modem emulator mode allows the device to act as a dial-up modem emulator for handling incoming AT dial-ins.

To change the configuration to match the serial configuration of the device to which you want to connect:



- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

- Glick to expand the name of the port that you want to configure, for example, Port 1.
 The serial port is enabled by default. To disable, toggle off Enable.
- 4. For **Mode**, select **Modem emulator**. The default is **Remote Access**.
- 5. (Optional) For Label, enter a label that will be used when referring to this port.
- 6. For **Baud rate**, select the baud rate used by the device to which you want to connect. The default is **9600**.
- 7. For **Data bits**, select the number of data bits used by the device to which you want to connect. The default is **8**.
- 8. For **Parity**, select the type of parity used by the device to which you want to connect. The default is **None**.
- For **Stop bits**, select the number of stop bits used by the device to which you want to connect. The default is 1
- For Flow control, select the type of flow control used by the device to which you want to connect. The default is None.
- For Idle timeout, type the amount of time that the active session can be idle before the session is disconnected.
 - Allowed values are any number of weeks, days, hours, minutes, or seconds, and take the format *number*{w|d|h|m|s}.
 - For example, to set Idle timeout to ten minutes, enter 10m or 600s.
- 12. For Escape character, type the character to use in the escape sequence. Enter this character three times, followed by the escape delay and then an AT command to switch from data mode to command mode. The default is the plus sign (+).
- 13. For **Escape delay**, type the delay between the escape sequence and an AT command to switch from data mode to command mode. The default is **1s**.
- 14. For **Auto-answer rings**, type the number of rings to wait before auto-answering. Enter **0** (zero) to disable auto-answering.
- 15. **Command echo** is enabled by default. Commands sent to the port are echoed back to the user. Select to disable this feature.
- 16. For **Result codes**, select the type of result code that are displayed as responses to commands. Options are:
 - None: No result codes are displayed.
 - Numeric: Numeric result codes are displayed.
 - Verbose: Result codes are displayed in English, for example: OK, ERROR, CONNECT. This is the default.

- (Optional) Click to expand Phonebook and create dial strings that can be used to connect to remote servers.
 - a. Click %to add a phone book entry.
 - b. For **Label**, type a descriptive name for the phone book entry.
 - c. (Required) For **Dialstring**, type the string to dial to connect to the remote server.
 - d. (Required) For Connection destination, type the hostname or IP address of the remote server
 - e. (Required) For Connection port, type the TCP port of the remote server. Minimum is 1 and maximum is 65535.
- 18. Expand **TCP connection** to configure TCP connection for this serial port.
 - a. To enable a TCP connection, click to toggle on **Enable**.
 - b. For **Port**, type the TCP port for this service. The default is **4001**.
 - c. Expand Access control list to create a list of IP addresses, interfaces, and firewall zones from which this service may be accessed.
 - To limit access to specified IPv4 addresses and networks:
 - i. Click IPv4 Addresses.
 - ii. For Add Address, click Yo
 - iii. For Address, enter the IPv4 address or network that can access the device's service-type. Allowed values are:
 - A single IP address or host name.
 - A network designation in CIDR notation, for example, 192.168.1.0/24.
 - any: No limit to IPv4 addresses that can access the service-type.
 - iv. Click Ybagain to list additional IP addresses or networks.
 - To limit access to specified IPv6 addresses and networks:
 - i. Click IPv6 Addresses.
 - ii. For Add Address, click Yo
 - iii. For **Address**, enter the IPv6 address or network that can access the device's service-type. Allowed values are:
 - · A single IP address or host name.
 - A network designation in CIDR notation, for example, 2001:db8::/48.
 - any: No limit to IPv6 addresses that can access the service-type.
 - iv. Click % again to list additional IP addresses or networks.
 - To limit access to hosts connected through a specified interface on the device:
 - i. Click Interfaces.
 - ii. For Add Interface, click Yo
 - iii. For Interface, select the appropriate interface from the dropdown.
 - iv. Click % again to allow access through additional interfaces.
 - To limit access based on firewall zones:
 - i. Click **Zones**. By default, there are three firewall zones already configured: Internal, Edge, and IPsec.
 - ii. For Add Zone, click Yo

- iii. For **Zone**, select the appropriate firewall zone from the dropdown.See Firewall configuration for information about firewall zones.
- iv. Click Ybagain to allow access through additional firewall zones.
- d. Toggle on **Enable mDNS** to enable Multicast DNS (mDNS) reporting for this service. This feature is disabled by default.
- 19. Expand **Logging Settings** to configure logging for this serial port.
 - a. To enable logging, click to toggle on Enable.
 - b. In the **Log file name** field, enter a descriptive name for the log file.
 - c. For **Log file size**, type the size of the log file. When the log file reaches the size limit, the current file is saved and a new file is created. The default is 65536 bytes.
 - d. From the **Type of data to log** list box, specify the type of data that should be saved.
 - Received
 - Transmitted
 - Both
 - Both with arrows. This is the default.
 - e. If you want to log the time at which date was received or transmitted, click the **Timestamps** toggle to **Enable**.
 - f. If you want to log the data as hexadecimal values, click the **Hexadecimal** toggle to **Enable**.

Note You can review the message log in the **Serial Port Log** page. See Review the serial port message log.

20. Click **Apply** to save the configuration and apply the change.

Configure Modbus mode for a serial port

Modbus mode allows you to use the serial port for Modbus. See Modbus gateway.


To change the configuration to match the serial configuration of the device to which you want to connect:



- 1. Log into the IX20 WebUI as a user with full Admin access rights.
- 2. On the menu, click **System**. Under **Configuration**, click **Serial Configuration**.



The **Serial Configuration** page is displayed.

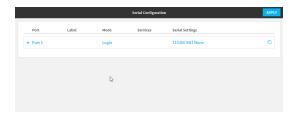

Note You can also configure the serial port by using **Device Configuration** > **Serial**. Changes made by using either **Device Configuration** or **Serial Configuration** will be reflected in both.

3. Click the name of the port that you want to configure.



The serial port is enabled by default. To disable, toggle off **Enable**.

- 4. For Mode, select Modbus.
- 5. (Optional) For **Label**, enter a label that will be used when referring to this port.
- 6. Expand Serial Settings.

The entries in the following fields must match the information for the power controller. Refer to your power controller manual for the correct entries.

- a. **Baud rate**: For **Baud rate**, select the baud rate used by the device to which you want to connect. The default is **9600**.
- b. **Data bits**: For **Data bits**, select the number of data bits used by the device to which you want to connect. The default is **8**.
- c. **Parity**: For **Parity**, select the type of parity used by the device to which you want to connect. The default is **None**.
- d. **Stop bits**: For **Stop bits**, select the number of stop bits used by the device to which you want to connect. The default is **1**.
- e. **Flow control**: For **Flow control**, select the type of flow control used by the device to which you want to connect. The default is **None**.
- 7. Click **Apply** to save the configuration and apply the change.

Command line

Select the device in Remote Manager and click Actions > Open Console, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2.	At the command line, type config to enter configuration mode:	
	> config (config)>	
3.	The serial port is enabled by default. To disable:	
	(config)> serial port1 enable false (config)>	
4.	Set the mode:	
	(config)> serial port1 mode modbus (config)>	
5.	(Optional) Set a label that will be used when referring to this port.	
	(config)>path-paramlabel label (config)>	
6.	Set the baud rate used by the device to which you want to connect:	
	(config)> serial port1 baudrate <i>rate</i> (config)>	
7.	Set the number of data bits used by the device to which you want to connect:	
	(config)> serial port1 databits <i>bits</i> (config)>	
8.	Set the type of parity used by the device to which you want to connect:	
	(config)> serial port1 parity parity (config)>	
	Allowed values are:	
	■ even	
	■ odd	
	• none	
_	The default is none .	
9.	Set the stop bits used by the device to which you want to connect:	
	(config)> serial port1 stopbits <i>bits</i> (config)>	
10.	Set the type of flow control used by the device to which you want to connect:	
	(config)> serial port1 flow <i>value</i> (config)>	

where value is one of:

- none
- rts/cts
- xon/xoff
- 11. Save the configuration and apply the change.

(config)> save Configuration saved.

>

Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configure RealPort mode using the Digi Navigator

You can use RealPort mode to enable communication between a device and your computer. From the **Digi Navigator**, you can easily configure your device for RealPort, and then install and configure RealPort on your computer.

With Digi Navigator, you can set serial ports on the device to RealPort mode as needed, and then also enable the RealPort service. The COM ports on your laptop are also configured. These processes ensure that RealPort is configured on the device and on your computer.

Note You must configure the device for RealPort before you install and configure RealPort on your computer. The RealPort configuration on the device includes enabling RealPort service on the device. When you configure RealPort on your computer, it must connect to the RealPort service on the device.

Digi Navigator installation

The **Digi Navigator** can only be installed on a computer with a Windows OS. If you are using Linux, you can manually install and configure RealPort without **Digi Navigator**. For the Linux installation process, refer to the Get started: Install RealPort for LINUX in the **RealPort Installation User's Guide**.

Installation and configuration process

These steps explain how to install and configure the **Digi Navigator**.

Step 1: Install the Digi Navigator

Step 2: Configure Real Port on a Digi device from the Digi Navigator

Step 3: Install and configure RealPort on your computer

Note If you have Digi Navigator 1.0 already installed, Digi recommends that you uninstall it, as both versions of the Digi Navigator are not needed. See Uninstall Digi Navigator 1.0.

Digi Navigator features

- Digi Navigator application features
- Filter devices for display in the Digi Navigator
 - Filter the device list by service option
 - Filter the device list for auto-discovered devices
 - Filter the device list by RealPort configuration status
- Specify the IP address to discover a Digi device
- Set an IP address for a device
- Access a device's web UI from the Digi Navigator
- Manage the list of devices configured for RealPort
 - · Refresh the RealPort device list
 - Review the COM ports configured for RealPort
 - · Uninstall the RealPort device configuration from your computer
- Reconfigure RealPort on a device
- Generate a device setup script
- Review Digi Navigator version information
- Uninstall Digi Navigator 1.0

Install the Digi Navigator

This section explains how to download and install the **Digi Navigator** application.

Note Microsoft Visual C++ is required for RealPort and is installed by default during the Digi Navigator install process.


1. Navigate to the Digi Navigator support page.

Note The **Digi Navigator** application can also be downloaded from your device's product support page.


- Scroll down to the Product Resources tab, and in the Drivers & Patches section, click Digi Navigator.
- From the list box, select the appropriate Microsoft Windows option from the list of driver options.
- 4. Click the download link to download the Digi Navigator application.
- 5. When the download is complete, click on the downloaded .exe file. The **Digi Navigator Setup** wizard displays.
- 6. In the **License Agreement** page, review the agreement and select the **I accept the agreement** option.




- 7. Click Next. The Select Destination Location page displays.
 - You can leave the installation location as the default, or click **Browse** to select a different location.

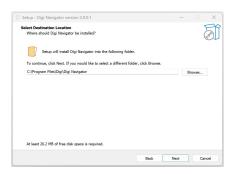

- 8. Click Next. The Select Additional Tasks page displays.
 - If you want to create a shortcut for the Digi Navigator, select the Create a desktop shortcut option.

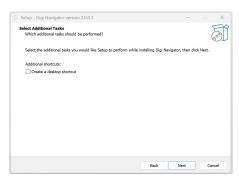


9. Click Next. The Ready to Install page displays.

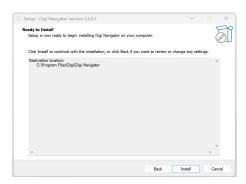

 Click Install to start the installation. When complete, the Completing the Digi Navigator Setup Wizard page displays.

The **Launch Digi Navigator** option is selected by default. De-select this option if you don't want the **Digi Navigator** to automatically launch each time you boot your computer.

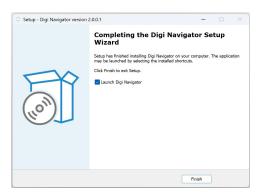

11. Click **Finish** to complete the installation process. If the **Launch Digi Navigator** option was selected, the Digi Navigator launches.

NEXT STEP: Configure RealPort on a device. See Configure RealPort on a Digi device from the Digi Navigator.

Configure RealPort on a Digi device from the Digi Navigator

You can configure the IX20 to communicate with your computer using RealPort. In this step, you can select which serial ports on the device should be set to RealPort mode, and the RealPort service is enabled for the device.

Configuring RealPort on your device is the first step in a two-step process. To ensure communication between the device and your laptop, you must also configure your computer for RealPort after the first step is completed.

Note You can also manually configure the device for RealPort by logging into the device's web UI. See Advanced RealPort configuration without using the Digi Navigator.

1. Make sure the IX20 is powered and connected your local network or computer with an Ethernet cable.

- 2. Launch the Digi Navigator.
- A list of the devices you have manually added displays. You can add additional devices if needed.
- Find the device that you want to configure and expand it to display the IP addresses for the device.
- 5. Use one of the following methods to begin configuring RealPort on the device:
 - Configuration pane: Click on the IP address to display options in the Configuration pane. Click Configure Device for RealPort. The Enter Device Credentials page displays.
 - Shortcut menu: Right-click on an IP address to display the shortcut menu, and click
 Configure Device For RealPort. The Enter Device Credentials page displays.
- 6. In the Enter Device Credentials page, enter the device's default user name and password in the Username and Password fields. The default user name is admin and the default password is the unique password printed on the label packaged with your device. If the defaults do not work, they may have been changed. Verify with your system administrator.
- 7. Click OK
- 8. When RealPort configuration is complete, the Success message displays.



- 9. Click **OK** to close the message.
- (Optional) If desired, you can verify the RealPort configuration. See Configure the serial port for RealPort mode and Configure the RealPort service.

NEXT STEP: Install and configure RealPort on your computer. See Install and configure RealPort on your computer.

Install and configure RealPort on your computer

You can configure your computer to communicate with the IX20 using RealPort. In this step, RealPort is installed on your computer and communication with the device is configured.

Configuring RealPort on your device is the second step in a two-step process. To ensure communication between the device and your laptop, you must also have configured your device for RealPort. See Configure RealPort on a Digi device from the Digi Navigator.


Note You can also manually install and configure RealPort on your computer. See Advanced RealPort configuration without using the Digi Navigator.

- 1. Make sure the IX20 is powered and connected your local network or computer with an Ethernet cable.
- Launch the Digi Navigator.
- 3. A list of the devices you have manually added displays. You can add additional devices if needed.
- 4. Find the device that you want to access and expand it to display the IP addresses for the device.

- 5. Use one of the following methods to begin configuring RealPort on your computer:
 - Configuration pane: Click on the IP address to display options in the Configuration pane. Click Configure this PC for RealPort. The Select RealPort Features dialog displays.
 - Shortcut menu: Right-click on an IP address to display the shortcut menu, and click
 Configure this PC for RealPort. The Select RealPort Features dialog displays.
- 6. Configure features in the **Select RealPort Features** dialog.



- a. Enable Encryption to enable encryption of data. This is enabled by default.
- b. Enable **Authentication** to configure the authentication method the RealPort server uses to authenticate clients. The **Authentication Configuration** dialog displays.
 - From the Method list box, select the Shared Secret SHA256 option.
 - For Shared Secret, enter the authentication password to ensure secure communication. Leave this field blank to disable authentication.

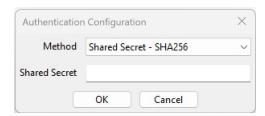

- c. Click OK
- 7. The **Select Ports** dialog displays. By default, all of the ports on the device are selected to be configured for RealPort. De-select the ports that you don't want to configure for RealPort.
- 8. Click OK. The COM Selection dialog displays.
- From the Select starting COM list box, select the first COM port that should be configured for Real Port. The first available COM port is selected by default. The number of COM ports configured matches the number of serial ports on the device.
- 10. Click **OK**. A series of progress messages displays.
- When the configuration is complete, a message displays.




- Click OK to close the message.
- 13. (Optional) After RealPort configuration on your laptop is complete, you can open the Windows **Properties** dialog for your computer.
 - a. Launch the **Digi Navigator** if it is not currently open. A list of devices that have RealPort enabled and configured displays in the **Installed RealPort Devices** section at the bottom

of the screen.

b. Double-click on a device name. The Windows **Properties** dialog for your computer displays. and display the COM ports on your computer that are configured for RealPort. For more information, see Review the COM ports configured for RealPort.

Digi Navigator application features

All features of the **Digi Navigator** are available from the main application screen.

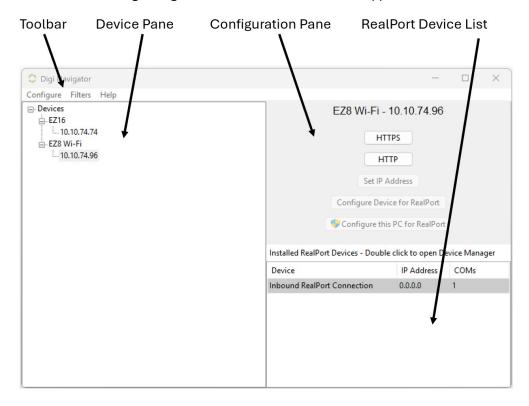

Toolbar

The toolbar menus are used to configure Digi Navigator.

Menu item	Sub-menu item	Description
Configure	Known Devices	If a Digi device is not on the same network as your computer or the device is undiscoverable, you can manually add the device using that device's IP address. Specify the IP address to discover a Digi device
	Refresh Installed RealPort Device List	Use the Refresh Installed RealPort Device List feature to update the list of the Digi devices that have RealPort enabled and configured. The list displays in the RealPort Device List pane in the Digi Navigator.

Menu item	Sub-menu item	Description
		 Refresh the RealPort device list
	Generate Device Setup Script	Use the Generate Device Setup Script feature to generate a script of the RealPort configuration of the local PC. The script can be saved and used as a backup. The script is generated as a .cmd file. Generate a device setup script
Filters	Services	You can limit the service options that display in the Configuration pane in the Digi Navigator . You can click on a service option in the Configuration pane to use that service to log in to the device. ■ Filter the device list by service option
	IP Addresses	Not applicable for devices that do not support autodiscovery with Digi Navigator.
	Devices > Supported Services > RealPort	You can use the RealPort option to filter which devices are included in the device list, depending on the RealPort configuration status. ■ Filter the device list by RealPort configuration status
	Devices > Discovered Devices	You can use the Discovered Devices option to filter which devices are included in the device list, depending on whether the device was auto-discovered. • Filter the device list for auto-discovered devices
Help	About	Review the Digi Navigator version information. Review Digi Navigator version information

Device pane

A list of the discovered devices and those added to the known device list display in the Device pane. Expand each device to display the IP addresses associated with each device.

Filter the device list

You can apply filters to limit which devices display in the pane.

- Filter the device list by service option
- Filter the device list for auto-discovered devices
- Filter the device list by RealPort configuration status

Display configuration options for a device in the Configuration page

Expand a device and click on an IP address for the device to display related configurations options in the Configuration pane.

Shortcut menu

You can right-click on the IP address for a device to display the shortcut menu options. The options are an easy way to use the features from the toolbar.

Item	Description
Add to Known Devices	If a Digi device is not on the same network as your computer or the device is undiscoverable, you can manually add the device using that device's IP address.
	 Specify the IP address to discover a Digi device
HTTPS	You can use the HTTPS menu option to access the device's web UI using the HTTPS service.
	 Access a device's web UI from the Digi Navigator
НТТР	You can choose the HTTP menu option to access the device's web UI using the HTTP service.
	 Access a device's web UI from the Digi Navigator
SSH	You can use the SSH menu option to access the device's web UI using the SSH service.
	 Access a device's web UI from the Digi Navigator
Set IP Address	You can reconfigure the IP address of a device to a DHCP address or a specified static address.
	 Set an IP address for a device
Configure Device for	You can use the Configure Device for RealPort menu option to configure RealPort on the device.
RealPort	 Configure RealPort on a Digi device from the Digi Navigator
	■ Reconfigure RealPort on a device
Configure this PC for	Use the Configure this PC for RealPort menu option to configure RealPort on your computer so that it can communicate with the device.
RealPort	■ Install and configure RealPort on your computer

Configuration pane

You can use the buttons in the Configuration pane to connect to a device's web UI, and configure Real Port on your device and on your computer.

Item	Description
HTTPS	You can click HTTPS to access the device's web UI using the HTTPS service.
	 Access a device's web UI from the Digi Navigator
HTTP	You can click HTTP to access the device's web UI using the HTTP service.
	 Access a device's web UI from the Digi Navigator
SSH You can click SSH to access the device's web UI using the SSH serv	
	 Access a device's web UI from the Digi Navigator

Item	Description
Set IP Address	You can reconfigure the IP address of a device to a DHCP address or a specified static address.
	Set an IP address for a device
Configure Device	Click Configure Device for RealPort to configure RealPort on the device.
for RealPort	Configure RealPort on a Digi device from the Digi Navigator
	Reconfigure RealPort on a device
Configure this PC for RealPort	Click Configure this PC for RealPort to configure RealPort on your computer so that it can communicate with the device.
	■ Install and configure RealPort on your computer

RealPort device list pane

The RealPort device list displays all of the devices in Digi Navigator that are configured for RealPort.

Item	Description
Open Device Manager	Oick a name in the RealPort device list to open the Windows Properties dialog on your computer to access the configured COM ports. The number of COM ports configured for RealPort matches the number of serial ports on the device. Review the COM ports configured for RealPort
Uninstall Device	You can uninstall RealPort from the device and uninstall the RealPort configuration for this device from your computer if needed, using the Uninstall Device shortcut menu option.
	■ Uninstall the RealPort device configuration from your computer

Filter the device list displayed in the Digi Navigator

You can apply filters to limit which devices display in the device list.

Filter the device list by service option

You can filter the device list that displays in the Device page by service. This also determines which service buttons display in the Configuration pane.

The Digi Navigator uses the HTTPS service by default to discover the IP addresses for the Digi devices connected to your network. Other services can be used, if needed.

- 1. Make sure **Digi Navigator** is installed and the IX20 is powered and connected to your local network or computer with an Ethernet cable.
- 2. Launch the Digi Navigator.
- Qick Filters > Services from the toolbar to display the service options: HTTPS, HTTP, and SSH. To ensure that you can communicate with your device, at least one option should be selected.
- 4. Qick on service option to select it or deselect it. A check mark displays next to a selected option.

The selected options are included in the configuration pane. You can click on a service option in the configuration pane to use that service to log in to the device.

Filter the device list for auto-discovered devices

You can use the **Discovered Devices** option to filter which devices are included in the device list, depending on whether the device was auto-discovered or is a device that was manually added to the known device list.

- 1. Make sure **Digi Navigator** is installed and the IX20 is powered and connected to your local network or to your computer with an Ethernet cable.
- 2. Launch the Digi Navigator.
- From the toolbar, click Filters > Devices. Use the Discovered Devices menu option to filter the devices.
 - Selected: Both known and discovered devices are listed.
 - Not selected: Only known devices are listed.

Filter the device list by RealPort configuration status

You can use the **RealPort** option to filter which devices are included in the device list, depending on the RealPort configuration status.

- 1. Make sure **Digi Navigator** is installed and the IX20 is powered and connected to your local network or to your computer with an Ethernet cable.
- 2. Launch the Digi Navigator.
- 3. From the toolbar, click **Filters > Devices > Supported Services**. Use the **RealPort** menu option to filter the devices.
 - **Selected**: Only discovered devices that are configured for the RealPort service display. Known devices are included if the device is configured for RealPort.
 - Not selected: All discovered devices on your network and all known devices display, regardless of RealPort service configuration status.

Specify the IP address to discover a Digi device

You can manually add a device to the known device list, using the device's IP address. This feature is useful if a device is not on the same network as your computer or the device is undiscoverable.

Before you begin

To add a device, you will need:

- The device's IP address.
- The user name and password for the device.

To add a device to the known device list:

- 1. Make sure **Digi Navigator** is installed and the IX20 is powered and connected to your local network or to your computer with an Ethernet cable.
- 2. Launch the Digi Navigator.
- 3. Click Configure > Known Devices.
- 4. Click Add. The New Device dialog displays.
 - a. In the Name field, enter a descriptive name for the device.
 - b. Click Add.
 - c. In the IP Addresses field, enter the IP address of the device.
 If you want to enter more than one IP address for this device, click Add and enter another IP address.
 - d. Click the buttons for the services that you want to use to communicate with the device. The default port number for each service can be changed. After a service has been selected, you can click the button for the service to de-select it.

To ensure that you can communicate with your device, at least one option should be selected.

- HTTPS: The HTTPS service is selected by default. The default port number is 443.
- HTTP: The default port number is 80.
- **SSH**: The default port number is **22**.
- RealPort: Click RealPort to enable the RealPort service for the device. The default port number is 1027.
- Click OK. You are returned to the Known Devices dialog.
- 6. Click the X in the upper right corner to close the dialog.
- 7. The device you just added displays in the device list.

Set an IP address for a device

You can reconfigure the IP address of a device to a DHCP address or a specified static address.


Note This feature can be used with only discovered devices. It is not enabled for known devices.

- 1. Make sure the IX20 is powered and connected your local network or computer with an Ethernet cable.
- 2. Launch the Digi Navigator.
- A list of the devices you have manually added displays. You can add additional devices if needed.
- 4. Find the device that you want to configure and expand it to display the IP addresses for the device.
- 5. Use one of the following methods to begin reconfiguring the IP address:

- Configuration pane: Click on the IP address to display options in the Configuration pane. Click Set IP Address. The IP Address Configuration dialog displays.
- Shortcut menu: Right-click on an IP address to display the shortcut menu, and click
 Set IP Address. The IP Address Configuration dialog displays.
- 6. In the **IP Address Configuration** dialog, enter the required information:
 - Type: From the Type list box, select an option: DHCP or Static IP address.
 - Address: Enter the IP address.
 - Default gateway: Enter the default gateway that should be used.
- 7. Click OK

Manage the list of devices configured for RealPort

After you have enabled and configured RealPort on at least one Digi device, a list of configured devices displays at the bottom of the **Digi Navigator**. You can refresh the list and easily access the COM port configuration on your computer.

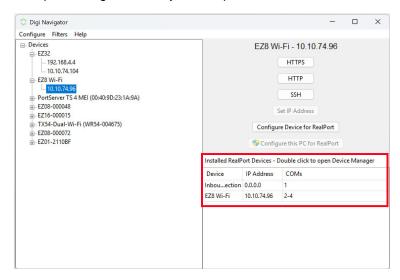


- Refresh: From the toolbar, choose Configure > Refresh Installed RealPort Device List to update the list of IX20 devices that have RealPort enabled and configured.
- **Device Manager**: Double-click on a device name in the list to open the Windows **Properties** dialog on your computer to access the configured COM ports. The number of COM ports configured for RealPort matches the number of serial ports on the device.
- Uninstall the RealPort configuration on your computer: You can use the Uninstall Device option to remove the RealPort device configuration on your computer for a selected device. This ensures that your computer is not able to connect to the selected device.

Refresh the RealPort device list

You can refresh the list of the Digi devices that have RealPort enabled and configured. The list displays in the **Installed RealPort Devices** pane in the Digi Navigator.

- 1. Make sure **Digi Navigator** is installed and the IX20 is powered and connected to your local network or to your computer with an Ethernet cable.
- 2. Launch the Digi Navigator.

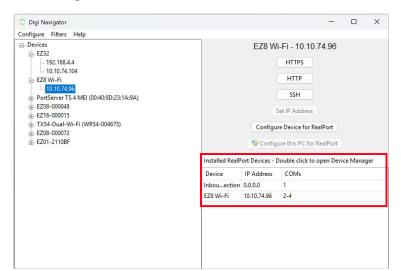


3. Click Configure > Refresh Installed RealPort Device List to refresh the list.

Review the COM ports configured for RealPort

You can open the Windows **Properties** dialog on your computer to access the configured COM ports. The number of COM ports configured for RealPort matches the number of serial ports on the device.

- 1. Make sure **Digi Navigator** is installed and the IX20 is powered and connected to your local network or to your computer with an Ethernet cable.
- 2. Launch the Digi Navigator.
- In the RealPort list section of the Digi Navigator, double-click on a name in the **Device** column.

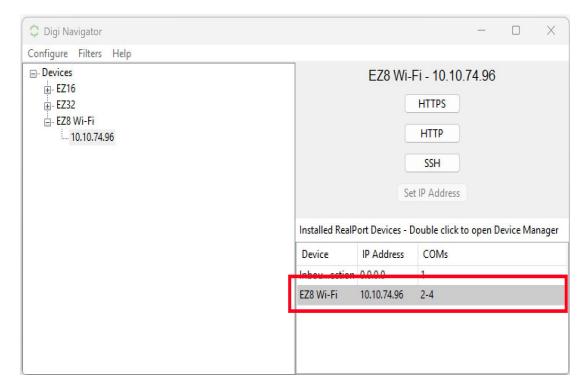


- 4. The standard Windows Device Properties dialog opens.
 - a. Click the General tab.
 - b. Click Change settings.
 - c. Click the Advanced tab.
 - d. Click **Properties**. The COM ports display.
 - e. Click OK or Cancel to close the dialog.

Uninstall the RealPort device configuration from your computer

You can use the **Uninstall Device** option to remove the RealPort device configuration on your computer for a selected device. This ensures that your computer is not able to connect to the selected device.

- 1. Make sure **Digi Navigator** is installed and the IX20 is powered and connected to your local network or to your computer with an Ethernet cable.
- 2. Launch the Digi Navigator.
- 3. In the RealPort list section of the **Digi Navigator**, find the device that you want to uninstall.

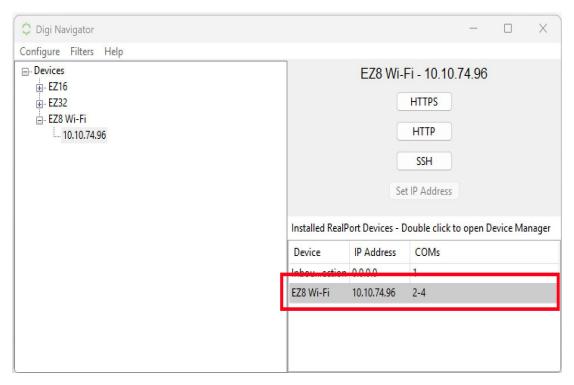

- 4. Right-click on an IP address in the list to display the shortcut menu.
- Glick **Uninstall Device** to remove the RealPort configuration for this device from your computer.
- 6. When the process is complete, a **Success** message displays in a confirmation dialog.
- 7. Click **OK** to close the dialog.

Reconfigure RealPort on a device

After you have initially configured RealPort on a device and established a connection with your computer, you can reconfigure RealPort on the device as needed.

Note If you reconfigure RealPort on a device, you do not need to reconfigure your computer.

- 1. Make sure the IX20 is powered and connected your local network or computer with an Ethernet cable.
- 2. Launch the **Digi Navigator**.
- A list of the devices you have manually added displays. You can add additional devices if needed.
- Find the device that you want to configure and expand it to display the IP addresses for the device.
- 5. Use one of the following methods to begin configuring RealPort on the device:
 - Configuration pane: Click on the IP address to display options in the Configuration pane. Click Configure Device for RealPort. The Enter Device Credentials page displays.
 - Shortcut menu: Right-click on an IP address to display the shortcut menu, and click Configure Device For RealPort. The Enter Device Credentials page displays.
- 6. In the **Enter Device Credentials** page, enter the device's default user name and password in the **Username** and **Password** fields. The default user name is **admin** and the default password is the unique password printed on the label packaged with your device. If the defaults do not work, they may have been changed. Verify with your system administrator.
- Click **OK**.
- 8. When RealPort configuration is complete, the **Success** message displays.



- Glick **OK** to close the message.
- (Optional) If desired, you can verify the RealPort configuration. See Configure the serial port for RealPort mode and Configure the RealPort service.

Access a device's web UI from the Digi Navigator

You can access the device's web UI and log in from the Configuration pane in the **Digi Navigator**, or from the shortcut menu for the device's IP address.

The service options are available in the Configuration pane or the shortcut menu if these conditions are met:

- The service button must be included in the Services filter. See Filter the device list by service option.
- At least one device must be configured for the service. For known devices, see Specify the IP address to discover a Digi device.

To access a device's web UI:

- 1. Make sure **Digi Navigator** is installed and the IX20 is powered and connected to your local network or to your computer with an Ethernet cable.
- 2. Launch the **Digi Navigator**.

- 3. A list of the devices you have manually added displays. You can add additional devices if needed.
- Find the device that you want to access and expand it to display the IP addresses for the device.
- 5. Launch the web UI for the device using one of the following methods:
 - Configuration pane: Qick on an IP address for the device to display the configured service button(s) in the Configuration pane. Qick on any of the active buttons (HTTP, HTTPS, SSH) to access the web UI and log in.
 - Shortcut menu: Right-click on the IP address for a device to display the shortcut menu. Click on any of the service options (HTTP, HTTPS, SSH) to access the web UI and log in.

Generate a device setup script

You can generate a script of the RealPort configuration of the local PC. The script can be saved and used as a backup. The script is generated as a .cmd file.

- 1. Make sure **Digi Navigator** is installed and the IX20 is powered and connected to your local network or to your computer with an Ethernet cable.
- 2. Launch the Digi Navigator.
- Click Configure > Generate Device Setup Script. The standard Windows dialog to name a file displays.
 - a. Select a location and enter a descriptive name.
 - b. Click Save.
- 4. The script is generated, a confirmation dialog displays when complete.
- 5. Click **OK** to close the dialog.

Review Digi Navigator version information

You can review the Digi Navigator version information.

- 1. Make sure **Digi Navigator** is installed and the IX20 is powered and connected to your local network or to your computer with an Ethernet cable.
- 2. Launch the Digi Navigator.
- 3. From the toolbar, click **Help > About**. The **About Digi Navigator** dialog displays.
- 4. Review the information.
- 5. Click OK to close the dialog.

Uninstall Digi Navigator 1.0

If you have Digi Navigator 1.0 installed, Digi recommends that you uninstall it, as both versions of the Digi Navigator are not needed.

- 1. If Digi Navigator 1.0 is open, close it before you begin.
- 2. Launch the Windows Control Panel.
- 3. Click the **Programs** option.
- 4. Click Uninstall a Program.
- 5. Scroll through the list of programs to find Digi Navigator 1.x.

- 6. Right-click on the program name to display the menu.
- 7. Click Uninstall. The Digi Navigator Uninstall wizard displays.
- 8. Click **Next**. The uninstall process begins.

Note If Digi Navigator 1.0 is open, a confirmation dialog with the message "Digi Navigator is running. Click OK to close it." displays. Click OK to continue with the uninstall process.

- 9. When complete, the **Completing Digi Navigator Uninstall** page displays.
- 10. Click Finish to complete the uninstall process.

Advanced RealPort configuration without using the Digi Navigator

You can configure the IX20 to communicate with your computer using RealPort.

Windows Operating System

This method can be used if your computer has a Windows OS installed and you choose not to use the Digi Navigator to discover devices and configure RealPort.

To complete the RealPort configuration process for Windows:

- Step 1: Download the RealPort driver
- Step 2: Configure RealPort on your computer
- Step 3: Configure the serial port for RealPort mode
- Step 4: Configure the RealPort service

Linux Operating System

To complete the RealPort configuration process for Linux OS:

Step 1: Download the RealPort driver

Step 2: To complete the RealPort configuration process, refer to the Get started: Install RealPort for LINUX section in the **RealPort Installation User's Guide**.

Download the RealPort driver

The first step is to download the RealPort application and save it to a location that you can easily access.

- Navigate to https://hub.digi.com/support/products/realport/.
- Scroll down to the Product Resources tab, and in the Drivers & Patches section, click RealPort Driver.
- 3. From the list box, select the appropriate Microsoft Windows option from the list of driver options. The associated RealPort for Windows option displays.
- 4. Click the download link.
- 5. When the download is complete, navigate to your download folder. The application is in a .zip file.
- 6. You can leave the .zip file in the download folder, or copy the .zip file and paste it to a location that you can easily access.

Configure RealPort on your computer

RealPort must be installed on yourcomputer, and then RealPort configured for the IP address of each device that should be allowed a RealPort connection.

You will run the RealPort Wizard for each device that you want to configure. RealPort is installed on your laptop the first time that you run the wizard. The installation process is ignored each subsequent time that you run the wizard.

Before you begin

- Download RealPort onto your laptop, and make note of the download location. See
 Download the RealPort driver.
- Have the IP address of the device that you want to configure.


Step 1: Implement RealPort

- 1. Navigate to the downloaded Realport .zip file.
- 2. Open the .zip file.
- Gick on setup.exe to launch the RealPort wizard. The Welcome to the Digi RealPort Setup Wizard screen displays.
- 4. If this is not the first time you have run the wizard, select the **Add a New Device** option. If this is the first time running the wizard, no options are available on the screen.
- 5. Click Next. The Select Device screen displays.
 - a. From the list of device options, select the **Device not listed** option.
- 6. Click Next. The Describe the Device screen displays.
 - a. In the **Device Model Name** field, enter a descriptive name for the device.
 - b. In the **Network Settings** section, select the **IP** option and enter the IP address in the associated field.
 - c. In the **COM Port Settings** section, from the **No. Ports** list box, select the number of physical serial ports that you want to configure. You can specify from 1 to the maximum number of ports available on the device.
 - d. In the **Device Features** section, select both the **Encryption** and **Authentication** options.
- 7. Click **Finish** to complete the process and close the wizard.

Note If this is the first time that you have run the RealPort wizard, Realport is installed on your laptop. If it is not the first time or if RealPort is already installed, it is not installed again.

Step 2: Configure a RealPort connection on your laptop for your device

- Follow the standard Windows process to access the **Device Manager** from your computer's operating system.
- 2. Select Multi-port Serial Adapters.
- 3. Right-click on your device. Click the **Properties** menu option. The **Properties** dialog appears.
- 4. Click the Advanced tab.
- 5. Click **Properties**. The **Advanced Properties** dialog appears
- 6. Click the Security tab.

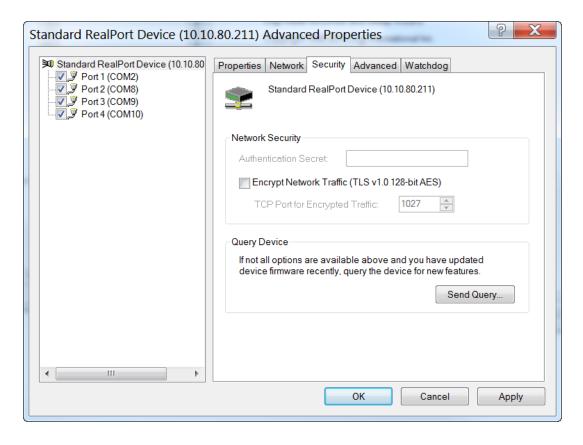

- 7. Select the **Encrypt Network Traffic** check box to enable encrypted network traffic. When you select this option, the **TCP Port for Encrypted Traffic** field becomes available.
- 8. The **TCP Port for Encrypted Traffic** field has a default value of **1027**. The entry must match the device's TCP port setting.
- 9. (Optional) If you want to use authentication, configure the feature.
 - a. From the the Authentication Method list box, select the Shared Secret SHA256 option.
 - b. Enter the authentication password in the Shared Secret field.
- 10. Click Apply.
- 11. Click OK to close the Advanced Properties dialog.
- Click OK to close the Properties window.

Configure the serial port for RealPort mode

RealPort mode allows you to use Realport.

To change the configuration to match the serial configuration of the device to which you want to connect:

₹ Web

Log into the IX20 WebUI as a user with full Admin access rights.

1. On the menu, click **System**. Under **Configuration**, click **Serial Configuration**.



The **Serial Configuration** page is displayed.



Note You can also configure the serial port by using **Device Configuration** > **Serial**. Changes made by using either **Device Configuration** or **Serial Configuration** will be reflected in both.

2. Click the name of the port that you want to configure.



The serial port is enabled by default. To disable, toggle off **Enable**.

- 3. For Mode, select RealPort.
- 4. Select an option from the **Sharing Mode** list box to determine which user(s) can change the port settings, and whether users can receive data from the port.
 - None: Only the user that opened the port can change the port settings. All other users are rejected. No other users can receive data from the port. This is the default.
 - Primary: Only the user that opened the port can change the port settings. All other users that try to open the port receive all of the data read to the port.
 - **Peer**: Any user that tries to open the port can change the port settings. All users that try to open the port receive all of the data read to the port.
- 5. (Optional) For Label, enter a label that will be used when referring to this port.
- 6. For **Signalling**, select the electrical signaling interface type used on this serial port:
 - RS-232
 - RS-485
 - Enable **Termination** if you want to enable electrical termination on this serial port.

The default is **RS-232**.

7. Expand **Logging Settings** to configure logging for this serial port.

- a. To enable logging, click to toggle on Enable.
- b. In the **Log file name** field, enter a descriptive name for the log file.
- c. For **Log file size**, type the size of the log file. When the log file reaches the size limit, the current file is saved and a new file is created. The default is 65536 bytes.
- d. From the **Type of data to log** list box, specify the type of data that should be saved.
 - Received
 - Transmitted
 - Both
 - Both with arrows. This is the default.
- e. If you want to log the time at which date was received or transmitted, click the **Timestamps** toggle to **Enable**.
- f. If you want to log the data as hexadecimal values, click the **Hexadecimal** toggle to **Enable**.

Note You can review the message log in the **Serial Port Log** page. See Review the serial port message log.

8. Click Apply to save the configuration and apply the change.

Command line

Select the device in Remote Manager and click Actions > Open Console, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

> config (config)>

3. The serial port is enabled by default. To disable:

(config)> serial port1 enable false (config)>

4. Set the mode:

(config)> serial port1 mode realport (config)>

5. Set the sharing mode:

(config)> serial port1 sharing value
(config)>

where value is one of:

• **none**: Only the user that opened the port can change the port settings. All other users are rejected. No other users can receive data from the port. This is the default.

- **peer**: Any user that tries to open the port can change the port settings. All users that try to open the port receive all of the data read to the port.
- primary: Only the user that opened the port can change the port settings. All other users that try to open the port receive all of the data read to the port.
- 6. Set the signal mode:

```
(config)> serial port1 signal mode value (config)>
```

where value is one of:

Set the signaling interface type used on this serial port:

- rs-232
- rs-485
 - Enable termination if you want to enable electrical termination on this serial port:

```
(config)> serial port1 termination true (config)>
```

The default is rs-232.

7. Set a label that will be used when referring to this port.

```
(config)> serial port1 label label (config)>
```

8. (Optional) Set a label that will be used when referring to this port.

```
(config)> serial port1 label label
(config)>
```

- 9. Configure serial port logging:
 - a. Enable serial port logging:

```
(config)>serial port1 logging enable true (config)>
```

b. Set the file name:

```
(config)>serial port1 logging filename string (config)>
```

c. Set the maximum allowed log size for the serial port log when starting the log:

```
(config)>serial port1 logging size value (config)>
```

where value is the size of the log file in bytes. The default is 65536.

d. Specify the data type:

```
(config)>serial port1 logging type value (config)>
```

where value is one of:

- received
- transmitted
- both
- arrows. This is the default.
- e. Log the time at which date was received or transmitted:

(config)>serial port1 logging hex true (config)>

f. Log data as hexadecimal values:

(config)>serial port1 logging timestamp true (config)>

10. Save the configuration and apply the change.

(config)> save Configuration saved.

11. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configure the RealPort service

After you have configured RealPort mode on the IX20, you must enable and configure the RealPort service. When this step is complete, all of the serial ports on the IX20 are configured to use the RealPort service.



- 1. Log into the IX20 WebUI as a user with full Admin access rights.
- 2. On the menu, click **System > Configuration > Device Configuration**.
- 3. Expand Services.
- 4. Expand RealPort.
- 5. Click Enable to enable the RealPort service.
- 6. For RealPort Server Port, enter 1027. This is the default.
- 7. For **Minimum TLS version**, select the minimum TLS version that the RealPort service will accept. The default is TLS version 1.0.
- 8. Enable **Encryption** to enable encryption of data. This is enabled by default.
- (Optional) Configure the authentication method the Real Port server uses to authenticate clients.
 - a. From the Authentication Method list box, select the Shared Secret SHA256 option.
 - b. For **Shared Secret**, enter the authentication password to ensure secure communication. Leave this field blank to disable authentication.

- 10. Enable **Exclusive Mode** to ensure that any connection from an IP address is closed when opening a new connection from the same IP address. This disabled by default.
- 11. Enable RealPort Keepalive to send RealPort keepalive packets. This is enabled by default.
- 12. Enable **TCP Port Keepalive** to send TCP keepalive packets. This is disabled by default.
- 13. Enable **Device Initiated connections** so users can remotely connect to serial devices as if they had a native COWTTY port on their PC. This is disabled by default.
- 14. Click Apply to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. RealPort is enabled by default. To disable:

```
(config)> service realport enable false (config)>
```

4. Set the RealPort server port.

```
(config)> service realport port value (config)>
```

where value is the port you want to use for the RealPort service. The default is 1027.

5. Set the select the minimum TLS version that the RealPort service will accept:

```
(config)> service realport minimum_tls_version value
(config)>
```

where value is one of:

- TLS-1_0. This is the default.
- TLS-1 1
- TLS-1 2
- TLS-1 3
- 6. Data encryption is enabled by default. To disable:

```
(config)> service realport encryption false (config)>
```

7. (Optional) Configure authentication.

```
(config)> service realport auth value (config)>
```

where value is one of:

- none: Do not use authentication. This is the default.
- shared_secret_sha256: You must also define the authentication password to ensure secure communication. Leave this field blank to disable authentication.

(config)> service realport auth shared_secret_sha256 *value* (config)

where value is the authentication password.

8. Exclusive mode is disabled by default. This mode ensures that any connection from an IP address is closed when opening a new connection from the same IP address. To enable:

(config)> service realport exclusive true (config)

Use RealPort keepalive to send RealPort keepalive packets. This is enabled by default. To disable:

(config)> service realport realport_keepalive false (config)>

10. TCP port keepalive to send TCP keepalive packets is disabled by default. To enable:

(config)> service realport tcp_keepalive true (config)>

11. Device initiated connections allow users to remotely connect to serial devices as if they had a native COWTTY port on their PC. This is disabled by default. To enable:

(config)> service realport device_initiated_enable true (config)>

12. Save the configuration and apply the change.

(config)> save Configuration saved.

Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Disconnect a user from a serial port

From the **Serial Status** page, you can disconnect any users connected to a serial port configured for one of these modes: Login, Remote Access, PPP Dial-in, or Modem Emulator.



- 1. Log into the IX20 WebUI as a user with full Admin access rights.
- 2. On the menu, click Status > Connections > Serial. The Serial Status page displays.

- Find the port for which you want to disconnect one or more users. Verify that the port is configured for one of the following modes: Login, Remote Access, PPP Dial-in, or Modem Emulator.
- 4. Click the down arrow next to the user name in the **Users** column to display a pop-up box.
- A list of the users currently connected to the port display in the pop-up box. Information about each user's connection displays. If more than one user is connected, a check box displays for each user.
 - User: The user's log in name or a connection type, such as Telnet, TCP, or SSH.
 - Remote IP: The user's IP address.
 - Connected: The length of time that the user has been connected to the port. The time is measured in seconds.
 - Idle: The length of time that connection has been idle. The time is measured in seconds.
- 6. Determine the user(s) that you want to disconnect.
 - If only one user is listed, that user will be selected for the disconnect by default.
 - If more than one user is connected to the port, by default the check box for each user is selected. Click on a check box to deselect a user. Click All to deselect or select all of of the users.
- Qick **Disconnect**. The single user or set of selected users are disconnected from the serial port.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. (Optional) Review the users currently connected to the port.

show serial *port*>

Where *port* is the port number you want to review, such as "port2"; a string, such as "console"; or the name of a user-configured serial port, such as USB.

3. (Optional) Review information about the disconnect command.

> system serial disconnect ?
>

4. Disconnect a specific user from a port.

>system serial disconnect *port remoteip STRING user STRING* >

Where *port* is the port number you want to review, such as "port2"; a string, such as "console"; or the name of a user-configured serial port, such as USB.

Enter one or both of the following:

- remoteip STRING The remote IP address to disconnect.
- user: The user name of the user that you want to disconnect.
- 5. Disconnect all users from a port.

```
system serial disconnect port >
```

Where *port*: is the port number you want to review, such as "port2"; a string, such as "console"; or the name of a user-configured serial port, such as USB.

6. Type **exit** to exit the Admin CLI.Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Show serial port status and statistics

To show the status and statistics for the serial port:



- 1. Log into the IX20 WebUI as a user with full Admin access rights.
- 2. On the main menu, click **Status > Connections > Serial**. The **Serial Status** page displays. See Serial Status page for information about the features in this page.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. Use the show serial command:

```
> show serial

Label Port Enable Mode Baudrate
------
Serial 1 port1 true login 9600
>
```

3. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Serial Status page

The **Serial Status** page contains status information about all of the serial ports available on the device.

To navigate to the **Serial Status** page, log into the device's web UI and click **Status > Connection > Serial**.

Item	Description		
* configuration icon	Click the ★ (configuration) icon in the upper right corner of the page to access the Serial Configuration page. See Serial port for more information.		
Status	Displays the connection status.		
	 CONNECTED: A telnet, terminal, SSH, or TCP session is active. DISABLED: The port is not enabled. NO SIGNAL: CTS or DCD is not active on the port. 		
Port	A list of the ports on the device. The port number and name displays as a link when the port is configured for remote access. You can click the port number or name to connect to the port in the terminal page.		
	 Click the link to connect to the port in the terminal page. In the terminal screen, enter ~b? to display additional commands. See Access the terminal screen from the web UI for more information about the commands. 		
	While you are connected to the terminal, the port status displays in the Status column as CONNECTED, and the name of the user logged into the device displays in the User column.		
Label	A description for the port. You can change this from the Serial Configuration page. Click the * (configuration) icon in the upper right corner of the page to access that page. The port number and name displays as a link when the port is configured for remote access. You can click the port number or name to connect to the port in the terminal page. See the description for Port (above) for more information.		
Log	If configured, you can open the Serial Port Log page for that port. Options are: • Green Log button: The serial port mode selected for the port supports serial port logging, and logging is enabled. Click the Log button to open the Serial Port Log page for that port. See Review the serial port message log for information about that page.		
	 Gray Log button: The serial port mode selected for the port supports serial port logging, but logging is not enabled. 		
	No button: The serial port mode selected for the port does not support serial port logging.		
User	When the port is connected to a Telnet, terminal, SSH, or TCP connection the name of the user logged into the device displays. See the description for Port (above) for more information. If a serial port is configured for one of these modes: Login, Remote Access, PPP Dial-in, or Modem Emulator, you can disconnect one or more users from the serial port using the Disconnect feature. See Disconnect a user from a serial port.		
TX/RX Bytes	Displays the total number of bytes that have been transmitted and received.		

Item	Description
Signals	Indicates the types of communication that the device is ready to send. DCD: Carrier Detected CTS: Clear to Send DTR: Data Terminal Ready RTS: Ready to Dend

Review the serial port message log

Serial port messages can be reviewed from the Serial Port Log page.

A serial port message log is created and saved when serial port logging has been enabled and configured for one of the following serial port modes: Login, Remote Access, RealPort, or UDP Serial. You can view the log file from the **Log** column in the **Serial Status** page.



- 1. Log into the IX20 WebUI as a user with full Admin access rights.
- 2. On the main menu, click Status
- 3. Under Connections, click Serial. The Serial Status page displays.
- 4. If a green Log button is displayed, the serial port mode selected for the port supports serial port logging, and logging is enabled. Click the Log button to open the Serial Port Log page for that port. The Serial port log window displays.

Note If the **Log** button is gray, the serial port mode selected for the port supports serial port logging, but logging is not enabled. If there is no **Log** button, the serial port mode selected for the port does not support serial port logging.

- 5. Review the messages in the window.
 - Click Refresh to refresh the log display.
 - Click Download to download the serial port log to your local device. The log file is saved to the /opt/serial directory. Because this is being save to the device's memory, you should use serial logging for diagnostic purposes, rather than having it permanently enabled.
 - Click Restart to clear and restart the serial port log.

Command line

Select the device in Remote Manager and click Actions > Open Console, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. To show the serial port's contents and logging status:

> system serial show *port-number* Logging is active on *port-number*

3. To save the log to your local device:

> system serial save *port-number path*

If a relative path is provided, /etc/config/serial will be used as the root directory for the path and file. (Required)

The log file is saved to the /opt/serial directory. Because this is being save to the device's memory, you should use serial logging for diagnostic purposes, rather than having it permanently enabled.

4. To clear and restart the log:

> system serial clear *port-number*

5. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Wi-Fi

This chapter applies to the IX20W Wi-Fi enabled model only.

This chapter contains the following topics:

W-Fi configuration	331
Configure the Wi-Fi radio's channel	
Configure the Wi-Fi radio to support DFS channels in client mode	335
Configure the Wi-Fi radio's band and protocol	337
Configure the Wi-Fi radio's transmit power	338
Configure an open Wi-Fi access point	340
Configure a Wi-Fi access point with personal security	346
Configure a Wi-Fi access point with enterprise security	
Isolate Wi-Fi clients	
Configure a Wi-Fi client and add client networks	367
Show Wi-Fi access point status and statistics	376
Show Wi-Fi client status and statistics	

W-Fi configuration

Wi-Fi configuration

The Wi-Fi enabled IX20W device has one Wi-Fi radio. You can configure the Wi-Fi radio for Wi-Fi access point mode and Wi-Fi client mode. By default, the IX20W radio is configured to use access point mode.

Note When Primary Responder mode is enabled, pre-configured access points are disabled by default. For more information about Primary Responder mode, see Differences between standard firmware operation and Primary Responder mode.

Default access point SSID and password

By default, the IX20W device has one access point enabled. The default SSID for the access points is:

Digi-IX20W-serial_number

The password for the default access point is the unique password as found on the device's label. See Change the default SSID and pre-shared key for the preconfigured Wi-Fi access point for information about changing the default SSID and password.

Default Wi-Fi configuration

The default Wi-Fi configuration of the IX20W device is:

Wi-Fi radio

	Default setting
Enabled Or disabled	Enabled
Frequency band	2.4 GHz
TX power percentage	100
Access point mode	802.11b/g/n
Channel	Automatic
Channel width	20/40 MHz
Beacon interval	100

Access point

	Default setting
Name	Digi AP
Enabled Or disabled	Enabled
SSID	Digi-IX20W-serial_number
SSID broadcast	Enabled

WI-Fi configuration

	Default setting	
Encyrption	WAP2 Personal (PSK)	
Pre-shared key	The unique password printed on the bottom label of the device.	
Group rekey interval	10 minutes	
Isolate clients	Enabled	

Client mode connections

None.

Configure the Wi-Fi radio's channel

By default, the Wi-Fi radio is configured to automatically select the best channel to use with respect to other Wi-Fi networks. You can configure a specific channel to use for the Wi-Fi radio by using the following steps.

- 2.4 GHz band—Channels 1 to 11 are supported. Channels 12, 13, and 14 are not supported.
- 5 GHz band—By default, only non-Dynamic Frequency Selection (DFS) channels are supported. You can also enable support for DFS channels in client mode. See Configure the Wi-Fi radio to support DFS channels in client mode for information about enabling DFS support.

Note Not all Digi devices currently support 5 GHz. Before you try to use this feature, verify that your device supports 5 GHz.



- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:


a. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.



The **Configuration** window is displayed.

3. Click Network > WiFi.

4. For Channel, select the channel. Only channels appropriate for the band are displayed.

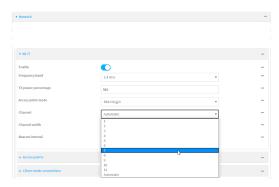

5. Click Apply to save the configuration and apply the change.

Command line

Select the device in Remote Manager and click Actions > Open Console, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type config to enter configuration mode:

```
> config
(config)>
```

- 3. Set the channel for the radio:
 - a. Determine the band for the radio:

```
(config)> network wifi radio phy0 band 2400mhz (config)>
```

b. Set the channel for the Wi-Fi radio:

```
(config)> network wifi radio phy0 2400mhz channel value (config)>
```

where value is:

- For 2.4 GHz:
 - 1 through 11
 - auto
- For 5 GHz:
 - 36
 - 40
 - 44
 - 48
 - auto

4. Save the configuration and apply the change.

(config)> save Configuration saved.

5. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configure the Wi-Fi radio to support DFS channels in client mode

Dynamic Frequency Selection (DFS) is a mechanism for W-Fi connections to use 5 GHz frequencies that are normally reserved for non-Wi-Fi proposes. In addition to the standard non-DFS channels (36, 40, 44, and 48), your IX20W can be configured to have one or more Wi-Fi clients that can connect to external Wi-Fi access points that support DFS channels:

- DFS channels 52, 56, 60, 64, 100, 104, 108, 112, 116, 120, 124, 128, 132, 136, 140, and 144
- Higher 5GHz non-DFS channels 149, 153, 157, 161, and 165

The Wi-Fi access point must also support connections on these channels.

If DFS functionality is enabled, the IX20W must be rebooted after saving the configuration changes to re-initialize the Wi-Fi module.

Note If DFS functionality is enabled, any access points enabled on the IX20W device will not be started.

Required configuration items

- Enable DFS support.
- One or more configured Wi-Fi clients. See Configure a Wi-Fi client and add client networks for details.

Note Not all Digi devices currently support 5 GHz. Before you try to use this feature, verify that your device supports 5 GHz.



- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- a. Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.

d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The Configuration window is displayed.

- 3. Click Network > WiFi.
- 4. For Frequency band, select 5 GHz.
- 5. Click to enable DFS Client Support.

Note When **DFS Client Support** is enabled, any enabled access points that use this radio will not be started and cannot be used as access points.

6. Click Apply to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

```
> config (config)>
```

- 3. Set the channel for the radio:
 - a. Set the band for the radio to 5 GHz:

(config)> network wifi radio phy0 band 5000mhz (config)>

b. Enable DFS client support:

(config)> network wifi radio phy0 5000mhz dfs_client true (config)>

Note When DFS client support is enabled, any enabled access points that use this radio will not be started and cannot be used as access points.

4. Save the configuration and apply the change.

(config)> save
Configuration saved.

5. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configure the Wi-Fi radio's band and protocol

For Wi-Fi radios that support both 2.4 GHz and 5 GHz modes, you can configure the band. **Wi-Fi radio** defaults to use 2.4 GHz b/g/n band

Note Not all Digi devices currently support 5 GHz. Before you try to use this feature, verify that your device supports 5 GHz.



- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.


Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

- 3. Click Network > WiFi.
- 4. For Frequency band, select either 2.4 GHz or 5 GHz.
- 5. For **Access point mode**, select the appropriate mode. Only modes appropriate for the selected band are displayed.

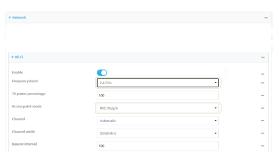

6. Click **Apply** to save the configuration and apply the change.

Command line

Select the device in Remote Manager and click Actions > Open Console, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

- 3. Set channel for the radio:
 - a. Set the band for the radio:

```
(config)> network wifi radio phy0 band value (config)>
```

where value is either 2400mhz or 5000mhz.

- b. Set the mode for the Wi-Fi radio. For example:
 - If the Wi-Fi radio has a band of **2400mhz**:

```
(config)> network wifi radio phy0 2400mhz mode value (config)>
```

where value is one of b, bg, bgn, g, gn, or n.

■ If the Wi-Fi radio has a band of 5000mhz:

```
(config)> network wifi radio phy0 5000mhz mode value (config)>
```

where value is one of ac, acn, or n.

4. Save the configuration and apply the change.

```
(config)> save
Configuration saved.
```

5. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configure the Wi-Fi radio's transmit power

The default Wi-Fi transmit power that the Wi-Fi radio will use when in access point or client mode is 100 percent. You can configure the Wi-Fi radio to transmit at a lower power.

₹ Web

- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- a. Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.


Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

- 3. Click Network > WiFi.
- 4. For **Tx power percentage**, type or select the appropriate percentage for the Wi-Fi radio's transmit power.

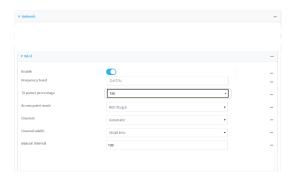

5. Click Apply to save the configuration and apply the change.

Command line

- 1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.
 - Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
- 2. At the command line, type **config** to enter configuration mode:

> config (config)>

3. Set the transmit power percentage for the radio:

(config)> network wifi radio phy0 tx_power value (config)>

where *value* is any integer between 1 and 100 and represents the percentage of transmit power that the Wi-Fi module should use.

4. Save the configuration and apply the change.

(config)> save Configuration saved.

5. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configure an open Wi-Fi access point

This procedure configures a Wi-Fi access point that does not require a password for client connections.

By default, the IX20W device comes with one preconfigured access point, **Digi AP**. You cannot delete default access points, but you can modify them or you can create your own access points.

Note The IX20W device supports a maximum of two enabled access points, regardless of the number of enabled Wi-Fi clients.

Required configuration items

- Enable the Wi-Fi access point
- The Service Set Identifier (SSID) for the access point.
- Configure open security for the access point.
- LAN/bridge assignment. Once you configure a Wi-Fi access point, you must assign the Wi-Fi access point to a LAN interface or to a bridge. See Configure a Local Area Network (LAN) and Configure a bridge for more information.

Additional configuration items

- Determine whether to broadcast the access point's SSID.
- Determine whether to isolate clients connected to this access point, so that they cannot communicate with each other.
- The amount of time to wait before changing the group key.

To configure a W-Fi access point with no security:



1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.

2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

- 3. Click Network > WiFi > Access points.
- 4. Create a new access point or modify an existing access point:
 - To create a new access point, for **Add WFi access point:**, type a name for the access point and click **1**/₂



To modify an existing access point, click to expand the access point.

The Wi-Fi access point configuration window is displayed.



- 5. For SSID, type the SSID. Up to 32 characters are allowed.
- 6. Enable SSID broadcast to configure the radio to broadcast the SSID.
- 7. (Optional) Enable **Isolate clients** if it isn't already enabled to prevent clients that are connected to this access point from communicating with each other. This setting is enabled by default. See <u>Isolate WI-FI clients</u> for information about how to prevent clients connected to different access points from communicating with each other.

- 8. For Encryption, select one of the following:
 - Open (Unencrypted)No encryption is used.
 - WPA3 Enhanced Open (OWE) Uses Opportunistic Wireless Encryption (OWE) technology to provide encryption for Wi-Fi networks that do not use password protection.

Note Only select **WPA3 Enhanced Open (OWE)** if you know that all Wi-Fi clients connecting to this device will have WPA3 capabilities.

9. (Optional) For **Group rekey interval**, type the amount of time to wait before changing the group key.

The group key is shared by all in clients of the access point, and after a client has disconnected, it will be able to use the group key to decrypt broadcast packets until the key is changed.

Allowed values are any number of days, hours, minutes, or seconds, and take the format **number**(**d|h|m|s**).

For example, to set Group rekey interval to ten minutes, enter 10m or 600s.

Increasing the time between rekeys can improve connectivity issues in noisy environments. To disable group rekeys, set to **0**. This will allow any client that has previously connected to see all broadcast traffic on the wireless network until the Wi-Fi radio is restarted. The default is 10 minutes.

 Assign the Wi-Fi access point to a LAN interface or to a bridge. See Configure a Local Area Network (LAN) and Configure a bridge for more information.

The access point must be assigned to an active LAN, or a bridge that is assigned to an active LAN.

11. Click **Apply** to save the configuration and apply the change.

Command line Configure a new access point

Select the device in Remote Manager and click Actions > Open Console, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

> config (config)>

3. Create a new access point:

(config)> add network wifi ap new_AP (config network wifi ap new_AP)>

New access points are enabled by default.

4. Set the SSID for the Wi-Fi access point. Up to 32 characters are allowed.

```
(config network wifi ap new_AP)> ssid my_SSID (config network wifi ap new_AP)>
```

SSID broadcasting is enabled by default for new access points.

5. Set the security for the access point to an open security method:

```
(config network wifi ap new_AP)> encryption type value (config network wifi ap new_AP)>
```

where value is either:

- none: No encryption is used.
- owe: Uses WPA3 Enhanced Open, which uses Opportunistic Wireless Encryption (OWE) technology to provide encryption for Wi-Fi networks that do not use password protection.

Note Only select **owe** if you know that all Wi-Fi clients connecting to this device will have WPA3 capabilities.

6. (Optional) Determine whether to prevent clients that are connected to this access point from communicating with each other:

```
(config)> network wifi ap digi_ap isolate_clients true (config)>
```

See Isolate Wi-Fi clients for information about how to prevent clients connected to different access points from communicating with each other.

7. (Optional) Set the amount of time to wait before changing the group key.

The group key is shared by all in clients of the access point, and after a client has disconnected, it will be able to use the group key to decrypt broadcast packets until the key is changed.

```
(config network wifi ap new_AP)> encryption group_rekey value (config network wifi ap new_AP)>
```

where *value* is any number of days, hours, minutes, or seconds, and takes the format *number* {d|h|m|s}.

For example, to set group rekey interval to ten minutes, enter either 10m or 600s:

```
(config network wireless ap new_AP)> encryption group_rekey 600s (config network wireless ap new_AP)>
```

Increasing the time between rekeys can improve connectivity issues in noisy environments. To disable group rekeys, set to **0**. This will allow any client that has previously connected to see all broadcast traffic on the wireless network until the Wi-Fi radio is restarted. The default is 10 minutes.

 Assign the Wi-Fi access point to a LAN interface or to a bridge. See Configure a Local Area Network (LAN) and Configure a bridge for more information.

The access point must be assigned to an active LAN, or a bridge that is assigned to an active LAN.

2. Save the configuration and apply the change.

```
(config)> save
Configuration saved.
>
```

3. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Edit an existing Access point

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

> config (config)>		
Show available access points:		
(config)> network wifi ap ?		

Additional Configuration

digi_ap Digi AP

(config)>

3.

4. Set the SSID for the appropriate access point:

```
(config)> network wifi ap digi_ap ssid my_SSID (config)>
```

5. SSID broadcasting is enabled by default for the preconfigured access points. If SSID broadcasting is disabled:

```
(config)> network wifi ap digi_ap ssid_broadcast true
(config)>
```

6. Set the security for the access point to an open security method:

```
(config network wifi ap new_AP)> encryption type value (config network wifi ap new_AP)>
```

where value is either:

- none: No encryption is used.
- owe: Uses WPA3 Enhanced Open, which uses Opportunistic Wireless Encryption (OWE) technology to provide encryption for Wi-Fi networks that do not use password protection.

Note Only select **owe** if you know that all Wi-Fi clients connecting to this device will have WPA3 capabilities.

7. (Optional) Determine whether to prevent clients that are connected to this access point from communicating with each other:

(config)> network wifi ap digi_ap isolate_client true (config)>

See Isolate Wi-Fi clients for information about how to prevent clients connected to different access points from communicating with each other.

8. (Optional) Set the amount of time to wait before changing the group key.

The group key is shared by all in clients of the access point, and after a client has disconnected, it will be able to use the group key to decrypt broadcast packets until the key is changed.

(config)> network wifi ap digi_ap encryption group_rekey *value* (config)>

where *value* is any number of days, hours, minutes, or seconds, and takes the format *number* {d|h|m|s}.

For example, to set group rekey interval to ten minutes, enter either 10m or 600s:

(config)> network wireless ap digi_ap encryption group_rekey 600s (config)>

Increasing the time between rekeys can improve connectivity issues in noisy environments. To disable group rekeys, set to **0**. This will allow any client that has previously connected to see all broadcast traffic on the wireless network until the Wi-Fi radio is restarted. The default is 10 minutes.

 Assign the Wi-Fi access point to a LAN interface or to a bridge. See Configure a Local Area Network (LAN) and Configure a bridge for more information.

The access point must be assigned to an active LAN, or a bridge that is assigned to an active LAN.

2. Save the configuration and apply the change.

(config)> save Configuration saved.

3. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configure a Wi-Fi access point with personal security

The WPA and WPA2 personal security modes allow a Wi-Fi access point to authenticate clients by using a preshared key that the client enters when connecting to the access point.

Note When Primary Responder mode is enabled, the WPA1 personal security mode is not available. For more information about Primary Responder mode, see Differences between standard firmware operation and Primary Responder mode.

By default, the IX20W device comes with one preconfigured access point, **Digi AP**. You cannot delete default access points, but you can modify them or you can create your own access points.

Note The IX20W device supports a maximum of two enabled access points, regardless of the number of enabled Wi-Fi clients.

Required configuration items

- Enable the Wi-Fi access point
- The Service Set Identifier (SSID) for the access point.
- Configure security for the access point to use personal security.
- The password (preshared key) that clients will used to connect to the access point.
- LAN/bridge assignment. Once you configure a Wi-Fi access point, you must assign the Wi-Fi access point to a LAN interface or to a bridge. See Configure a Local Area Network (LAN) and Configure a bridge for more information.

Additional configuration items

- Determine whether to broadcast the access point's SSID.
- Determine whether to isolate clients connected to this access point, so that they cannot communicate with each other.
- The amount of time to wait before changing the group key.

To configure a Wi-Fi access point to use personal security:



- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- a. Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

- 3. Click Network > WiFi > Access points.
- 4. Create a new access point or modify an existing access point:
 - To create a new access point, for **Add WiFi access point:**, type a name for the access point and click **1**/₂



To modify an existing access point, click to expand the access point.

The Wi-Fi access point configuration window is displayed.



- 5. For **SSID**, type the SSID. Up to 32 characters are allowed.
- 6. Enable **SSID** broadcast to configure the radio to broadcast the SSID.
- 7. (Optional) Enable **Isolate clients** if it isn't already enabled to prevent clients that are connected to this access point from communicating with each other. This setting is enabled by default. See <u>Isolate WI-Fi clients</u> for information about how to prevent clients connected to different access points from communicating with each other.
- 8. For **Encryption**, select one of the following:
 - WPA Personal (PSK): All Wi-Fi clients must support WPA to be able to authenticate.

Note When Primary Responder mode is enabled, the WPA personal security mode is not available. For more information about Primary Responder mode, see Differences between standard firmware operation and Primary Responder mode.

 WPA/WPA2 Personal (PSK): Wi-Fi clients that support WPA and WPA2 are able to authenticate.

Note When Primary Responder mode is enabled, the WPA personal security mode is not available. For more information about Primary Responder mode, see Differences between standard firmware operation and Primary Responder mode.

- WPA2 Personal (PSK): All Wi-Fi clients must support WPA2 to be able to authenticate.
- WPA2-PSK/WPA3-SAE mixed mode: Wi-Fi clients that support WPA2 and WPA3 are able to authenticate.
- WPA3 Personal (SAE): All Wi-Fi clients must support WPA3 to be able to authenticate.

Note Only select **WPA3 Personal (SAE)** if you know that all Wi-Fi clients connecting to this device will have WPA3 capabilities.

9. For **Pre-shared key**, enter the password that clients will use when connecting to the access point.

Note If you need to configure a Wi-Fi passphrase with any non-printable ASCII characters, you can use the wpa_passphrase tool to generate the appropriate pre-shared key. The wpa_passphrase command is available in the shell console of a DAL OS Digi device. For details about the command, see the wpa_passphrase Linux command.

10. (Optional) For **Group rekey interval**, type the amount of time to wait before changing the group key.

The group key is shared by all in clients of the access point, and after a client has disconnected, it will be able to use the group key to decrypt broadcast packets until the key is changed.

Allowed values are any number of days, hours, minutes, or seconds, and take the format **number**{d|h|m|s}.

For example, to set Group rekey interval to ten minutes, enter 10m or 600s.

Increasing the time between rekeys can improve connectivity issues in noisy environments. To disable group rekeys, set to **0**. This will allow any client that has previously connected to see all broadcast traffic on the wireless network until the Wi-Fi radio is restarted. The default is 10 minutes.

11. Assign the Wi-Fi access point to a LAN interface or to a bridge. See Configure a Local Area Network (LAN) and Configure a bridge for more information.

The access point must be assigned to an active LAN, or a bridge that is assigned to an active LAN.

12. Click **Apply** to save the configuration and apply the change.

Command line Configure a new access point

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

> config (config)>

3. Create a new access point:

(config)> add network wifi ap new_AP (config network wifi ap new_AP)>

New access points are enabled by default.

4. Set the SSID for the Wi-Fi access point. Up to 32 characters are allowed.

(config network wifi ap new_AP)> ssid my_SSID (config network wifi ap new_AP)>

SSID broadcasting is enabled by default for new access points.

5. Set the security for the access point to a personal security option:

```
(config network wifi ap new_AP)> encryption type value (config network wifi ap new_AP)>
```

where value is one of:

 psk: Uses WPA Personal (PSK). All Wi-Fi clients must support WPA to be able to authenticate.

Note When Primary Responder mode is enabled, the WPA personal security mode is not available. For more information about Primary Responder mode, see Differences between standard firmware operation and Primary Responder mode.

Note If you need to configure a Wi-Fi passphrase with any non-printable ASCII characters, you can use the wpa_passphrase tool to generate the appropriate preshared key. The wpa_passphrase command is available in the shell console of a DAL OS Digi device. For details about the command, see the wpa_passphrase Linux command.

mixedpsk: Uses mixed WPA/WPA2 Personal (PSK) mode. Wi-Fi clients that support WPA and WPA2 are able to authenticate.

Note When Primary Responder mode is enabled, the WPA personal security mode is not available. For more information about Primary Responder mode, see Differences between standard firmware operation and Primary Responder mode.

- psk2: Uses WPA2 Personal (PSK) mode. All Wi-Fi clients must support WPA2 to be able to authenticate.
- psk2sae: Uses WPA2-PSk/WPA3-AES mixed mode. Wi-Fi clients that support WPA2 and WPA3 are able to authenticate.
- sae: Uses WPA3 Personal mode. All Wi-Fi clients must support WPA3 to be able to authenticate.

```
(config network wifi ap new_AP)> encryption type psk2sae (config network wifi ap new_AP)>
```

6. (Optional) Determine whether to prevent clients that are connected to this access point from communicating with each other:

```
(config)> network wifi ap digi_ap isolate_clients true (config)>
```

See Isolate Wi-Fi clients for information about how to prevent clients connected to different access points from communicating with each other.

7. Set the password that clients will use when connecting to the access point:

```
(config network wifi ap new_AP)> encryption key_type password (config network wifi ap new_AP)>
```

where *key_type* varies depending on the selection for encryption **type**, above:

- If type is set to psk, key_type is key_psk.
- If type is set to mixedpsk, key_type is key_mixedpsk.
- If type is set to psk2, key_type is key_psk2.
- If type is set to psk2sae, key_type is key_psk2sae.
- If type is set to sae, key_type is key_sae.

For example, if type is set to psk2sae, set key_psk2sae to the appropriate password:

```
(config network wifi ap new_AP)> encryption type psk2sae
(config network wifi ap new_AP)> encryption key_psk2sae abcd1234
(config network wifi ap new_AP)>
```

Note The encryption key type must correspond to the configured encryption type. If you set an encyrption key type that does not correspond to the configured encryption type, you will not be able to save the configuration.

8. (Optional) Set the amount of time to wait before changing the group key.

The group key is shared by all in clients of the access point, and after a client has disconnected, it will be able to use the group key to decrypt broadcast packets until the key is changed.

```
(config network wifi ap new_AP)> encryption group_rekey value (config network wifi ap new_AP)>
```

where *value* is any number of days, hours, minutes, or seconds, and takes the format *number* {d|h|m|s}.

For example, to set group rekey interval to ten minutes, enter either 10m or 600s:

```
(config network wireless ap new_AP)> encryption group_rekey 600s (config network wireless ap new_AP)>
```

Increasing the time between rekeys can improve connectivity issues in noisy environments. To disable group rekeys, set to **0**. This will allow any client that has previously connected to

see all broadcast traffic on the wireless network until the Wi-Fi radio is restarted. The default is 10 minutes.

 Assign the Wi-Fi access point to a LAN interface or to a bridge. See Configure a Local Area Network (LAN) and Configure a bridge for more information.

The access point must be assigned to an active LAN, or a bridge that is assigned to an active LAN.

2. Save the configuration and apply the change.

```
(config)> save
Configuration saved.
>
```

3. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Edit an existing Access point

Select the device in Remote Manager and click Actions > Open Console, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

	> config (config)>				
3.	Show available access points:				
	(config)> net	work wifi ap ?			
	Additional C	onfiguration			
	digi_ap	Digi AP			
	(config)>				

4. Set the SSID for the appropriate access point:

```
(config)> network wifi ap digi_ap ssid my_SSID (config)>
```

5. SSID broadcasting is enabled by default for the preconfigured access points. If SSID broadcasting is disabled:

```
(config)> network wifi ap digi_ap ssid_broadcast true
(config)>
```

6. Set the security for the access point to a personal security option:

(config network wifi ap new_AP)> encryption type *value* (config network wifi ap new_AP)>

where *value* is one of:

psk: Uses WPA Personal (PSK). All Wi-Fi clients must support WPA to be able to authenticate.

Note When Primary Responder mode is enabled, the WPA personal security mode is not available. For more information about Primary Responder mode, see Differences between standard firmware operation and Primary Responder mode.

Note If you need to configure a Wi-Fi passphrase with any non-printable ASCII characters, you can use the wpa_passphrase tool to generate the appropriate preshared key. The wpa_passphrase command is available in the shell console of a DAL OS Digi device. For details about the command, see the wpa_passphrase Linux command.

mixedpsk: Uses mixed WPA/WPA2 Personal (PSK) mode. Wi-Fi clients that support WPA and WPA2 are able to authenticate.

Note When Primary Responder mode is enabled, the WPA personal security mode is not available. For more information about Primary Responder mode, see Differences between standard firmware operation and Primary Responder mode.

- psk2: Uses WPA2 Personal (PSK) mode. All Wi-Fi clients must support WPA2 to be able to authenticate.
- psk2sae: Uses WPA2-PSK/WPA3-AES mixed mode. Wi-Fi clients that support WPA2 and WPA3 are able to authenticate.
- sae: Uses WPA3 Personal mode. All Wi-Fi clients must support WPA3 to be able to authenticate.

(config network wifi ap new_AP)> encryption type psk2sae (config network wifi ap new_AP)>

7. (Optional) Determine whether to prevent clients that are connected to this access point from communicating with each other:

(config)> network wifi ap digi_ap isolate_client true (config)>

See Isolate Wi-Fi clients for information about how to prevent clients connected to different access points from communicating with each other.

8. Set the password that clients will use when connecting to the access point:

(config)> network wifi ap digi_ap encryption key_psk2 password (config)>

9. (Optional) Set the amount of time to wait before changing the group key.

The group key is shared by all in clients of the access point, and after a client has disconnected, it will be able to use the group key to decrypt broadcast packets until the key is changed.

(config)> network wifi ap digi_ap encryption group_rekey *value* (config)>

where *value* is any number of days, hours, minutes, or seconds, and takes the format *number* {dlh|m|s}.

For example, to set group rekey interval to ten minutes, enter either 10m or 600s:

(config)> network wireless ap digi_ap encryption group_rekey 600s (config)>

Increasing the time between rekeys can improve connectivity issues in noisy environments. To disable group rekeys, set to **0**. This will allow any client that has previously connected to see all broadcast traffic on the wireless network until the Wi-Fi radio is restarted. The default is 10 minutes.

 Assign the Wi-Fi access point to a LAN interface or to a bridge. See Configure a Local Area Network (LAN) and Configure a bridge for more information.

The access point must be assigned to an active LAN, or a bridge that is assigned to an active LAN.

2. Save the configuration and apply the change.

(config)> save Configuration saved. >

3. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configure a Wi-Fi access point with enterprise security

The WPA2 enterprise security mode allows a Wi-Fi access point to authenticate clients by using one or more RADIUS servers. When the Wi-Fi access point receives a connection request from a client, it authenticates the client with the RADIUS server before allowing the client to connect.

Using enterprise security modes allows each client to have different usernames and passwords configured in the RADIUS server, rather than using preshared key on the IX20 device.

By default, the IX20W device comes with one preconfigured access point, **Digi AP**. You cannot delete default access points, but you can modify them or you can create your own access points.

Note The IX20W device supports a maximum of two enabled access points, regardless of the number of enabled Wi-Fi clients.

Required configuration items

- Enable the Wi-Fi access point
- The Service Set Identifier (SSID) for the access point.

- Configure security for the access point to WPA2 enterprise.
- The IP address for one or more RADIUS servers.
- The secret key for one or more RADIUS servers.
- LAN/bridge assignment. Once you configure a Wi-Fi access point, you must assign the Wi-Fi access point to a LAN interface or to a bridge. See Configure a Local Area Network (LAN) and Configure a bridge for more information.

Additional configuration items

- Determine whether to broadcast the access point's SSID.
- Determine whether to isolate clients connected to this access point, so that they cannot communicate with each other.
- The server port for one or more RADIUS server.
- The amount of time to wait before changing the group key.

To configure a Wi-Fi access point with WPA2 enterprise security:



- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.



The **Configuration** window is displayed.

- 3. Click Network > WiFi > Access points.
- 4. Create a new access point or modify an existing access point:
 - To create a new access point, for Add WiFi access point:, type a name for the access point and click Y_α




To modify an existing access point, click to expand the access point.


The Wi-Fi access point configuration window is displayed.



- 5. For SSID, type the SSID. Up to 32 characters are allowed.
- 6. Enable SSID broadcast to configure the radio to broadcast the SSID.
- 7. (Optional) Enable **Isolate clients** if it isn't already enabled to prevent clients that are connected to this access point from communicating with each other. This setting is enabled by default. See **Isolate Wi-Fi clients** for information about how to prevent clients connected to different access points from communicating with each other.
- 8. For Encryption, select WPA2 Enterprise.
- 9. Configure one or more RADIUS servers:
 - a. Click to expand RADIUS server list.
 - b. Click to expand RADIUS server.
 - c. For RADIUS IP/hostname, type the IP address or hostname of the RADIUS server.
 - d. (Optional) Change the RADIUS port. The default port is 1812.
 - e. For **RADIUS secret key**, type the secret key as configured on the RADIUS server.

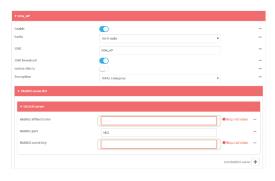

f. To add additional RADIUS servers, click 1/2

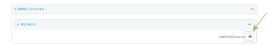

10. (Optional) For **Group rekey interval**, type the amount of time to wait before changing the group key.

The group key is shared by all in clients of the access point, and after a client has disconnected, it will be able to use the group key to decrypt broadcast packets until the key is changed.

Allowed values are any number of days, hours, minutes, or seconds, and take the format **number**{**d|h|m|s**}.

For example, to set Group rekey interval to ten minutes, enter 10m or 600s.

Increasing the time between rekeys can improve connectivity issues in noisy environments. To disable group rekeys, set to **0**. This will allow any client that has previously connected to see all broadcast traffic on the wireless network until the Wi-Fi radio is restarted. The default is 10 minutes.

11. Assign the Wi-Fi access point to a LAN interface or to a bridge. See Configure a Local Area Network (LAN) and Configure a bridge for more information.

The access point must be assigned to an active LAN, or a bridge that is assigned to an active LAN.

12. Click **Apply** to save the configuration and apply the change.

Command line

Configure a new access point

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

> config (config)>

3. Create a new access point:

(config)> add network wifi ap new_AP (config network wifi ap new_AP)>

New access points are enabled by default.

4. Set the SSID for the Wi-Fi access point. Up to 32 characters are allowed.

(config network wifi ap new_AP)> ssid my_SSID (config network wifi ap new_AP)>

SSID broadcasting is enabled by default for new access points.

5. Set the security for the access point to wpa2:

(config network wifi ap new_AP)> encryption type wpa2 (config network wifi ap new_AP)>

6. (Optional) Determine whether to prevent clients that are connected to this access point from communicating with each other:

(config)> network wifi ap digi_ap isolate_clients true (config)>

See Isolate Wi-Fi clients for information about how to prevent clients connected to different access points from communicating with each other.

- 7. Configure one or more RADIUS servers:
 - a. Set the IP address of the RADIUS server:

(config network wifi ap new_AP)> encryption radius_servers 0 host *IP_address* (config network wifi ap new_AP)>

b. Set the secret key as configured on the RADIUS server:

(config network wifi ap new_AP)> encryption radius_servers 0 key secret_key (config network wifi ap new_AP)>

c. (Optional) Set the RADIUS server's port. The default is 1812.

(config network wifi ap new_AP)> encryption radius_servers 0 port *port* (config network wifi ap new_AP)>

- d. (Optional) Add and configure additional radius servers:
 - i. Add a server:

(config network wifi ap new_AP)> add encryption radius_servers end (config network wifi ap new_AP encryption radius_servers 1)>

ii. Configure the new server as described above. For example, set the server IP address:

(config network wifi ap new_AP encryption radius_servers 1)> host *IP_address* (config network wifi ap new_AP encryption radius_servers 1)>

- iii. Repeat for additional radius servers.
- 8. (Optional) Set the amount of time to wait before changing the group key.

The group key is shared by all in clients of the access point, and after a client has disconnected, it will be able to use the group key to decrypt broadcast packets until the key is changed.

(config network wifi ap new_AP)> encryption group_rekey *value* (config network wifi ap new_AP)>

where *value* is any number of days, hours, minutes, or seconds, and takes the format *number* {d|h|m|s}.

For example, to set group rekey interval to ten minutes, enter either 10m or 600s:

(config network wireless ap new_AP)> encryption group_rekey 600s (config network wireless ap new_AP)>

Increasing the time between rekeys can improve connectivity issues in noisy environments. To disable group rekeys, set to **0**. This will allow any client that has previously connected to see all broadcast traffic on the wireless network until the Wi-Fi radio is restarted. The default is 10 minutes.

 Assign the Wi-Fi access point to a LAN interface or to a bridge. See Configure a Local Area Network (LAN) and Configure a bridge for more information.

The access point must be assigned to an active LAN, or a bridge that is assigned to an active LAN.

2. Save the configuration and apply the change.

(config)> save
Configuration saved.

3. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Edit an existing Access point

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

> config (config)>

3. Show available access points:

(config)> network wifi ap?

Additional Configuration

digi_ap

(config)>

4. Set the SSID for the appropriate access point:

Digi AP

(config)> network wifi ap digi_ap ssid my_SSID
(config)>

5. SSID broadcasting is enabled by default for the preconfigured access points. If SSID broadcasting is disabled:

(config)> network wifi ap digi_ap ssid_broadcast true (config)>

6. Set the security for the access point to wpa2:

(config network wifi ap new_AP)> encryption type wpa2 (config network wifi ap new_AP)>

7. (Optional) Determine whether to prevent clients that are connected to this access point from communicating with each other:

(config)> network wifi ap digi_ap isolate_client true (config)>

See Isolate Wi-Fi clients for information about how to prevent clients connected to different access points from communicating with each other.

8. Set the IP address or hostname of the RADIUS server:

(config)> network wifi ap digi_ap encryption host_wpa2 hostname (config)>

9. Set the secret key as configured on the RADIUS server:

(config)> network wifi ap digi_ap encryption key_wpa2 secret_key
(config)>

10. (Optional) Set the RADIUS server's port. The default is 1812.

(config)> network wifi ap digi_ap encryption port_wpa2 port
(config)>

11. (Optional) Set the amount of time to wait before changing the group key.

The group key is shared by all in clients of the access point, and after a client has disconnected, it will be able to use the group key to decrypt broadcast packets until the key is changed.

(config)> network wifi ap digi_ap encryption group_rekey value (config)>

where *value* is any number of days, hours, minutes, or seconds, and takes the format *number* {d|h|m|s}.

For example, to set group rekey interval to ten minutes, enter either 10m or 600s:

(config)> network wireless ap digi_ap encryption group_rekey 600s (config)>

Increasing the time between rekeys can improve connectivity issues in noisy environments. To disable group rekeys, set to **0**. This will allow any client that has previously connected to see all broadcast traffic on the wireless network until the Wi-Fi radio is restarted. The default is 10 minutes.

 Assign the Wi-Fi access point to a LAN interface or to a bridge. See Configure a Local Area Network (LAN) and Configure a bridge for more information.

W-Fi

The access point must be assigned to an active LAN, or a bridge that is assigned to an active LAN.

2. Save the configuration and apply the change.

```
(config)> save
Configuration saved.
>
```

3. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Isolate Wi-Fi clients

Gient isolation prevents wireless clients connected to the IX20W device from communicating with other clients. There are two mechanisms for client isolation configuration:

- Isolate clients connected to the same access point
- Isolate clients connected to different access points

This section provides instructions for both mechanisms.

Isolate clients connected to the same access point



- Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- a. Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

3. Click Network > WiFi > Access points.

4. Create a new access point or modify an existing access point. See Configure an open Wi-Fi access point, Configure a Wi-Fi access point with personal security, or Configure a Wi-Fi access point with enterprise security.

- 5. Check to ensure that **Isolate clients** is enabled. This setting is enabled by default.
- 6. Click **Apply** to save the configuration and apply the change.

Command line

Select the device in Remote Manager and click Actions > Open Console, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

- Create a new access point or modify an existing access point. See Configure an open Wi-Fi
 access point, Configure a Wi-Fi access point with personal security, or Configure a Wi-Fi
 access point with enterprise security.
- 4. (Optional) Set the client isolation to true, if it is not already set. This is enabled by default.s

```
(config)> network wifi ap digi_ap isolate_client true (config)>
```

5. Save the configuration and apply the change.

```
(config)> save
Configuration saved.
```

6. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Isolate clients connected to different access points

Isolating clients that are on different access points involves the following steps:

- 1. Create new access points.
- 2. Assign the access points to separate LAN interfaces.
- 3. Assign those LAN interfaces to separate firewall zones.
- 4. Create firewall filters to prevent traffic between the two firewall zones.



1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.

2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

3. Create a new access point.

By default, the IX20W comes with one preconfigured access point, named **Digi AP**. In these instructions, we will use the existing **Digi AP** access point and create another new access point, named **new_AP**.

- a. Click Network > WiFi > Access points.
- b. For Add WiFi access point:, type a name for the access point and click 1/2



- c. For SSID, type the SSID. Up to 32 characters are allowed.
- d. Select the appropriate type of **Encryption** and complete the encryption-related fields as appropriate. See Configure an open W-Fi access point, Configure a W-Fi access point with personal security, or Configure a W-Fi access point with enterprise security for details.
- 4. Configure the firewall:
 - a. Click Firewall > Zones.
 - b. In **Add Zone**, enter **LAN2_isolation_zone** for the name of the zone and click **1**/₂



Note We will be creating **LAN2** later in the procedure.

- c. Create a firewall filter to provide internet access for the LAN2_isolation_zone:
 - i. For Add packet filter, click 1/30
 - ii. For Label, type Allow LAN2_isolation_zone to External.
 - iii. For Source zone, select LAN2_isolation_zone.
 - iv. For **Destination zone**, select **External**.



- d. Oreate a firewall filter to drop traffic from the **Internal** zone (used by the **LAN1** interface) to the **LAN2** isolation zone:
 - i. Click Firewall > Packet filtering.
 - ii. For Add packet filter, click %
 - iii. For Label, type Drop traffic from Internal to LAN2_isolation_zone.
 - iv. For Action, select Drop.
 - v. For Source zone, select Internal.
 - vi. For **Destination zone**, select **LAN2_isolation_zone**.



e. Rearrange the firewall filters.

Firewall filters are applied in the order that they are listed. As a result, in order to drop traffic from the **Internal** zone to the **LAN2_isolation_zone**, this filter must be listed prior to the **Allow all outgoing traffic filter**, which allows the **Internal** zone to have access to any zone.

To move the Drop traffic from Internal to LAN2_isolation_zone filter to the top of the list:


- i. Click the filter title.
- ii. Drag-and-drop the filter to the top of the list.



5. Create a new LAN:

By default, the IX20W device comes with one preconfigured LAN, which includes the default access point. We will use that LAN for the default access point, and create a new LAN for the second access point.

- a. Click Configuration > Network > Interfaces.
- b. For Add interface, type a name for the LAN and click %

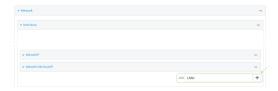

- c. For **Zone**, select **LAN2_isolation_zone**.
- d. For **Device**, select the new Wi-Fi access point.
- e. Click to expand IPv4.
- f. For Address, type an IP address and subnet for the LAN.
- g. Click to expand DHCP server.
- h. Enable the DHCP server.
- 6. Click **Apply** to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

- 3. Configure a new access point:
 - a. Create a new access point:

```
(config)> add network wifi ap new_AP (config network wifi ap new_AP)>
```

New access points are enabled by default.

b. Set the SSID for the Wi-Fi access point. Up to 32 characters are allowed.

```
(config network wifi ap new_AP)> ssid my_SSID (config network wifi ap new_AP)>
```

c. Set the security for the access point:

(config network wifi ap new_AP)> encryption type *value* (config network wifi ap new_AP)>

where value is one of:

- none
- psk

- psk2
- wpa2:

d. Complete other encryption-related fields as appropriate based on the type of encryption. See Configure an open Wi-Fi access point, Configure a Wi-Fi access point with personal security, or Configure a Wi-Fi access point with enterprise security for details.

- 4. Configure the firewall:
 - a. Return to the root config prompt by typing three periods (...):

```
(config network wifi ap new_AP)> ... (config)>
```

 Add a new firewall zone named LAN2_isolation_zone. We will be creating LAN2 later in the procedure.

```
(config)> add firewall zone LAN2_isolation_zone (config firewall zone LAN2_isolation_zone)>
```

- c. Create a firewall filter to provide internet access for the LAN2_isolation_zone.
 - i. Return to the root config prompt by typing three periods (...):

```
(config firewall zone LAN2_isolation_zone)> ... (config)>
```

ii. Add the new packet filter:

```
(config)> add firewall filter end (config firewall filter 2)>
```

iii. Set the label for the filter:

```
(config firewall filter 2)> label "Allow LAN2_isolation_zone to External" (config firewall filter 2)>
```

iv. Set the source zone to LAN2_isolation_zone:

```
(config firewall filter 2)> src_zone LAN2_isolation_zone (config firewall filter 2)>
```

v. Set the destination zone to **external**:

```
(config firewall filter 2)> dst_zone external (config firewall filter 2)>
```

d. Create a firewall filter to drop traffic from the **Internal** zone (used by the **LAN1** interface) to the **LAN2** isolation zone:

Firewall filters are applied in the order that they are listed. As a result, in order to drop traffic from the **Internal** zone to the **LAN2_isolation_zone**, this filter must be added before the **Allow all outgoing traffic** filter, which allows the **Internal** zone to have access to any zone. In this example, we will add the new to the first position in the list (index position **0**).

i. Add the new packet filter:

(config firewall filter 2)> add .. 0 (config firewall filter 0)>

ii. Set the label for the filter:

(config firewall filter 0)> label "Drop traffic from Internal to LAN2_isolation_zone" (config firewall filter 0>

iii. Set the source zone to internal:

(config firewall filter 0)> src_zone internal (config firewall filter 0)>

iv. Set the destination zone to **LAN2_isolation_zone**:

(config firewall filter 0)> dst_zone LAN2_isolation_zone (config firewall filter 0)>

v. Set the filter to drop traffic between the zones:

(config firewall filter 0)> action drop (config firewall filter 0)>

5. Create a new LAN:

By default, the IX20W device comes with one preconfigured LAN, which includes the default access point. We will use that LAN for the default access point, and create a new LAN for the second access point.

a. Return to the root config prompt by typing three periods (...):

(config firewall filter 0)> ... (config)>

b. Add the new LAN:

(config)> add network interface LAN2 (config network interface LAN2)>

c. Set the device to the new Wi-Fi access point:

(config network interface LAN2)> device /network/wifi/ap/new_AP (config network interface LAN2)>

d. Set the zone to LAN2_isolation_zone:

(config network interface LAN2)> zone LAN2_isolation_zone (config network interface LAN2)>

e. Set the IP address and subnet mask of the LAN:

(config network interface LAN2)> ipv4 address *address/mask* (config network interface LAN2)>

f. Enable the DHCP server:

(config network interface LAN2)> ipv4 dhcp_server enable true (config network interface LAN2)>

6. Save the configuration and apply the change.

(config network interface LAN2)> save Configuration saved.

7. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configure a Wi-Fi client and add client networks

Required configuration items

- Create the Wi-Fi client.
- The IX20W device's Wi-Fi radio that the Wi-Fi client will use.
- SSID of the access point that the client will log into.
- The encryption type used by the access point:
 - If a personal or mixed mode option is selected, identify the Pre-shared key.
 - If an enterprise option is selected:
 - Select the Extensible Authentication Protocol (EAP), one of:
 - TLS: Client certificate authentication.

If TLS is selected, include:

- The username.
- The CA certificate in PEM format.
- The client certificate in PEM format.
- The private key in PEM format.
- (Optional) The private key passphrase.
- PEAP: Username/password authentication.

If PEAP is selected, identify the username and password.

 SCEP certificates: Simple Certificate Enrollment Protocol (SCEP) certificate management.

If SCEP certificates is selected:

- Identify the username.
- Select the SCEP client. See Configure a Simple Certificate Enrollment Protocol client for information about SCEP clients.
- WAN assignment. Once you configure a Wi-Fi client, you must assign the Wi-Fi client to a WAN. See Wide Area Networks (WANs) and Wireless Wide Area Networks (WWANs) for further information.

Additional configuration items

- Enable and configure background scanning, which allows the Wi-Fi client to move between access points that have the same SSID as their signal strength varies.
- Additional access points that client will attempt to use. If connection to one access point fails, the device will attempt to connect to the next access point in the list.

Note The IX20W device supports a maximum of ten enabled Wi-Fi clients, regardless of the number of enabled access points.

To configure a Wi-Fi client:



- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.




The **Configuration** window is displayed.

- 3. Click Network > WiFi > Client mode connections.
- 4. For **Add WiFi client:**, type the name of the client and click %



The Wi-Fi client configuration window is displayed.

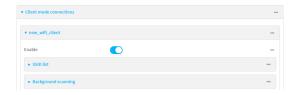

New Wi-Fi clients are enabled by default. To disable, toggle off **Enable**.

- 5. Configure the Wi-Fi network that the client will use:
 - a. Click to expand SSID list.
 - b. Enter the SSID of the access point that the client will use to connect to the Wi-Fi network.
 - c. Select the type of **Encryption** used by the access point.
 - If a personal or mixed mode is selected, for Pre-shared key, enter the password that the client will use to connect to the access point.

Note If you need to configure a Wi-Fi passphrase with any non-printable ASCII characters, you can use the wpa_passphrase tool to generate the appropriate preshared key. The wpa_passphrase command is available in the shell console of a DAL OS Digi device. For details about the command, see the wpa_passphrase Linux command.

- If WPA2 Enterprise is selected:
 - Select the Extensible Authentication Protocol (EAP), one of:
 - TLS: Client certificate authentication.

If **TLS** is selected, include:

- The Username.
- The CA certificate in PEM format.
- The Client certificate in PEM format.
- The **Private key** in PEM format.
- (Optional) The Private key passphrase.
- **PEAP**: Username/password authentication.

If **PEAP** is selected, identify the **Username** and **Password**.

 SCEP certificates: Simple Certificate Enrollment Protocol (SCEP) certificate management.

If **SCEP certificates** is selected:

- o Identify the Username.
- Select the SCEP Client. See Configure a Simple Certificate Enrollment Protocol client for information about SCEP clients.
- 6. (Optional) Configure Background scanning.

Background scanning allows the device to scan for nearby access points and to move between access points that have the same SSID that is configured for the client connection, based on the signal strength of the access points.


a. Click to expand Background scanning.



- b. Click Enable background scanning to enable.
- c. For **Scan threshold**, enter a value in dB that is used to determine the scanning frequency. The allowed value is an integer between-**113** and **0**.

The **Scan threshold** works with the **Short interval** and **Long interval** options to determine how often the device should scan for available access points:

- If the signal strength from the access point to which the client is currently connected is below the Scan threshold, it will use the Short interval to determine how often to scan for available access points.
- If the signal strength from the access point to which the client is currently connected is stronger the Scan threshold, it will use the Long interval to determine how often to scan for available access points.
- If Short interval and Long interval are set to the same value, Scan threshold is ignored. For example, the default configuration has both Short interval and Long interval set to 1 second, which means that the device will scan for access points once per second regardless of the Scan threshold.
- d. For **Short interval**, type the number of seconds to wait between scans for access points, when the signal strength from the access point to which the client is currently connected is below the **Scan threshold**.
- e. For **Long interval**, type the number of seconds to wait between scans for access points, when the signal strength from the access point to which the client is currently connected is stronger than the **Scan threshold**.
- f. Click to expand Scan frequencies list. You must add one or more frequency to scan:
 - i. Click %to add a scan frequency.
 - ii. Select a frequency.
 - Repeat for additional frequencies.
- g. To add a channel, click Add Scan frequency and select the appropriate channel.

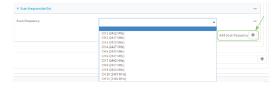

7. Click Apply to save the configuration and apply the change.

After you configure a Wi-Fi client, you must assign the Wi-Fi client to a WAN. See Wide Area Networks (WANs) and Wireless Wide Area Networks (WWANs) for further information.

Command line

Select the device in Remote Manager and click Actions > Open Console, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

> config (config)>

3. Create a new Wi-Fi client:

(config)> add network wifi client new_client (config network wifi client new_client)>

New clients are enabled by default.

- 4. Configure the Wi-Fi network that the client will use:
 - a. Set the SSID of the access point that the client will use to connect to the Wi-Fi network:

(config network wifi client new_client)> ssid 0 ssid *value* (config network wifi client new_client)>

where value is the SSID of the access point.

b. Set the encryption type for the access point:

(config network wifi client new_client)> ssid 0 encryption type *value* (config network wifi client new_client)>

where value is the type of encryption used by the access point. Allowed values are:

- **none**: no encryption.
- owe: WPA3 Enhanced Open, which uses Opportunistic Wireless Encryption (OWE) technology to provide encryption for Wi-Fi networks that do not use password protection.
- **psk**: WPA personal encryption.
- mixedpsk: Uses both WPA and WPA2 personal encryption.
- psk2: WPA2 personal encryption.
- psk2sae: Uses WPA2-PSK/WPA3-AES mixed mode.
- sae: Uses WPA3 Personal mode.
- wpa2: WPA2 enterprise encryption.

Note When Primary Responder mode is enabled, the WPA personal security mode is not available, and the **psk** and **mixed psk** options are not available. For more information about Primary Responder mode, see Differences between standard firmware operation and Primary Responder mode.

- c. If the type of encryption is set to:
 - psk, mixedpsk, psk2, psk2sae, or sae, set the password that the client will use to connect to the access point:

(config network wifi client new_client)> ssid 0 encryption key_psk2 password (config network wifi client new_client)>

Note If you need to configure a W-Fi passphrase with any non-printable ASCII characters, you can use the wpa_passphrase tool to generate the appropriate preshared key. The wpa_passphrase command is available in the shell console of a DAL OS Digi device. For details about the command, see the wpa_passphrase Linux command.

wpa2:

i. Set the Extensible Authentication Protocol (EAP):

(config network wifi client new_client)> ssid 0 encryption eap_type value (config network wifi client new_client)>

where value is one of:

- peap: Username/password authentication. If peap is set:
 - i. Set the username:

(config network wifi client new_client)> ssid 0 encryption id_wpa2 username
(config network wifi client new_client)>

ii. Set the password:

(config network wifi client new_client)> ssid 0 encryption password_wpa2 password
(config network wifi client new_client)>

- scep: Simple Certificate Enrollment Protocol (SCEP) certificate management. If scep is set:
 - i. Set the username:

(config network wifi client new_client)> ssid 0 encryption id_wpa2
username
(config network wifi client new_client)>

- ii. Set the SCEP client:
 - i. Use the ?to determine available SCEP clients:

(config network wifi client new_client)> ssid 0 encryption scep_client?

SCEP Client: The SCEP client which this Wi-Fi client will use to download the

necessary keys and certificates from the SCEP server.

Format:

SCEP_test_client SCEP_test_client1 Current value:

(config network wifi client new_client)>

ii. Set the SCEP client, for example:

(config network wifi client new_client)> ssid 0 encryption scep_client SCEP_test_client (config network wifi client new_client)>

See Configure a Simple Certificate Enrollment Protocol client for information about SCEP clients.

- tls: Client certificate authentication. If tls is selected:
 - i. Set the username:

(config network wifi client new_client)> ssid 0 encryption id_wpa2 username
(config network wifi client new_client)>

ii. Set the CA certificate by using the **ca_cert** paramater and pasting the certificte in PEM format:

(config network wifi client new_client)> ssid 0 encryption ca_cert certificate (config network wifi client new_client)>

iii. Set the client certificate by using the client_cert paramater and pasting the certificte in PEM format:

(config network wifi client new_client)> ssid 0 encryption client_cert
certificate
(config network wifi client new_client)>

iv. Set the private key by using the **private_key** paramater and pasting the private key in PEM format:

(config network wifi client new_client)> ssid 0 encryption private_key *key* (config network wifi client new_client)>

v. (Optional) Set the private key passphrase:

(config network wifi client new_client)> ssid 0 encryption private_key_ passphrase passphrase (config network wifi client new_client)>

5. (Optional) Configure background scanning.

Background scanning allows the device to scan for nearby access points and to move between access points that have the same SSID that is configured for the client connection, based on the signal strength of the access points.

a. Enable background scanning:

(config network wifi client new_client)> background_scanning enable true (config network wifi client new_client)>

 Set the scan threshold (bgscan_strength), in dB, that is used to determine the scanning frequency.

(config network wifi client new_client)> bgscan_strength *value* (config network wifi client new_client)>

where value is an integer between -113 and 0.

The scan threshold works with the short and long intervals (**bgscan_short_interval** and **bgscan_long_interval**) to determine how often the device should scan for available access points:

- If the signal strength from the access point to which the client is currently connected is below the value of bgscan_strength, it will use bgscan_short_interval to determine how often to scan for available access points.
- If the signal strength from the access point to which the client is currently connected is stronger than the value of bgscan_strength, it will use bgscan_long_interval to determine how often to scan for available access points.
- If bgscan_short_interval and bgscan_long_interval are set to the same value, bgscan_strength is ignored. For example, the default configuration has both bgscan_short_interval and bgscan_long_interval set to 1 second, which means that the device will scan for access points once per second regardless of the value of bgscan_strength.
- c. Set the number of seconds to wait between scans for access points, when the signal strength from the access point to which the client is currently connected is below the value of bgscan_strength:

(config network wifi client new_client)> bgscan_short_interval value (config network wifi client new_client)>

where value is any integer greater than 0. The default is 1.

d. Set the number of seconds to wait between scans for access points, when the signal strength from the access point to which the client is currently connected is greater than the value of bgscan_strength:

(config network wifi client new_client)> bgscan_long_interval value (config network wifi client new_client)>

where value is any integer greater than 0. The default is 1.

e. Configure the frequencies that will be scanned for available access points.

The IX20W device has three preconfigured frequencies:

- 2412 MHz
- 2437 MHz
- 2462 MHz

You can delete the preconfigured frequencies and add additional frequencies. At least one frequencies is required.

- f. To delete a preconfigured frequencies:
 - Use the **show** command to determine the index number of the channel to be deleted:

```
(config network wifi client new_client)> show background_scanning scan_freq 0 2412 1 2437 2 2462 (config network wifi client new_client)>
```

ii. Use the appropriate index number to delete the channel. For example, to delete the 2412 frequency:

```
(config network wifi client new_client)> del 0 (config network wifi client new_client)>
```

- g. To add a frequency:
 - i. Use the ?with an existing index number to determine the allowed values for frequencies:

```
(config network wifi client new_client)> background_scanning scan_freq 1
```

Scan frequency: Enable this frequency in the background scan.

Format:

2412

2417

2422

2427

2432

2437

2442

2442

2452

2457

2462

Current value: 2437

ii. Add the appropriate frequency. For example, to add the **2457** frequency to the end of the list:

```
(config network wifi client new_client)> add background_scanning scan_freq end 2457 (config network wifi client new_client)>
```

6. Save the configuration and apply the change.

```
(config network wireless client new_client)> save Configuration saved.
```

>

7. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

After you configure a Wi-Fi client, you must assign the Wi-Fi client to a WAN. See Wide Area Networks (WANs) and Wireless Wide Area Networks (WWANs) for further information.

Show Wi-Fi access point status and statistics

You can show summary status for all Wi-Fi access points, and detailed status and statistics for individual Wi-Fi access points.



Log into the IX20 WebUI as a user with full Admin access rights.

- 1. On the main menu, click Status.
- 2. Under Connections, click Wi-Fi > Access Points.

Command line Show summary of Wi-Fi access points

To show the status and statistics for W-Fi access points, use the show wifi ap command.

- 1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.
 - Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
- 2. At the Admin CLI prompt, type show wifi ap:

```
> show wifi ap

AP Enabled Status SSID BSSID
-------
my_AP true up my_SSID 01:41:D1:14:36:37
digi_ap true up Digi2 00:40:D0:13:35:36
>
```

3. To view information about both active and inactive access points, include the all parameter:

Show detailed status and statistics of a specific Wi-Fi access point

To show a detailed status and statistics of a Wi-Fi access point, use the **show wifi ap name** name command.

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the Admin CLI prompt, type show wifi ap name name:

```
> show wifi ap name my_AP
my_AP Access Point Status
Enabled
              : true
Status
             : up
SSID
             : my_AP
Security
             : none
Channel
Channel Width
Radio
       : wifi
BSSID
             : 01:41:D1:14:36:37
Client
           Signal RX Bytes TX Bytes Uptime
cc:c0:78:34:d5:a2 -68 260997 279481 801
```

Show Wi-Fi client status and statistics

You can show summary status for all Wi-Fi clients, and detailed status and statistics for individual Wi-Fi clients.



Log into the IX20 WebUI as a user with full Admin access rights.

- 1. On the main menu, click Status.
- 2. Under Connections, click Wi-Fi > Clients.

Command line Show summary of Wi-Fi clients

To show the status and statistics for Wi-Fi client, use the show wifi client command.

- 1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.
 - Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
- 2. At the Admin CLI prompt, type show wifi client:

```
> show wifi client

Client Enabled SSID Status Signal MAC Address
-------
my_client true my_SSID up -43 91:fe:86:d1:0e:81
```

>

3. To view information about both active and inactive clients, include the **all** parameter:

```
> show wifi client all

Client Enabled SSID Status Signal MAC Address
------
my_client true my_SSID up -43 91:fe:86:d1:0e:81
client2 true SSID2 down
>
```

Show detailed status and statistics of a specific Wi-Fi client

To show a detailed status and statistics of a Wi-Fi client, use the **show wifi client name name** command.

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the Admin CLI prompt, type show wifi cleint name name:

Client : my_client
Enabled : true

> show wifi client name my_client

Enabled : true
SSID : my_SSID
Status : up
Signal : -43

MAC Address : 91:fe:86:d1:0e:81

Channel: 48
Radio: wifi1
TX Power: 23
Link Quality: 67/70

BSSID : 6D:B9:DD:BD:EE:C4

>

Hotspot

Hotspot is available for Wi-Fi-enabled models (IX20W), and offers the ability to create a publicly available hotspot, which allows you to provide internet access to users while restricting their ability to access other functionality on the IX20 device, as well as applying bandwidth limits, authenticating users, and other features. The IX20 device's implementation of hotspot uses a "captive portal" page—a web page that is displayed to users when they first connect to the hotspot and requires users to perform some specific action before they are granted access to the internet, such as accepting terms of use, logging in with a shared password or a username/password combination, or using a payment service to purchase web access via your hotspot.

Authentication of hotspot users can be performed by the device itself, by an external RADIUS server or other remote server, or by HotspotSystem (a cloud-based hotspot management and billing service). The device provides sample html pages to be used for authentication, and you can modify these pages, add your own pages, or host HTML login pages on a remote web server.

Note Sample HTML pages provided by your IX20 device are located in the /etc/config/hotspot directory on your device's filesystem. The files are created when you enable a hotspot and its associated access point or bridge for the first time, and cannot be accessed prior to that.

This chapter contains the following topics:

Hotspot authentication modes

During hotspot configuration, you select one the following authentication modes for the hotspot:

- Click-through: Requires each user to accept the terms and conditions. The sample HTML page included with your IX20 device for click-through authentication is terms.html.
 See Create a new hotspot for information about configuring hotspot for click-through authentication.
- Local shared password: Requires each user to enter a password. This password is validated locally on the IX20 device, and the password is the same for all users. The sample HTML page included with your IX20 device for local shared password authentication is password.html.
 See Configure the hotspot to use local shared password authentication for information about configuring hotspot for local shared password authentication.
- RADIUS shared password: Requires each user to enter a password. This password is validated by an external RADIUS server, and the password is the same for all users. The RADIUS server should be "white listed" by including it in the Walled garden > Allowed domains or Walled garden > Allowed subnets setting for the hotspot, which allows unauthenticated hotspot clients to access the server for authentication. The sample HTML page included with your IX20 device for RADIUS shared password authentication is password.html.
 See Configure the hotspot to use RADIUS shared password authentication for information about configuring hotspot for RADIUS shared password authentication.
- RADIUS users: Requires each user to enter username and password credentials that are established on an external RADIUS server. The credentials are validated by the RADIUS server. The RADIUS server should be "white listed" by including it in the Walled garden > Allowed domains or Walled garden > Allowed subnets setting for the hotspot, which allows unauthenticated hotspot clients to access the server for authentication. The sample HTML page included with your IX20 device for RADIUS shared password authentication is login.html.
 - See Configure the hotspot to use RADIUS users authentication for information about configuring hotspot for RADIUS users authentication.
- HotspotSystem: Requires each user to be authenticated by HotspotSystem, a cloud hotspot service that supports various free and paid authentication methods, including social media account, SMS, voucher, and PayPal. Domains needed for HotspotSystem authentication, payment options, and social media login should be "white listed" by including them in the Walled garden > Allowed domains or Walled garden > Allowed subnets setting for the hotspot, which allows unauthenticated hotspot clients to access them for authentication. When HotspotSystem is selected for the authentication mode, the browser is redirected to the HotspotSystem web page.

See Configure the hotspot to use HotspotSystem authentication for information about configuring hotspot for HotspotSystem authentication.

Prior to authentication, a hotspot client that attempts to make an HTTP request to any domain other than those included in white-listed sites in the **Walled garden** > **Allowed domains** or **Walled garden** > **Allowed subnets** settings will be redirected to the login webpage. HTTPS requests will time out, because the hotspot cannot provide a valid SSL certificate for the requested domain. Requests made via any other protocol will also time out. Most operating systems will detect this scenario and automatically notify users to open the login page in a web browser.

Hotspot DHCP server

When the hotspot is enabled on the IX20 device, it automatically enables a DHCP server. During hotspot configuration, you assign an IPv4 address to the hotspot, and the DHCP server then uses the subnet of the hotspot's IP address, along with the hotspot's subnet mask, to assign IPv4 addresses to clients that connect to the hotspot.

To prevent the hotspot's DHCP server from assigning IP addresses that are already in use elsewhere in your local network, the hotspot must use a subnet that is not currently being used in your local network.

Hotspot security

A typical hotspot is an open network. This means that traffic transferred between the hotspot and the hotspot clients is not encrypted and can be intercepted by a packet sniffer or similar technology. However, the sample HTML login pages provided with your IX20 device use CHAP-MD5 authentication, providing a level of security during the authentication process. Additionally, websites that use the HTTPS protocol provide end-to-end encryption between the browser and the web server.

Hotspot clients are typically untrusted and only given access to the WAN interface on the device. The hotspot firewall zone settings prevent hotspot clients from accessing any of the other interfaces on the device (such as the LAN and VPN interfaces). Additionally, the hotspot zone prevents hotspot clients from accessing the device itself (for example, via the web interface or SSH).

Hotspot configuration

This section provides information about enabling and configuring the default hotspot that is provided with your IX20 installation, as well as creating a new hotspot and configuring the type of authentication mode you select for your hotspot.

This section contains the following topics:

Enable hotspot using the default configuration

The default configuration of the IX20 device's hotspot is:

	Default configuration
Hotspot	 Name: hotspot Disabled Authentication mode: Click-through IP address: 10.1.0.1/24 DHCP server: Automatically enabled DHCP server lease range: 100-250 Bandwidth limits: Maximum download speed: 10000 Kbps Maximum upload speed: 10000 Kbps
Bridge	 Name: hotspot_bridge Disabled 2.4 GHz Wi-Fi access point: Digi Hotspot AP (Wi-Fi)
Access points	 Name: Digi Hotspot AP (Wi-Fi) Disabled SSID: Digi Hotspot Encryption: Open (unencrypted) Hotspot access points should be set to open (unencrypted). See Hotspot security for further information.
LAN	 Name: LAN hotspot Disabled Device: hotspot_bridge IP address: 192.168.100.1/30 This IP address is not used by the hotspot or the hotspot's DHCP server. It must be a unique IP address that is not used elsewhere in your network. DHCP server: Disabled The hotspot will use the hotspot's DHCP server rather than the LAN's DHCP server.

To use the default hotspot with click-through authentication, enable the hotspot, the bridge, the access points, and the LAN.

In additional to enabling the default hotspot configuration, you may also want to:

- Change the default hotspot SSID.
- Change the default authentication method:
 - Configure the hotspot to use local shared password authentication.
 - Configure the hotspot to use RADIUS shared password authentication.

- Configure the hotspot to use RADIUS users authentication.
- Configure the hotspot to use HotspotSystem authentication.
- Change the default hotspot IP address and subnet.
- Modify the sample local HTML page that the IX20 device uses by default for click-through authentication. See Edit sample hotspot HTML pages for information.

₹ Web

- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.




The Configuration window is displayed.


- 3. Enable the hotspot:
 - a. Click Network > Hotspots > hotspot.
 - b. Click Enable hotspot.



- 4. Enable the hotspot access points:
 - a. Click Network > Wi-Fi > Access points > Digi Hotspot AP (Wi-Fi).
 - b. Click Enable.

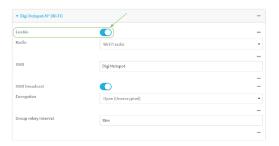

- 5. Enable the hotspot bridge:
 - a. Click Network > Bridges > hotspot_bridge.
 - b. Click Enable.

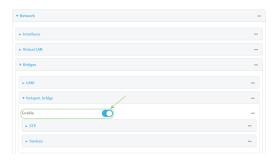

- 6. Enable the hotspot LAN:
 - a. Click **Network > Interface > LAN > LAN hotspot**.
 - b. Click Enable.



7. Click **Apply** to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

> config (config)>

3. Enable the hotspot:

(config)> network hotspot hotspot enable true (config)>

4. Enable the hotspot access points:

(config)> network ap digi_hotspot_ap
(config)>

5. Enable the hotspot bridge:

(config)> network bridge hotspot_bridge enable true (config)>

6. Enable the hotspot LAN:

(config)> network interface lan_hotspot enable true (config)>

7. Save the configuration and apply the change.

(config)> save Configuration saved.

>

8. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Change the default hotspot SSID

Required configuration items

- Enable default hotspot configuration. See Enable hotspot using the default configuration for instructions.
- An SSID for the hotspot.



- Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- a. Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.


Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

- 3. Click Network > Wi-Fi > Access points > Digi Hotspot AP (Wi-Fi).
- 4. Change the default SSID, Digi Hotspot, to your preferred value.

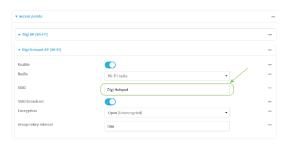

5. Click **Apply** to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:



3. Change the SSID for digi_hotspot_ap to your preferred value:

(config)> network wifi ap digi_hotspot_ap ssid value

where *value* is a string of 1 to 32 characters. If the value contains spaces, enclose in quote marks (").

4. Save the configuration and apply the change.

```
(config)> save
Configuration saved.
>
```

5. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Change the default hotspot IP address and subnet

Required configuration items

- Enable default hotspot configuration. See Enable hotspot using the default configuration for instructions.
- An IP address and subnet for the hotspot.

Additional configuration items

- Hotspot DHCP server settings:
 - · Lease time.
 - · Lease range start and end.

To change the default hotspot IP address and subnet:



- Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:


a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

- 3. Click Network > Hotspots > hotspot.
- 4. Click to expand IPv4.

5. For Address, enter a new IP address and subnet mask.

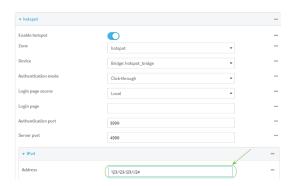

6. (Optional) Change the default DHCP server configuration.

Note The hotspot DHCP server is automatically enabled and cannot be disabled.

a. Click to expand DHCP server.



b. For **Lease time**, type the amount of time that a client DHCP lease is valid. The default is 10 minutes.

Allowed values are any number of weeks, days, hours, minutes, or seconds, and take the format *number*{w|d|h|m|s}.

For example, to set Lease time to ten minutes, enter 10m or 600s.

- c. For Lease range start, type the lowest IP address in the range to assign to hotspot clients. The value entered here represents the low order byte of the IP address, and is combined with the subnet of the hotspot's static IP address. The default is 100.
- d. For Lease range end, type the highest IP address in the range to assign to hotspot clients. The value entered here represents the low order byte of the IP address, and when DHCP addresses are assigned to client, this number is combined with the subnet of the hotspot's static IP address. The default is 250.
- 7. Click **Apply** to save the configuration and apply the change.

Command line

Select the device in Remote Manager and click Actions > Open Console, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type config to enter configuration mode:

> config (config)>

3. Change the default hotspot IP address and subnet mask:

(config)> network hotspot hotspot ipv4 address *ip_address/mask* (config)>

4. (Optional) Change the default DHCP server configuration.

Note The hotspot DHCP server is automatically enabled and cannot be disabled.

a. Set the amount of time that a client DHCP lease is valid:

(config)> network hotspot hotspot ipv4 address dhcp_server lease_time *value* (config)>

where *value* is any number of weeks, days, hours, minutes, or seconds, and takes the format *number*{w|d|h|m|s}.

For example, to set lease_time to ten minutes, enter either 10m or 600s:

(config)> network hotspot hotspot ipv4 dhcp_server lease_time 600s (config)>

The default is 10 minutes.

b. Set the lowest IP address in the range to assign to hotspot clients. This value represents the low order byte of the IP address, and is combined with the subnet of the hotspot's static IP address.

(config)> network hotspot hotspot ipv4 address dhcp_server lease_start *value* (config)>

where value is any integer between 1 and 254. The default is 100.

c. Set the highest IP address in the range to assign to hotspot clients. This value represents the low order byte of the IP address, and is combined with the subnet of the hotspot's static IP address.

(config)> network hotspot hotspot ipv4 address dhcp_server lease_end *value* (config)>

where value is any integer between 1 and 254. The default is 250.

5. Save the configuration and apply the change.

(config)> save
Configuration saved.

6. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Change the default hotspot bandwidth limits

Required configuration items

- Enable default hotspot configuration. See Enable hotspot using the default configuration for instructions.
- Maximum download speed, in Kbps.
- Maximum upload speed, in Kbps.

To change the default hotspot IP address and subnet:



- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- a. Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:


a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

- 3. Click Network > Hotspots > hotspot.
- 4. For **Maximum download speed**, type the maximum download speed in kilobytes per second (Kbps).

Note Setting the **Maximum download speed** to **0** means that the bandwidth is unlimited. This can have an adverse effect on performance.

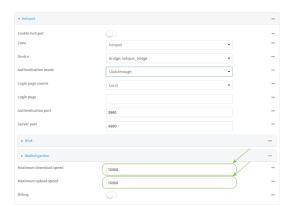

5. For Maximum upload speed, type the maximum upload speed in kilobytes per second (Kbps).

Note Setting the **Maximum upload speed** to **0** means that the bandwidth is unlimited. This can have an adverse effect on performance.

6. Click **Apply** to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions** > **Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

> config (config)>

3. Change the default maximum download speed:

(config)> network hotspot hotspot bandwidth_max_down value (config)>

where *value* is an integer between 1 and 100000 and represents the maximum download speed in Kbps.

Note Setting the maximum download speed to **0** means that the bandwidth is unlimited. This can have an adverse effect on performance.

4. Change the default maximum upload speed:

(config)> network hotspot hotspot bandwidth_max_up value (config)>

where *value* is an integer between 1 and 100000 and represents the maximum upload speed in Kbps.

Note Setting the maximum upload speed to **0** means that the bandwidth is unlimited. This can have an adverse effect on performance.

5. Save the configuration and apply the change.

```
(config)> save
Configuration saved.
```

6. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Add an Ethernet port to the default hotspot

Required configuration items

- Enable default hotspot configuration. See Enable hotspot using the default configuration for instructions.
- Ethernet port to be added to the hotspot.

To add an Ethernet port to the default hotspot:



- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.



The **Configuration** window is displayed.

3. Click Network > Bridges > hotspot_bridge > Devices.

4. Click the 1/2 to add a new device.



5. By default, For **Device**, select the appropriate Ethernet port.



By default, the **ETH1** device is configured as the device for the **ETH1** interface, and **ETH2** configured as device in the **LAN** bridge, which is used by the **ETH2** interface. As a result, when you add an Ethernet port to the hotspot, you may need to reconfigure the Ethernet port configuration for other interfaces. For example, to remove the port from the **LAN** bridge:

- a. Click Network > Bridges > LAN > Devices.
- b. Click the ... menu icon next to the Ethernet: device entry and select Delete.



6. Click Apply to save the configuration and apply the change.

Command line

Select the device in Remote Manager and click Actions > Open Console, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

> config (config)>

3. Display a list of available devices by using the tab autocomplete feature:

(config)> add network bridge hotspot_bridge device end /network/<tab>

/network/device/eth1 /network/device/eth2

/network/device/loopback /network/bridge/hotspot_bridge

/network/bridge/lan /network/wifi/ap/digi_ap

/network/wifi/ap/digi_hotspot_ap

(config)> add network bridge hotspot_bridge device end /network/

4. Add a new device. For example, to add the device:

(config)> add network bridge hotspot_bridge device end /network/device/eth (config)>

By default, the **ETH1** device is configured as the device for the **ETH1** interface, and **ETH2** configured as device in the **LAN** bridge, which is used by the **ETH2** interface. As a result, when you add an Ethernet port to the hotspot, you may need to reconfigure the Ethernet port configuration for other interfaces. For example, to remove the port from the **LAN** bridge:

a. Display the current LAN bridge configuration:

(config)> show network bridge lan device

0 /network/device/eth2

1 /network/wifi/ap/digi_ap

(config)>

b. Use the index number, **0**, to remove the device from the **LAN** bridge:

(config)> del network bridge lan1 device 0 (config)>

5. Save the configuration and apply the change.

(config)> save Configuration saved.

6. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Use policy routes with hotspot

When creating policy routes for hotspots, the source address should be set to use the hotspot zone:



- 1. Create a new routing policy. See Configure a routing policy for instructions.
- During configuration, for Source address:
 - a. For Type, select Zone.
 - b. For **Zone**, select **hotspot**.
- 3. Click **Apply** to save the configuration and apply the change.

Command line

- 1. Create a new routing policy. See Configure a routing policy for instructions.
- 2. During configuration, set the source address type to **zone**:

```
(config network route policy 0)> src type zone (config network route policy 0)>
```

3. Set the zone to hotspot:

```
(config network route policy 0)> src zone hotspot (config network route policy 0)>
```

4. Save the configuration and apply the change.

```
(config)> save
Configuration saved.
```

5. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Create a new hotspot

Required configuration items

- A device or bridge for the hotstpot.
 - If a bridge is used, it must be included in an interface with an assigned IP address.
- The authentication mode:
 - If Local shared password is selected for the authentication mode, include the password.
 - If **RADIUS shared password** or **RADIUS users** is selected for the authentication mode, include RADIUS configuration information.
 - If **HotspotSystem** is selected for the authentication mode, include HotspotSystem configuration information.

See Hotspot authentication modes for more information about authentication modes.

- The login page source, either **Local** or **Remote**.
 - If **Remote** is selected, include the IP address of fully-qualified domain name of the remote web server that serves the login page.
- An IP address and subnet for the hotspot.

Additional configuration items

- If the login page source is Local, include the name of the local HTML file, if different than the default.
- If the login page source is **Remote**, include the shared secret that the remote server and the hotspot. Used with cloud-based hotspot providers.
- The **Authentication port** used by the hotspot.
- The **Server port** used by the hotspot.

- Hotspot DHCP server settings:
 - · Lease time.
 - Lease range start and end.
- Walled garden configuration:
 - Domains that clients connected to the hotspot can access prior to the client being authenticated.
 - Subnets that clients connected to the hotspot can access prior to the client being authenticated.
- Maximum download speed, in Kbps.
- Maximum upload speed, in Kbps.
- Enable verbose logging.

To create a new hotspot:



- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- a. Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The Configuration window is displayed.

3. (Optional) Create new access points for the hotspot.

You can also use existing access points for the hotspot. Access Points that are assigned to a hotspot or to a bridge used by a hotspot cannot be used for any other purpose.

If more than one access point is being used by the hotspot, you must create a bridge that includes the access points.

- a. Click Configuration > Network > WiFi > Access points.
- b. For Add WiFi access point:, type a name for the access point and click Yo
- c. For **Radio**, select the appropriate Wi-Fi radio.

d. For SSID, type the SSID. Up to 32 characters are allowed.

This will be the SSID used by clients to connect to the hotspot. If you are creating multiple access points, each access point must have the same SSID.

e. For Encryption, select Open (Unencrypted).

Hotspot access points must use open (unencrypted) communication. See Hotspot security for more information.

- f. Add additional access points by following the above instructions.
- 4. (Optional) Create a new bridge and interface for the hotspot.

Note Hotspot bridges must also be part of an interface with a configured IP address.


- a. Click Network > Bridges.
- b. For **Add Bridge:**, type a name for the bridge and click %
- c. Add devices to the bridge:
 - i. Click to expand Devices.
 - ii. For Add device, click Yo
 - iii. Select the Device.
 - iv. Repeat to add additional devices.
- d. Create an interface for the bridge:
 - i. Click Configuration > Network > Interfaces.
 - ii. For **Add Interface**, create a new interface and click %
 - iii. For **Device**, select the bridge created above.
 - iv. Click to expand IPv4.
 - v. For Address, enter an IP address and subnet mask for the LAN. This IP address must be unique from all other interfaces.

Note This IP address is not the IP address of the hotspot. The hotspot IP address is configured during hotspot configuration.

- 5. Click Network > Hotspots.
- 6. For **Add Hotspot**, enter a name for the hotspot and click %



The new hotspot configuration appears.

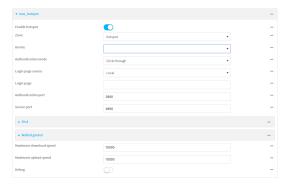

- 7. Hotspots are enabled by default when they are created. To disable, toggle off **Enable hotspot**.
- 8. For **Zone**, leave at the default setting of **hotspot**. The **hotspot** firewall zone provides the necessary firewall rules for hotspot functionality.
- 9. For **Device**, select an access point, and Ethernet port, or a bridge.
- For Authentication Mode, select one of the following:
 - Click-through: Requires each user to accept the terms and conditions.
 - Local shared password: Requires each user to enter a password. This password is validated locally on the IX20 device, and the password is the same for all users.
 See Configure the hotspot to use local shared password authentication for information about configuring hotspot for local shared password authentication.
 - RADIUS shared password: Requires each user to enter a password. This password is validated by an external RADIUS server, and the password is the same for all users.
 See Configure the hotspot to use RADIUS shared password authentication for information about configuring hotspot for RADIUS shared password authentication.
 - RADIUS users: Requires each user to enter username and password credentials that are established on an external RADIUS server. The credentials are validated by the RADIUS server.
 - See Configure the hotspot to use RADIUS users authentication for information about configuring hotspot for RADIUS users authentication.
 - HotspotSystem: Requires each user to be authenticated by HotspotSystem, a cloud hotspot service that supports various free and paid authentication methods, including social media account, SMS, voucher, and PayPal.
 - See Configure the hotspot to use HotspotSystem authentication for information about configuring hotspot for HotspotSystem authentication.
- 11. For Login page source, select either:
 - Local: Uses an HTML page for authentication that is stored locally on the IX20 device's filesystem, in the /etc/config/hotspot directory. Note that the hotspot directory is not visible until hotspot has been enabled for the first time.
 - Remote: Uses an HTML page for authentication that is served by a remote web server.
 - This parameter is not available if **HotspotSystem** is selected for the **Authentication mode**.
- (Optional) If Local is selected for Login page source, for Login page, type the name of the local HTML file used for authentication. This parameter is not available if HotspotSystem is selected for the Authentication mode.

Normally, this field should be left blank, and the device will use the default authentication HTML page. See Hotspot authentication modes for information about the default authentication HTML page used for each authentication mode.

If you upload a custom HTML file that uses a filename other than the default filename, type the custom filename here. See Upload custom hotspot HTML pages for more information about creating and uploading custom HTML files.

- (Optional) For Authentication port, type the port number that the hotspot authentication server will used. The default is 3990.
- 14. (Optional) For Server port, type the port number of the hotspot server. The default is 4990.
- 15. If Remote is selected for Login page source, click to expand Remote web server.
 - For FQDN, type the IP address or fully-qualified domain name or the remote web server that will be used for client authentication.
 - b. (Optional) For **Secret**, type the shared secret that the remote server and the hotspot. Used with cloud-based hotspot providers.
 - c. (Optional) Change the default DHCP server configuration.

Note The hotspot DHCP server is automatically enabled and cannot be disabled.

i. Click to expand DHCP server.



ii. For **Lease time**, type the amount of time that a client DHCP lease is valid. The default is 10 minutes.

Allowed values are any number of weeks, days, hours, minutes, or seconds, and take the format *number*{w|d|h|m|s}.

For example, to set Lease time to ten minutes, enter 10m or 600s.


- iii. For **Lease range start**, type the lowest IP address in the range to assign to hotspot clients. The value entered here represents the low order byte of the IP address, and is combined with the subnet of the hotspot's static IP address. The default is **100**.
- iv. For Lease range end, type the highest IP address in the range to assign to hotspot clients. The value entered here represents the low order byte of the IP address, and when DHCP addresses are assigned to client, this number is combined with the subnet of the hotspot's static IP address. The default is 250.
- 16. Click to expand Walled garden.

Walled garden settings define the "white list" of domains and subnets that unauthenticated clients are able to access. If external servers are used for client authentication, such as a RADIUS server or HotspotSystem, they should be included in the walled garden settings. If **Remote** has been selected for **Login page source**, the domain for the web server that is being use to serve the remote HTML files must be included in the white list defined in these fields.

- To add domains that can be accessed by the client prior to authentication:
 - a. Click to expand Allowed domains.
 - b. Click %to add a domain.
 - c. For **Domain**, type the hostname of the allowed domain.
 - d. Repeat to add additional domains.
- To add subnets that can be accessed by the client prior to authentication:
 - a. Click to expand Allowed subnets.
 - b. Click %to add a subnet.
 - c. For **Subnet**, type an IPv4 address and optional subnet mask, using the format IPv4_address[/netmask], or the keyword **any**.
 - d. Repeat to add additional subnets.
- 17. (Optional) For **Maximum download speed**, type the maximum download speed in kilobytes per second (Kbps).

Note Setting the **Maximum download speed** to **0** means that the bandwidth is unlimited. This can have an adverse effect on performance.

(Optional) For Maximum upload speed, type the maximum upload speed in kilobytes per second (Kbps).

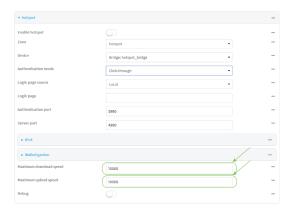

Note Setting the **Maximum upload speed** to **0** means that the bandwidth is unlimited. This can have an adverse effect on performance.

- 19. (Optional) Click **Debug** to enable verbose logging to the system log.
- 20. Click **Apply** to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

> config (config)>

(Optional) Create new access points for the hotspot.

You can also use existing access points for the hotspot. Access Points that are assigned to a hotspot or to a bridge used by a hotspot cannot be used for any other purpose.

If more than one access point is being used by the hotspot, you must create a bridge that includes the access points.

a. Create a new access point:

```
(config)> add network wifi ap new_hotspot_AP1 (config network wifi ap new_hotspot_AP1)>
```

New access points are enabled by default.

b. Set the SSID:

```
(config network wifi ap new_hotspot_AP1)> ssid my_SSID (config network wifi ap new_hotspot_AP1)>
```

This will be the SSID used by clients to connect to the hotspot. If you are creating multiple access points, each access point must have the same SSID. Up to 32 characters are allowed.

c. Set the encryption to open:

```
(config network wifi ap new_hotspot_AP1)> encryption type none (config network wifi ap new_hotspot_AP1)>
```

Hotspot access points must use open (unencrypted) communication. See Hotspot security for more information.

d. Type ... to return to the config prompt:

```
(config network wifi ap new_hotspot_AP1)> ... (config)>
```

- e. Add additional access points by following the above instructions.
- 4. (Optional) Create a new bridge and interface for the hotspot.

Note Hotspot bridges must also be part of an interface with a configured IP address.

a. Create a bridge:

```
(config)> add network bridge new_hotspot_bridge
(config network bridge new_hotspot_bridge)>
```

b. Add devices to the bridge:

i. Determine available devices:

(config network bridge new_hotspot_bridge)> interface lan device ?

Device: The network device used by this network interface.

Format:

/network/device/eth1 /network/device/eth2 /network/device/loopback

/network/bridge/hotspot_bridge

/network/bridge/lan

/network/wireless/ap/digi_ap

/network/wireless/ap/digi_hotspot_ap

Default value: /network/bridge/lan Current value: /network/bridge/lan

(config network bridge new_hotspot_bridge)>

ii. Add the appropriate device. For example, to add the Digi AP Wi-Fi access point:

(config network bridge new_hotspot_bridge)> add device end /network/wireless/ap/digi_ap (config)>

c. Type ... to return to the config prompt:

(config network bridge new_hotspot_bridge)> ... (config)>

d. Create an interface for the bridge:

(config)> add network interface hotspot_bridge_interface (config network interface hotspot_bridge_interface)>

e. Add the new bridge to the interface:

(config network interface hotspot_bridge_interface)> device /network/bridge/new_hotspot_bridge

(config network interface hotspot_bridge_interface)>

f. Set an IP address for the interface.

Note This IP address is not the IP address of the hotspot. The hotspot IP address is configured during hotspot configuration.

(config network interface hotspot_bridge_interface)> ipv4 address *ip_address/netmask* (config network interface hotspot_bridge_interface)>

g. Type ... to return to the config prompt:

(config network interface hotspot_bridge_interface)> ... (config)>

5. Create a new hotspot:

(config)> add network hotspot new_hotspot (config network hotspot new_hotspot)>

New hotspots are enabled by default.

■ To disable:

(config network hotspot new_hotspot)> enable false (config network hotspot new_hotspot)>

■ To enable, it it has been disabled:

(config network hotspot new_hotspot)> enable true (config network hotspot new_hotspot)>

- 6. Add devices to the bridge:
 - a. Determine available devices:

(config network bridge new_hotspot_bridge)> interface lan device ?

Device: The network device used by this network interface.

Format:

/network/device/eth1

/network/device/eth2

/network/device/loopback

/network/bridge/hotspot_bridge

/network/bridge/lan

/network/wireless/ap/digi ap

/network/wireless/ap/digi_hotspot_ap

Default value: /network/bridge/lan Current value: /network/bridge/lan

(config network bridge new_hotspot_bridge)>

b. Add the appropriate device. For example, to add the Digi AP Wi-Fi access point:

(config network bridge new_hotspot_bridge)> add device end /network/wireless/ap/digi_ap (config)>

- 7. Set an access point, and Ethernet port, or a bridge for the hotspot's device:
 - a. Determine available devices:

(config network hotspot new_hotspot)> device ?

Device: Device to use for this hotspot interface.

Format:

/network/device/eth1

/network/device/eth2 /network/device/loopback

/network/bridge/hotspot_bridge /network/bridge/lan /network/bridge/new_hotspot_bridge /network/wifi/ap/digi_ap /network/wifi/ap/digi_hotspot_ap /network/wifi/ap/new_hotspot_ap Current value:

(config network hotspot new_hotspot)>

b. Add the device:

(config network hotspot new_hotspot)> device /network/bridge/new_hotspot_bridge (config network hotspot new_hotspot)>

8. Set the authentication mode:

(config network hotspot new_hotspot)> auth value (config network hotspot new_hotspot)>

where *value* is one of:

- click through: Requires each user to accept the terms and conditions.
- local_shared_password: Requires each user to enter a password. This password is validated locally on the IX20 device, and the password is the same for all users.
 See Configure the hotspot to use local shared password authentication for information about configuring hotspot for local shared password authentication.
- radius_shared_password: Requires each user to enter a password. This password is validated by an external RADIUS server, and the password is the same for all users.
 See Configure the hotspot to use RADIUS shared password authentication for information about configuring hotspot for RADIUS shared password authentication.
- radius_user: Requires each user to enter username and password credentials that are established on an external RADIUS server. The credentials are validated by the RADIUS server.
 - See Configure the hotspot to use RADIUS users authentication for information about configuring hotspot for RADIUS users authentication.
- hotspotsystem: Requires each user to be authenticated by HotspotSystem, a cloud hotspot service that supports various free and paid authentication methods, including social media account, SMS, voucher, and PayPal.
 - See Configure the hotspot to use HotspotSystem authentication for information about configuring hotspot for HotspotSystem authentication.
- 9. Set the login page source. (This option is not available if **auth** is set to **hotspotsystem**.)

(config network hotspot new_hotspot)> login value (config network hotspot new_hotspot)>

where value is either:

 local: Uses an HTML page for authentication that is stored locally on the IX20 device's filesystem, in the /etc/config/hotspot directory. Note that the hotspot directory is not

visible until hotspot has been enabled for the first time.

- remote: Uses an HTML page for authentication that is served by a remote web server.
- 10. (Optional) If **local** is selected for **login**, set the name of the local HTML file used for authentication. (This option is not available if **auth** is set to **hotspotsystem**.)

```
(config network hotspot new_hotspot)> local_page HTML_filename (config network hotspot new_hotspot)>
```

Normally, this parameter should be left blank, and the device will use the default authentication HTML page. See Hotspot authentication modes for information about the default authentication HTML page used for each authentication mode.

If you upload a custom HTML file that uses a filename other than the default filename, type the custom filename here. See Upload custom hotspot HTML pages for more information about creating and uploading custom HTML files.

11. (Optional) Set the port number that the hotspot authentication server will used.

```
(config network hotspot new_hotspot)> auth_port port
(config network hotspot new_hotspot)>
```

The default is 3990.

(Optional) Set the port number of the hotspot server.

```
(config network hotspot new_hotspot)> server_port port
(config network hotspot new_hotspot)>
```

The default is 4990.

- 13. If remote is selected for login:
 - a. Set the IP address or fully-qualified domain name or the remote web server that will be used for client authentication:

```
(config network hotspot new_hotspot)> remote url address
(config network hotspot new_hotspot)>
```

 a. (Optional) Set the shared secret that the remote server and the hotspot. Used with cloudbased hotspot providers.

```
(config network hotspot new_hotspot)> remote secret secret (config network hotspot new_hotspot)>
```

14. (Optional) Change the default DHCP server configuration.

Note The hotspot DHCP server is automatically enabled and cannot be disabled.

a. Set the amount of time that a client DHCP lease is valid:

```
(config network hotspot new_hotspot)> ipv4 address dhcp_server lease_time value (config network hotspot new_hotspot)>
```

where *value* is any number of weeks, days, hours, minutes, or seconds, and takes the format *number*{w|d|h|m|s}.

For example, to set lease_time to ten minutes, enter either 10m or 600s:

(config network hotspot new_hotspot)> ipv4 dhcp_server lease_time 600s (config network hotspot new_hotspot)>

The default is 10 minutes.

b. Set the lowest IP address in the range to assign to hotspot clients. This value represents the low order byte of the IP address, and is combined with the subnet of the hotspot's static IP address.

(config network hotspot new_hotspot)> ipv4 address dhcp_server lease_start *value* (config network hotspot new_hotspot)>

where value is any integer between 1 and 254. The default is 100.

c. Set the highest IP address in the range to assign to hotspot clients. This value represents the low order byte of the IP address, and is combined with the subnet of the hotspot's static IP address.

(config network hotspot new_hotspot)> ipv4 address dhcp_server lease_end *value* (config network hotspot new_hotspot)>

where value is any integer between 1 and 254. The default is 250.

15. Set walled garden settings.

Walled garden settings define the "white list" of domains and subnets that unauthenticated clients are able to access. If external servers are used for client authentication, such as a RADIUS server or Hotspot System, they should be included in the walled garden settings.

Add domains that can be accessed by the client prior to authentication:

(config network hotspot new_hotspot)> add walled_garden domains end *domain_name* (config network hotspot new_hotspot)>

Repeat to add additional domains.

Add IP addresses and subnets that can be accessed by the client prior to authentication:

(config network hotspot new_hotspot)> add walled_garden subnets end *value* (config network hotspot new_hotspot)>

where *value* is an IPv4 address and optional subnet mask, using the format *IPv4_address[/netmask]*, or the keyword **any**.

Repeat to add additional IP addresses or subnets.

16. (Optional) Change the default maximum download speed:

(config network hotspot new_hotspot)> bandwidth_max_down *value* (config network hotspot new_hotspot)>

where *value* is an integer between 1 and 100000 and represents the maximum download speed in Kbps.

Note Setting the maximum download speed to **0** means that the bandwidth is unlimited. This can have an adverse effect on performance.

17. (Optional) Change the default maximum upload speed:

(config network hotspot new_hotspot)> bandwidth_max_up value (config network hotspot new_hotspot)>

where *value* is an integer between 1 and 100000 and represents the maximum upload speed in Kbps.

Note Setting the maximum upload speed to **0** means that the bandwidth is unlimited. This can have an adverse effect on performance.

18. (Optional) Enable verbose logging to the system log:

(config network hotspot new_hotspot)> debug true (config network hotspot new_hotspot)>

19. Save the configuration and apply the change.

(config)> save
Configuration saved.

20. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configure the hotspot to use local shared password authentication

Local shared password authentication requires each user to enter a password. This password is validated locally on the IX20 device, and the password is the same for all users.

By default, the router redirects unauthenticated users to the HTML authentication page located on the router at **etc/config/hotspot/password.html**. You can customize the authentication page as needed, or host an authentication page on a remote server. See <u>Customize the hotspot login page</u> for further information.

Required configuration items

- Create a new hotspot or Enable hotspot using the default configuration.
- Select local shared password authentication.
- The local password that will be used for authentication.

Additional configuration items

Modify the local HTML authentication page, /etc/config/hotspot/password.html, or enter the name of an alternative HTML authentication page stored in the same directory, or identify a remote web server to host the HTML authentication page and include that server in the "white list" of servers that unauthenticated hotspot clients can access. See Customize the hotspot login page for further information.

Hotspot LAN configuration:



Configure hotspot for local shared password authentication from the WebUl

- Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- a. Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The Configuration window is displayed.

- 3. Create a new hotspot or Enable hotspot using the default configuration.
- 4. During hotspot configuration, for Authentication mode, select Local shared password.
- 5. For **Local shared password**, type the password that all users will be required to enter to authentication with the hotspot.
- 6. Click **Apply** to save the configuration and apply the change.

Configure hotspot for local shared password authentication from the Command line

- 1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.
 - Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
- 2. At the command line, type **config** to enter configuration mode:

> config (config)>

- 3. Create a new hotspot or Enable hotspot using the default configuration.
- 4. Set the authentication mode to **local-shared-password**:

(config)> network hotspot *hotspot_name* auth local-shared-password (config)>

5. Set the password that all users will be required to enter to authentication with the hotspot:

(config)> network hotspot hotspot_name local_shared_password password (config)>

6. Save the configuration and apply the change.

(config)> save Configuration saved.

7. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configure the hotspot to use RADIUS shared password authentication

RADIUS shared password authentication requires each user to enter a password. This password is validated by an external RADIUS server, and the password is the same for all users.

Create a user on the RADIUS server with the username **guest**. The password assigned at the RADIUS server for the user **guest** is the shared password that your hotspot users should enter to authenticate to the hotspot via the RADIUS server.

By default, the router redirects unauthenticated users to the HTML authentication page located on the router at **etc/config/hotspot/password.html**. You can customize the authentication page as needed, or host an authentication page on a remote server. See <u>Oustomize the hotspot login page</u> for further information.

Required configuration items

- Create a new hotspot or Enable hotspot using the default configuration.
- Select RADIUS shared password authentication.
- IP address or hostname of the primary RADIUS server.
- A user on the RADIUS server with the username guest.
- RADIUS server secret.
- RADIUS NAS ID.
- Domain name or subnet of the RADIUS server included in the "white list" of servers that unauthenticated hotspot clients can access.

Additional configuration items

- IP address or hostname of the secondary RADIUS server to be used if the primary RADIUS server is unreachable.
- Modify the local HTML authentication page, /etc/config/hotspot/password.html, or enter the name of an alternative HTML authentication page stored in the same directory, or identify a remote web server to host the HTML authentication page and include that server in the "white list" of servers that unauthenticated hotspot clients can access. See Oustomize the hotspot login page for further information.

Hotspot LAN configuration:

Configure hotspot for RADIUS shared password authentication from the WebUI

- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- a. Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

- 3. Create a new hotspot or Enable hotspot using the default configuration.
- 4. During hotspot configuration, for Authentication mode, select RADIUS shared password.
- 5. Click to expand Radius.
 - a. For **Primary server name**, enter the IP address or fully-qualified domain name of the primary RADIUS server to use to authenticate hotspot users.
 - b. (Optional) For Secondary server name, enter the IP address or fully-qualified domain name of the backup RADIUS server to use to authenticate hotspot users if the primary RADIUS server is not available.
 - c. (Optional) For **Port**, type the port number to use for RADIUS authentication requests. The default is **1812**.
 - d. (Optional) For Accounting port, type the port number to use for RADIUS accounting requests. The default is 1813.
 - e. For **Secret**, enter the shared secret for the RADIUS server. This is configured on the RADIUS server.
 - f. For NAS ID, enter the unique Network Access Server (NAS) identifier used by the RADIUS server. The default is hotspot.
 - g. (Optional) Enable Swap Octets to swap the meaning of the input octets/packets and output octets/packets RADIUS attributes. This can fix issues if the data limits and/or accounting reports appear to be reversed on the RADIUS server. The default is disabled.
- 6. Click to expand Walled garden.

Walled garden settings define the "white list" of domains and subnets that unauthenticated clients are able to access. Include the domain or subnet of the RADIUS server(s) that are being used for authentication.

- To add domains that can be accessed by the client prior to authentication:
 - a. Click to expand Allowed domains.
 - b. Click %to add a domain.
 - c. For **Domain**, type the hostname of the allowed domain.
 - d. Repeat to add additional domains.
- To add subnets that can be accessed by the client prior to authentication:
 - a. Click to expand Allowed subnets.
 - b. Click %to add a subnet.
 - c. For **Subnet**, type an IPv4 address and optional subnet mask, using the format IPv4_address[/netmask], or the keyword **any**.
 - d. Repeat to add additional subnets.
- 7. Click Apply to save the configuration and apply the change.

Configure hotspot for RADIUS shared password authentication from the Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

> config (config)>

- 3. Create a new hotspot or Enable hotspot using the default configuration.
- 4. Set the authentication mode to radius-shared-password:

(config)> network hotspot *hotspot_name* auth radius-shared-password (config)>

- 5. Configure the RADIUS server:
 - a. Set the fully qualified domain name or IP address of the primary RADIUS server:

(config)> network hotspot hotspot_name radius primary_radius_server address (config)>

b. (Optional) Set the fully qualified domain name or IP address of the secondary RADIUS server, used if the primary RADIUS server is unreachable:

(config)> network hotspot hotspot_name radius backup_radius_server address (config)>

c. (Optional) Set the port number to use for RADIUS authentication requests.

(config)> network hotspot hotspot_name radius auth_port port
(config)>

The default is 1812.

d. (Optional) Set the port number to use for RADIUS accounting requests.

(config)> network hotspot hotspot_name radius acct_port port (config)>

The default is 1813.

e. Set the shared secret for the RADIUS server. This is configured on the RADIUS server.

(config)> network hotspot hotspot_name radius secret secret (config)>

f. Set the unique Network Access Server (NAS) identifier used by the RADIUS server:

(config)> network hotspot hotspot_name radius nas_id id (config)>

The default is hotspot.

g. (Optional) Enable Swap Octets to swap the meaning of the input octets/packets and output octets/packets RADIUS attributes. This can fix issues if the data limits and/or accounting reports appear to be reversed on the RADIUS server:

(config)> network hotspot hotspot_name radius swap octets true (config)>

The default is disabled.

6. Set walled garden settings.

Walled garden settings define the "white list" of domains and subnets that unauthenticated clients are able to access. Include the domain or subnet of the RADIUS server(s) that are being used for authentication.

Add domains that can be accessed by the client prior to authentication:

(config network hotspot new_hotspot)> add walled_garden domains end *domain_name* (config network hotspot new_hotspot)>

Repeat to add additional domains.

Add IP addresses and subnets that can be accessed by the client prior to authentication:

(config network hotspot new_hotspot)> add walled_garden subnets end *value* (config network hotspot new_hotspot)>

where *value* is an IPv4 address and optional subnet mask, using the format *IPv4_address[/netmask]*, or the keyword **any**.

Repeat to add additional IP addresses or subnets.

7. Save the configuration and apply the change.

(config)> save Configuration saved.

8. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an Access selection **menu.** Type **quit** to disconnect from the device.

Configure the hotspot to use RADIUS users authentication

RADIUS users authentication requires each hotspot user to enter a username and password. Users are created on an external RADIUS server, and the username and password is validated by the external RADIUS server.

By default, the router redirects unauthenticated users to the HTML authentication page located on the router at etc/config/hotspot/login.html. You can customize the authentication page as needed, or host an authentication page on a remote server. See Oustomize the hotspot login page for further information.

Required configuration items

- Create a new hotspot or Enable hotspot using the default configuration.
- Select RADIUS users authentication.
- IP address or hostname of the primary RADIUS server.
- Users configured on the RADIUS server.
- RADIUS server secret.
- RADIUS NAS ID.
- Domain name or subnet of the RADIUS server included in the "white list" of servers that unauthenticated hotspot clients can access.

Additional configuration items

- IP address or hostname of the secondary RADIUS server to be used if the primary RADIUS server is unreachable.
- Modify the local HTML authentication page, /etc/config/hotspot/login.html, or enter the name of an alternative HTML authentication page stored in the same directory, or identify a remote web server to host the HTML authentication page and include that server in the "white list" of servers that unauthenticated hotspot clients can access. See Customize the hotspot login page for further information.

Hotspot LAN configuration:



Configure hotspot for RADIUS users authentication from the WebUI

- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- a. Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.

d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

- 3. Create a new hotspot or Enable hotspot using the default configuration.
- 4. During hotspot configuration, for Authentication mode, select RADIUS users.
- 5. Click to expand Radius.
 - a. For **Primary server name**, enter the IP address or fully-qualified domain name of the primary RADIUS server to use to authenticate hotspot users.
 - b. (Optional) For **Secondary server name**, enter the IP address or fully-qualified domain name of the backup RADIUS server to use to authenticate hotspot users if the primary RADIUS server is not available.
 - c. (Optional) For **Port**, type the port number to use for RADIUS authentication requests. The default is **1812**.
 - d. (Optional) For **Accounting port**, type the port number to use for RADIUS accounting requests. The default is **1813**.
 - e. For **Secret**, enter the shared secret for the RADIUS server. This is configured on the RADIUS server.
 - f. For NAS ID, enter the unique Network Access Server (NAS) identifier used by the RADIUS server. The default is hotspot.
 - g. (Optional) Enable Swap Octets to swap the meaning of the input octets/packets and output octets/packets RADIUS attributes. This can fix issues if the data limits and/or accounting reports appear to be reversed on the RADIUS server. The default is disabled.
- 6. Click to expand Walled garden.

Walled garden settings define the "white list" of domains and subnets that unauthenticated clients are able to access. Include the domain or subnet of the RADIUS server(s) that are being used for authentication.

- To add domains that can be accessed by the client prior to authentication:
 - a. Click to expand Allowed domains.
 - b. Click %to add a domain.
 - c. For **Domain**, type the hostname of the allowed domain.
 - d. Repeat to add additional domains.
- To add subnets that can be accessed by the client prior to authentication:
 - a. Click to expand Allowed subnets.
 - b. Click %to add a subnet.
 - c. For **Subnet**, type an IPv4 address and optional subnet mask, using the format

IPv4_address[/netmask], or the keyword any.

- d. Repeat to add additional subnets.
- 7. Click **Apply** to save the configuration and apply the change.

Configure hotspot for RADIUS users authentication from the Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

> config (config)>

- 3. Create a new hotspot or Enable hotspot using the default configuration.
- 4. Set the authentication mode to radius-users:

(config)> network hotspot *hotspot_name* auth radius-users (config)>

- 5. Configure the RADIUS server:
 - a. Set the fully qualified domain name or IP address of the primary RADIUS server:

(config)> network hotspot *hotspot_name* radius primary_radius_server *address* (config)>

b. (Optional) Set the fully qualified domain name or IP address of the secondary RADIUS server, used if the primary RADIUS server is unreachable:

(config)> network hotspot *hotspot_name* radius backup_radius_server *address* (config)>

c. (Optional) Set the port number to use for RADIUS authentication requests.

(config)> network hotspot hotspot_name radius auth_port port (config)>

The default is 1812.

d. (Optional) Set the port number to use for RADIUS accounting requests.

(config)> network hotspot hotspot_name radius acct_port port (config)>

The default is 1813.

e. Set the shared secret for the RADIUS server. This is configured on the RADIUS server.

(config)> network hotspot hotspot_name radius secret secret
(config)>

f. Set the unique Network Access Server (NAS) identifier used by the RADIUS server:

(config)> network hotspot hotspot_name radius nas_id id (config)>

The default is **hotspot**.

g. (Optional) Enable Swap Octets to swap the meaning of the input octets/packets and output octets/packets RADIUS attributes. This can fix issues if the data limits and/or accounting reports appear to be reversed on the RADIUS server:

(config)> network hotspot *hotspot_name* radius swap octets true (config)>

The default is disabled.

6. Set walled garden settings.

Walled garden settings define the "white list" of domains and subnets that unauthenticated clients are able to access. Include the domain or subnet of the RADIUS server(s) that are being used for authentication.

Add domains that can be accessed by the client prior to authentication:

(config network hotspot new_hotspot)> add walled_garden domains end domain_name (config network hotspot new_hotspot)>

Repeat to add additional domains.

Add IP addresses and subnets that can be accessed by the client prior to authentication:

(config network hotspot new_hotspot)> add walled_garden subnets end *value* (config network hotspot new_hotspot)>

where *value* is an IPv4 address and optional subnet mask, using the format *IPv4_address[/netmask]*, or the keyword **any**.

Repeat to add additional IP addresses or subnets.

7. Save the configuration and apply the change.

(config)> save Configuration saved. >

8. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configure the hotspot to use HotspotSystem authentication

You can configure IX20 hotspot to use Hotspot System, a cloud hotspot service that supports various free and paid authentication methods, including social media accounts, SMS, voucher, and PayPal. By default, the router redirects unauthenticated users to the HTML authentication page located on the router at etc/config/hotspot/login.html. You can customize the authentication page as needed, or host an authentication page on a remote server. See Customize the hotspot login page for further information.

Required configuration items

- Create a new hotspot or Enable hotspot using the default configuration.
- Select HotspotSystem authentication.
- Create and configure a HotspotSystem account.
- The Operator name and location ID for the HotspotSystem.

Additional configuration items

Modify the local HTML authentication page, /etc/config/hotspot/login.html, or enter the name of an alternative HTML authentication page stored in the same directory, or identify a remote web server to host the HTML authentication page and include that server in the "white list" of servers that unauthenticated hotspot clients can access. See Customize the hotspot login page for further information.

Hotspot LAN configuration:

Configure a HotspotSystem account

- 1. Sign up for an operator account. Go to HotspotSystem signup.
- 2. Add a new location for the hotspot. Take care when selecting the Business Model because some options cannot be changed after you create the location. Go to Add a new location.
- 3. Click Modify Hotspot Data & Settings.
- 4. Click Splash Page Settings.
- 5. Set Internal Login URL to http://{UAMIP}:{UAMPORT}/prelogin.
- 6. Set Internal Logout URL to http://{UAMIP}:{UAMPORT}/logoff.
- 7. Click Submit.

Configure allowed domains

Hotspot System uses various additional domains for payment processing and social media login. While unauthorized users are automatically able to access **hotspotsystem.com**, your hotspot configuration may require unauthorized users to have access to additional domains. These domains need to be listed by the **Allowed garden** > **Allowed domains** option. For example, this may include sites like the following:

- PayPal and other payment processors require access to a number of domains, depending on which services you select. Contact HotspotSystem for an up-to-date list of domains that need to be whitelisted.
- FREE Social login requires a number of domains, depending on which services you select. Refer to the following page for an up-to-date list of social login domains that need to be whitelisted: Whitelist for hotspot free social login.

Add routers to HotspotSystem's list of supported devices

You can use the **Remote Webserver** feature to certify and add your device to Hotspotsystem's official list of supported devices.

1

Configure hotspot for HotspotSystem authentication from the WebUI

- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- a. Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The Configuration window is displayed.

- 3. Create a new hotspot or Enable hotspot using the default configuration.
- 4. During hotspot configuration, for Authentication mode, select HotspotSystem.
- 5. Click to expand HotspotSystem.
 - a. For **Operator name**, type the operator name that you registered with **hotspotsystem.com**.
 - b. For **Location ID**, type the location ID of this hotspot. The default is 1.
- 6. Click to expand Remote Webserver to redirect the hotspot to an authentication page.
 - a. For FQDN, enter the Fully Qualified Domain name or IP address through which users are redirected to the hotspot splash screen, log in, or authentication page of the hotspot. The default is: https://customer.hotspotsystem.com/customer/hotspotlogin.php
 - b. (Optional) For **Secret**, enter the secret key shared between the remote server and the hotspot. This is optional, unless you are integrating with a cloud hotspot provider.
- 7. Click to expand Walled garden.

Walled garden settings define the "white list" of domains and subnets that unauthenticated clients are able to access. Include the domain or subnet of supporting servers for payment or other external login and authentication (such as social media sites).

- To add domains that can be accessed by the client prior to authentication:
 - a. Click to expand Allowed domains.
 - b. Click %to add a domain.
 - c. For **Domain**, type the hostname of the allowed domain.
 - d. Repeat to add additional domains.
- To add subnets that can be accessed by the client prior to authentication:
 - a. Click to expand Allowed subnets.
 - b. Click %to add a subnet.

- c. For **Subnet**, type an IPv4 address and optional subnet mask, using the format IPv4_address[/netmask], or the keyword **any**.
- d. Repeat to add additional subnets.
- 8. Click Apply to save the configuration and apply the change.

Configure hotspot for HotspotSystem authentication from the Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

> config (config)>

- 3. Create a new hotspot or Enable hotspot using the default configuration.
- 4. Set the authentication mode to hotspotsystem:

(config)> network hotspot hotspot_name auth hotspotsystem (config)>

- 5. Configure HotspotSystem:
 - a. Set the operator name that you registered with hotspotsystem.com.

(config)> network hotspot hotspot_name hotspotsystem operator name (config)>

b. Set the location ID of this hotspot.

(config)> network hotspot *hotspot_name* hotspotsystem location *value* (config)>

where value is any integer. The default is 1.

- Configure the Remote Webserver to redirect the hotspot to an authentication page.
 - a. Set the Fully Qualified Domain name or IP address through which users are redirected to the hotspot splash screen, log in, or authentication page for the hotspot.

(config)> network hotspot hotspot_name hotspotsystem remote url value (config)>

where *value* is a FQDN: Fully Qualified Domain Name or IP address. The default is: https://customer.hotspotsystem.com/customer/hotspotlogin.php

b. (Optional) Set the secret key shared between the remote server and the hotspot. This is optional, unless you are integrating with a cloud hotspot provider.

(config)> network hotspot *hotspot_name* hotspotsystem remote secret *value* (config)>

where value is the secret key.

7. Set walled garden settings.

Walled garden settings define the "white list" of domains and subnets that unauthenticated clients are able to access. Include the domain or subnet of supporting servers for payment or other external login and authentication (such as social media sites).

Add domains that can be accessed by the client prior to authentication:

(config network hotspot new_hotspot)> add walled_garden domains end *domain_name* (config network hotspot new_hotspot)>

Repeat to add additional domains.

Add IP addresses and subnets that can be accessed by the client prior to authentication:

(config network hotspot new_hotspot)> add walled_garden subnets end *value* (config network hotspot new_hotspot)>

where *value* is an IPv4 address and optional subnet mask, using the format *IPv4_address[/netmask]*, or the keyword **any**.

Repeat to add additional IP addresses or subnets.

8. Save the configuration and apply the change.

(config)> save
Configuration saved.

9. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Show hotspot status and statistics



Log into the IX20 WebUI as a user with full Admin access rights.

- 1. On the main menu, click Status
- 2. Under Networking, click Hotspot.



The **Hotspot** status page is displayed.




Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. Enter the show hotspot command at the Admin CLI prompt:

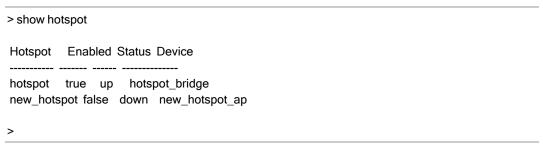

Enter the **show hotspot name** hotspot_name command at the Admin CLI prompt to display information about clients connected to a specific hotspot:

4. Enter the **show hotspot ip** *ip_address* command at the Admin CLI prompt to display information about clients connected to a specific hotspot:

5. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Customize the hotspot login page

The IX20 device provides three sample HTML webpages for use with the hotspot feature. When hotspot is enabled for the first time, the sample webpages are installed to the /etc/config/hotspot folder on the device's filesystem. By default, the hotspot redirects users to one of the sample webpages based on the authentication mode being used. See Hotspot authentication modes for information about which HTML file is used for each authentication mode. The sample HTML webpages use ChilliLibrary.js to perform authentication. Do not modify ChilliLibrary.js.

You can customize the sample HTML pages, or replace them with your own page, so that hotspot users will be redirected to your custom HTML page when they log into the hotspot. You can also host the HTML pages on an external web server, rather than on the IX20 device. See Create a new hotspot for information about configuring the HTML page that the hotspot will use.

This section contains the following topics:

Edit sample hotspot HTML pages

To edit the sample HTML pages, download the files and edit the files on your local machine. After they have been edited, upload the edited files to the IX20 device.


The edited HTML page should call the same JavaScript functions that the sample HTML pages do. Additional pages and assets can be uploaded to the hotspot folder, and additional subfolders can be created as needed. Supported file extensions include: .html, .gif, .js, .jpg, .mp4, .ogv, .png, .swf, .json, and .dat.



1. Download the sample HTML file:

Log into the IX20 WebUI as a user with full Admin access rights.

a. On the menu, click System. Under Administration, click File System.

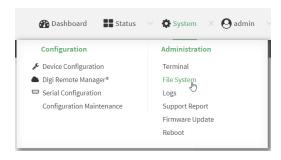

The File System page appears.



- b. Highlight the **hotspot** directory and click \triangle to open the directory.
- c. Select the HTML file you want to edit and click (download).

Note The files in the **hotspot** directory are only available after hotspot has been enabled for the first time.

- 2. On your local machine, edit the file as needed.
- 3. Upload the edited file:
 - a. In the IX20WebUI, return to the **hotspot** directory.
 - b. Click (upload).
 - c. Use the local file system to browse to the location of the edited HTML file. Select the file and click **Open** to upload the file.

Command line

Use the scp command to download and upload the sample HTML files using utilities.

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. Download the file to your local machine. For example:

```
> scp host 192.168.4.1 user admin remote /home/admin/temp/ local /etc/config/hotspot/login.html to remote admin@192.168.4.1's password: adminpwd login.html
```

Note The files in the **hotspot** directory are only available after hotspot has been enabled for the first time.

- 3. On your local machine, edit the file as needed.
- 4. Upload the edited file from your local machine the the IX20 device. For example:

```
> scp host 192.168.4.1 user admin remote /home/admin/temp/ local /etc/config/hotspot/login.html to local admin@192.168.4.1's password: adminpwd login.html >
```

Upload custom hotspot HTML pages

Rather than editing the sample HTML pages, you can upload a custom login page with a different filename.

The new page should include **ChilliLibrary.js** and call the same JavaScript functions that the sample HTML pages do. Additional pages and assets can be uploaded to the hotspot folder, and additional subfolders can be created as needed. Supported file extensions include: .html, .gif, .js, .jpg, .mp4, .ogv, .png, .swf, .json, and .dat.

You can configure the IX20 device to use your custom HTML page using either the WebUI or the command line:



- 1. Upload your custom HTML file to the IX20 device's filesystem:
 - Log into the IX20 WebUI as a user with full Admin access rights.
 - a. On the menu, click System. Under Administration, click File System.



The File System page appears.



- b. Highlight the **hotspot** directory and click \triangle to open the directory.
- c. Click @ (upload).
- d. Browse to the location of the HTML file on your local machine. Select the file and click **Open** to upload the file.
- 2. Configure the hotspot to use your custom HTML file:
 - a. On the menu, click **Network > Hotspot**.
 - b. Click the name of the appropriate hotspot to expand.
 - c. Ensure that Login page source is set to Local.
 - d. For **Login page**, type the name of your custom HTML file.
 - e. Click **Apply** to save the configuration and apply the change.

Command line

- Select the device in Remote Manager and click Actions > Open Console, or log into the IX20 local command line as a user with full Admin access rights.
 - Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
- 2. Use the scp command to upload the edited file from your local machine the the IX20 device. For example:
 - > scp host 192.168.4.1 user admin remote /home/admin/temp/ local /etc/config/hotspot/custom.html to local

- 3. Configure the hotspot to use your custom HTML file:
 - a. Type config to change to configuration mode:

```
> config
(config)>
```

b. Set login to local-page:

(config)> network hotspot *hotspot_name* login local (config)>

c. Set local-page to your custom HTML file:

(config)> network hotspot hotspot_name local-page custom.html

d. Save the configuration and apply the change.

```
(config)> save
Configuration saved.
>
```

e. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Restore hotspot default sample pages

If you have customized the sample HTML pages without making a backup of the samples, you may wish to restore the original version of the HTML pages without doing a factory reset.

The **hotspot** directory and files are loaded when the hotspot is enabled, and you can restore the default pages by doing the following:

Select the device in Remote Manager and click Actions > Open Console, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. Use the mv command to change the name of the existing hotspot directory:

```
> mv /etc/config/hotspot /etc/config/hotspot_modified.
```

- 3. Use the WebUI or the command line to disable all hotspots and then reenable them. This will recreate the default hotspot directory. For example:
 - a. Type **config** to change to configuration mode:

> config (config)>

b. Disable the hotspot:

(config)> network hotspot hotspot_name enabled false
(config)>

c. Save the configuration and apply the change.

(config)> save Configuration saved.

d. Type **config** again to change to configuration mode:

> config (config)>

e. Reenable the hotspot:

(config)> network hotspot hotspot_name enabled true (config)>

f. Save the configuration and apply the change.

(config)> save Configuration saved.

g. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Hotspot RADIUS attributes

The RADIUS server may send attributes to the hotspot to affect the operation of a client session. For example, here are some of the RADIUS attributes that the hotspot handles:

- Session-Timeout
- Idle-Timeout
- Acct-Interim-Interval
- WISPr-Redirection-URL
- WSPr-Session-Terminate-Time
- ChilliSpot-Max-Input-Octets
- ChilliSpot-Max-Output-Octets
- ChilliSpot-Max-Total-Octets

Also, if the RADIUS server requests it, the hotspot will send accounting information back to the RADIUS server. For example, here are some of the RADIUS attributes that the hotspot sends:

- Acct-Input-Octets
- Acct-Output-Octets
- Acct-Session-Time
- Acct-Input-Packets
- Acct-Output-Packets
- Acct-Input-Gigawords
- Acct-Output-Gigawords

Routing

This chapter contains the following topics:

IP routing	430
Show the routing table	458
Dynamic DNS	
Virtual Router Redundancy Protocol (VRRP)	

Routing IP routing

IP routing

The IX20 device uses IP routes to decide where to send a packet it receives for a remote network. The process for deciding on a route to send the packet is as follows:

- 1. The device examines the destination IP address in the IP packet, and looks through the IP routing table to find a match for it.
- 2. If it finds a route for the destination, it forwards the IP packet to the configured IP gateway or interface.
- 3. If it cannot find a route for the destination, it uses a default route.
- 4. If there are two or more routes to a destination, the device uses the route with the longest mask.
- 5. If there are two or more routes to a destination with the same mask, the device uses the route with the lowest metric.

This section contains the following topics:

Configure a static route	43
Delete a static route	
Policy-based routing	
Configure a routing policy	
Example: Dual WAN policy-based routing	
Example: Domain-based routing with dual WAN	
Example: Route traffic to a specific WAN interface based on the client MAC address	
Routing services	
Configure routing services	

Routing IP routing

Configure a static route

A static route is a manually configured routing entry. Information about the route is manually entered rather than obtained from dynamic routing traffic.

Required configuration items

- The destination address or network.
- The interface to use to reach the destination.

Additional configuration items

- A label used to identify this route.
- The IPv4 address of the gateway used to reach the destination.
- The metric for the route. When multiple routes are available to reach the same destination, the route with the lowest metric is used.
- The Maximum Transmission Units (MTU) of network packets using this route.

To configure a static route:



- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- a. Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The Configuration window is displayed.


3. Click Network > Routes > Static routes.

Routing IP routing

4. Click the Yoto add a new static route.



The new static route configuration page is displayed:

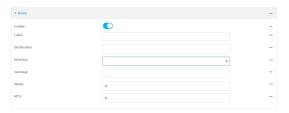

New static route configurations are enabled by default. To disable, toggle off **Enable**.

- 5. (Optional) For Label, type a label that will be used to identify this route.
- 6. For **Destination**, type the IP address or network of the destination of this route. For example, to route traffic to the 192.168.47.0 network that uses a subnet mask of 255.255.255.0, type 192.168.47.0/24. The any keyword can also be used to route packets to any destination with this static route.
- 7. For **Interface**, select the interface on the IX20 device that will be used with this static route.
- 8. (Optional) For **Cateway**, type the IPv4 address of the gateway used to reach the destination. Set to blank if the destination can be accessed without a gateway.
- 9. (Optional) For **Metric**, type the metric for the route. When multiple routes are available to reach the same destination, the route with the lowest metric is used.
- (Optional) For MTU, type the Maximum Transmission Units (MTU) of network packets using this route.
- 11. Click **Apply** to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type config to enter configuration mode:

> config (config)>

3. Add a new static route:

(config)> add network route static end (config network route static 0)>

New static route instances are enabled by default. To disable:

(config network route static 0)> enable false (config network route static 0)>

4. (Optional) set a label that will be used to identify this route. For example:

(config network route static 0)> label "route to accounting network" (config network route static 0)>

5. Set the IP address or network of the destination of this route. For example:

(config network route static 0)> destination *ip_address[/netmask]* (config network route static 0)>

For example, to route traffic to the 192.168.47.0 network that uses a subnet mask of 255.255.25.0:

(config network route static 0)> dst 192.168.47.0/24 (config network route static 0)>

The any keyword can also be used to route packets to any destination with this static route.

- 6. Set the interface on the IX20 device that will be used with this static route:
 - a. Use the ?to determine available interfaces:

(config network route static 0)> interface?

Interface: The network interface to use to reach the destination.

Format:

/network/interface/setupip

/network/interface/setuplinklocalip

/network/interface/eth1

/network/interface/eth2

/network/interface/loopback

Current value:

(config network route static 0)> interface

b. Set the interface. For example:

(config network route static 0)> interface /network/interface/eth1 (config network route static 0)>

7. (Optional) Set the IPv4 address of the gateway used to reach the destination. Set to blank if the destination can be accessed without a gateway.

(config network route static 0)> gateway *IPv4_address* (config network route static 0)>

8. (Optional) Set the metric for the route. When multiple routes are available to reach the same destination, the route with the lowest metric is used.

(config network route static 0)> metric *value* (config network route static 0)>

where value is an interger between 0 and 65535. The default is 0.

9. (Optional) Set the Maximum Transmission Units (MTU) of network packets using this route:

(config network route static 0)> mtu *integer* (config network route static 0)>

10. Save the configuration and apply the change.

(config)> save Configuration saved. >

11. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Delete a static route



- Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- a. Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The Configuration window is displayed.

Click Network > Routes > Static routes.

4. Click the menu icon (...) for a static route and select **Delete**.



5. Click **Apply** to save the configuration and apply the change.

Command line

Select the device in Remote Manager and click Actions > Open Console, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Determine the index number of the static route to be deleted:

```
(config)> show network route static
  dst 10.0.0.1
  enable true
  no gateway
  interface /network/interface/lan1
  label new_static_route
  metric 0
  mtu 0
  dst 192.168.5.1
  enable true
  gateway 192.168.5.1
  interface / network / interface / lan2
  label new_static_route_1
  metric 0
  mtu 0
(config)>
```

4. Use the index number to delete the static route:

```
(config)> del network route static 0 (config)>
```

5. Save the configuration and apply the change.

```
(config)> save
Configuration saved.
>
```

6. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Policy-based routing

Normally, a routing device determines how to route a network packet based on its destination address. However, you can use policy-based routing to forward the packet based on other criteria, such as the source of the packet. For example, you can configure the IX20 device so that high-priority traffic is routed through the cellular connection, while all other traffic is routed through an Ethernet (WAN) connection.

Policy-based routing for the IX20 device uses the following criteria to determine how to route traffic:

- Firewall zone (for example, internal/outbound traffic, external/inbound traffic, or IPSec tunnel traffic).
- Network interface (for example, the cellular connection, the WAN, or the LAN).
- IPv4 address.
- IPv6 address.
- MAC address.
- Domain.
- Protocol type (TCP, UDP, ICMP, or all).

The order of the policies is important. Routing policies are processed sequentially; as a result, if a packet matches an earlier policy, it will be routed using that policy's rules. It will not be processed by any subsequent rules.

Configure a routing policy

Required configuration items

- The packet matching parameters. It can any combination of the following:
 - · Source interface.
 - Source address. This can be a firewall zone, an interface, a single IPv4/IPv6 address or network, or a MAC address.
 - Destination address. This can be a firewall zone, an interface, a single IPv4/IPv6 address or network, or a domain.
 - Protocol. This can be any, tcp, udp or icmp.
 - Source port. This is only used if the protocol is set to tcp or udp.
 - Destination port. This is only used if protocol is set to **tcp** or **udp**.
- The network interface used to reach the destination.

Additional configuration items

- A label for the routing policy.
- Whether packets that match this policy should be dropped when the gateway interface is disconnected, rather than forwarded through other interfaces.

To configure a routing policy:



1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.

2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The Configuration window is displayed.

- 3. Click Network > Routes > Policy-based routing.
- 4. Click the Yoto add a new route policy.



The new route policy page is displayed:

New route policies are enabled by default. To disable, toggle off **Enable**.

- 5. (Optional) For **Label**, type a label that will be used to identify this route policy.
- 6. For **Interface**, select the interface on the IX20 device that will be used with this route policy.
- (Optional) Enable Exclusive to configure the policy to drop packets that match the policy when the gateway interface is disconnected, rather than forwarded through other interfaces.
- 8. For IP version, select Any, IPv4, or IPv6.
- 9. For Protocol, select Any, TCP, UDP, or ICMP.
 - If TCP or UDP is selected for Protocol, type the port numbers of the Source port and Destination port, or set to any to match for any port.
 - If ICMP is selected for Protocol, type the ICMP type and optional code, or set to any to match for any ICMP type.

 For **DSCP**, type the 6-bit hexadecimal Differentiated Services Code Point (DSCP) field match criteria. This will match packets based on the DHCP field within the ToS field of the IP header.

- 11. Configure source address information:
 - a. Click to expand Source address.
 - b. For **Type**, select one of the following:
 - **Zone**: Matches the source IP address to the selected firewall zone. See Firewall configuration for more information about firewall zones.
 - Interface: Matches the source IP address to the selected interface's network address.
 - IPv4 address: Matches the source IP address to the specified IP address or network. Use the format IPv4_address[/netmask], or use any to match any IPv4 address.
 - IPv6 address: Matches the source IP address to the specified IP address or network. Use the format IPv6_address[/ prefix_length], or use any to match any IPv6 address.
 - MAC address: Matches the source MAC address to the specified MAC address.
- 12. Configure the destination address information:
 - a. Click to expand Destination address.
 - b. For **Type**, select one of the following:
 - Zone: Matches the destination IP address to the selected firewall zone. See Firewall configuration for more information about firewall zones.
 - Interface: Matches the destination IP address to the selected interface's network address.
 - IPv4 address: Matches the destination IP address to the specified IP address or network. Use the format IPv4_address/[netmask], or use any to match any IPv4 address
 - IPv6 address: Matches the destination IP address to the specified IP address or network. Use the format IPv6_address/[prefix_length], or use any to match any IPv6 address.
 - Domain: Matches the destination IP address to the specified domain names. To specify domains:
 - i. Click to expand Domains.
 - ii. Click the 1/2 to add a domain.
 - iii. For Domain, type the domain name.
 - iv. Repeat to add additional domains.
 - Default route: Matches packets destined for the default route, excluding routes for local networks.
- 13. Click **Apply** to save the configuration and apply the change.

Command line

Select the device in Remote Manager and click Actions > Open Console, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Add a new routing policy:

(config)> add network route policy end (config network route policy 0)>

New route policies are enabled by default. To disable:

(config network route policy 0)> enable false (config network route policy 0)>

4. (Optional) Set the label that will be used to identify this route policy:

(config network route policy 0)> label "New route policy" (config network route policy 0)>

- 5. Set the interface on the IX20 device that will be used with this route policy:
 - a. Use the ?to determine available interfaces:

(config network route policy 0)> interface?

Interface: The network interface used to reach the destination. Packets that satisfy the matching criteria will be routed through this interface. If the interface has a gateway then it will be used as the next hop.

Format:

/network/interface/setupip

/network/interface/setuplinklocalip

/network/interface/eth1

/network/interface/eth2

/network/interface/loopback

Current value:

(config network route policy 0)> interface

b. Set the interface. For example:

(config network route policy 0)> interface /network/interface/eth1 (config network route policy 0)>

6. (Optional) Enable **exclusive** to configure the policy to drop packets that match the policy when the gateway interface is disconnected, rather than forwarded through other interfaces:

(config network route policy 0)> exclusive true (config network route policy 0)>

7. Select the IP version:

(config network route policy 0)> ip_version *value* (config network route policy 0)>

where value is one of any, ipv4, or ipv6.

8. Set the protocol:

(config network route policy 0)> protocol *value* (config network route policy 0)>

where value is one of:

- any: All protocols are matched.
- tcp: Source and destination ports are matched:
 - a. Set the source port:

(config network route policy 0)> src_port *value* (config network route policy 0)>

where *value* is the port number, or the keyword **any** to match any port as the source port.

b. Set the destination port:

(config network route policy 0)> dst_port *value* (config network route policy 0)>

where *value* is the port number, or the keyword **any** to match any port as the destination port.

- upd: Source and destination ports are matched:
 - a. Set the source port:

(config network route policy 0)> src_port *value* (config network route policy 0)>

where *value* is the port number, or the keyword **any** to match any port as the source port.

b. Set the destination port:

(config network route policy 0)> dst_port *value* (config network route policy 0)>

where *value* is the port number, or the keyword **any** to match any port as the destination port.

• icmp: The ICMP protocol is matched. Identify the ICMP type:

(config network route policy 0)> icmp_type *value* (config network route policy 0)>

where *value* is the ICMP type and optional code, or set to **any** to match for any ICMP type.

9. Set the source address type:

```
(config network route policy 0)> src type value (config network route policy 0)>
```

where value is one of:

zone: Matches the source IP address to the selected firewall zone. Set the zone:

a. Use the ?to determine available zones:

```
(config network route policy 0)> src zone?
```

Zone: Match the IP address to the specified firewall zone.

Format:

any

dynamic_routes

edge

external

hotspot

internal

ipsec

loopback

setup

Default value: any Current value: any

(config network route policy 0)> src zone

b. Set the zone. For example:

```
(config network route policy 0)> src zone external (config network route policy 0)>
```

See Firewall configuration for more information about firewall zones.

- interface: Matches the source IP address to the selected interface's network address. Set the interface:
 - a. Use the ?to determine available interfaces:

(config network route policy 0)> src interface?

Interface: The network interface.

Format:

/network/interface/setupip

/network/interface/setuplinklocalip

/network/interface/eth1

/network/interface/eth2

/network/interface/loopback

Current value:

(config network route policy 0)> src interface

b. Set the interface. For example:

(config network route policy 0)> src interface /network/interface/eth1 (config network route policy 0)>

address: Matches the source IPv4 address to the specified IP address or network. Set the address that will be matched:

(config network route policy 0)> src address value (config network route policy 0)>

where value uses the format IPv4_address[/netmask], or any to match any IPv4 address.

address6: Matches the source IPv6 address to the specified IP address or network. Set the address that will be matched:

(config network route policy 0)> src address6 value (config network route policy 0)>

where value uses the format **IPv6_address[/prefix_length]**, or **any** to match any IPv6 address.

mac: Matches the source MAC address to the specified MAC address. Set the MAC address to be matched:

(config network route policy 0)> src mac MAC_address (config network route policy 0)>

10. Set the destination address type:

(config network route policy 0)> dst type value (config network route policy 0)>

where value is one of:

- zone: Matches the destination IP address to the selected firewall zone. Set the zone:
 - a. Use the ?to determine available zones:

(config network route policy 0)> dst zone?

Zone: Match the IP address to the specified firewall zone.

Format:

any

dynamic_routes

edge

external

hotspot

internal

ipsec loopback

setup

Default value: any

Current value: any

(config network route policy 0)> dst zone

b. Set the zone. For example:

(config network route policy 0)> dst zone external (config network route policy 0)>

See Firewall configuration for more information about firewall zones.

- interface: Matches the destination IP address to the selected interface's network address. Set the interface:
 - a. Use the ?to determine available interfaces:

(config network route policy 0)> dst interface?

Interface: The network interface.

Format:

/network/interface/setupip

/network/interface/setuplinklocalip

/network/interface/eth1

/network/interface/eth2

/network/interface/loopback

Current value:

(config network route policy 0)> dst interface

b. Set the interface. For example:

(config network route policy 0)> dst interface /network/interface/eth1 (config network route policy 0)>

address: Matches the destination IPv4 address to the specified IP address or network. Set the address that will be matched:

(config network route policy 0)> dst address *value* (config network route policy 0)>

where value uses the format *IPv4_address[/netmask]*, or any to match any IPv4 address.

address6: Matches the destination IPv6 address to the specified IP address or network. Set the address that will be matched:

(config network route policy 0)> dst address6 *value* (config network route policy 0)>

where value uses the format *IPv6_address[/ prefix_length]*, or any to match any IPv6 address.

mac: Matches the destination MAC address to the specified MAC address. Set the MAC address to be matched:

(config network route policy 0)> dst mac *MAC_address* (config network route policy 0)>

11. Save the configuration and apply the change.

(config)> save Configuration saved.

12. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Example: Dual WAN policy-based routing

This example routes traffic to a specific IP address to go through the cellular WWAN interface, while all other traffic uses the Ethernet WAN interface.





- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- a. Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.




The **Configuration** window is displayed.

- 3. Click Network > Routes > Policy-based routing.
- 4. Click the %to add a new route policy.



- 5. For Label, type Route through cellular.
- 6. For Interface, select Modem.
- 7. Configure the source address:
 - a. Click to expand Source address.
 - b. For **Type**, select **Zone**.
 - c. For **Zone**, select **Internal**.
- 8. Configure the destination address:
 - a. Click to expand Destination address.
 - b. For Type, select IPv4 address.
 - c. For **IPv4 address**, type the IP address that will be the destination for outgoing traffic routed through the WWAN interface. In the above example, this is 241.236.162.59.

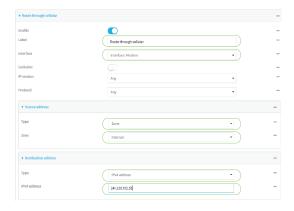

9. Click **Apply** to save the configuration and apply the change.

Command line

Select the device in Remote Manager and click Actions > Open Console, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

> config (config)>

- 3. Create the route policy:
 - a. Add a new routing policy:

(config)> add network route policy end (config network route policy 0)>

b. Set the label that will be used to identify this route policy:

(config network route policy 0)> label "Route through cellular" (config network route policy 0)>

c. Set the interface:

(config network route policy 0)> interface /network/interface/modem (config network route policy 0)>

- d. Configure the source address:
 - i. Set the source type to zone:

(config network route policy 0)> src type zone (config network route policy 0)>

ii. Set the zone to internal:

(config network route policy 0)> src zone internal (config network route policy 0)>

- e. Configure the destination address:
 - i. Set the destination to use an IPv4 address:

(config network route policy 0)> dst type address (config network route policy 0)>

ii. Set the IP address that will be the destination for outgoing traffic routed through the WWAN interface. In the above example, this is 241.236.162.59.

(config network route policy 0)> dst address 241.236.162.59 (config network route policy 0)>

4. Save the configuration and apply the change.

(config)> save
Configuration saved.


.

5. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Example: Domain-based routing with dual WAN

This example routes traffic destined for a specific domain to the WAN Ethernet port, and never through the cellular modem.

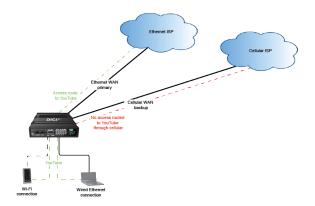



- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- a. Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The Configuration window is displayed.


- 3. Click Network > Routes > Policy-based routing.
- 4. Click the Yoto add a new route policy.




- 5. For Label, type Domain-based policy.
- 6. For Interface, select ETH1.

- 7. Configure the source address:
 - a. Click to expand Source address.
 - b. For **Type**, select **Zone**.
 - c. For **Zone**, select **Any**.
- 8. Configure the destination address:
 - a. Click to expand Destination address.
 - b. For **Type**, select **Domain**.
 - c. Click to expand Domains.
 - d. Click the Yoto add a new domain.
 - e. For **Domain**, type **youtube.com**.

You can add additional domains by repeating the last two steps.

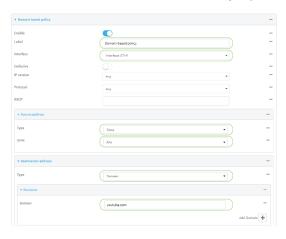

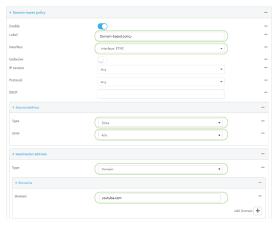

9. Click **Apply** to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

> config (config)>

3. Create the route policy:

a. Add a new routing policy:

(config)> add network route policy end (config network route policy 0)>

b. Set the label that will be used to identify this route policy:

(config network route policy 0)> label "Domain-based policy" (config network route policy 0)>

c. Set the interface:

(config network route policy 0)> interface /network/interface/eth1 (config network route policy 0)>

- d. Leave the source address type at the default of zone.
- Leave the source address zone at the default of any.
- f. Configure the destination address:
 - i. Set the destination to use a domain:

(config network route policy 0)> dst type domain (config network route policy 0)>

ii. Add a domain and set it to youtube.com:

(config network route policy 0)> add dst domain end youtube.com (config network route policy 0)>

You can add additional domains by repeating this step with a different domain name.

4. Save the configuration and apply the change.


(config)> save Configuration saved.

5. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Example: Route traffic to a specific WAN interface based on the client MAC address

This example routes all data from a certain client device through a cellular WAN based on the device's MAC address, while all other client devices are routed through the Ethernet WAN.

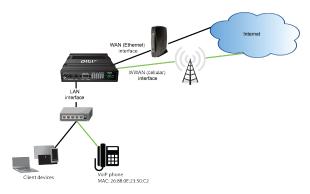



- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- a. Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

- 3. Create new firewall zones:
 - a. Create a firewall zone named CellularWAN with Source NAT enabled:
 - i. Click Firewall > Zones.
 - ii. For Add Zone, type CellularWAN and click 1/30



iii. Enable Source NAT.




- b. Create second firewall zone named EthernetWAN with Source NAT enabled:
 - i. For Add Zone, type EthernetWAN and click 1/5
 - ii. Enable Source NAT.
- 4. Configure the WAN interfaces to use the new zones:
 - a. Configure the cellular WAN interface:
 - i. Click Network > Interfaces > Modem.
 - ii. For Zone, select CellularWAN.



- b. Configure the Ethernet WAN interface:
 - i. Click Network > Interfaces > ETH1.
 - ii. For Zone, select EthernetWAN.
- 5. Configure the policy-based route for traffic from the client device that will be sent over the cellular WAN:
 - a. Click Network > Routes > Policy-based routing.
 - b. Click the %to add a new route policy.



- c. For **Label**, type **VolP phone**.
- d. For Interface, select Modem.
- e. Configure the source as the MAC address of the VoIP phone:
 - i. Click to expand Source address.
 - ii. For Type, select MAC address.
 - iii. For MAC address, type 26:88:0E:23:50:C2.
- f. Configure the destination zone:
 - i. Click to expand Destination address.
 - ii. For Type, select Zone.
 - iii. For **Zone**, select **CellularWAN**.

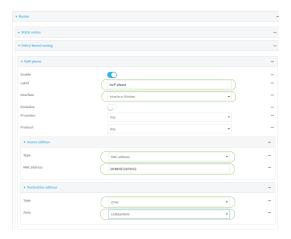

- 6. Create a packet filtering rule that rejects all other LAN packets on the cellular WAN interface.
 - a. Click Firewall > Packet filtering.
 - b. Click the Yoto add a new packet filtering rule.



- c. For Label, type Reject LAN traffic to cellular WAN.
- d. For Action, select Drop.
- e. For Source zone, select Internal.
- f. For **Destination zone**, select **CellularWAN**.



7. Click **Apply** to save the configuration and apply the change.

Command line

Select the device in Remote Manager and click Actions > Open Console, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

> config (config)>

- 3. Create new firewall zones:
 - a. Create a firewall zone named CellularWAN with Source NAT enabled:

i. Create the firewall zone:

(config)> add firewall zone CellularWAN (config firewall zone CellularWAN)>

i. Enable Source NAT on the new zone:

(config firewall zone CellularWAN)> src_nat true (config firewall zone CellularWAN)>

- b. Oreate second firewall zone named EthernetWAN with Source NAT enabled:
 - i. Type .. to move back one node in the configuration:

(config firewall zone CellularWAN)> .. (config firewall zone)>

ii. Create the firewall zone:

(config firewall zone)> add EthernetWAN (config firewall zone EthernetWAN)>

i. Enable Source NAT on the new zone:

(config firewall zone EthernetWAN)> src_nat true (config firewall zone EthernetWAN)>

- 4. Configure the WAN interfaces to use the new zones:
 - a. Set the zone for the cellular WAN interface:
 - i. Type ... to move to the root of the configuration:

(config firewall zone EthernetWAN)> ... (config)>

ii. Set the zone:

(config)> network interface modem zone CellularWAN (config)>

b. Set the zone for the Ethernet WAN interface:

(config)> network interface eth1 zone EthernetWAN (config)>

- 5. Configure the policy-based route for traffic from the client device that will be sent over the cellular WAN:
 - a. Add a new routing policy:

(config)> add network route policy end (config network route policy 0)>

b. Set the label that will be used to identify this route policy: (config network route policy 0)> label "VoIP phone" (config network route policy 0)> c. Set the interface: (config network route policy 0)> interface /network/interface/modem (config network route policy 0)> d. Configure the source as the MAC address of the VoIP phone: i. Set the source type to **mac**: (config network route policy 0)> src type mac (config network route policy 0)> ii. Set the MAC address to the MAC address of the VoIP phone: (config network route policy 0)> src mac 26:88:0E:23:50:C2 (config network route policy 0)> e. Configure the destination zone: i. Set the source destination to zone: (config network route policy 0)> dst type zone (config network route policy 0)> ii. Set the zone to CellularWAN: (config network route policy 0)> dst zone CellularWAN (config network route policy 0)> 6. Create a packet filtering rule that rejects all other LAN packets on the cellular WAN interface: a. Create a new packet filtering rule: i. Type ... to move to the root of the configuration: (config network route policy 0)> ... (config)> ii. Create the packet filtering rule: (config)> add firewall filter end (config firewall filter 2)> b. Set the lable to **Reject LAN traffic to cellular WAN**: (config firewall filter 2)> label "Reject LAN traffic to cellular WAN"

IX20 User Guide 454

(config firewall filter 2)>

c. Set the action to drop:

(config firewall filter 2)> action drop (config firewall filter 2)>

d. Set the source zone to internal:

(config firewall filter 2)> src_zone internal (config firewall filter 2)>

e. Set the destination zone to CellularWAN:

(config firewall filter 2)> dst_zone CellularWAN (config firewall filter 2)>

7. Save the configuration and apply the change.

(config firewall filter 2)> save Configuration saved.

8. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Routing services

Your IX20 includes support for dynamic routing services and protocols. The following routing services are supported:

Service or protocol	Information
BGP	The Border Gateway Protocol (BGP) service supports BGP-4 (RFC1771).
IS-IS	The IPv4 and IPv6 Intermediate System to Intermediate System (IS-IS) service (RFC1142).
NHRP	Next Hop Resolution Protocol (NHRP) (RFC2332). Does not support NHRP authentication.
OSPFv2	The IPv4 Open Shortest Path First (OSPF) service supports OSPFv2 (RFC2328).
OSPFv3	The IPv6 Open Shortest Path First (OSPF) service supports OSPFv3 (RFC2740).
RIP	The IPv4 Routing Information Protocol (RIP) service supports RIPv2 (RFC2453) and RIPv1 (RFC1058).
RIPng	The IPv6 Routing Information Protocol (RIP) service supports RIPng (RFC2080).

Configure routing services

Required configuration items

- Enable routing services.
- Enable and configure the types of routing services that will be used.



- Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The Configuration window is displayed.

- 3. Click Network > Routes > Routing services.
- 4. Click Enable.



The default firewall zone setting, **Dynamic routes**, is specifically designed to work with routing services and should be left as the default.

- 5. Configure the routing services that will be used:
 - a. Click to expand a routing service.
 - b. **Enable** the routing service.
 - c. Complete the configuration of the routing service.

6. Click Apply to save the configuration and apply the change.

Command line

Select the device in Remote Manager and click Actions > Open Console, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Enable routing services:

```
(config)> network route service enable true (config)>
```

- 4. Configure routing services that will be used:
 - a. Use the ?to display available routing services:

```
(config)> network route service?
```

Routing services: Settings for dynamic routing services and protocols.

Parameters	Curre	nt Value
enable	true	Enable
zone	dynamic_	routes Zone

Additional Configuration

bgp BGP
isis IS-IS
nhrp NHRP
ospfv2 OSPFv2
ospfv3 OSPFv3
rip RIP
ripng RIPng

(config)>

b. Enable a routing service that will be used. For example, to enable the RIP service:

```
(config)> network route service rip enable true (config)>
```

c. Complete the configuration of the routing service. For example, use the ?to view the available parameters for the RIP service:

(config)> network route service rip?

Routing Show the routing table

Parameters	Curre	ent Value
ecmp enable	false true	Allow ECMP Enable
Additional Co	nfiguration	
interface neighbour	Interfac Neight	
redis	Route redistribution	
timer	Timers	
(config)>		

5. Save the configuration and apply the change.

```
(config)> save
Configuration saved.
```

6. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Show the routing table

To display the routing table:



- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- a. Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



Routing Show the routing table

The **Configuration** window is displayed.

3. Click Status > Routes.

The **Network Routing** window is displayed.

- 4. Click IPv4 Load Balance to view IPv4 load balancing.
- 5. Click IPv6 Load Balance to view IPv6 load balancing.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the Admin CLI prompt, type show route:

> show route							
Destination	Gateway	Source	Metric	Interface			
default	 10.1.21.1	 1					
10.1.14.25	10.1.21.1	10.1.21.99	1	/network/device/eth			
10.1.14.27	10.1.21.1	10.1.21.99	1	/network/device/eth			
10.1.25.0/24		10.1.21.99 1	/ne	twork/device/eth1			
127.0.0.0/8		127.0.0.1	/netw	ork/device/loopback			
fd00:2704::1	fe80::204:f3f	f:fe80:e231	1				
fd00:2704::/64		1					
fd00:2704::/48		214748	3647				
fe80::204:f3ff:fe	80:e231 fe80::20	04:f3ff:fe80:e23	1	1			
fe80::204:f3ff:ff8	30:c525 fe80::20	4:f3ff:fe80:e231		1			
fe80::/64		256					
fe80::/64		256					
default	fe80::204:f3ff:fe	80:e231	1				
default		1024					
IPv4 Route Loa	d Balance (%)						
 eth1 75.0							
modem 25.0							
IPv6 Route Loa	d Balance (%)						
eth1 75.0							
modem 25.0							

You can limit the display to only IPv4 entries by using **show route ipv4**, or to IPv6 entries by using **show route ipv6**. You can also display more information by adding the **verbose** option to the **show route** and **show route ip_type** commands.

3. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Dynamic DNS



WARNING! The Dynamic Domain Name System uses unencrypted HTTP communication. Please ensure you are utilizing a VPN to secure your communications.

The Domain Name System (DNS) uses name servers to provide a mapping between computer-readable IP addresses and human-readable hostnames. This allows users to access websites and personal networks with easy-to-remember URLs. Unfortunately, IP addresses change frequently, invalidating these mappings when they do. Dynamic DNS has become the standard method of addressing this problem, allowing devices to update name servers with their new IP addresses.

By providing the IX20 device with the domain name and credentials obtained from a dynamic DNS provider, the router can automatically update the remote nameserver whenever your WAN or public IP address changes.

Your IX20 device supports a number of Dynamic DNS providers as well as the ability to provide a custom provider that is not included on the list of providers.

Configure dynamic DNS

This section describes how to cofigure dynamic DNS on a IX20 device.

Required configuration items

- Add a new Dynamic DNS service.
- The interface that has its IP address registered with the Dynamic DNS provider.
- The name of a Dynamic DNS provider.
- The domain name that is linked to the interface's IP address.
- The username and password to authenticate with the Dynamic DNS provider.

Additional configuration items

- If the Dynamic DNS service provider is set to custom, identify the URL that should be used to update the IP address with the Dynamic DNS provider.
- The amount of time to wait to check if the interface's IP address needs to be updated.
- The amount of time to wait to force an update of the interface's IP address.
- The amount of time to wait for an IP address update to succeed before retrying the update.
- The number of times to retry a failed IP address update.



1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.

2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.


Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.




The **Configuration** window is displayed.

- 3. Click Network > Dynamic DNS.
- 4. Type a name for this Dynamic DNS instance in Add Service and click 1/2.

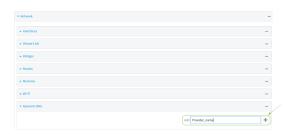

The Dynamic DNS configuration page displays.

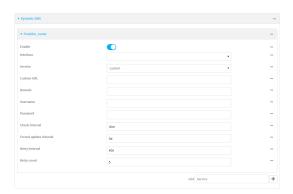

New Dynamic DNS configurations are enabled by default. To disable, toggle off **Enable**.

- 5. For **Interface**, select the interface that has its IP address registered with the Dynamic DNS provider.
- 6. For **Service**, select the Dynamic DNS provider, or select **custom** to enter a custom URL for the Dynamic DNS provider.

7. If **custom** is selected for **Service**, type the **Custom URL** that should be used to update the IP address with the Dynamic DNS provider.

- 8. Type the **Domain** name that is linked to the interface's IP address.
- 9. Type the Username and Password used to authenticate with the Dynamic DNS provider.
- (Optional) For Check Interval, type the amount of time to wait to check if the interface's IP address needs to be updated.

Allowed values are any number of weeks, days, hours, minutes, or seconds, and take the format *number*{w|d|h|m|s}.

For example, to set Check interval to ten minutes, enter 10m or 600s.

11. (Optional) For **Forced update interval**, type the amount of time to wait to force an update of the interface's IP address.

Allowed values are any number of weeks, days, hours, minutes, or seconds, and take the format *number*{w|d|h|m|s}.

For example, to set Forced update interval to ten minutes, enter 10m or 600s.

The setting for Forced update interval must be larger than the setting for Check Interval.

12. (Optional) For **Retry interval**, type the amount of time to wait for an IP address update to succeed before retrying the update.

Allowed values are any number of weeks, days, hours, minutes, or seconds, and take the format *number*{w|d|h|m|s}.

For example, to set Retry interval to ten minutes, enter 10m or 600s.

- 13. (Optional) For **Retry count**, type the number of times to retry a failed IP address update.
- 14. Click **Apply** to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

> config (config)>

Add a new Dynamic DNS instance. For example, to add an instance named new_ddns_ instance:

(config)> add network ddns new_ddns_instance (config network ddns new_ddns_instance)>

New Dynamic DNS instances are enabled by default. To disable:

(config network ddns new_ddns_instance)> enable false (config network ddns new_ddns_instance)>

- 4. Set the interface for the Dynamic DNS instance:
 - a. Use the ?to determine available interfaces:

```
(config network ddns new_ddns_instance)> interface?
```

Interface: The network interface from which to obtain the IP address to register with the dynamic DNS service.

Format:

setupip

setuplinklocalip

eth1

eth2

loopback

Current value:

(config network ddns new_ddns_instance)> interface

b. Set the interface. For example:

```
(config network ddns new_ddns_instance)> interface eth1 (config network ddns new_ddns_instance)>
```

- 5. Set the Dynamic DNS provider service:
 - a. Use the ?to determine available services:

```
(config network ddns new_ddns_instance)> service?
```

Service: The provider of the dynamic DNS service.

Format:

custom

3322.org

changeip.com

ddns.com.br

dnsdynamic.org

...

Default value: custom Current value: custom

(config network ddns new_ddns_instance)> service

b. Set the service:

```
(config network ddns new_ddns_instance)> service service_name (config network ddns new_ddns_instance)>
```

6. If **custom** is configured for **service**, set the custom URL that should be used to update the IP address with the Dynamic DNS provider:

```
(config network ddns new_ddns_instance)> custom url (config network ddns new_ddns_instance)>
```

7. Set the domain name that is linked to the interface's IP address:

(config network ddns new_ddns_instance)> domain domain_name (config network ddns new_ddns_instance)>

8. Set the username to authenticate with the Dynamic DNS provider:

(config network ddns new_ddns_instance)> username *name* (config network ddns new_ddns_instance)>

9. Set the password to authenticate with the Dynamic DNS provider:

(config network ddns new_ddns_instance)> password *pwd* (config network ddns new_ddns_instance)>

10. (Optional) Set the amount of time to wait to check if the interface's IP address needs to be updated:

(config network ddns new_ddns_instance)> check_interval *value* (config network ddns new_ddns_instance)>

where *value* is any number of weeks, days, hours, minutes, or seconds, and takes the format *number*{w|d|h|m|s}.

For example, to set **check_interval** to ten minutes, enter either **10m** or **600s**:

(config network ddns new_ddns_instance)> check_interval 600s (config network ddns new_ddns_instance)>

The default is 10m.

11. (Optional) Set the amount of time to wait to force an update of the interface's IP address:

(config network ddns new_ddns_instance)> force_interval *value* (config network ddns new_ddns_instance)>

where value is any number of weeks, days, hours, minutes, or seconds, and takes the format $number\{w|d|h|m|s\}$.

For example, to set force_interval to ten minutes, enter either 10m or 600s:

(config network ddns new_ddns_instance)> force_interval 600s (config network ddns new_ddns_instance)>

The default is 3d.

12. (Optional) Set the amount of time to wait for an IP address update to succeed before retrying the update:

(config network ddns new_ddns_instance)> retry_interval value (config network ddns new_ddns_instance)>

where *value* is any number of weeks, days, hours, minutes, or seconds, and takes the format *number*{w|d|h|m|s}.

For example, to set retry_interval to ten minutes, enter either 10m or 600s:

(config network ddns new_ddns_instance)> retry_interval 600s (config network ddns new_ddns_instance)>

The default is 60s.

13. (Optional) Set the number of times to retry a failed IP address update:

(config network ddns new_ddns_instance)> retry_count *value* (config network ddns new_ddns_instance)>

where value is any interger. The default is 5.

14. Save the configuration and apply the change.

(config)> save Configuration saved.

Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Virtual Router Redundancy Protocol (VRRP)

Virtual Router Redundancy Protocol (VRRP) is a standard for gateway device redundancy and failover that creates a "virtual router" with a floating IP address. Devices connected to the LAN then use this virtual router as their default gateway. Responsibility for the virtual router is assigned to one of the VRRP-enabled devices on a LAN (the "master router"), and this responsibility transparently fails over to backup VRRP devices if the master router fails. This prevents the default gateway from being a single point of failure, without requiring configuration of dynamic routing or router discovery protocols on every host.

Multiple IX20 devices can be configured as VRRP devices and assigned a priority. The router with the highest priority will be used as the master router. If the master router fails, then the IP address of the virtual router is mapped to the backup device with the next highest priority. Each VRRP router is configured with a unique LAN IP address, and the same shared VRRP address.

VRRP+

VRRP+ is an extension to the VRRP standard that uses network probing to monitor connections through VRRP-enabled devices and can dynamically change the priority of the devices, including changing devices from master to backup, and from backup to master, even if the device has not failed. For example, if a host becomes unreachable on the far end of a network link, then the physical default gateway can be changed by adjusting the VRRP priority of the IX20 device connected to the failing link. This provides failover capabilities based on the status of connections behind the router, in addition to the basic VRRP device failover. For IX20 devices, SureLink is used to probe network connections.

VRRP+ can be configured to probe a specified IP address by either sending an ICMP echo request (ping) or attempting to open a TCP socket to the IP address.

Configure VRRP

This section describes how to configure VRRP on a IX20 device.

Required configuration items

- Enable VRRP.
- The interface used by VRRP.
- The Router ID that identifies the virtual router instance. The Router ID must be the same on all VRRP devices that participate in the same VRRP device pool.
- The VRRP priority of this device.
- The shared virtual IP address for the VRRP virtual router. Devices connected to the LAN will use this virtual IP address as their default gateway.

See Configure VRRP+ for information about configuring VRRP+, an extension to VRRP that uses network probing to monitor connections through VRRP-enabled devices and dynamically change the VRRP priorty of devices based on the status of their network connectivity.



- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

- 3. Click Network > VRRP.
- 4. For **Add VRRP instance**, type a name for the VRRP instance and click 1/20



The new VRRP instance configuration is displayed.



- Click Enable.
- 6. For Interface, select the interface on which this VRRP instance should run.
- 7. For Router ID field, type the ID of the virtual router instance. The Router ID must be the same on all VRRP devices that participate in the same VRRP device pool. Allowed values are from 1 and 255, and it is configured to 50 by default.
- 8. For **Priority**, type the priority for this router in the group. The router with the highest priority will be used as the master router. If the master router fails, then the IP address of the virtual router is mapped to the backup device with the next highest priority. If this device's actual IP address is being used as the virtual IP address of the VRRP pool, then the priority of this device should be set to **255**. Allowed values are from **1** and **255**, and it is configured to **100** by default.
- (Optional) For Password, type a password that will be used to authenticate this VRRP router with VRRP peers. If the password length exceeds 8 characters, it will be truncated to 8 characters.
- 10. Configure the virtual IP addresses associated with this VRRP instance:
 - a. Click to expand Virtual IP addresses.
 - b. Click 1/5 to add a virtual IP address.



- c. For Virtual IP, type the IPv4 or IPv6 address for a virtual IP of this VRRP instance.
- d. (Optional) Repeat to add additional virtual IPs.
- 11. See Configure VRRP+ for information about configuring VRRP+.
- 12. Click **Apply** to save the configuration and apply the change.

Command line

Select the device in Remote Manager and click Actions > Open Console, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

> config (config)>

3. Add a VRRP instance. For example:

(config)> add network vrrp VRRP_test (config network vrrp VRRP_test)>

4. Enable the VRRP instance:

(config network vrrp VRRP_test)> enable true (config network vrrp VRRP_test)>

- 5. Set the interface on which this VRRP instance should run:
 - Use the ?to determine available interfaces:

(config network vrrp VRRP_test)> interface ?

Interface: The network interface to communicate with VRRP peers on and listen for traffic to virtual IP addresses.

Format:

/network/interface/setupip

/network/interface/setuplinklocalip

/network/interface/eth1

/network/interface/eth2

/network/interface/loopback

Current value:

(config network vrrp VRRP_test)> interface

b. Set the interface, for example:

(config network vrrp VRRP_test)> interface /network/interface/eth2 (config network vrrp VRRP_test)>

- c. Repeat for additional interfaces.
- Set the router ID. The Router ID must be the same on all VRRP devices that participate in the same VRRP device pool. Allowed values are from 1 and 255, and it is configured to 50 by default.

```
(config network vrrp VRRP_test)> router_id int (config network vrrp VRRP_test)>
```

7. Set the priority for this router in the group. The router with the highest priority will be used as the master router. If the master router fails, then the IP address of the virtual router is mapped to the backup device with the next highest priority. If this device's actual IP address is being used as the virtual IP address of the VRRP pool, then the priority of this device should be set to 255. Allowed values are from 1 and 255, and it is configured to 100 by default.

```
(config network vrrp VRRP_test)> priority int (config network vrrp VRRP_test)>
```

8. (Optional) Set a password that will be used to authenticate this VRRP router with VRRP peers. If the password length exceeds 8 characters, it will be truncated to 8 characters.

(config network vrrp VRRP_test)> password *pwd* (config network vrrp VRRP_test)>

9. Add a virtual IP address associated with this VRRP instance. This can be an IPv4 or IPv6 address.

(config network vrrp VRRP_test)> add virtual_address end *ip_address* (config network vrrp VRRP_test)>

Additional virtual IP addresses can be added by repeating this step with different values for *ip_address*.

Save the configuration and apply the change.

(config network vrrp new_vrrp_instance)> save Configuration saved.

11. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configure VRRP+

VRRP+ is an extension to the VRRP standard that uses SureLink network probing to monitor connections through VRRP-enabled devices and adjust devices' VRRP priority based on the status of the SureLink tests.

This section describes how to configure VRRP+ on a IX20 device.

Required configuration items

- Both master and backup devices:
 - A configured and enabled instance of VRRP. See Configure VRRP for information.
 - · Enable VRRP+.
 - WAN interfaces to be monitored by using VRRP+.

Note SureLink is enabled by default on all WAN interfaces, and should not be disabled on the WAN interfaces that are being monitored by VRRP+.

If multiple WAN interfaces are being monitored on the same device, the VRRP priority will be adjusted only if all WAN interfaces fail SureLink tests.

- The amount that the VRRP priority will be modified when SureLink determines that the VRRP interface is not functioning correctly.
- Configure the VRRP interface's DHCP server to use a custom gateway that corresponds to one of the VRRP virtual IP addresses.
- Backup devices only:
 - Enable and configure SureLink on the VRRP interface.
 - Set the IP gateway to the IP address of the VRRP interface on the master device.

Additional configuration items

■ For backup VRRP devices, enable the ability to monitor the VRRP master, so that a backup device can increase its priority when the master device fails SureLink tests.



- Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.


Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.




The **Configuration** window is displayed.

- 3. Click Network > VRRP.
- 4. Create a new VRRP instance, or click to expand an existing VRRP instance. See Configure VRRP for information about creating a new VRRP instance.
- 5. Click to expand VRRP+.

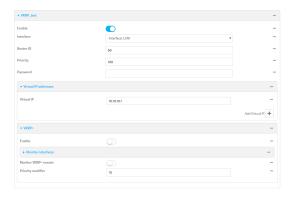

6. Click Enable.


- 7. Add interfaces to monitor:
 - a. Click to expand Monitor interfaces.
 - b. Click 1/5 to add an interface for monitoring.

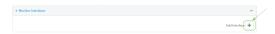

- c. For **Interface**, select the local interface to monitor. Generally, this will be a cellular or WAN interface.
- d. (Optional) Click % again to add additional interfaces.
- 8. (Optional) For backup devices, click to enable Monitor VRRP+ master.

This parameter allows a backup VRRP device to monitor the master device, and increase its priority when the master device is failing SureLink tests. This can allow a device functioning as a backup device to promote itself to master.

- 9. For **Priority modifier**, type or select the amount that the device's priority should be decreased due to SureLink connectivity failure, and increased when SureLink succeeds again.
 - Along with the priority settings for devices in this VRRP pool, the amount entered here should be large enough to automatically demote a master device when SureLink connectivity fails. For example, if the VRRP master device has a priority of **100** and the backup device has a priority of **80**, then the **Priority modifier** should be set to an amount greater than **20** so that if SureLink fails on the master, it will lower its priority to below **80**, and the backup device will assume the master role.
- 10. Configure the VRRP interface. The VRRP interface is defined in the **Interface** parameter of the VRRP configuration, and generally should be a LAN interface:

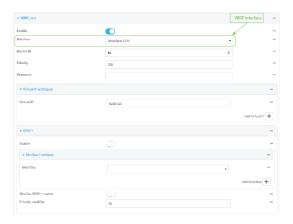

To configure the VRRP interface:


- a. Click to expand Network > Interfaces.
- b. Click to expand the appropriate VRRP interface (for example, **LAN1**).
- For backup devices, for **Default Gateway**, type the IP address of the VRRP interface on the master device.



- d. Configure the VRRP interface's DHCP server to use a custom gateway that corresponds to one of the VRRP virtual IP addresses:
 - i. Click to expand DHCP Server > Advanced settings.
 - ii. For Gateway, select Custom.
 - iii. For **Custom gateway**, enter the IP address of one of the virtual IPs used by this VRRP instance.



- e. For backup devices, enable and configure SureLink on the VRRP interface. Generally, this should be a LAN interface; VRRP+ will then monitor the LAN using SureLink to determine if the interface has network connectivity and promote a backup to master if SureLink fails.
 - i. Click to expand IPv4 > SureLink.
 - ii. Click Enable.
 - iii. For Interval, type a the amount of time to wait between connectivity tests. To guarantee seamless internet access for VRRP+ purposes, SureLink tests should occur more often than the default of 15 minutes.
 - Allowed values are any number of weeks, days, hours, minutes, or seconds, and take the format *number*{w|d|h|m|s}. For example, to set *Interval* to five seconds, enter 5s.
 - iv. Click to expand Test targets > Test target.
 - v. Configure the test target. For example, to configure SureLink to verify internet connectivity on the LAN by pinging https://remotemanager.digi.com:
 - i. For Test Type, select Ping test.
 - ii. For Ping host, type https://remotemanager.digi.com.

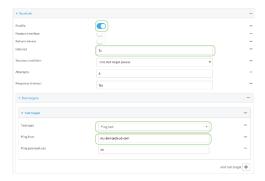

11. Click **Apply** to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

> config (config)>

- 3. Create a new VRRP instance, or edit an existing one. See Configure VRRP for information about creating a new VRRP instance.
- 4. Enable VRRP+:

(config)> network vrrp VRRP_test vrrp_plus enable true (config)>

- 5. Add interfaces to monitor. Generally, this will be a cellular or WAN interface.
 - a. Use the ?to determine available interfaces:

(config)> network vrrp test interface?

Interface: The network interface.

Format:

/network/interface/setupip

/network/interface/setuplinklocalip

/network/interface/eth1

/network/interface/eth2

/network/interface/loopback

Current value:

(config)> network vrrp test interface

b. Set the interface, for example:

(config)> add network vrrp VRRP_test vrrp_plus monitor_interface end /network/interface/modem (config)>

- c. (Optional) Repeat for additional interfaces.
- 6. Set the amount that the device's priority should be decreased or increased due to SureLink connectivity failure or success:

```
(config)> network vrrp VRRP_test vrrp_plus weight value (config)>
```

where value is an integer between 1 and 254. The default is 10.

Along with the priority settings for devices in this VRRP pool, the amount entered here should be large enough to automatically demote a master device when SureLink connectivity fails. For example, if the VRRP master device has a priority of **100** and the backup device has a priority of **80**, then **weight** should be set to an amount greater than **20** so that if SureLink fails on the master, it will lower its priority to below **80**, and the backup device will assume the master role.

7. (Optional) For backup devices, enable the ability for the device to monitor the master device. This allows a backup VRRP device to monitor the master device, and increase its priority when the master device is failing SureLink tests. This can allow a device functioning as a backup device to promote itself to master.

```
(config)> network vrrp VRRP_test vrrp_plus monitor_master true (config)>
```

- 8. Configure the VRRP interface:
 - Configure the VRRP interface's DHCP server to use a custom gateway that corresponds to one of the VRRP virtual IP addresses:
 - i. Set the DHCP server gateway type to custom:

```
(config)> network interface eth2 ipv4 dhcp_server advanced gateway custom (config)>
```

ii. Determine the VRRP virtual IP addresses:

```
(config)> show network vrrp VRRP_test virtual_address 0 192.168.3.3 1 10.10.10.1
```

(config)>

iii. Set the custom gateway to one of the VRRP virtual IP addresses. For example:

(config)> network interface eth2 ipv4 dhcp_server advanced gateway_custom 192.168.3.3 (config)>

b. For backup devices, set the default gateway to the IP address of the VRRP interface on the master device. For example:

(config)> network interface eth2 ipv4 gateway 192.168.3.1 (config)>

- c. For backup devices, enable and configure SureLink on the VRRP interface.
 - Determine the VRRP interface. Generally, this should be a LAN interface; VRRP+ will
 then monitor the LAN using SureLink to determine if the interface has network
 connectivity and promote a backup to master if SureLink fails.

(config)> show network vrrp VRRP_test interface /network/interface/eth2 (config)>

ii. Enable SureLink on the interface:

(config)> network interface eth2 ipv4 surelink enable true (config)>

iii. Set the amount of time to wait between connectivity tests:

(config)> network interface eth2 ipv4 surelink interval *value* (config)>

where *value* is any number of weeks, days, hours, minutes, or seconds, and takes the format *number*(w|d|h|m|s).

For example, to set interval to ten minutes, enter 5s:

(config)> network interface eth2 ipv4 surelink interval 5s (config)>

iv. Create a SureLink test target:

(config)> add network interface eth2 ipv4 surelink target end (config network interface eth2 ipv4 surelink target 0)>

v. Configure the type of test for the test target:

(config network interface eth2 ipv4 surelink target 0)> test value (config network interface eth2 ipv4 surelink target 0)>

where value is one of:

- ping: Tests connectivity by sending an ICMP echo request to a specified hostname or IP address.
 - Specify the hostname or IP address:

(config network interface eth2 ipv4 surelink target 0)> ping_host *host* (config network interface eth2 ipv4 surelink target 0)>

(Optional) Set the size, in bytes, of the ping packet:

(config network interface eth2 ipv4 surelink target 0)> ping_size [num] (config network interface eth2 ipv4 surelink target 0)>

- dns: Tests connectivity by sending a DNS query to the specified DNS server.
 - · Specify the DNS server. Allowed value is the IP address of the DNS server.

(config network interface eth2 ipv4 surelinktarget 0)> dns_server *ip_address* (config network interface eth2 ipv4 surelinktarget 0)>

- dns_configured: Tests connectivity by sending a DNS query to the DNS servers configured for this interface.
- http: Tests connectivity by sending an HTTP or HTTPS GET request to the specified URL.
 - Specify the url:

(config network interface eth2 ipv4 surelink target 0)> http_url value (config network interface eth2 ipv4 surelink target 0)>

where value uses the format http[s]://hostname/[path]

- interface_up: The interface is considered to be down based on the interfaces
 down time, and the amount of time an initial connection to the interface
 takes before this test is considered to have failed.
 - (Optional) Set the amount of time that the interface can be down before this test is considered to have failed:

(config network interface eth2 ipv4 surelink target 0)> interface_down_time $\it value$

(config network interface eth2 ipv4 surelink target 0)>

where *value* is any number of weeks, days, hours, minutes, or seconds, and takes the format *number*{w|d|h|m|s}.

For example, to set **interface_down_time** to ten minutes, enter either **10m** or **600s**:

(config network interface eth2 ipv4 surelink target 0)> interface_down_time 600s

(config network interface eth2 ipv4 surelink target 0)>

The default is 60 seconds.

• (Optional) Set the amount of time to wait for an initial connection to the interface before this test is considered to have failed:

(config network interface eth2 ipv4 surelink target 0)> interface_timeout *value* (config network interface eth2 ipv4 surelink target 0)>

where *value* is any number of weeks, days, hours, minutes, or seconds, and takes the format *number*{w|d|h|m|s}.

For example, to set **interface_timeout**to ten minutes, enter either **10m** or **600s**:

(config network interface eth2 ipv4 surelink target 0)> interface_timeout 600s (config network interface eth2 ipv4 surelink target 0)>

The default is 60 seconds.

9. Save the configuration and apply the change.


```
(config)> save
Configuration saved.
```

10. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Example: VRRP/VRRP+ configuration

This example configuration creates a VRRP pool containing two IX20 devices:

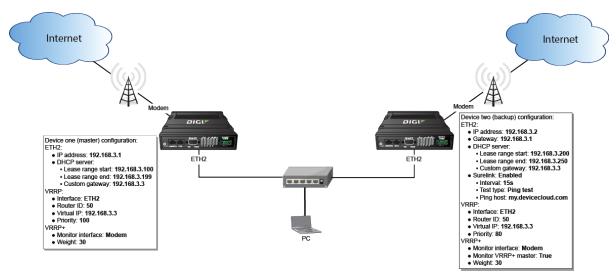

Configure device one (master device)



Task 1: Configure VRRP on device one

- Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.

d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

- 3. Click Network > VRRP.
- 4. For Add VRRP instance, type a name for the VRRP instance and click 1/2



The new VRRP instance configuration is displayed.



- 5. Click Enable.
- 6. For Interface, select Interface: ETH2.
- 7. For Router ID, leave at the default setting of 50.
- 8. For **Priority**, leave at the default setting of **100**.
- 9. Click to expand Virtual IP addresses.
- 10. Click Yoto add a virtual IP address.




11. For **Virtual IP**, type **192.168.3.3**.

Task 2: Configure VRRP+ on device one

- 1. Click to expand VRRP+.
- 2. Click Enable.
- 3. Click to expand Monitor interfaces.

4. Click %to add an interface for monitoring.

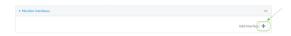

- 5. Select Interface: Modem.
- 6. For Priority modifier, type 30.

Task 3: Configure the IP address for the VRRP interface, ETH2, on device one

- 1. Click Network > Interfaces > ETH2 > IPv4
- 2. For Address, type 192.168.3.1/24.



Task 4: Configure the DHCP server for ETH2 on device one

- 1. Click to expand Network > Interfaces > ETH2 > IPv4 > DHCP Server
- 2. For Lease range start, leave at the default of 100.
- 3. For Lease range end, type 199.
- 4. Click to expand Advanced settings.
- 5. For Gateway, select Custom.
- 6. For Custom gateway, enter 192.168.3.3.



7. Click Apply to save the configuration and apply the change.

Command line

Task 1: Configure VRRP on device one

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type config to enter configuration mode:

> config (config)>

3. Create the VRRP instance:

(config)> add network vrrp VRRP_test (config network vrrp VRRP_test)>

4. Enable the VRRP instance:

(config network vrrp VRRP_test)> enable true (config network vrrp VRRP_test)>

5. Set the VRRP interface to ETH2:

(config network vrrp VRRP_test)> interface /network/interface/eth2 (config network vrrp VRRP_test)>

6. Add the virtual IP address associated with this VRRP instance.

(config network vrrp VRRP_test)> add virtual_address end 192.168.3.3 (config network vrrp VRRP_test)>

Task 2: Configure VRRP+ on device one

1. Enable VRRP+:

(config network vrrp VRRP_test)> vrrp_plus enable true (config network vrrp VRRP_test)>

2. Add the interface to monitor:

(config network vrrp VRRP_test)> add vrrp_plus monitor_interface end /network/interface/modem (config network vrrp VRRP_test)>

3. Set the amount that the device's priority should be decreased or increased due to SureLink connectivity failure or success to **30**:

(config network vrrp VRRP_test)> network vrrp VRRP_test vrrp_plus weight 30 (config network vrrp VRRP_test)>

Task 3: Configure the IP address for the VRRP interface, ETH2, on device one

1. Type ... to return to the root of the config prompt:

(config network vrrp VRRP_test)> ...
(config)>

2. Set the IP address for ETH2:

(config)> network interface eth2 ipv4 address 192.168.3.1/24 (config)>

Task 4: Configure the DHCP server for ETH2 on device one

- 1. Set the start and end addresses of the DHCP pool to use to assign DHCP addresses to clients:
 - a. Set the start address to 100:

(config)> network interface eth2 ipv4 dhcp_server lease_start 100 (config)>

b. Set the end address to 199:

(config)> network interface eth2 ipv4 dhcp_server lease_end 199 (config)>

2. Set the DHCP server gateway type to custom:

(config)> network interface eth2 ipv4 dhcp_server advanced gateway custom (config)>

Set the custom gateway to 192.168.3.3:

(config)> network interface eth2 ipv4 dhcp_server advanced gateway_custom 192.168.3.3 (config)>

4. Save the configuration and apply the change.

(config)> save
Configuration saved.

5. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configure device two (backup device)



Task 1: Configure VRRP on device two

- Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

- 3. Click Network > VRRP.
- 4. For Add VRRP instance, type a name for the VRRP instance and click 1/2



The new VRRP instance configuration is displayed.



- 5. Click Enable.
- 6. For Interface, select Interface: ETH2.
- 7. For Router ID, leave at the default setting of 50.
- 8. For Priority, type 80.
- 9. Click to expand Virtual IP addresses.
- 10. Click 1/5 to add a virtual IP address.




11. For Virtual IP, type 192.168.3.3.

Task 2: Configure VRRP+ on device two

- 1. Click to expand VRRP+.
- 2. Click Enable.
- 3. Click to expand Monitor interfaces.

4. Click %to add an interface for monitoring.

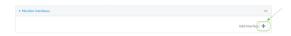

- 5. Select Interface: Modem.
- 6. Click to enable Monitor VRRP+ master.
- 7. For **Priority modifier**, type **30**.


Task 3: Configure the IP address for the VRRP interface, ETH2, on device two

- 1. Click Network > Interfaces > ETH2 > IPv4
- 2. For Address, type 192.168.3.2/24.
- 3. For **Default gateway**, type the IP address of the VRRP interface on the master device, configured above in Task 3, step 2 (192.168.3.1).



Task 4: Configure SureLink for ETH2on device two

- 1. Click Network > Interfaces > ETH2 > IPv4 > SureLink.
- 2. Click Enable.
- 3. For Interval, type 15s.
- 4. Click to expand Test targets > Test target.
- 5. For Test Type, select Ping test.
- 6. For Ping host, type https://remotemanager.digi.com.

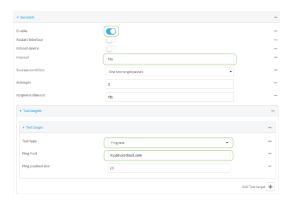

Task 5: Configure the DHCP server for ETH2 on device two

- 1. Click to expand Network > Interfaces > ETH2 > IPv4 > DHCP Server
- 2. For Lease range start, type 200.

- 3. For Lease range end, type 250.
- 4. Click Advanced settings.
- 5. For Gateway, select Custom.
- 6. For **Custom gateway**, enter **192.168.3.3**.



7. Click **Apply** to save the configuration and apply the change.

Command line

Task 1: Configure VRRP on device two

Select the device in Remote Manager and click Actions > Open Console, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Create the VRRP instance:

(config)> add network vrrp VRRP_test (config network vrrp VRRP_test)>

4. Enable the VRRP instance:

(config network vrrp VRRP_test)> enable true (config network vrrp VRRP_test)>

5. Set the VRRP interface to ETH2:

(config network vrrp VRRP_test)> interface /network/interface/eth2 (config network vrrp VRRP_test)>

6. Add the virtual IP address associated with this VRRP instance.

(config network vrrp VRRP_test)> add virtual_address end 192.168.3.3 (config network vrrp VRRP_test)>

Task 2: Configure VRRP+ on device two

1. Enable VRRP+:

(config network vrrp VRRP_test)> vrrp_plus enable true (config network vrrp VRRP_test)>

Add the interface to monitor:

(config network vrrp VRRP_test)> add vrrp_plus monitor_interface end /network/interface/modem (config network vrrp VRRP_test)>

3. Enable the ability to monitor the master device:

(config network vrrp VRRP_test)> vrrp_plus monitor_master true (config network vrrp VRRP_test)>

4. Set the amount that the device's priority should be decreased or increased due to SureLink connectivity failure or success to **30**:

(config network vrrp VRRP_test)> network vrrp VRRP_test vrrp_plus weight 30 (config network vrrp VRRP_test)>

Task 3: Configure the IP address for the VRRP interface, ETH2, on device two

1. Type ... to return to the root of the config prompt:

(config network vrrp VRRP_test)> ...
(config)>

2. Set the IP address for ETH2:

(config)> network interface eth2 ipv4 address 192.168.3.2 (config)>

3. Set the default gateway to the IP address of the VRRP interface on the master device, configured above in Task 3, step 2 (192.168.3.1).

(config)> network interface eth2 ipv4 gateway 192.168.3.1 (config)>

Task 4: Configure SureLink for ETH2 on device two

1. Enable SureLink on the ETH2 interface:

(config)> network interface eth2 ipv4 surelink enable true (config)>

2. Create a SureLink test target:

(config)> add network interface eth2 ipv4 surelink target end (config network interface eth2 ipv4 surelink target 0)>

3. Set the type of test to ping:

(config network interface eth2 ipv4 surelink target 0)> test ping (config network interface eth2 ipv4 surelink target 0)>

4. Set https://remotemanager.digi.com as the hostname to ping:

(config network interface eth2 ipv4 surelink target 0)> ping_host https://remotemanager.digi.com (config network interface eth2 ipv4 surelink target 0)>

Task 5: Configure the DHCP server for ETH2 on device two

1. Type ... to return to the root of the configuration prompt:

(config network interface eth2 ipv4 surelink target 0)> ... (config)>

- 2. Set the start and end addresses of the DHCP pool to use to assign DHCP addresses to clients:
 - a. Set the start address to 200:

(config)> network interface eth2 ipv4 dhcp_server lease_start 200 (config)>

b. Set the end address to 250:

(config)> network interface eth2 ipv4 dhcp_server lease_end 250 (config)>

3. Set the DHCP server gateway type to custom:

(config)> network interface eth2 ipv4 dhcp_server advanced gateway custom (config)>

4. Set the custom gateway to 192.168.3.3:

(config)> network interface eth2 ipv4 dhcp_server advanced gateway_custom 192.168.3.3 (config)>

5. Save the configuration and apply the change.

(config)> save
Configuration saved.

6. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Show VRRP status and statistics

This section describes how to display VRRP status and statistics for a IX20 device. VRRP status is available from the Web UI only.



- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- a. Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

3. Click Status > VRRP.

The Virtual Router Redundancy Protocol window is displayed.



Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the Admin CLI prompt, type show vrrp:

3. To display additional information about a specific VRRP instance, at the Admin CLI prompt, type show vrrp name name:

```
> show vrrp name VRRP_test
```

VRRP_test VRRP Status

Enabled : True Status : Up Interface : lan

IPv4

Virtual IP address(es): 10.10.10.1, 100.100.100.1

Current State : Master Current Priority : 100

Last Transition : Tue Jan 1 00:00:39 2019

Became Master : 1
Released Master : 0
Adverts Sent : 71
Adverts Received : 4
Priority Zero Sent : 0
Priority zero Received : 0

>

Virtual Private Networks (VPN)

Virtual Private Networks (VPNs) are used to securely connect two private networks together so that devices can connect from one network to the other using secure channels.

This chapter contains the following topics:

IPsec	490
OpenVPN	552
Generic Routing Encapsulation (GRE)	592
Dynamic Multipoint VPN (DMVPN)	612
LŹTP	
L2TPv3 Ethernet	631
MACsec	637
NEWO	640
WireGuard VPN	

IPsec

IPsec is a suite of protocols for creating a secure communication link—an IPsec tunnel—between a host and a remote IP network or between two IP networks across a public network such as the Internet.

IPsec data protection

IPsec protects the data being sent across a public network by providing the following:

Data origin authentication

Authentication of data to validate the origin of data when it is received.

Data integrity

Authentication of data to ensure it has not been modified during transmission.

Data confidentiality

Encryption of data sent across the IPsec tunnel to ensure that an unauthorized device cannot read the data.

Anti-Replay

Authentication of data to ensure an unauthorized device has not injected it into the IPsec tunnel.

IPsec mode

The IX20 supports IPsec mode. You can set this mode to run using either the **Tunnel** or **Transport** options.

Tunnel

The entire IP packet is encrypted and/or authenticated and then encapsulated as the payload in a new IP packet.

Transport

Only the payload of the IP packet is encrypted and/or authenticated. The IP header is left untouched. This mode has limitations when using an authentication header, because the IP addresses in the IP header cannot be translated (for example, with Network Address Translation (NAT), as it would invalidate the authentication hash value.

Internet Key Exchange (IKE) settings

IKE is a key management protocol that allows IPsec to negotiate the security associations (SAs) that are used to create the secure IPsec tunnel. Both IKEv1 and IKEv2 are supported.

SA negotiations are performed in two phases, known as **phase 1** and **phase 2**.

Phase 1

In phase 1, IKE creates a secure authenticated communication channel between the device and the peer (the remote device which is at the other end of the IPsec tunnel) using the configured preshared key and the Diffie-Hellman key exchange. This creates the IKE SAs that are used to encrypt further IKE communications.

For IKEv1, there are two modes for the phase 1 negotiation: **Main mode** and **Aggressive mode**. IKEv2 does not use these modes.

Main mode

Main mode is the default mode. It is slower than aggressive mode, but more secure, in that all sensitive information sent between the device and its peer is encrypted.

Aggressive mode

Aggressive mode is faster than main mode, but is not as secure as main mode, because the device and its peer exchange their IDs and hash information in clear text instead of being encrypted. Aggressive mode is usually used when one or both of the devices have a dynamic external IP address.

Phase 2

In phase 2, IKE negotiates the SAs for IPsec. This creates two unidirectional SAs, one for each direction. Once the phase 2 negotiation is complete, the IPsec tunnel should be fully functional.

IPsec and IKE renegotiation

To reduce the chances of an IPsec tunnel being compromised, the IPsec SAs and IKE SA are renegotiated at a regular interval. This results in different encryption keys being used in the IPsec tunnel.

Authentication

Gient authenticaton

XAUTH (extended authentication) pre-shared key authentication mode provides additional security by using client authentication credentials in addition to the standard pre-shared key. The IX20 device can be configured to authenticate with the remote peer as an XAUTH client.

RSA Signatures

With RSA signatures authentication, the IX20 device uses a private RSA key to authenticate with a remote peer that is using a corresponding public key.

Certificate-based Authentication

X509 certificate-based authentication makes use of private keys on both the server and client which are secured and never shared. Both the server and client have a certificate which is generated with their respective private key and signed by a Certificate Authority (CA).

The IX20 implementation of IPsec can be configured to use X.509 certificate-based authentication using the private keys and certificates, along with a root CA certificate from the signing authority and, if available, a Certificate Revocation List (CRL).

Configure an IPsec tunnel

Configuring an IPsec tunnel with a remote device involves configuring the following items:

Required configuration items

- IPsec tunnel configuration items:
 - · A name for the tunnel.

Note If the tunnel name is more than eight characters, the name will be truncated in the underlying network interface to the first six characters followed by three digits, incrementing from 000. This affects any custom scripts or firewall rules that may be trying to adjust the tunnel's interface or routing table entries.

• The mode: either tunnel or transport.

- · Enable the IPsec tunnel.
 - The IPsec tunnel is enabled by default.
- The firewall zone of the IPsec tunnel.
- The routing metric for routes associated with this IPsec tunnel.
- The authentication type and pre-shared key or other applicable keys and certificates.
 If SCEP certificates will be selected as the Authentication type, create the SCEP client prior to configuring the IPsec tunnel. See Configure a Simple Certificate Enrollment Protocol client for instructions.
- The local endpoint type and ID values, and the remote endpoint host and ID values.

IKE configuration items

- The IKE version, either IKEv1 or IKEv2.
- Whether to initiate a key exchange or wait for an incoming request.
- · The IKE mode, either main aggressive.
- The IKE authentication protocol to use for the IPsec tunnel negotiation during phase 1 and phase 2.
- The IKE encryption protocol to use for the IPsec tunnel negotiation during phase 1 and phase 2.
- The IKE Diffie-Hellman group to use for the IPsec tunnel negotiation during phase 1 and phase 2.
- Enable dead peer detection and configure the delay and timeout.
- Destination networks that require source NAT.
- Active recovery configuration. See Configure SureLink active recovery for IPsec for information about IPsec active recovery.

Additional configuration items

The following additional configuration settings are not typically configured to get an IPsec tunnel working, but can be configured as needed:

- Determine whether the device should use UDP encapsulation even when it does not detect that NAT is being used.
- If using IPsec failover, identify the primary tunnel during configuration of the backup tunnel.
- The Network Address Translation (NAT) keep alive time.
- The protocol, either Encapsulating Security Payload (ESP) or Authentication Header (AH).
- The management priority for the IPsec tunnel interface. The active interface with the highest management priority will have its address reported as the preferred contact address for central management and direct device access.
- Enable XAUTH client authentication, and the username and password to be used to authenticate with the remote peer.
- Enable Mode-configuration (MODECFG) to receive configuration information, such as the private IP address, from the remote peer.
- Disable the padding of IKE packets. This should normally not be done except for compatibility purposes.
- Destination networks that require source NAT.

- Depending on your network and firewall configuration, you may need to add a packet filtering rule to allow incoming IPsec traffic.
- Tunnel and key renegotiating
 - The lifetime of the IPsec tunnel before it is renegotiated.
 - The amount of time before the IKE phase 1 lifetime expires.
 - The amount of time before the IKE phase 2 lifetime expires
 - The lifetime margin, a randomizing amount of time before the IPsec tunnel is renegotiated.

Note If the remote networks for an IPsec tunnel overlap with the networks for a WAN internet connection (wired, cellular, or otherwise), you must configure a static route to direct the traffic either through the IPsec tunnel, or through the WAN (outside of the IPsec tunnel). See Configure a static route for information about configuring a static route.



- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:


a. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.



The **Configuration** window is displayed.

- 3. Click VPN > IPsec.
- 4. Click to expand Tunnels.
- 5. For **Add IPsec tunnel**, type a name for the tunnel and click $\sqrt[n]{}_{2}$



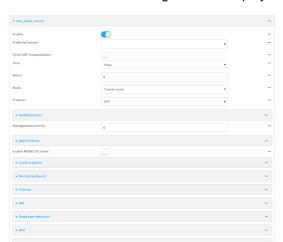

The new IPsec tunnel configuration is displayed.

- 6. The IPsec tunnel is enabled by default. To disable, toggle off Enable.
- (Optional) Preferred tunnel provides an optional mechanism for IPsec failover behavior. See Configure IPsec failover for more information.
- 8. (Optional) Enable **Force UDP encapsulation** to force the tunnel to use UDP encapsulation even when it does not detect that NAT is being used.
- For **Zone**, select the firewall zone for the IPsec tunnel. Generally this should be left at the default of **IPsec**.

Note Depending on your network configuration, you may need to add a packet filtering rule to allow incoming traffic. For example, for the **IPsec** zone:

- a. Click to expand Firewall > Packet filtering.
- b. For Add packet filter, click %
- c. For Label, type Allow incoming IPsec traffic.
- d. For Source zone, select IPsec.

Leave all other fields at their default settings.



10. For **Metric**, enter or select the priority of routes associated with this IPsec tunnel. When more than one active route matches a destination, the route with the lowest metric is used.
The metric can also be used in tandem with Surel ink to configure IPsec failover behavior. See

The metric can also be used in tandem with SureLink to configure IPsec failover behavior. See Configure IPsec failover for more information.

11. For **Mode**, select **Tunnel mode**. **Transport mode** is not currently supported.

- 12. Select the Mode, either:
 - **Tunnel mode**: The entire IP packet is encrypted and/or authenticated and then encapsulated as the payload in a new IP packet.
 - **Transport mode**: Only the payload of the IP packet is encrypted and/or authenticated. The IP header is unencrypted.
- 13. Select the Protocol, either:
 - ESP (Encapsulating Security Payload): Provides encryption as well as authentication and integrity.
 - **AH** (Authentication Header): Provides authentication and integrity only.
- 14. Strict routing is disabled by default. Toggle on to enable.

Strict routing makes IPsec behave like a policy-based VPN, rather than a route-based VPN.

15. Click to expand Authentication.



- a. For Authentication type, select one of the following:
 - Pre-shared key: Uses a pre-shared key (PSK) to authenticate with the remote peer.
 - i. Type the Pre-shared key.
 - Asymmetric pre-shared keys: Uses asymmetric pre-shared keys to authenticate with the remote peer.
 - i. For **Local key**, type the local pre-shared key. This must be the same as the remote key on the remote host.
 - ii. For **Remote key**, type the remote pre-shared key. This must be the same as the local key on the remote host.
 - RSA signature: Uses a private RSA key to authenticate with the remote peer.
 - i. For **Private key**, paste the device's private RSA key in PEM format.
 - ii. Type the **Private key passphrase** that is used to decrypt the private key. Leave blank if the private key is not encrypted.
 - iii. For Peer public key, paste the peer's public RSA key in PEM format.
 - SCEP certificates: Uses Simple Certificate Enrollment Protocol (SCEP) to download a private key, certificates, and an optional Certificate Revocation List (CRL) to the IX20 device from a SCEP server.

You must create the SCEP client prior to configuring the IPsec tunnel. See Configure a Simple Certificate Enrollment Protocol client for instructions.

- i. For **SCEP Client**, select the SCEP client.
- **X.509 certificate**: Uses private key and X.509 certificates to authenticate with the remote peer.
 - i. For Private key, paste the device's private RSA key in PEM format.
 - ii. Type the **Private key passphrase** that is used to decrypt the private key. Leave blank if the private key is not encrypted.

- iii. For **Certificate**, paste the local X509 certificate in PEM format.
- iv. For Peer verification, select either:
 - Peer certificate: For Peer certificate, paste the peer's X.509 certificate in PEM format.
 - Certificate Authority: For Certificate Authority chain, paste the Certificate
 Authority (CA) certificates. These must include all peer certificates in the
 chain up to the root CA certificate, in PEM format.
- 16. (Optional) For Management Priority, set the management priority for this IPsec tunnel. A tunnel that is up and has the highest priority will be used for central management and direct device access.
- 17. (Optional) To configure the device to connect to its remote peer as an XAUTH client:
 - a. Click to expand XAUTH client.



- b. Click Enable.
- c. Type the **Username** and **Password** that the device will use to authenticate as an XAUTH client with the peer.
- 18. (Optional) Click **Enable MODECFG client** to receive configuration information, such as the private IP address, from the remote peer.
- Gick to expand Local endpoint.
 - a. For **Type**, select either:
 - Default route: Uses the same network interface as the default route.
 - Interface: Select the Interface to be used as the local endpoint.
 - b. Click to expand ID.
 - i. Select the ID type:
 - Auto: The ID will be automatically determined from the value of the tunnels endpoints.
 - Raw: Enter an ID and have it passed unmodified to the underlying IPsec stack.
 For Raw ID value, type the ID that will be passed.
 - Any: Any ID will be accepted.
 - IPv4: The ID will be interpreted as an IP address and sent as an ID_IPV4_ADDR IKE identity.
 - For **IPv4 ID value**, type an IPv4 formatted ID. This can be a fully-qualified domain name or an IPv4 address.
 - IPv6: The ID will be interpreted as an IP address and sent as an ID_IPv6_ADDR IKE identity.

For **IPv6 ID value**, type an IPv6 formatted ID. This can be a fully-qualified domain name or an IPv6 address.

- RFC822/Email: The ID will be interpreted as an RFC822 (email address). For RFC822 ID value, type the ID in internet email address format.
- FQDN: The ID will be interpreted as FQDN (Fully Qualified Domain Name) and sent as an ID_FQDN IKE identity.
 - For FQDN ID value, type the ID as an FQDN.
- KeyID: The ID will be interpreted as a Key ID and sent as an ID_KEY_ID IKE identity.
 - For **KEYID ID value**, type the key ID.
- MAC address: The device's primary MAC address will be used as the ID and sent as a ID_KEY_ID IKE identity.
- Serial number: The device's serial number will be used as the ID and sent as a ID KEY ID IKE identity.
- 20. Click to expand Remote endpoint.
 - a. For IP version, select either IPv4 or IPv6.
 - b. For Hostname list selection, select one of the following:
 - Round robin: Attempts to connect to hostnames sequentially based on the list order.
 - Random: Randomly selects an IPsec peer to connect to from the hostname list.
 - **Priority ordered**: Selects the first hostname in the list that is resolvable.
 - c. Click to expand Hostname.
 - i. Click %next to Add Hostname.
 - ii. For Hostname, type a hostname or IPv4 address. If your device is not configured to initiate the IPsec connection (see IKE > Initiate connection), you can also use the keyword any, which means that the hostname is dynamic or unknown.
 - iii. Click %again to add additional hostnames.
 - d. Click to expand ID.
 - i. Select the ID type:
 - Auto: The ID will be automatically determined from the value of the tunnels endpoints.
 - Raw: Enter an ID and have it passed unmodified to the underlying IPsec stack.
 For Raw ID value, type the ID that will be passed.
 - Any: Any ID will be accepted.
 - IPv4: The ID will be interpreted as an IPv4 address and sent as an ID_IPv4_ ADDR IKE identity.
 - For **IPv4 ID value**, type an IPv4 formatted ID. This can be a fully-qualified domain name or an IPv4 address.
 - IPv6: The ID will be interpreted as an IPv6 address and sent as an ID_IPv6_ ADDR IKE identity.
 - For **IPv6 ID value**, type an IPv6 formatted ID. This can be a fully-qualified domain name or an IPv6 address.
 - RFC322/Email: The ID will be interpreted as an RFC322 (email address). For RFC322 ID value, type the ID in internet email address format.

■ FQDN: The ID will be interpreted as FQDN (Fully Qualified Domain Name) and sent as an ID_FQDN IKE identity.

For FQDN ID value, type the ID as an FQDN.

KeyID: The ID will be interpreted as a Key ID and sent as an ID_KEY_ID IKE identity.

For **KEYID ID value**, type the key ID.

- MAC address: The device's primary MAC address will be used as the ID and sent as a ID_KEY_ID IKE identity.
- Serial number: The device's serial number will be used as the ID and sent as a ID_KEY_ID IKE identity.

21. Click to expand Policies.

Policies define the network traffic that will be encapsulated by this tunnel.

a. Click Yoto create a new policy.



The new policy configuration is displayed.

b. Click to expand Local traffic selector.



- c. For **Type**, select one of the following:
 - Address: The address of a local network interface.

For Address, select the appropriate interface.

■ **Network**: The subnet of a local network interface.

For **Address**, select the appropriate interface.

Custom network: A user-defined network.


For **Custom network**, enter the IPv4 address and optional netmask.

- Request a network: Requests a network from the remote peer.
- **Dynamic**: Uses the address of the local endpoint.
- d. For **Protocol**, select one of the following:
 - Any: Matches any protocol.
 - **TCP**: Matches TCP protocol only.
 - UDP: Matches UDP protocol only.
 - ICMP: Matches ICMP requests only.

- Other protocol: Matches an unlisted protocol.
 If Other protocol is selected, type the number of the protocol.
- e. For **Port**, type the port matching criteria.
 Allowed values are a port number, a range of port numbers, or **any**.
- f. (Optional) Click to expand Remote traffic selector.



- g. For Remote network, enter the IP address and optional netmask of the remote network.
- h. For Protocol, select one of the following:
 - Any: Matches any protocol.
 - **TCP**: Matches TCP protocol only.
 - UDP: Matches UDP protocol only.
 - ICMP: Matches ICMP requests only.
 - Other protocol: Matches an unlisted protocol.
 If Other protocol is selected, type the number of the protocol.
- For **Port**, type the port matching criteria.
 Allowed values are a port number, a range of port numbers, or **any**.
- 22. Click to expand IKE.

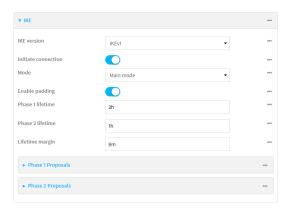

- a. For **IKE version**, select either IKEv1 or IKEv2. This setting must match the peer's IKE version.
- Initiate connection instructs the device to initiate the key exchange, rather than waiting
 for an incoming request. This must be disabled if Remote endpoint > Hostname is set to
 any.
- c. For Mode, select either Main mode or Aggressive mode.
- d. For **IKE fragmentation**, select one of the following:
 - If supported by the peer: Send oversized IKE messages in fragments, if the peer supports receiving them.

- Always: Always send IKEv1 messages in fragments. For IKEv2, this option is equivalent to If supported by the peer.
- Never: Do not send oversized IKE messages in fragments.
- Accept: Do not send oversized IKE messages in fragments, but announce support for fragmentation to the peer.

The default is Always.

- e. For **Enable padding**, click to disable the padding of IKE packets. This should normally not be disabled except for compatibility purposes.
- f. For Phase 1 lifetime, enter the amount of time that the IKE security association expires after a successful negotiation and must be re-authenticated.
 - Allowed values are any number of weeks, days, hours, minutes, or seconds, and take the format *number*{w|d|h|m|s}.
 - For example, to set **Phase 1 lifetime** to ten minutes, enter **10m** or **600s**.
- g. For Phase 2 lifetime, enter the amount of time that the IKE security association expires after a successful negotiation and must be rekeyed.
 - Allowed values are any number of weeks, days, hours, minutes, or seconds, and take the format *number*(w|d|h|m|s).
 - For example, to set Phase 2 lifetime to ten minutes, enter 10m or 600s.
- h. For Lifetime margin, enter a randomizing amount of time before the IPsec tunnel is renegotiated.
 - Allowed values are any number of weeks, days, hours, minutes, or seconds, and take the format *number*(w|d|h|m|s).
 - For example, to set Lifetime margin to ten minutes, enter 10m or 600s.
- i. Click to expand Phase 1 Proposals.
 - i. Click Yoto create a new phase 1 proposal.
 - ii. For Cipher, select the type of encryption.
 - iii. For **Hash**, select the type of hash to use to verify communication integrity.
 - For Diffie-Hellman group, select the type of Diffie-Hellman group to use for key exchange.
 - You can add additional Phase 1 proposals by clicking \(\gamma_0 \) next to **Add Phase 1 Proposal**.
- j. Click to expand Phase 2 Proposals.
 - i. Click Yoto create a new phase 2 proposal.
 - ii. For **Cipher**, select the type of encryption.
 - iii. For **Hash**, select the type of hash to use to verify communication integrity.
 - iv. For **Diffie-Hellman group**, select the type of Diffie-Hellman group to use for key exchange.
 - v. You can add additional Phase 2 proposals by clicking Yonext to **Add Phase 2 Proposal**.
- 23. (Optional) Click to expand **Dead peer detection**. Dead peer detection is enabled by default. Dead peer detection uses periodic IKE transmissions to the remote endpoint to detect whether tunnel communications have failed, allowing the tunnel to be automatically

restarted when failure occurs.

- a. To enable or disable dead peer detection, click **Enable**.
- b. For **Delay**, type the number of seconds between transmissions of dead peer packets. Dead peer packets are only sent when the tunnel is idle.
- c. For **Timeout**, type the number of seconds to wait for a response from a dead peer packet before assuming the tunnel has failed.
- (Optional) Click to expand NAT to create a list of destination networks that require source NAT.
 - a. Click Yonext to Add NAT destination.
 - b. For **Destination network**, type the IPv4 address and optional netmask of a destination network that requires source NAT. You can also use **any**, meaning that any destination network connected to the tunnel will use source NAT.
- 25. See Configure SureLink active recovery for IPsec for information about IPsec Active recovery.
- (Optional) Click Advanced to set various IPsec-related time out, keep alive, and related values.
- 27. Click **Apply** to save the configuration and apply the change.

Command line

Select the device in Remote Manager and click Actions > Open Console, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Add an IPsec tunnel. For example, to add an IPsec tunnel named ipsec_example:

```
(config)> add vpn ipsec tunnel ipsec_example (config vpn ipsec tunnel ipsec_example)>
```

The IPsec tunnel is enabled by default. To disable:

```
(config vpn ipsec tunnel ipsec_example)> enable false (config vpn ipsec tunnel ipsec_example)>
```

4. (Optional) Set the tunnel to use UDP encapsulation even when it does not detect that NAT is being used:

```
(config vpn ipsec tunnel ipsec_example)> force_udp_encap true (config vpn ipsec tunnel ipsec_example)>
```

5. Set the firewall zone for the IPsec tunnel. Generally this should be left at the default of ipsec.

```
(config vpn ipsec tunnel ipsec_example)> zone zone (config vpn ipsec tunnel ipsec_example)>
```

To view a list of available zones:

(config vpn ipsec tunnel ipsec_example)> zone ?

Zone: The firewall zone assigned to this IPsec tunnel. This can be used by packet filtering rules and access control lists to restrict network traffic on this tunnel.

Format:

any

dynamic_routes

edge

external

hotspot

internal

ipsec

loopback

setup

Default value: ipsec Current value: ipsec

(config vpn ipsec tunnel ipsec_example)>

Note Depending on your network configuration, you may need to add a packet filtering rule to allow incoming traffic. For example, for the **IPsec** zone:

a. Type ... to move to the root of the configuration:

```
(config vpn ipsec tunnel ipsec_example)> ... (config)>
```

b. Add a packet filter:

```
(config)> add firewall filter end (config firewall filter 2)>
```

c. Set the label to Allow incoming IPsec traffic:

```
(config config firewall filter 2)> label "Allow incoming IPsec traffic" (config firewall filter 2)>
```

d. Set the source zone to ipsec:

```
(config config firewall filter 2)> src_zone ipsec (config firewall filter 2)>
```

6. Set the metric for the IPsec tunnel. When more than one active route matches a destination, the route with the lowest metric is used. The metric can also be used in tandem with SureLink to configure IPsec failover behavior. See Configure IPsec failover for more information.

```
(config vpn ipsec tunnel ipsec_example)> metric value (config vpn ipsec tunnel ipsec_example)>
```

where value is any integer between 0 and 65535.

7. Set the mode:

(config vpn ipsec tunnel ipsec_example)> mode *mode* (config vpn ipsec tunnel ipsec_example)>

where *mode* is either:

- **tunnel**: The entire IP packet is encrypted and/or authenticated and then encapsulated as the payload in a new IP packet.
- transport: Only the payload of the IP packet is encrypted and/or authenticated. The IP header is unencrypted.

The default is tunnel.

8. Set the protocol:

(config vpn ipsec tunnel ipsec_example)> type *protocol* (config vpn ipsec tunnel ipsec_example)>

where protocol is either:

- esp (Encapsulating Security Payload): Provides encryption as well as authentication and integrity.
- **ah** (Authentication Header): Provides authentication and integrity only.

The default is **esp**.

9. (Optional) Set the management priority for this IPsec tunnel:

(config vpn ipsec tunnel ipsec_example)> mgmt value (config vpn ipsec tunnel ipsec_example)>

where *value* is any interger between **0** and **1000**.

Set the authentication type:

(config vpn ipsec tunnel ipsec_example)> auth type *value* (config vpn ipsec tunnel ipsec_example)>

where *value* is one of:

- secret: Uses a pre-shared key (PSK) to authenticate with the remote peer.
 - a. Set the pre-shared key:

(config vpn ipsec tunnel ipsec_example)> auth secret *key* (config vpn ipsec tunnel ipsec_example)>

- asymmetric-secrets: Uses asymmetric pre-shared keys to authenticate with the remote peer.
 - a. Set the local pre-shared key. This must be the same as the remote key on the remote host.:

(config vpn ipsec tunnel ipsec_example)> auth local_secret *key* (config vpn ipsec tunnel ipsec_example)>

b. Set the remote pre-shared key. This must be the same as the local key on the remote host.:

(config vpn ipsec tunnel ipsec_example)> auth remote_secret *key* (config vpn ipsec tunnel ipsec_example)>

- rsasig: Uses a private RSA key to authenticate with the remote peer.
 - a. For the private_key parameter, paste the device's private RSA key in PEM format:

(config vpn ipsec tunnel ipsec_example)> auth private_key key (config vpn ipsec tunnel ipsec_example)>

b. Set the private key passphrase that is used to decrypt the private key. Leave blank if the private key is not encrypted.

(config vpn ipsec tunnel ipsec_example)> auth private_key_passphrase passphrase (config vpn ipsec tunnel ipsec_example)>

c. For the **peer_public_key** parameter, paste the peer's public RSA key in PEM format:

(config vpn ipsec tunnel ipsec_example)> auth peer_public_key *key* (config vpn ipsec tunnel ipsec_example)>

- x509: Uses private key and X.509 certificates to authenticate with the remote peer.
 - a. For the **private_key** parameter, paste the device's private RSA key in PEM format:

(config vpn ipsec tunnel ipsec_example)> auth private_key key (config vpn ipsec tunnel ipsec_example)>

b. Set the private key passphrase that is used to decrypt the private key. Leave blank if the private key is not encrypted.

(config vpn ipsec tunnel ipsec_example)> auth private_key_passphrase passphrase (config vpn ipsec tunnel ipsec_example)>

c. For the **cert** parameter, paste the local X509 certificate in PEM format:

(config vpn ipsec tunnel ipsec_example)> auth cert certificate (config vpn ipsec tunnel ipsec_example)>

d. Set the method for verifying the peer's X509 certificate:

(config vpn ipsec tunnel ipsec_example)> auth peer_verify value (config vpn ipsec tunnel ipsec_example)>

where value is either:

- cert: Uses the peer's X509 certificate in PEM format for verification.
 - For the peer_cert parameter, paste the peer's X509 certificate in PEM format:

(config vpn ipsec tunnel ipsec_example)> auth peer_cert certificate (config vpn ipsec tunnel ipsec_example)>

- ca: Uses the Certificate Authority chain for verification.
 - For the ca_cert parameter, paste the Certificate Authority (CA) certificates.
 These must include all peer certificates in the chain up to the root CA certificate, in PEM format.

(config vpn ipsec tunnel ipsec_example)> auth ca_cert cert_chain (config vpn ipsec tunnel ipsec_example)>

- 11. (Optional) Configure the device to connect to its remote peer as an XAUTH client:
 - a. Enable XAUTH client functionality:

(config vpn ipsec tunnel ipsec_example)> xauth_client enable true (config vpn ipsec tunnel ipsec_example)>

b. Set the XAUTH client username:

(config vpn ipsec tunnel ipsec_example)> xauth_client username *name* (config vpn ipsec tunnel ipsec_example)>

c. Set the XAUTH client password:

(config vpn ipsec tunnel ipsec_example)> xauth_client password pwd (config vpn ipsec tunnel ipsec_example)>

12. (Optional) Enable MODECFG client functionality:

MODECFG client functionality configures the device to receive configuration information, such as the private IP address, from the remote peer.

a. Enable MODECFG client functionality:

(config vpn ipsec tunnel ipsec_example)> modecfg_client enable true (config vpn ipsec tunnel ipsec_example)>

- 13. Configure the local endpoint:
 - a. Set the method for determining the local network interface:

(config vpn ipsec tunnel ipsec_example)> local type *value* (config vpn ipsec tunnel ipsec_example)>

where value is either:

- defaultroute: Uses the same network interface as the default route.
- interface: Select the Interface to be used as the local endpoint.
- b. Set the ID type:

(config vpn ipsec tunnel ipsec_example)> local id type *value* (config vpn ipsec tunnel ipsec_example)>

where value is one of:

auto: The ID will be automatically determined from the value of the tunnels endpoints.

raw: Enter an ID and have it passed unmodified to the underlying IPsec stack.
Set the unmodified ID that will be passed:

(config vpn ipsec tunnel ipsec_example)> local id type raw_id id (config vpn ipsec tunnel ipsec_example)>

- any: Any ID will be accepted.
- ipv4: The ID will be interpreted as an IPv4 address and sent as an ID_IPv4_ADDR IKE identity.

Set an IPv4 formatted ID. This can be a fully-qualified domain name or an IPv4 address.

(config vpn ipsec tunnel ipsec_example)> local id type ipv4_id *id* (config vpn ipsec tunnel ipsec_example)>

ipv6: The ID will be interpreted as an IPv6 address and sent as an ID_IPv6_ADDR IKE identity.

Set an IPv6 formatted ID. This can be a fully-qualified domain name or an IPv6 address.

(config vpn ipsec tunnel ipsec_example)> local id type ipv6_id id (config vpn ipsec tunnel ipsec_example)>

rfc822: The ID will be interpreted as an RFC822 (email address).

Set the ID in internet email address format:

(config vpn ipsec tunnel ipsec_example)> local id type rfc822_id id (config vpn ipsec tunnel ipsec_example)>

- fqdn: The ID will be interpreted as FQDN (Fully Qualified Domain Name) and sent as an ID_FQDN IKE identity.
- keyid: The ID will be interpreted as a Key ID and sent as an ID_KEY_ID IKE identity.
 Set the key ID:

(config vpn ipsec tunnel ipsec_example)> local id type keyid_id id (config vpn ipsec tunnel ipsec_example)>

- mac_address: The device's MAC address will be used for the Key ID and sent as an ID_KEY_ID IKE identity.
- serial_number: The ID device's serial number will be used for the Key ID and sent as an ID_KEY_ID IKE identity.
- 14. Configure the remote endpoint:
 - a. Add a remote hostname:

(config vpn ipsec tunnel ipsec_example)> add remote hostname end *value* (config vpn ipsec tunnel ipsec_example)>

where *value* is the hostname or IPv4 address of the IPsec peer. If your device is not configured to initiate the IPsec connection (see ike initiate), you can also use the keyword **any**, which means that the hostname is dynamic or unknown.

Repeat for additional hostnames.

b. Set the hostname selection type:

(config vpn ipsec tunnel ipsec_example)> remote hostname_selection *value* (config vpn ipsec tunnel ipsec_example)>

where value is one of:

- round_robin: Attempts to connect to hostnames sequentially based on the list order.
- random: Randomly selects an IPsec peer to connect to from the hostname list.
- priority: Selects the first hostname in the list that is resolvable.
- c. Set the ID type:

(config vpn ipsec tunnel ipsec_example)> remote id type value (config vpn ipsec tunnel ipsec_example)>

where value is one of:

- auto: The ID will be automatically determined from the value of the tunnels endpoints.
- raw: Enter an ID and have it passed unmodified to the underlying IPsec stack.
 Set the unmodified ID that will be passed:

(config vpn ipsec tunnel ipsec_example)> remote id type raw_id *id* (config vpn ipsec tunnel ipsec_example)>

- any: Any ID will be accepted.
- ipv4: The ID will be interpreted as an IPv4 address and sent as an ID_IPv4_ADDR IKE identity.

Set an IPv4 formatted ID. This can be a fully-qualified domain name or an IPv4 address.

(config vpn ipsec tunnel ipsec_example)> remote id type ipv4_id *id* (config vpn ipsec tunnel ipsec_example)>

ipv6: The ID will be interpreted as an IPv6 address and sent as an ID_IPv6_ADDR IKE identity.

Set an IPv6 formatted ID. This can be a fully-qualified domain name or an IPv6 address.

(config vpn ipsec tunnel ipsec_example)> remote id type ipv6_id *id* (config vpn ipsec tunnel ipsec_example)>

rfc822: The ID will be interpreted as an RFC822 (email address).

Set the ID in internet email address format:

(config vpn ipsec tunnel ipsec_example)> remote id type rfc822_id *id* (config vpn ipsec tunnel ipsec_example)>

- fqdn: The ID will be interpreted as FQDN (Fully Qualified Domain Name) and sent as an ID_FQDN IKE identity.
- keyid: The ID will be interpreted as a Key ID and sent as an ID_KEY_ID IKE identity.
 Set the key ID:

(config vpn ipsec tunnel ipsec_example)> remote id type keyid_id id (config vpn ipsec tunnel ipsec_example)>

- mac_address: The device's MAC address will be used for the Key ID and sent as an ID_KEY_ID IKE identity.
- serial_number: The ID device's serial number will be used for the Key ID and sent as an ID_KEY_ID IKE identity.
- Configure IKE settings:
 - a. Set the IKE version:

(config vpn ipsec tunnel ipsec_example)> ike version *value* (config vpn ipsec tunnel ipsec_example)>

where value is either ikev1 or ikev2. This setting must match the peer's IKE version.

b. Determine whether the device should initiate the key exchange, rather than waiting for an incoming request. By default, the device will initiate the key exchange. This must be disabled if remote hostname is set to any. To disable:

(config vpn ipsec tunnel ipsec_example)> ike initiate false (config vpn ipsec tunnel ipsec_example)>

c. Set the IKE phase 1 mode:

(config vpn ipsec tunnel ipsec_example)> ike mode *value* (config vpn ipsec tunnel ipsec_example)>

where value is either aggressive or main.

d. Set the IKE fragmentation:

(config vpn ipsec tunnel ipsec_example)> ike fragmentation *value* (config vpn ipsec tunnel ipsec_example)>

where value is one of:

- if_supported: Send oversized IKE messages in fragments, if the peer supports receiving them.
- always: Always send IKEv1 messages in fragments. For IKEv2, this option is equivalent to if supported.
- never: Do not send oversized IKE messages in fragments.
- accept: Do not send oversized IKE messages in fragments, but announce support for fragmentation to the peer.

The default is always.

e. Padding of IKE packets is enabled by default and should normally not be disabled except for compatibility purposes. To disable:

(config vpn ipsec tunnel ipsec_example)> ike pad false (config vpn ipsec tunnel ipsec_example)>

f. Set the amount of time that the IKE security association expires after a successful negotiation and must be re-authenticated:

(config vpn ipsec tunnel ipsec_example)> ike phase1_lifetime *value* (config vpn ipsec tunnel ipsec_example)>

where *value* is any number of weeks, days, hours, minutes, or seconds, and takes the format *number*{w|d|h|m|s}.

For example, to set phase1_lifetime to ten minutes, enter either 10m or 600s:

(config vpn ipsec tunnel ipsec_example)> ike phase1_lifetime 600s (config vpn ipsec tunnel ipsec_example)>

The default is three hours.

g. Set the amount of time that the IKE security association expires after a successful negotiation and must be rekeyed.

(config vpn ipsec tunnel ipsec_example)> ike phase2_lifetime *value* (config vpn ipsec tunnel ipsec_example)>

where *value* is any number of weeks, days, hours, minutes, or seconds, and takes the format *number*{w|d|h|m|s}.

For example, to set **phase2_lifetime** to ten minutes, enter either **10m** or **600s**:

(config vpn ipsec tunnel ipsec_example)> ike phase2_lifetime 600s (config vpn ipsec tunnel ipsec_example)>

The default is one hour.

h. Set a randomizing amount of time before the IPsec tunnel is renegotiated:

(config vpn ipsec tunnel ipsec_example)> ike lifetime_margin *value* (config vpn ipsec tunnel ipsec_example)>

where *value* is any number of weeks, days, hours, minutes, or seconds, and takes the format *number*{w|d|h|m|s}.

For example, to set lifetime_margin to ten minutes, enter either 10m or 600s:

(config vpn ipsec tunnel ipsec_example)> ike lifetime_margin 600s (config vpn ipsec tunnel ipsec_example)>

The default is nine minutes.

- i. Configure the types of encryption, hash, and Diffie-Hellman group to use during phase 1:
 - i. Add a phase 1 proposal:

(config vpn ipsec tunnel ipsec_example)> add ike phase1_proposal end (config vpn ipsec tunnel ipsec_example ike phase1_proposal 0)>

ii. Set the type of encryption to use during phase 1:

(config vpn ipsec tunnel ipsec_example ike phase1_proposal 0)> cipher *value* (config vpn ipsec tunnel ipsec_example ike phase1_proposal 0)>

where value is one of:

- 3des
- aes128
- aes128gcm128
- aes128gcm64
- aes128gcm96
- aes192
- aes192gcm128
- aes192gcm64
- aes192gcm96
- aes256
- aes256gcm128
- aes256gcm64
- aes256gcm96
- null

The default is 3des.

iii. Set the type of hash to use during phase 1 to verify communication integrity:

```
(config vpn ipsec tunnel ipsec_example ike phase1_proposal 0)> hash value (config vpn ipsec tunnel ipsec_example ike phase1_proposal 0)>
```

where value is one of:

- md5
- sha1
- sha256
- sha384
- sha512

The default is sha1.

- iv. Set the type of Diffie-Hellman group to use for key exchange during phase 1:
 - i. Use the ?to determine available Diffie-Hellman group types:

```
(config vpn ipsec tunnel ipsec_example ike phase1_proposal 0)> dh_group ?
curve25519
curve448
ecp192
ecp224
...
(config vpn ipsec tunnel ipsec_example ike phase1_proposal 0)>
```

ii. Set the Diffie-Hellman group type:

(config vpn ipsec tunnel ipsec_example ike phase1_proposal 0)> dh_group value (config vpn ipsec tunnel ipsec_example ike phase1_proposal 0)>

The default is modp2048.

- v. (Optional) Add additional phase 1 proposals:
 - i. Move back one level in the schema:

(config vpn ipsec tunnel ipsec_example ike phase1_proposal 0)> .. (config vpn ipsec tunnel ipsec_example ike phase1_proposal)>

ii. Add an additional proposal:

(config vpn ipsec tunnel ipsec_example ike phase1_proposal)> add end (config vpn ipsec tunnel ipsec_example ike phase1_proposal 1)>

Repeat the above steps to set the type of encryption, hash, and Diffie-Hellman group for the additional proposal.

- Repeat to add more phase 1 proposals.
- j. Configure the types of encryption, hash, and Diffie-Hellman group to use during phase 2:
 - i. Move back two levels in the schema:

(config vpn ipsec tunnel ipsec_example ike phase1_proposal 0)> (config vpn ipsec tunnel ipsec_example ike)>

ii. Add a phase 2 proposal:

(config vpn ipsec tunnel ipsec_example ike)> add ike phase2_proposal end (config vpn ipsec tunnel ipsec_example ike phase2_proposal 0)>

iii. Set the type of encryption to use during phase 2:

(config vpn ipsec tunnel ipsec_example ike phase2_proposal 0)> cipher *value* (config vpn ipsec tunnel ipsec_example ike phase2_proposal 0)>

where value is one of:

- 3des
- aes128
- aes128gcm128
- aes128gcm64
- aes128gcm96
- aes192
- aes192gcm128
- aes192gcm64
- aes192gcm96
- aes256
- aes256gcm128

- aes256gcm64
- aes256gcm96
- null

The default is 3des.

iv. Set the type of hash to use during phase 2 to verify communication integrity:

(config vpn ipsec tunnel ipsec_example ike phase2_proposal 0)> hash *value* (config vpn ipsec tunnel ipsec_example ike phase2_proposal 0)>

where value is one of:

- md5
- sha1
- sha256
- sha384
- sha512

The default is sha1.

- v. Set the type of Diffie-Hellman group to use for key exchange during phase 2:
 - i. Use the ?to determine available Diffie-Hellman group types:

```
(config vpn ipsec tunnel ipsec_example ike phase2_proposal 0)> dh_group?
curve25519
curve448
ecp192
ecp224
...
(config vpn ipsec tunnel ipsec_example ike phase2_proposal 0)>
```

ii. Set the Diffie-Hellman group type:

(config vpn ipsec tunnel ipsec_example ike phase2_proposal 0)> dh_group *value* (config vpn ipsec tunnel ipsec_example ike phase2_proposal 0)>

The default is modp2048.

- vi. (Optional) Add additional phase 2 proposals:
 - i. Move back one level in the schema:

```
(config vpn ipsec tunnel ipsec_example ike phase2_proposal 0)> .. (config vpn ipsec tunnel ipsec_example ike phase2_proposal)>
```

ii. Add an additional proposal:

```
(config vpn ipsec tunnel ipsec_example ike phase2_proposal)> add end (config vpn ipsec tunnel ipsec_example ike phase2_proposal 1)>
```

Repeat the above steps to set the type of encryption, hash, and Diffie-Hellman group for the additional proposal.

- iii. Repeat to add more phase 2 proposals.
- 16. (Optional) Configure dead peer detection:

Dead peer detection is enabled by default. Dead peer detection uses periodic IKE transmissions to the remote endpoint to detect whether tunnel communications have failed, allowing the tunnel to be automatically restarted when failure occurs.

a. Change to the root of the configuration schema:

(config vpn ipsec tunnel ipsec_example ike phase2_proposal 0)> ... (config)>

b. To disable dead peer detection:

(config)> vpn ipsec tunnel ipsec_example dpd enable false (config)>

c. Set the number of seconds between transmissions of dead peer packets. Dead peer packets are only sent when the tunnel is idle. The default is **60**.

(config)> vpn ipsec tunnel ipsec_example dpd delay value (config)>

d. Set the number of seconds to wait for a response from a dead peer packet before assuming the tunnel has failed. The default is **90**.

(config)> vpn ipsec tunnel ipsec_example dpd timeout *value* (config)>

- 17. (Optional) Create a list of destination networks that require source NAT:
 - a. Add a destination network:

(config)> add vpn ipsec tunnel ipsec_example nat end (config vpn ipsec tunnel ipsec_example nat 0)>

b. Set the IPv4 address and optional netmask of a destination network that requires source NAT. You can also use any, meaning that any destination network connected to the tunnel will use source NAT.

(config vpn ipsec tunnel ipsec_example nat 0)> dst *value* (config vpn ipsec tunnel ipsec_example nat 0)>

- 18. Configure policies that define the network traffic that will be encapsulated by this tunnel:
 - a. Change to the root of the configuration schema:

(config vpn ipsec tunnel ipsec_example nat 0)> ... (config)>

b. Add a policy:

(config)> add vpn ipsec tunnel ipsec_example policy end (config vpn ipsec tunnel ipsec_example policy 0)>

c. Set the type of local traffic selector:

(config vpn ipsec tunnel ipsec_example policy 0)> local type *value* (config vpn ipsec tunnel ipsec_example policy 0)>

where value is one of:

address: The address of a local network interface.

Set the address:

i. Use the ?to determine available interfaces:

(config vpn ipsec tunnel ipsec_example policy 0)> local address?

Address: The local network interface to use the address of. This field must be set when 'Type' is set to 'Address'.

Format:

setupip

setuplinklocalip

eth1

eth2

loopback

Current value:

(config vpn ipsec tunnel ipsec_example policy 0)> local address

ii. Set the interface. For example:

(config vpn ipsec tunnel ipsec_example policy 0)> local address eth1 (config vpn ipsec tunnel ipsec_example policy 0)>

network: The subnet of a local network interface.

Set the network:

i. Use the ?to determine available interfaces:

(config vpn ipsec tunnel ipsec_example policy 0)> local network?

Interface: The network interface.

Format:

setupip

setuplinklocalip

eth1

eth2

loopback

Current value:

(config vpn ipsec tunnel ipsec_example policy 0)> local network

ii. Set the interface. For example:

(config vpn ipsec tunnel ipsec_example policy 0)> local network eth1 (config vpn ipsec tunnel ipsec_example policy 0)>

custom: A user-defined network.

Set the custom network:

(config vpn ipsec tunnel ipsec_example policy 0)> local custom *value* (config vpn ipsec tunnel ipsec_example policy 0)>

where *value* is the IPv4 address and optional netmask. The keyword **any** can also be used.

- request: Requests a network from the remote peer.
- dynamic: Uses the address of the local endpoint.
- d. Set the port matching criteria for the local traffic selector:

```
(config vpn ipsec tunnel ipsec_example policy 0)> local port value (config vpn ipsec tunnel ipsec_example policy 0)>
```

where value is the port number, a range of port numbers, or the keyword any.

e. Set the protocol matching criteria for the local traffic selector:

```
(config vpn ipsec tunnel ipsec_example policy 0)> local protocol value (config vpn ipsec tunnel ipsec_example policy 0)>
```

where value is one of:

- any: Matches any protocol.
- tcp: Matches TCP protocol only.
- udp: Matches UDP protocol only.
- icmp: Matches ICMP requests only.
- other: Matches an unlisted protocol.

If other is used, set the number of the protocol:

```
(config vpn ipsec tunnel ipsec_example policy 0)> local protocol_other int (config vpn ipsec tunnel ipsec_example policy 0)>
```

Allowed values are an integer between 1 and 255.

f. Set the IP address and optional netmask of the remote traffic selector:

```
(config vpn ipsec tunnel ipsec_example policy 0)> remote network value (config vpn ipsec tunnel ipsec_example policy 0)>
```

g. Set the port matching criteria for the remote traffic selector:

```
(config vpn ipsec tunnel ipsec_example policy 0)> remote port value (config vpn ipsec tunnel ipsec_example policy 0)>
```

where value is the port number, a range of port numbers, or the keyword any.

h. Set the protocol matching criteria for the remote traffic selector:

```
(config vpn ipsec tunnel ipsec_example policy 0)> remote protocol value (config vpn ipsec tunnel ipsec_example policy 0)>
```

where value is one of:

- **any**: Matches any protocol.
- **tcp**: Matches TCP protocol only.
- udp: Matches UDP protocol only.
- icmp: Matches ICMP requests only.
- other: Matches an unlisted protocol.

If **other** is used, set the number of the protocol:

```
(config vpn ipsec tunnel ipsec_example policy 0)> remote protocol_other int (config vpn ipsec tunnel ipsec_example policy 0)>
```

Allowed values are an integer between 1 and 255.

- (Optional) You can also configure various IPsec related time out, keep alive, and related values:
 - a. Change to the root of the configuration schema:

```
(config vpn ipsec tunnel ipsec_example policy 0)> ... (config)> \cdots
```

b. Use the ?to determine available options:

```
(config)> vpn ipsec advanced?
```

Advanced: Advanced configuration that applies to all IPsec tunnels.

Parameters	Current Value	
debug r ike_fragment_size ike_retransmit_tric keep_alive	1280	Debug level Maximum IKE fragment size IKE retransmit tries NAT keep alive time
Additional Configuration		

.....

connection_retry_timeout Connection retry timeout connection_try_interval Connection try interval ike_timeout IKE timeout

(config)>

Generally, the default settings for these should be sufficient.

c. You can also enable debugging for IPsec:

```
(config)> vpn ipsec advanced debug value (config)>
```

where value is one of:

- none
- basic_auditing

- detailed_control
- generic_control
- raw_data
- sensitive_data
- 20. Save the configuration and apply the change.

(config)> save Configuration saved.

21. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configure IPsec failover

You can configure the IX20 device to fail over from a primary IPsec tunnel to a backup tunnel:

- SureLink active recovery—You can use SureLink along with the IPsec tunnel's metric to configure two or more tunnels so that when the primary tunnel is determined to be inactive by SureLink, a secondary tunnel can begin serving traffic that the primary tunnel was serving.
- **Preferred tunnel**—When multiple IPsec tunnels are configured, one tunnel can be configured as a backup to another tunnel by defining a preferred tunnel for the backup device.

Required configuration items

- Two or more configured IPsec tunnels: The primary tunnel, and one or more backup tunnels.
- Either:
 - SureLink configured on the primary tunnel with Restart Interface enabled, and the metric
 for all tunnels set appropriately to determine which IPsec tunnel has priority. With this
 failover configuration, both tunnels are active simultaneously, and there is minimal
 downtime due to failover.
 - Identify the preferred tunnel during configuration of the backup tunnel. In this scenario, the backup tunnel is not active until the preferred tunnel fails.

IPsec failover using SureLink

With this configuration, when two IPsec tunnels are configured with the same local and remote endpoints but different metrics, traffic addressed to the remote endpoint will be routed through the IPsec tunnel with the lower metric.

If **SureLink** > **Restart Interface** is enabled for the tunnel with the lower metric, and SureLink determines that the tunnel is not functioning properly (for example, pings to a host at the other end of the tunnel are failing), then:

- 1. SureLink will shut down the tunnel and renegotiate its IPsec connection.
- 2. While the tunnel with the lower metric is down, traffic addressed to the remote endpoint will be routed through the tunnel with the higher metric.

For example:

- Tunnel 1:
 - **Metric**: 10
 - Local endpoint > Interface: ETH2
 - Remote endpoint > Hostname: 192.168.10.1
 - SureLink configuration:
 - Restart Interface enabled
 - Test target:
 - ∘ **Test type**: Ping test
 - Ping host: 192.168.10.2

■ Tunnel 2:

- Metric: 20
- Local endpoint > Interface: ETH2
- Remote endpoint > Hostname: 192.168.10.1

In this configuration:

- 1. Tunnel_1 will normally be used for traffic destined for the 192.168.10.1 endpoint.
- 2. If pings to 192.168.10.2 fail, SureLink will shut down the tunnel and renegotiate its IPsec connection.
- 3. While Tunnel_1 is down, Tunnel_2 will be used for traffic destined for the 192.168.10.1 endpoint.



- 1. Configure the primary IPsec tunnel. See Configure an IPsec tunnel for instructions.
 - During configuration of the IPsec tunnel, set the metric to a low value (for example, 10).



Configure SureLink for the primary IPsec tunnel and enable Restart interface. See
 Configure SureLink active recovery for IPsec for instructions.



- 2. Create a backup IPsec tunnel. Configure this tunnel to use the same local and remote endpoints as the primary tunnel. See Configure an IPsec tunnel for instructions.
 - During configuration of the IPsec tunnel, set the metric to a value that is higher than the metric of the primary tunnel (for example, 20).



Command line

- 1. Configure the primary IPsec tunnel. See Configure an IPsec tunnel for instructions.
 - During configuration of the IPsec tunnel, set the metric to a low value (for example, 10):

(config vpn ipsec tunnel IPsecFailoverPrimaryTunnel)> metric 10 (config vpn ipsec tunnel IPsecFailoverPrimaryTunnel)>

Configure SureLink for the primary IPsec tunnel and enable Restart interface. See
 Configure SureLink active recovery for IPsec for instructions.

(config vpn ipsec tunnel IPsecFailoverPrimaryTunnel)> surelink restart true (config vpn ipsec tunnel IPsecFailoverPrimaryTunnel)>


- 2. Create a backup IPsec tunnel. Configure this tunnel to use the same local and remote endpoints as the primary tunnel. See Configure an IPsec tunnel for instructions.
 - During configuration of the IPsec tunnel, set the metric to a value that is higher than the metric of the primary tunnel (for example, 20):

(config vpn ipsec tunnel IPsecFailoverBackupTunnel)> metric 20 (config vpn ipsec tunnel IPsecFailoverBackupTunnel)>

IPsec failover using Preferred tunnel



- 1. Configure the primary IPsec tunnel. See Configure an IPsec tunnel for instructions.
- 2. Create a backup IPsec tunnel. See Configure an IPsec tunnel for instructions.
- 3. During configuration of the backup IPsec tunnel, identify the primary IPsec tunnel in the **Preferred tunnel** parameter:

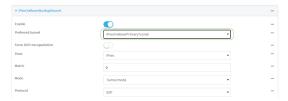

Command line

- 1. Configure the primary IPsec tunnel. See Configure an IPsec tunnel for instructions.
- 2. Create a backup IPsec tunnel. See Configure an IPsec tunnel for instructions.
- 3. During configuration of the backup IPsec tunnel, identify the primary IPsec tunnel:
 - a. Use the ?to view a list of available tunnels:

(config vpn ipsec tunnel backup_ipsec_tunnel)> ipsec_failover?

Preferred tunnel: This tunnel will not start until the preferred tunnel has failed. It will continue to operate until the preferred tunnel returns to full operation status.

Format:

primary_ipsec_tunnel
backup_ipsec_tunnel

Optional: yes Current value:

(config vpn ipsec tunnel backup_ipsec_tunnel)> ipsec_failover

b. Set the primary IPsec tunnel:

(config vpn ipsec tunnel backup_ipsec_tunnel)> ipsec_failover primary_ipsec_tunnel (config vpn ipsec tunnel backup_ipsec_tunnel)>

Configure SureLink active recovery for IPsec

You can configure the IX20 device to regularly probe IPsec tunnels to determine if the connection has failed and take remedial action.

You can also configure the IPsec tunnel to fail over to a backup tunnel. See Configure IPsec failover for further information.

Required configuration items

- A valid IPsec configuration. See Configure an IPsec tunnel for configuration instructions.
- Enable IPsec SureLink.
- The behavior of the IX20 device upon IPsec failure: either
 - · Restart the IPsec interface
 - · Reboot the device.

Additional configuration items

- The interval between connectivity tests.
- Whether the interface should be considered to have failed if one of the test targets fails, or all of the test targets fail.
- The number of probe failures before the IPsec connection is considered to have failed.
- The amount of time that the device should wait for a response to a probe failures before considering it to have failed.

To configure the IX20 device to regularly probe the IPsec connection:



- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

- 3. Click VPN > IPsec.
- 4. Create a new IPsec tunnel or select an existing one:
 - To create a new IPsec tunnel, see Configure an IPsec tunnel.
 - To edit an existing IPsec tunnel, click to expand the appropriate tunnel.
- 5. After creating or selecting the IPsec tunnel, click SureLink.



- 6. Enable SureLink.
- 7. (Optional) Change the **Test interval** between connectivity tests.

Allowed values are any number of weeks, days, hours, minutes, or seconds, and take the format *number*{w|d|h|m|s}.

For example, to set Interval to ten minutes, enter 10m or 600s.

The default is 15 minutes.

- 8. (Optional) If more than one test target is configured, for Success condition, select either:
 - One test passes: Only one test needs to pass for Surelink to consider an interface to be up.
 - All test pass: All tests need to pass for SureLink to consider the interface to be up.
- 9. (Optional) For **Pass threshold**, type or select the number of times that the test must pass after failure, before the interface is determined to be working and is reinstated.
- (Optional) For Response timeout, type the amount of time that the device should wait for a response to a test failure before considering it to have failed.

Allowed values are any number of weeks, days, hours, minutes, or seconds, and take the format *number*{w|d|h|m|s}.

For example, to set **Response timeout** to ten minutes, enter **10m** or **600s**.

The default is 15 seconds.

11. Click to expand Tests.

By default, **Test DNS servers configured for this interface** is automatically configured and enabled. This test communication with DNS servers that are either provided by DHCP, or statically configured for this interface.

a. Click Yo



New tests are enabled by default. To disable, click to toggle off **Enable**.

- b. Type a Label for the test.
- c. Click to toggle on IPv6 if the test should apply to both IPv6 rather than IPv4.
- d. Select the **Test type**.

Available test types:

■ Ping test: Uses ICMP to determine connectivity.

If **Ping test** is selected, complete the following:

- **Ping target:** The type of target for the ping, one of:
 - Hostname or IP address of an external server.
 - Ping host: hostname or IP address of the server.
 - The Interface gateway. If Interface gateway is selected, an initial traceroute is sent to the hostname or IP address configured in the SureLink advanced settings, and then the first hop in that route is used for the ping test.
 - The Interface address.
 - The Interface DNS server.
- Ping payload size: The number of bytes to send as part of the ping payload.
- **DNS test**: Performs a DNS query to the named DNS server.

If **DNS test** is selected, complete the following:

- DNS server: The IP address of the DNS server.
- HTTP test: Uses HTTP(s) GET requests to determine connectivity to the configured web server.

If **HTTP test** is selected, complete the following:

- Web server: The URL of the web server.
- Test DNS servers configured for this interface: Tests communication with DNS servers that are either provided by DHCP, or statically configured for this interface.
- Test the interface status: Tests the current status of the interface. The test fails if the interface is down. Failing this test infers that all other tests fail.

If **Test the interface status** is selected, complete the following:

• **Down time**: The amount of time that the interface is down before the test can be considered to have failed.

Allowed values are any number of weeks, days, hours, minutes, or seconds, and take the format **number**{w|d|h|m|s}.

For example, to set **Down time** to ten minutes, enter **10m** or **600s**.

 Initial connection time: The amount of time to wait for the interface to connect for the first time before the test is considered to have failed.

Allowed values are any number of weeks, days, hours, minutes, or seconds, and take the format *number*{w|d|h|m|s}.

For example, to set Initial connection time to ten minutes, enter 10m or 600s.

Custom test: Tests the interface with custom commands.

If Custom test is selected, complete the following:

- · The Commands to run to test.
- **TCP connection test**: Tests that the interface can reach a destination port on the configured host.

If **TCP connection test** is selected, complete the following:

- TCP connect host: The hostname or IP address of the host to create a TCP connection to.
- TCP connect port: The TCP port to create a TCP connection to.
- Test another interface's status: Tests the status of another interface.

If Test another interface's status is selected, complete the following:

- Test interface: The interface to test.
- IP version: The type of IP connection, one of:
 - Any: Either the IPv4 or IPv6 connection must be up.
 - Both: Both the IPv4 or IPv6 connection must be up.
 - **IPv4**: The IPv4 connection must be up.
 - IPv6: The IPv6 connection must be up.
- Expected status: The status required for the test to past.
 - Up: The test will pass only if the referenced interface is up and passing its own SureLink tests (if applicable).
 - Down: The test will pass only if the referenced interface is down or failing its own SureLink tests (if applicable).
- Repeat for each additional test.
- 12. Add recovery actions:
 - a. Click to expand Recovery actions.

By default, there are two preconfigured recovery actions:

- Update routing: Uses the Change default gateway action, which increases the interface's metric by 100 to change the default gateway.
- Restart interface.

b. Click Yo



New recovery actions are enabled by default. To disable, click to toggle off Enable.

- c. Type a Label for the recovery action.
- d. For Recovery type, select Reboot device.
- For Recovery type, select the type of recovery action. If multiple recovery actions are configured, they are performed in the order that they are listed.
 - Change default gateway: Increases the interface's metric to change the default gateway.

If Change default gateway is selected, complete the following:

- **SureLink test failures**: The number of failures for this recovery action to perform, before moving to the next recovery action.
- Increase metric to change active default gateway: Increase the interface's
 metric by this amount. This should be set to a number large enough to change
 the routing table to use another default gateway. The default is 100.
- Override wait interval before performing the next recovery action: The time to
 wait before the next test is run. If set to the default value of 0s, the Test
 interval is used.
- Restart interface.

If **Restart interface** is selected, complete the following:

- SureLink test failures: The number of failures for this recovery action to perform, before moving to the next recovery action.
- Override wait interval before performing the next recovery action: The time to
 wait before the next test is run. If set to the default value of 0s, the Test
 interval is used.
- Reset modem: This recovery action is available for WWAN interfaces only.

If **Reset modem** is selected, complete the following:

- SureLink test failures: The number of failures for this recovery action to perform, before moving to the next recovery action.
- Override wait interval before performing the next recovery action: The time to
 wait before the next test is run. If set to the default value of 0s, the Test
 interval is used.
- **Switch to alternate SIM**: Switches to an alternate SIM. This recovery action is available for WWAN interfaces only.

If **Switch to alternate SIM** is selected, complete the following:

- **SureLink test failures**: The number of failures for this recovery action to perform, before moving to the next recovery action.
- Override wait interval before performing the next recovery action: The time to
 wait before the next test is run. If set to the default value of 0s, the Test
 interval is used.

Reboot device.

If **Reboot device** is selected, complete the following:

- SureLink test failures: The number of failures for this recovery action to perform, before moving to the next recovery action.
- Override wait interval before performing the next recovery action: The time to
 wait before the next test is run. If set to the default value of 0s, the Test
 interval is used.
- Execute custom Recovery commands.

If **Recovery commands** is selected, complete the following:

- **SureLink test failures**: The number of failures for this recovery action to perform, before moving to the next recovery action.
- The Commands to run to recovery connectivity.
- Override wait interval before performing the next recovery action: The time to
 wait before the next test is run. If set to the default value of 0s, the Test
 interval is used.
- Powercycle the modem. This recovery action is available for WWAN interfaces only.

If **Powercycle the modem** is selected, complete the following:

- **SureLink test failures**: The number of failures for this recovery action to perform, before moving to the next recovery action.
- Override wait interval before performing the next recovery action: The time to
 wait before the next test is run. If set to the default value of 0s, the Test
 interval is used.
- f. Repeat for each additional recovery action.
- 13. (Optional) Configure advanced SureLink parameters:
 - a. Click to expand Advanced settings.
 - b. For **Delayed Start**, type the amount of time to wait while the device is starting before SureLink testing begins. This setting is bypassed when the interface is determined to be up.

Allowed values are any number of weeks, days, hours, minutes, or seconds, and take the format *number*{w|d|h|m|s}.

For example, to set **Delayed start** to ten minutes, enter **10m** or **600s**.

The default is 300 seconds.

c. For **Backoff interval**, type the time to add to the test interval when restarting the list of actions. This option is capped at 15 minutes.

Allowed values are any number of weeks, days, hours, minutes, or seconds, and take the format *number*{w|d|h|m|s}.

For example, to set Backoff interval to ten minutes, enter 10m or 600s.

The default is 300 seconds.

d. Test interface gateway by pinging is used by the Interface gateway Ping test as the endpoint for traceroute to use to determine the interface gateway. The default is 8.8.8.8, and should only be changed if this IP address is not accessible due to networking issues.

14. Click Apply to save the configuration and apply the change.

Command line

Select the device in Remote Manager and click Actions > Open Console, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

- 3. Create a new IPsec tunnel, or edit an existing one:
 - To create a new IPsec tunnel, see Configure an IPsec tunnel.
 - To edit an existing IPsec tunnel, change to the IPsec tunnel's node in the configuration schema. For example, for an IPsec tunnel named ipsec_example, change to the ipsec_ example node in the configuration schema:

```
(config)> vpn ipsec tunnel ipsec_example (config vpn ipsec tunnel ipsec_example)>
```

4. Enable SureLink:

```
(config vpn ipsec tunnel ipsec_example)> surelink enable true (config vpn ipsec tunnel ipsec_example)>
```

 By default, the **Test DNS servers configured for this interface** test is automatically configured and enabled. This tests communication with DNS servers that are either provided by DHCP, or statically configured for this interface.

To add additional tests:

a. Add a test:

```
(config vpn ipsec tunnel ipsec_example)> add surelink tests end (config vpn ipsec tunnel ipsec_example surelink tests 1)>
```

b. New tests are enabled by default. To disable:

```
(config vpn ipsec tunnel ipsec_example surelink tests 1)> enable false (config vpn ipsec tunnel ipsec_example surelink tests 1)>
```

c. Create a label for the test:

```
(config vpn ipsec tunnel ipsec_example surelink tests 1)> label string (config vpn ipsec tunnel ipsec_example surelink tests 1)>
```

d. if the test should apply to both IPv6 rather than IPv4, enable IPv6:

```
(config vpn ipsec tunnel ipsec_example surelink tests 1)> ipv6 true (config vpn ipsec tunnel ipsec_example surelink tests 1)>
```

e. Set the test type:

(config vpn ipsec tunnel ipsec_example surelink tests 1)> test *value* (config vpn ipsec tunnel ipsec_example surelink tests 1)>

where value is one of:

ping: Uses ICMP to determine connectivity.
If ping is selected, complete the following:

• Set the ping_method:

(config vpn ipsec tunnel ipsec_example surelink tests 1)> ping_method *value* (config vpn ipsec tunnel ipsec_example surelink tests 1)>

where value is one of:

- hostname: The hostname or IP address of an external server.
 - Set ping_host to the hostname or IP address of the server:

(config vpn ipsec tunnel ipsec_example surelink tests 1)> ping_host hostname/IP_address (config vpn ipsec tunnel ipsec_example surelink tests 1)>

- interface_gateway. If set, an initial traceroute is sent to the hostname or IP address configured in the SureLink advanced settings, and then the first hop in that route is used for the ping test.
- interface address.
- o interface_dns: The interface's DNS server.
- Set the number of bytes to send as part of the ping payload:

(config vpn ipsec tunnel ipsec_example ipsec tunnel ipsec_example surelink tests
1)> ping_size int
(config vpn ipsec tunnel ipsec_example surelink tests 1)>

dns: Performs a DNS guery to the named DNS server.

If dns is set, set the IPv4 or IPv6 address of the DNS server:

(config vpn ipsec tunnel ipsec_example surelink tests 1)> dns_server *IP_address* (config vpn ipsec tunnel ipsec_example surelink tests 1)>

http: Uses HTTP(s) GET requests to determine connectivity to the configured web server.

If **http** is set, set the URL of the web server.

(config vpn ipsec tunnel ipsec_example surelink tests 1)> http *url* (config vpn ipsec tunnel ipsec_example surelink tests 1)>

- dns_configured: Tests communication with DNS servers that are either provided by DHCP, or statically configured for this interface.
- interface_up: Tests the current status of the interface. The test fails if the interface is down. Failing this test infers that all other tests fail.

If interface_up is set, complete the following:

 Set the amount of time that the interface is down before the test can be considered to have failed.

(config vpn ipsec tunnel ipsec_example surelink tests 1)> interface_down_time value

(config vpn ipsec tunnel ipsec_example surelink tests 1)>

where *value* is any number of weeks, days, hours, minutes, or seconds, and takes the format *number*{w|d|h|m|s}.

For example, to set **interface_down_time** to ten minutes, enter either **10m** or **600s**:

(config vpn ipsec tunnel ipsec_example surelink tests 1)> interface_down_time 600s (config)>

 Set the amount of time to wait for the interface to connect for the first time before the test is considered to have failed.

(config vpn ipsec tunnel ipsec_example surelink tests 1)> interface_timeout *value* (config vpn ipsec tunnel ipsec_example surelink tests 1)>

where *value* is any number of weeks, days, hours, minutes, or seconds, and takes the format *number*{w|d|h|m|s}.

For example, to set **interface_timeout** to ten minutes, enter either **10m** or **600s**:

(config vpn ipsec tunnel ipsec_example surelink tests 1)> interface_timeout 600s (config)>

custom test: Tests the interface with custom commands.

If **custom_test** is set, set the commands to run to perform the test:

(config vpn ipsec tunnel ipsec_example surelink tests 1)> custom_test_commands "string"

(config vpn ipsec tunnel ipsec_example surelink tests 1)>

tcp_connection: Tests that the interface can reach a destination port on the configured host.

If tcp connection is selected, complete the following:

• Set the hostname or IP address of the host to create a TCP connection to:

(config vpn ipsec tunnel ipsec_example surelink tests 1)> tcp_host hostname/IP_address

(config vpn ipsec tunnel ipsec_example surelink tests 1)>

Set the TCP port to create a TCP connection to.

(config vpn ipsec tunnel ipsec_example surelink tests 1)> tcp_port port (config vpn ipsec tunnel ipsec_example surelink tests 1)>

• other: Tests the status of another interface.

If **other** is selected, complete the following:

- · Set the interface to test.
 - i. Use the ?to determine available interfaces:

(config vpn ipsec tunnel ipsec_example surelink tests 1)> other_interface?

Test interface: Test the status of this other interface.

Format:

/network/interface/setupip

/network/interface/setuplinklocalip

/network/interface/eth1

/network/interface/eth2

/network/interface/loopback

Current value:

(config vpn ipsec tunnel ipsec_example surelink tests 1)> other_interface

ii. Set the interface. For example:

(config vpn ipsec tunnel ipsec_example surelink tests 1)> other_interface /network/interface/eth1 (config vpn ipsec tunnel ipsec_example surelink tests 1)>

Set the type of IP connection:

(config vpn ipsec tunnel ipsec_example surelink tests 1)> other_ip_version *value* (config vpn ipsec tunnel ipsec_example surelink tests 1)>

where value is one of:

- o any: Either the IPv4 or IPv6 connection must be up.
- o both: Both the IPv4 or IPv6 connection must be up.
- **ipv4** The IPv4 connection must be up.
- **ipv6**: The IPv6 connection must be up.
- The status required for the test to past.

(config vpn ipsec tunnel ipsec_example surelink tests 1)> other_status *value* (config vpn ipsec tunnel ipsec_example surelink tests 1)>

where value is one of:

- up: The test will pass only if the referenced interface is up and passing its own SureLink tests (if applicable).
- down: The test will pass only if the referenced interface is down or failing its own SureLink tests (if applicable).
- Repeat for each additional test.

6. Add recovery actions:

a. Type ... to return to the root of the configuration:

(config vpn ipsec tunnel ipsec_example surelink tests 1)> ... (config)>

b. Add a recovery action:

(config)> add vpn ipsec tunnel ipsec_example surelink actions end (config vpn ipsec tunnel ipsec_example surelink actions 0)>

c. New actions are enabled by default. To disable:

(config vpn ipsec tunnel ipsec_example surelink actions 0)> enable false (config vpn ipsec tunnel ipsec_example surelink actions 0)>

d. Create a label for the action:

(config vpn ipsec tunnel ipsec_example surelink actions 0)> label *string* (config vpn ipsec tunnel ipsec_example surelink actions 0)>

e. Set the type of recovery action to reboot_device:

(config vpn ipsec tunnel ipsec_example surelink actions 0)> action reboot_device (config vpn ipsec tunnel ipsec_example surelink actions 0)>

Set the number of failures for this recovery action to perform, before moving to the next recovery action:

(config vpn ipsec tunnel ipsec_example surelink actions 0)> test_failures *int* (config vpn ipsec tunnel ipsec_example surelink actions 0)>

The default is 3.

Set the time to wait before the next test is run. If set to the default value of 0s, the test interval is used.

(config vpn ipsec tunnel ipsec_example surelink actions 0)> override_interval int (config vpn ipsec tunnel ipsec_example surelink actions 0)>

f. Set the type of recovery action. If multiple recovery actions are configured, they are performed in the order that they are listed. The command varies depending on whether the interface is a WAN or WWAN:

(config vpn ipsec tunnel ipsec_example surelink actions 0)> modem_action *value* (config vpn ipsec tunnel ipsec_example surelink actions 0)>

WAN interfaces:

(config vpn ipsec tunnel ipsec_example surelink actions 0)> action *value* (config vpn ipsec tunnel ipsec_example surelink actions 0)>

WWAN interfaces:

(config vpn ipsec tunnel ipsec_example surelink actions 0)> modem_action *value* (config vpn ipsec tunnel ipsec_example surelink actions 0)>

where value is one of:

update_routing_table: Increases the interface's metric to change the default gateway.

If update_routing_table is selected, complete the following:

 Set the number of failures for this recovery action to perform, before moving to the next recovery action:

(config vpn ipsec tunnel ipsec_example surelink actions 0)> test_failures *int* (config vpn ipsec tunnel ipsec_example surelink actions 0)>

The default is 3.

 Set the amount that the interface's metric should be increased. This should be set to a number large enough to change the routing table to use another default gateway.

(config vpn ipsec tunnel ipsec_example surelink actions 0)> metric_adjustment_ modem *int* (config vpn ipsec tunnel ipsec_example surelink actions 0)>

The default is 100.

 Set the time to wait before the next test is run. If set to the default value of 0s, the test interval is used.

(config vpn ipsec tunnel ipsec_example surelink actions 0)> override_interval int (config vpn ipsec tunnel ipsec_example surelink actions 0)>

restart_interface.

If restart interface is selected, complete the following:

 Set the number of failures for this recovery action to perform, before moving to the next recovery action:

(config vpn ipsec tunnel ipsec_example surelink actions 0)> test_failures *int* (config vpn ipsec tunnel ipsec_example surelink actions 0)>

The default is 3.

 Set the time to wait before the next test is run. If set to the default value of 0s, the test interval is used.

(config vpn ipsec tunnel ipsec_example surelink actions 0)> override_interval int (config vpn ipsec tunnel ipsec_example surelink actions 0)>

reset_modem: This recovery action is available for WWAN interfaces only.
If reset modem is selected, complete the following:

 Set the number of failures for this recovery action to perform, before moving to the next recovery action:

(config vpn ipsec tunnel ipsec_example surelink actions 0)> test_failures *int* (config vpn ipsec tunnel ipsec_example surelink actions 0)>

The default is 3.

 Set the time to wait before the next test is run. If set to the default value of 0s, the test interval is used.

(config vpn ipsec tunnel ipsec_example surelink actions 0)> override_interval *int* (config vpn ipsec tunnel ipsec_example surelink actions 0)>

 switch_sim: Switches to an alternate SIM. This recovery action is available for WWAN interfaces only.

If **switch_sim** is selected, complete the following:

 Set the number of failures for this recovery action to perform, before moving to the next recovery action:

(config vpn ipsec tunnel ipsec_example surelink actions 0)> test_failures *int* (config vpn ipsec tunnel ipsec_example surelink actions 0)>

The default is 3.

 Set the time to wait before the next test is run. If set to the default value of 0s, the test interval is used.

(config vpn ipsec tunnel ipsec_example surelink actions 0)> override_interval int (config vpn ipsec tunnel ipsec_example surelink actions 0)>

- modem_power_cycle: This recovery action is available for WWAN interfaces only.
 If modem_power_cycle is selected, complete the following:
 - Set the number of failures for this recovery action to perform, before moving to the next recovery action:

(config vpn ipsec tunnel ipsec_example surelink actions 0)> test_failures *int* (config vpn ipsec tunnel ipsec_example surelink actions 0)>

The default is 3.

 Set the time to wait before the next test is run. If set to the default value of 0s, the test interval is used.

(config vpn ipsec tunnel ipsec_example surelink actions 0)> override_interval int (config vpn ipsec tunnel ipsec_example surelink actions 0)>

reboot device.

If **reboot_device** is selected, complete the following:

 Set the number of failures for this recovery action to perform, before moving to the next recovery action:

(config vpn ipsec tunnel ipsec_example surelink actions 0)> test_failures int (config vpn ipsec tunnel ipsec_example surelink actions 0)>

The default is 3.

 Set the time to wait before the next test is run. If set to the default value of 0s, the test interval is used.

(config vpn ipsec tunnel ipsec_example surelink actions 0)> override_interval int (config vpn ipsec tunnel ipsec_example surelink actions 0)>

custom_action: Execute custom recovery commands.

If custom_action is selected, complete the following:

 Set the number of failures for this recovery action to perform, before moving to the next recovery action:

(config vpn ipsec tunnel ipsec_example surelink actions 0)> test_failures *int* (config vpn ipsec tunnel ipsec_example surelink actions 0)>

The default is 3.

Set the commands to run to attempt to recovery connectivity.

(config network interface my_wan surelink actions 0)> custom_action_commands_ modem "string" (config network interface my_wan surelink actions 0)>

 Set the time to wait before the next test is run. If set to the default value of 0s, the test interval is used.

(config vpn ipsec tunnel ipsec_example surelink actions 0)> override_interval int (config vpn ipsec tunnel ipsec_example surelink actions 0)>

- g. Repeat for each additional recovery action.
- 7. Optional SureLink configuration parameters:
 - a. Type ... to return to the root of the configuration:

(config vpn ipsec tunnel ipsec_example surelink actions 0)> ... (config)> $\,$

b. Set the test interval between connectivity tests:

(config)> vpn ipsec tunnel ipsec_example surelink interval *value* (config)>

where *value* is any number of weeks, days, hours, minutes, or seconds, and takes the format *number*{w|d|h|m|s}.

For example, to set interval to ten minutes, enter either 10m or 600s:

(config)> vpn ipsec tunnel ipsec_example surelink interval 600s (config)>

The default is 15m.

c. If more than one test target is configured, set the success condition:

(config)> vpn ipsec tunnel ipsec_example surelink success_condition *value* (config)>

where value is either:

- one: Only one test needs to pass for Surelink to consider an interface to be up.
- all: All tests need to pass for SureLink to consider the interface to be up.
- d. Set the number of times that the test must pass after failure, before the interface is determined to be working and is reinstated.

(config)> vpn ipsec tunnel ipsec_example surelink pass_threshold int (config)>

The default is 1.

e. Set the amount of time that the device should wait for a response to a test attempt before considering it to have failed:

(config)> vpn ipsec tunnel ipsec_example surelink timeout *value* (config)>

where *value* is any number of weeks, days, hours, minutes, or seconds, and takes the format *number*{w|d|h|m|s}.

For example, to set timeout to ten minutes, enter either 10m or 600s:

(config)> vpn ipsec tunnel ipsec_example surelink timeout 600s (config)>

The default is 15s.

f. Set the amount of time to wait while the device is starting before SureLink testing begins. This setting is bypassed when the interface is determined to be up.

(config)> vpn ipsec tunnel ipsec_example surelink advanced delayed_start *value* (config)>

where *value* is any number of weeks, days, hours, minutes, or seconds, and takes the format *number*{w|d|h|m|s}.

For example, to set **delayed_start** to ten minutes, enter either **10m** or **600s**:

(config)> vpn ipsec tunnel ipsec_example surelink advanced delayed_start 600s (config)>

The default is 300s.

g. Set the time to add to the test interval when restarting the list of actions. This option is capped at 15 minutes.

(config)> vpn ipsec tunnel ipsec_example surelink advanced backoff_interval *value* (config)>

where *value* is any number of weeks, days, hours, minutes, or seconds, and takes the format *number*{w|d|h|m|s}.

For example, to set backoff_interval to ten minutes, enter either 10m or 600s:

(config)> vpn ipsec tunnel ipsec_example surelink advanced backoff_interval 600s (config)>

The default is 300 seconds.

h. The **interface_gateway** parameter is used by the Interface gateway Ping test as the endpoint for traceroute to use to determine the interface gateway. The default is **8.8.8.8**, and should only be changed if this IP address is not accessible due to networking issues. To set to an alternate host:

(config)> vpn ipsec tunnel ipsec_example surelink advanced interface_gateway *hostname/IP_address* (config)>

8. Save the configuration and apply the change.

(config vpn ipsec tunnel ipsec_example connection_monitor target 0)> save Configuration saved.

>

9. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Show IPsec status and statistics



Log into the IX20 WebUI as a user with full Admin access rights.

1. On the menu, select Status > IPsec.

The **IPsec** page appears.

To view configuration details about an IPsec tunnel, click the ★ (configuration) icon in the upper right of the tunnel's status pane.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. To display details about all configured IPsec tunnels, type the following at the prompt:

> show ipsec all

Name Enable Status Hostname

```
ipsec1 true up 192.168.2.1
vpn1 false pending 192.168.3.1
```

3. To display details about a specific tunnel:

> show ipsec tunnel ipsec1

Tunnel : ipsec1
Enable : true
Status : pending
Hostname : 192.168.2.1

Zone : ipsec
Mode : tunnel
Type : esp

>

4. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Debug an IPsec configuration

If you experience issues with an IPsec tunnel not being successfully negotiated with the remote end of the tunnel, you can enable IPsec debug messages to be written to the system log. See View system and event logs for more information about viewing the system log.



- Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

- 3. Click VPN > IPsec.
- 4. Click to expand Advanced.
- 5. For **Debug level**, select one of the following:
 - Disable debug messages.
 - Basic auditing debug: Logs basic auditing information, (for example, SA up/SA down).
 - Generic control flow: Select this for basic debugging information.
 - Detailed control flow: More detailed debugging control flow.
 - Raw data: Includes raw data dumps in hexadecimal format.
 - Sensitive material: Also includes sensitive material in dumps (for example, encryption keys).
- 6. Click Apply to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

> config (config)>

3. Set the IPsec debug value:

config> vpn ipsec advanced debug *value* config>

where value is one of:

- none. (Default) No debug messages are written.
- basic_auditing: Logs basic auditing information, (for example, SA up/SA down).
- **generic_control**: Select this for basic debugging information.
- detailed_control: More detailed debugging control flow.
- raw_data: Includes raw data dumps in hexadecimal format.
- sensitive_data: Also includes sensitive material in dumps (for example, encryption keys).

4. Save the configuration and apply the change.

(config)> save Configuration saved.

5. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configure a Simple Certificate Enrollment Protocol client



WARNING! The Simple Certificate Enrollment Protocol (SCEP) uses unencrypted HTTP communication. Please ensure you are utilizing a VPN to secure your communications.

Simple Certificate Enrollment Protocol (SCEP) is a mechanism that allows for large-scale X509 certificate deployment. You can configure IX20 device to function as a SCEP client that will connect to a SCEP server that is used to sign Certificate Signing Requests (CSRs), provide Certificate Revocation Lists (CRLs), and distribute valid certificates from a Certificate Authority (CA).

Required configuration

- Enable the SCEP client.
- The fully-qualified domain name of the SCEP server to be used for certificate requests.
- The challenge password provided by the SCEP server that the SCEP client will use when making SCEP requests.
- The distinguished name to be used for the CSR.

Additional configuration

The number of days that the certificate enrollment can be renewed, prior to the request expiring.



- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- a. Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.




The **Configuration** window is displayed.

- 3. Click Network > SCEP Client.
- 4. For Add clients, enter a name for the SCEP client and click 1/20



The new SCEP client configuration is displayed.

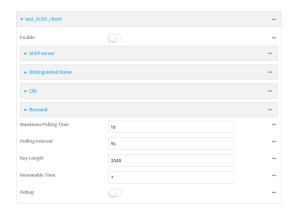

- 5. Click Enable to enable the SCEP client.
- 6. For **Maximum Polling Time**, type the maximum time that the device will poll the SCEP server, when operating in manual mode.

Allowed values are any number of weeks, days, hours, minutes, or seconds, and take the format *number*{w|d|h|m|s}.

For example, to set **Maximum Polling Time** to ten minutes, enter **10m** or **600s**. The default is **1d**.

7. For **Polling Interval**, type the amount of time that the device should wait between polling attempts, when operating in manual mode.


Allowed values are any number of weeks, days, hours, minutes, or seconds, and take the format *number*{w|d|h|m|s}.

For example, to set **Polling Interval** to ten minutes, enter **10m** or **600s**.


The default is 5s.

- 8. For **Key Length**, type the bit size of the private key. The default is **2048**.
- For Renewable Time, type the number of days that the certificate enrollment can be renewed, prior to the request expiring. This value is configured on the SCEP server, and is used by the IX20 device to determine when to start attempting to auto-renew an existing certificate. The default is 7.

- 10. (Optional) Click **Debug** to enable verbose logging in /var/log/scep_client.
- 11. Click to expand SCEP server.

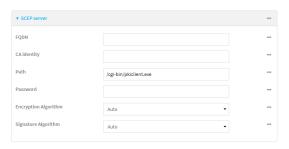

- 12. For **FQDN**, type the fully qualified domain name or IP address of the SCEP server.
- 13. (Optional) For CA identity, type a string that will be understood by the certificate authority. For example, it could be a domain name or a user name. If the certificate authority has multiple CA certificates, this field can be used to distinguish which is required.
- 14. For **Path**, Type the HTTP URL path required for accessing the certificate authority. You should leave this option at the default of **/cgi-bin/pkiclient.exe** unless directed by the CA to use another path.
- 15. For **Password**, type the challenge password as configured on the SCEP server.
- 16. For **Encryption Algorithm**, select the PKCS#7 encryption algorithm. The default is **Auto**, which automatically selects the best algorithm.
- For Signature Algorithm, select the PKCS#7 signature algorithm. The default is Auto, which automatically selects the best algorithm.
- 18. Click to expand Distinguished Name.

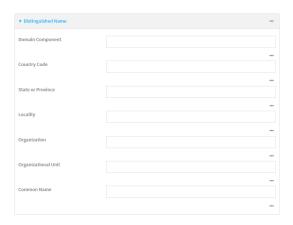

- 19. Type the value for each appropriate Distinguished Name attribute.
- 20. (Optional) Configure the certificate revocation list (CRL):
 - a. Click to expand CRL
 - b. Click Enable to enable the CRL.
 - c. For **Type**, select the type of CRL:
 - URL: The URL to the file name used to access the certificate revocation list from the CA.
 - **CRLDP**: The CRL distribution point.

 getCRL: A CRL query using the issuer name and serial number from the certificate whose revocation status is being queried.

The default is URL

- d. If **Type** is set to **URL**, for **URL**, type the URL to be used.
- 21. Configure certificate renewal:
 - a. Click to expand Renewal.
 - dick Use New Private Key to enable the creation of a new private key for renewal requests.
 - c. **Use Client Certificate** is enabled by default. Click to disable the use of a client certificate for renewal requrests.
- 22. Click Apply to save the configuration and apply the change.

Command line

Select the device in Remote Manager and click Actions > Open Console, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

> config (config)>

3. Add a new SCEP client:

(config)> add network scep_client scep_client_name (config network scep_client scep_client_name)>

4. Enable the SCEP client:

(config network scep_client scep_client_name)> enable true (config network scep_client scep_client_name)>

5. Set the url parameter to the fully qualified domain name or IP address of the SCEP server:

(config network scep_client scep_client_name)> server url https://scep.example.com (config network scep_client scep_client_name)>

(Optional) Set a CA identity string that will be understood by the certificate authority. For example, it could be a domain name or a user name. If the certificate authority has multiple CA certificates, this field can be used to distinguish which is required.

(config network scep_client scep_client_name)> server ca_ident string (config network scep_client scep_client_name)>

7. Set the HTTP URL path required for accessing the certificate authority. You should leave this option at the default of /cgi-bin/pkiclient.exe unless directed by the CA to use another path.

(config network scep_client scep_client_name)> server path path (config network scep_client scep_client_name)>

8. Set the challenge password as configured on the SCEP server:

(config network scep_client scep_client_name)> server password challenge_password (config network scep_client scep_client_name)>

- 9. Set Distinguished Name attributes:
 - a. Set the Domain Component:

(config network scep_client scep_client_name)> distinguished_name dc *value* (config network scep_client scep_client_name)>

b. Set the two letter Country Code:

(config network scep_client scep_client_name)> distinguished_name c value (config network scep_client scep_client_name)>

c. Set the State or Province:

(config network scep_client scep_client_name)> distinguished_name st *value* (config network scep_clientscep_client_name)>

d. Set the Locality:

(config network scep_client scep_client_name)> distinguished_name I value (config network scep_client scep_client_name)>

e. Set the Organization:

(config network scep_client scep_client_name)> distinguished_name o *value* (config network scep_client scep_client_name)>

f. Set the Organizational Unit:

(config network scep_client scep_client_name)> distinguished_name ou *value* (config network scep_client scep_client_name)>

g. Set the Common Name:

(config network scep_client scep_client_name)> distinguished_name cn *value* (config network scep_client scep_client_name)>

- 10. (Optional) Configure the certificate revocation list (CRL):
 - a. Enable the CRL:

(config network scep_client scep_client_name)> crl enable true (config network scep_client scep_client_name)>

b. Set the type of CRL:

(config network scep_client scep_client_name)> crl type value (config network scep_client scep_client_name)>

where value is one of:

- url: The URL to the file name used to access the certificate revocation list from the CA
- **cridp**: The CRL distribution point.
- getCRL: A CRL query using the issuer name and serial number from the certificate whose revocation status is being queried.

The default is url.

c. If type is set to url, set the URL that should be used:

(config network scep_client scep_client_name)> crl url value (config network scep_client scep_client_name)>

- 11. Configure certificate renewal:
 - a. To enable the creation of a new private key for renewal requests:

(config network scep_client scep_client_name)> renewal new_key true (config network scep_client scep_client_name)>

b. The use of a client certificate for renewal requests is enabled by default. To disable:

(config network scep_client scep_client_name)> renewal use_client_cert false (config network scep_client scep_client_name)>

12. Set the maximum time that the device will poll the SCEP server, when operating in manual mode:

(config network scep_client scep_client_name)> max_poll_time value (config network scep_client scep_client_name)>

where *value* is any number of weeks, days, hours, minutes, or seconds, and takes the format *number*(w|d|h|m|s).

For example, to set **max_poll_time** to ten minutes, enter either **10m** or **600s**:

(config network scep_client scep_client_name)> max_poll_time 600s (config network scep_client scep_client_name)>

The default is 1d.

13. Set the amount of time that the device should wait between polling attempts, when operating in manual mode:

(config network scep_client scep_client_name)> polling_interval value (config network scep_client scep_client_name)>

where *value* is any number of weeks, days, hours, minutes, or seconds, and takes the format *number*{w|d|h|m|s}.

For example, to set polling_interval to ten minutes, enter either 10m or 600s:

(config network scep_client scep_client_name)> polling_interval 600s (config network scep_client scep_client_name)>

The default is 5s.

14. Set the bit size of the private key:

(config network scep_client scep_client_name)> key_length int (config network scep_client scep_client_name)>

The default is 2048.

15. Set the number of days that the certificate enrollment can be renewed, prior to the request expiring. This value is configured on the SCEP server, and is used by the IX20 device to determine when to start attempting to auto-renew an existing certificate. The default is 7.

(config network scep_client scep_client_name)> renewable_time integer (config network scep_client scep_client_name)>

16. (Optional) Enable verbose logging in /var/log/scep_client:

(config network scep_client scep_client_name)> debug true (config network scep_client scep_client_name)>

17. Save the configuration and apply the change.

(config network scep_client scep_client_name)> save Configuration saved.

18. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Example: SCEP client configuration with Fortinet SCEP server

In this example configuration, we will configure the IX20 device as a SCEP client that will connect to a Fortinet SCEP server.

Fortinet configuration

On the Fortinet server:

- 1. Enable ports for SCEP services:
 - a. From the menu, select Network > Interfaces.
 - b. Select the appopriate port and click Edit.
 - c. For Access Rights > Services, enable the following services:
 - HTTPS > SCEP
 - HTTPS > CRL Downloads
 - HTTP > SCEP
 - HTTP > CRL Downloads

- d. The remaining fields can be left at their defaults or changed as appropriate.
- e. Click OK
- 2. Create a Certificate Authority (CA):
 - a. From the menu, click Certificate Authorities > Local CAs.
 - b. Click Create New.
 - c. Type a **Certificate ID** for the CA, for example, **fortinet_example_ca**.
 - d. Complete the Subject Information fields.
 - e. The remaining fields can be left at their defaults or changed as appropriate.
 - f. Click OK.
- 3. Edit SCEP settings:
 - a. From the menu, click SCEP > General.
 - b. Click Enable SCEP if it is not enabled.
 - c. For **Default enrollment password**, enter a password. The password entered here must correspond to the challenge password configured for the SCEP client on the IX20 device.
 - d. The remaining fields can be left at their defaults or changed as appropriate.
 - e. Click OK.
- 4. Create an Enrollment Request:
 - a. From the menu, click SCEP > Enrollment Requests.
 - b. Click Create New.
 - c. For Automatic request type, select Wildcard.
 - d. For **Certificate authority**, select the CA created in step 1, above.
 - e. Complete the Subject Information fields. The Distinguished Name (DN) attributes entered
 here must correspond to the Distinguished Name attributes configured for the SCEP
 client on the IX20 device.
 - f. For **Renewal > Allow renewal x days before the certified is expired**, type the number of days that the certificate enrollment can be renewed, prior to the request expiring. The **Renewable Time** setting on the IX20 device must match the setting of this parameter.
 - g. The remaining fields can be left at their defaults or changed as appropriate.
 - h. Click OK

IX20 configuration

On the IX20 device:



- Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.

- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.




The **Configuration** window is displayed.


- 3. Click Network > SCEP Client.
- 4. For Add clients, enter a name for the SCEP client and click 1/2



The new SCEP client configuration is displayed.

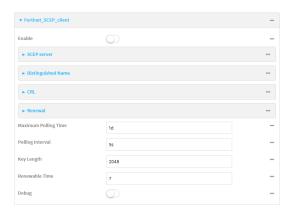


- 5. Click Enable to enable the SCEP client.
- For Renewable Time, type the number of days that the certificate enrollment can be renewed, prior to the request expiring. This value must match the setting of the Allow renewal x days before the certified is expired option on the Fortinet server.
- 7. (Optional) Click **Debug** to enable verbose logging in /var/log/scep_client.
- 8. Click to expand SCEP server.

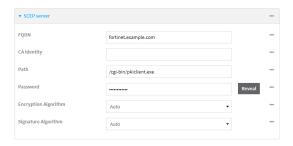

9. For **FQDN**, type the fully qualified domain name or IP address of the Fortinet server.

- For Password, type the challenge password. This corresponds to the Default enrollment password on the Fortinet server.
- 11. Click to expand **Distinguished Name**.

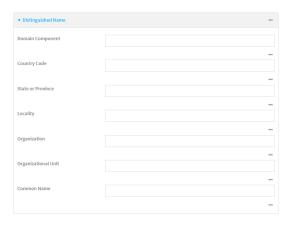

- 12. Type the value for each appropriate Distinguished Name attribute. The values entered here must correspond to the DN attributes in the **Enrollment Request** on the Fortinet server.
- 13. Click Apply to save the configuration and apply the change.

Command line

Select the device in Remote Manager and click Actions > Open Console, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Add a new SCEP client, for example, Fortinet_SCEP_client:

```
(config)> add network scep_client Fortinet_SCEP_client
(config network scep_client Fortinet_SCEP_client
)>
```

4. Enable the SCEP client:

```
(config network scep_client Fortinet_SCEP_client)> enable true (config network scep_client Fortinet_SCEP_client)>
```

5. Set the url parameter to the fully qualified domain name or IP address of the SCEP server:

```
(config \ network \ scep\_client \ Fortinet\_SCEP\_client) > server \ url \ https://fortinet.example.com \\ (config \ network \ scep\_client \ Fortinet\_SCEP\_client) >
```

6. Set the challenge password as configured on the SCEP server. This corresponds to the **Default enrollment password** on the Fortinet server.

(config network scep_client Fortinet_SCEP_client)> server password challenge_password (config network scep_client Fortinet_SCEP_client)>

- 7. Set Distinguished Name attributes. The values entered here must correspond to the DN attributes in the **Enrollment Request** on the Fortinet server.
 - a. Set the Domain Component:

(config network scep_client Fortinet_SCEP_client)> distinguished_name dc *value* (config network scep_client Fortinet_SCEP_client)>

b. Set the two letter Country Code:

(config network scep_client Fortinet_SCEP_client)> distinguished_name c *value* (config network scep_client Fortinet_SCEP_client)>

c. Set the State or Province:

(config network scep_client Fortinet_SCEP_client)> distinguished_name st *value* (config network scep_client Fortinet_SCEP_client)>

d. Set the Locality:

(config network scep_client Fortinet_SCEP_client)> distinguished_name I value (config network scep_client Fortinet_SCEP_client)>

e. Set the Organization:

(config network scep_client Fortinet_SCEP_client)> distinguished_name o *value* (config network scep_client Fortinet_SCEP_client)>

f. Set the Organizational Unit:

(config network scep_client Fortinet_SCEP_client)> distinguished_name ou *value* (config network scep_client Fortinet_SCEP_client)>

g. Set the Common Name:

(config network scep_client Fortinet_SCEP_client)> distinguished_name cn *value* (config network scep_client Fortinet_SCEP_client)>

8. Set the number of days that the certificate enrollment can be renewed, prior to the request expiring. This value must match the setting of the Allow renewal x days before the certified is expired option on the Fortinet server.

(config network scep_client Fortinet_SCEP_client)> renewable_time integer (config network scep_client Fortinet_SCEP_client)>

9. (Optional) Enable verbose logging in /var/log/scep_client:

(config network scep_client Fortinet_SCEP_client)> debug true (config network scep_client Fortinet_SCEP_client)>

10. Save the configuration and apply the change.

```
(config network scep_client Fortinet_SCEP_client)> save
Configuration saved.
```

11. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an Access selection menu. Type quit to disconnect from the device.

Show SCEP client status and information

You can show general SCEP client information for all SCEP clients, and specific information for an individual SCEP client.

This procedure is only available from the Admin CLI.

Command line

1. Select the device in Remote Manager and click Actions > Open Console, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an Access selection menu. Type admin to access the Admin CLI.

2. To display details about all configured SCEP clients, type the following at the prompt:

```
> show scep-client
    SCEP Enabled Expiry
    test true Jun 4 19:05:25 2022 GMT
    test1 false
3. To display details about a specific SCEP client:
    > show scep-client name name
   For example:
```

> show scep-client name test

test SCEP Status Enabled: true Client Certificate

Subject : C=US,ST=MA,L=BOS,O=Digi,OU=IT1,CN=dummy

Issuer : CN=TA-SCEP-1-CA

Serial: 1100000017A30C8EDD3805EB5200000000017

Expiry : Jun 4 19:05:25 2022 GMT

Certificate Authority Certificate {1}

Subject: C=US,CN=TA-SCEP-1-MSCEP-RA

Issuer : CN=TA-SCEP-1-CA

Serial: 1100000002A1E755981C0C3F34000000000002

Expiry : Apr 25 13:42:47 2023 GMT

Certificate Authority Certificate (2)

Subject: C=US,CN=TA-SCEP-1-MSCEP-RA

Issuer : CN=TA-SCEP-1-CA

Serial: 1100000003268AFB5E98BFCA73000000000003

Expiry : Apr 25 13:42:48 2023 GMT

Certificate Authority Certificate {3}

Subject : CN=TA-SCEP-1-CA Issuer : CN=TA-SCEP-1-CA

Serial: 681670E9EFB7FCB74E79C33DD9D54847

Expiry : Apr 25 13:36:42 2027 GMT

Certificate Revocation List

Issuer : CN=TA-SCEP-1-CA

Last Update: May 23 13:27:21 2022 GMT

>

4. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

OpenVPN

OpenVPN is an open-source Virtual Private Network (VPN) technology that creates secure point-to-point or site-to-site connections in routed or bridged configurations. OpenVPN uses a custom security protocol that is Secure Socket Layer (SSL) / Transport Layer Security (TLS) for key exchange. It uses standard encryption and authentication algorithms for data privacy and authentication over TCP or UDP.

The OpenVPN server can push the network configuration, such as the topology and IP routes, to OpenVPN clients. This makes OpenVPN simpler to configure as it reduces the chances of a configuration mismatch between the client and server. OpenVPN also supports cipher negotiation between the client and server. This means you can configure the OpenVPN server and clients with a range of different cipher options and the server will negotiate with the client on the cipher to use for the connection.

For more information on OpenVPN, see www.openvpn.net.

OpenVPN modes:

There are two modes for running OpenVPN:

- Routing mode, also known as TUN.
- Bridging mode, also known as TAP.

Routing (TUN) mode

In routing mode, each OpenVPN client is assigned a different IP subnet from the OpenVPN server and other OpenVPN clients. OpenVPN clients use Network Address Translation (NAT) to route traffic from devices connected on its LAN interfaces to the OpenVPN server.

The manner in which the IP subnets are defined depends on the OpenVPN topology in use. The IX20 device supports two types of OpenVPN topology:

OpenVPN Topology	Subnet definition method
net30	Each OpenVPN client is assigned a /30 subnet within the IP subnet specified in the OpenVPN server configuration. With net30 topology, pushed routes are used, with the exception of the default route. Automatic route pushing (exec) is not allowed, because this would not inform the firewall and would be blocked.
subnet	Each OpenVPN client connected to the OpenVPN server is assigned an IP address within the IP subnet specified in the OpenVPN server configuration. For the IX20 device, pushed routes are not allowed; you will need to manually configure routes on the device.

For more information on OpenVPN topologies, see OpenVPN topology.

Bridging (TAP) mode

In bridging mode, a LAN interface on the OpenVPN server is assigned to OpenVPN. The LAN interfaces of the OpenVPN clients are on the same IP subnet as the OpenVPN server's LAN interface. This means that devices connected to the OpenVPN client's LAN interface are on the same IP subnet as devices. The IX20 device supports two mechanisms for configuring an OpenVPN server in TAP mode:

- OpenVPN managed—The IX20 device creates the interface and then uses its standard configuration to set up the connection (for example, its standard DHCP server configuration).
- Device only—IP addressing is controlled by the system, not by OpenVPN.

Additional OpenVPN information

For more information on OpenVPN, see these resources:

Bridging vs. routing OpenVPN/Routing

Configure an OpenVPN server

Required configuration items

- Enable the OpenVPN server.
 The OpenVPN server is enabled by default.
- The mode used by the OpenVPN server, one of:
 - TUN (OpenVPN managed)—Also known as routing mode. Each OpenVPN client is assigned
 a different IP subnet from the OpenVPN server and other OpenVPN clients. OpenVPN
 clients use Network Address Translation (NAT) to route traffic from devices connected on
 its LAN interfaces to the OpenVPN server.
 - TAP OpenVPN managed—Also know as bridging mode. A more advanced implementation of OpenVPN. The IX20 device creates an OpenVPN interface and uses standard interface configuration (for example, a standard DHCP server configuration).
 - TAP Device only—An alternate form of OpenVPN bridging mode, in which the device, rather than OpenVPN, controls the interface configuration. If this method is is, the OpenVPN server must be included as a device in either an interface or a bridge.
- The firewall zone to be used by the OpenVPN server.
- The IP network and subnet mask of the OpenVPN server.
- The server's Certificate authority (CA) certificate, and public, private and Diffie-Hellman (DH) keys.
- An OpenVPN authentication group and an OpenVPN user.
- Determine the method of certificate management:
 - · Certificates managed by the server.
 - Certificates created externally and added to the server.
- If certificates are created and added to the server, determine the level of authentication:
 - · Certificate authentication only.
 - Username and password authentication only.
 - Certificate and username and password authentication.

If username and password authentication is used, you must create an OpenVPN authentication group and user. See Configure an OpenVPN Authentication Group and User for instructions.

- Certificates and keys:
 - The CA certificate (usually in a ca.crt file).
 - The **Public key** (for example, server.crt)
 - The **Private key** (for example, server.key).
 - The Diffie Hellman key (usually in dh2048.pem).
- Active recovery configuration. See Configure SureLink active recovery for OpenVPN for information about OpenVPN active recovery.

Additional configuration items

- The route metric for the OpenVPN server.
- The range of IP addresses that the OpenVPN server will provide to clients.
- The TCP/UDP port to use. By default, the IX20 device uses port 1194.
- Access control list configuration to restrict access to the OpenVPN server through the firewall.
- Additional OpenVPN parameters.



- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.


Local Web UI:


a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

- 3. Click VPN > OpenVPN > Servers.
- 4. For **Add**, type a name for the OpenVPN server and click %

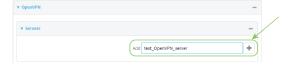

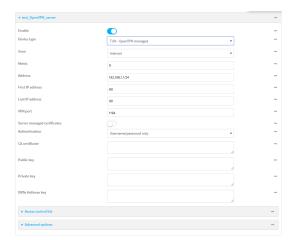

The new OpenVPN server configuration is displayed.

The OpenVPN server is enabled by default. To disable, toggle off **Enable**.

- 5. For **Device type**, select the mode used by the OpenVPN server, either:
 - TUN (OpenVPN managed)
 - TAP OpenVPN managed
 - TAP Device only

See OpenVPN for information about OpenVPN server modes.

- If TUN (OpenVPN managed) or TAP OpenVPN managed is selected for Device type:
 - a. For **Zone**, select the firewall zone for the OpenVPN server. For TUN device types, this should be set to **Internal** to treat clients as LAN devices.
 - b. (Optional) Select the **Metric** for the OpenVPN server. If multiple active routes match a destination, the route with the lowest metric will be used. The default setting is **0**.
 - c. For Address, type the IP address and subnet mask of the OpenVPN server.
 - d. (Optional) For First IP address and Last IP address, set the range of IP addresses that the OpenVPN server will use when providing IP addresses to clients. The default is from 80 to 99.
- 7. (Optional) Set the VPN port that the OpenVPN server will use. The default is 1194.
- For Server managed certificates, determine the method of certificate management. If enabled, the server will manage certificates. If not enabled, certificates must be created externally and added to the server.
- 9. If Server managed certificates is not enabled:
 - a. Select the Authentication type:
 - Certificate only: Uses only certificates for client authentication. Each client requires a public and private key.
 - Username/password only: Uses a username and password for client authentication. You must create an OpenVPN authentication group and user. See Configure an OpenVPN Authentication Group and User for instructions.
 - Certificate and username/password: Uses both certificates and a username and password for client authentication. Each client requires a public and private key,

and you must create an OpenVPN authentication group and user. See Configure an OpenVPN Authentication Group and User for instructions.

- b. Paste the contents of the CA certificate (usually in a ca.crt file), the Public key (for example, server.crt), the Private key (for example, server.key), and the Diffie Hellman key (usually in dh2048.pem) into their respective fields. The contents will be hidden when the configuration is saved.
- 10. (Optional) Click to expand Access control list to restrict access to the OpenVPN server:
 - To limit access to specified IPv4 addresses and networks:
 - a. Click IPv4 Addresses.
 - b. For Add Address, click Yo
 - c. For Address, enter the IPv4 address or network that can access the device's service-type. Allowed values are:
 - · A single IP address or host name.
 - A network designation in CIDR notation, for example, 192.168.1.0/24.
 - any: No limit to IPv4 addresses that can access the service-type.
 - d. Click Ybagain to list additional IP addresses or networks.
 - To limit access to specified IPv6 addresses and networks:
 - a. Click IPv6 Addresses.
 - b. For Add Address, click Yo
 - c. For Address, enter the IPv6 address or network that can access the device's service-type. Allowed values are:
 - A single IP address or host name.
 - A network designation in CIDR notation, for example, 2001:db8::/48.
 - any: No limit to IPv6 addresses that can access the service-type.
 - d. Click Ybagain to list additional IP addresses or networks.
 - To limit access to hosts connected through a specified interface on the device:
 - a. Click Interfaces.
 - b. For Add Interface, click %
 - c. For **Interface**, select the appropriate interface from the dropdown.
 - d. Click % again to allow access through additional interfaces.
 - To limit access based on firewall zones:
 - a. Click Zones. By default, there are three firewall zones already configured: Internal, Edge, and IPsec.
 - b. For **Add Zone**, click **1**/20
 - For **Zone**, select the appropriate firewall zone from the dropdown.
 See Firewall configuration for information about firewall zones.
 - d. Click % again to allow access through additional firewall zones.
- (Optional) Click to expand Advanced Options to manually set additional OpenVPN parameters.
 - a. Click Enable to enable the use of additional OpenVPN parameters.
 - b. Click **Override** if the additional OpenVPN parameters should override default options.

- c. For **OpenVPN parameters**, type the additional **OpenVPN parameters**.
- 12. Click **Apply** to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

> config (config)>

3. At the config prompt, type:

(config)> add vpn openvpn server *name* (config vpn openvpn server *name*)>

where name is the name of the OpenVPN server.

The OpenVPN server is enabled by default. To disable the server, type:

(config vpn openvpn server *name*)> enable false (config vpn openvpn server *name*)>

4. Set the mode used by the OpenVPN server:

(config vpn openvpn server *name*)> device_type *value* (config vpn openvpn server *name*)>

where value is one of:

- TUN (OpenVPN managed)—Also known as routing mode. Each OpenVPN client is assigned a different IP subnet from the OpenVPN server and other OpenVPN clients. OpenVPN clients use Network Address Translation (NAT) to route traffic from devices connected on its LAN interfaces to the OpenVPN server.
- TAP OpenVPN managed—Also know as bridging mode. A more advanced implementation of OpenVPN. The IX20 device creates an OpenVPN interface and uses standard interface configuration (for example, a standard DHCP server configuration).
- **TAP Device only**—An alternate form of OpenVPN bridging mode, in which the device, rather than OpenVPN, controls the interface configuration. If this method is is, the OpenVPN server must be included as a device in either an interface or a bridge.

See OpenVPN for information about OpenVPN modes. The default is **tun**.

- 5. If tap or tun are set for device_type:
 - Set the IP address and subnet mask of the OpenVPN server.

(config vpn openvpn server *name*)> address *ip_address/netmask* (config vpn openvpn server *name*)>

b. Set the firewall zone for the OpenVPN server. For TUN device types, this should be set to **internal** to treat clients as LAN devices.

(config vpn openvpn server *name*)> zone *value* (config vpn openvpn server *name*)>

To view a list of available zones:

(config vpn openvpn server name)> firewall zone?

Zone: The zone for the local TUN interface. To treat clients as LAN devices this would usually be set to internal.

Format:

any

dynamic_routes

edge

external

hotspot

internal

ipsec

loopback

setup

Current value:

(config vpn openvpn server name)>

c. (Optional) Set the route metric for the OpenVPN server. If multiple active routes match a destination, the route with the lowest metric will be used.

(config vpn openvpn server *name*)> metric *value* (config vpn openvpn server *name*)>

where value is an interger between 0 and 65535. The default is 0.

- d. (Optional) Set the range of IP addresses that the OpenVPN server will use when providing IP addresses to clients:
 - i. Set the first address in the range limit:

(config vpn openvpn server *name*)> server_first_ip *value* (config vpn openvpn server *name*)>

where *value* is a number between **1** and **255**. The number entered here will represent the first client IP address. For example, if **address** is set to **192.168.1.1/24** and **server_first_ip** is set to **80**, the first client IP address will be 192.168.1.80.

The default is from 80.

ii. Set the last address in the range limit:

(config vpn openvpn server *name*)> server_last_ip *value* (config vpn openvpn server *name*)>

where *value* is a number between **1** and **255**. The number entered here will represent the last client IP address. For example, if **address** is set to **192.168.1.1/24** and **server_last_ip** is set to **99**, the last client IP address will be 192.168.1.80.

The default is from 80.

(Optional) Set the port that the OpenVPN server will use:

(config vpn openvpn server *name*)> port *port* (config vpn openvpn server *name*)>

The default is 1194.

- 7. Determine the method of certificate management:
 - a. To allow the server to manage certificates:

(config vpn openvpn server *name*)> autogenerate true (config vpn openvpn server *name*)>

b. To create certificates externally and add them to the server

(config vpn openvpn server name)> autogenerate false (config vpn openvpn server name)>

The default setting is false.

- c. If autogenerate is set to false:
 - Set the authentication type:

(config vpn openvpn server *name*)> authentication *value* (config vpn openvpn server *name*)>

where value is one of:

- cert: Uses only certificates for client authentication. Each client requires a public and private key.
- passwd: Uses a username and password for client authentication. You must create an OpenVPN authentication group and user. See Configure an OpenVPN Authentication Group and User for instructions.
- cert_passwd: Uses both certificates and a username and password for client authentication. Each client requires a public and private key, and you must create an OpenVPN authentication group and user. See Configure an OpenVPN Authentication Group and User for instructions.
- ii. Paste the contents of the CA certificate (usually in a ca.crt file) into the value of the cacert parameter:

(config vpn openvpn server *name*)> cacert *value* (config vpn openvpn server *name*)>

iii. Paste the contents of the public key (for example, server.crt) into the value of the **server_cert** parameter:

(config vpn openvpn server *name*)> server_cert *value* (config vpn openvpn server *name*)>

iv. Paste the contents of the private key (for example, server.key) into the value of the **server_key** parameter:

(config vpn openvpn server *name*)> server_key *value* (config vpn openvpn server *name*)>

v. Paste the contents of the Diffie Hellman key (usually in dh2048.pem) into the value of the **diffie** parameter:

(config vpn openvpn server *name*)> diffie *value* (config vpn openvpn server *name*)>

- 8. (Optional) Set the access control list to restrict access to the OpenVPN server:
 - To limit access to specified IPv4 addresses and networks:

(config vpn openvpn server name)> add acl address end *value* (config vpn openvpn server name)>

Where value can be:

- · A single IP address or host name.
- A network designation in CIDR notation, for example, 192.168.1.0/24.
- any: No limit to IPv4 addresses that can access the service-type.

Repeat this step to list additional IP addresses or networks.

To limit access to specified IPv6 addresses and networks:

(config vpn openvpn server name)> add acl address6 end *value* (config vpn openvpn server name)>

Where value can be:

- · A single IP address or host name.
- A network designation in CIDR notation, for example, 2001:db8::/48.
- any: No limit to IPv6 addresses that can access the service-type.

Repeat this step to list additional IP addresses or networks.

To limit access to hosts connected through a specified interface on the IX20 device:

(config vpn openvpn server name)> add acl interface end *value* (config vpn openvpn server name)>

Where value is an interface defined on your device.

Display a list of available interfaces:

Use ... network interface ?to display interface information:

(config vpn openvpn server name)> ... network interface ?

Interfaces

Additional Configuration

setupip Setup IP
setuplinklocalip Setup Link-local IP
eth1 ETH1
eth2 ETH2
loopback Loopback
modem Modem

(config vpn openvpn server name)>

Repeat this step to list additional interfaces.

To limit access based on firewall zones:

(config vpn openvpn server name)> add acl zone end *value* (config vpn openvpn server name)>

Where *value* is a firewall zone defined on your device, or the **any** keyword.

Display a list of available firewall zones:

Type ... firewall zone ?at the config prompt:

(config vpn openvpn server name)> ... firewall zone?

Zones: A list of groups of network interfaces that can be referred to by packet filtering rules and access control lists.

Additional Configuration

any

dynamic_routes

edge

external

hotspot

internal

ipsec

loopback

setup

(config vpn openvpn server name)>

Repeat this step to include additional firewall zones.

- 9. (Optional) Set additional OpenVPN parameters.
 - a. Enable the use of additional OpenVPN parameters:

(config vpn openvpn server *name*)> advanced_options enable true (config vpn openvpn server *name*)>

b. Configure whether the additional OpenVPN parameters should override default options:

(config vpn openvpn server *name*)> advanced_options override true (config vpn openvpn server *name*)>

c. Set the additional OpenVPN parameters:

(config vpn openvpn server *name*)> extra *parameters* (config vpn openvpn server *name*)>

10. Save the configuration and apply the change.

```
(config)> save
Configuration saved.
>
```

11. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configure an OpenVPN Authentication Group and User

If username and password authentication is used for the OpenVPN server, you must create an OpenVPN authentication group and user.

See Configure an OpenVPN server for information about configuring an OpenVPN server to use username and password authentication. See IX20 user authentication for more information about creating authentication groups and users.



- Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.


Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.




The **Configuration** window is displayed.

- 3. Add an OpenVPN authentication group:
 - a. Click Authentication > Groups.
 - b. For Add Group, type a name for the group (for example, OpenVPN_Group) and click 1/30

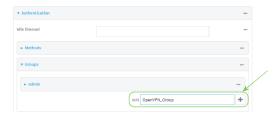

The new authentication group configuration is displayed.

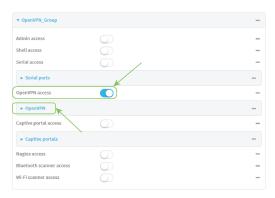

- c. Click OpenVPN access to enable OpenVPN access rights for users of this group.
- d. Click to expand the OpenVPN node.
- e. Click %to add a tunnel.



f. For Tunnel, select an OpenVPN tunnel to which users of this group will have access.



g. Repeat to add additional OpenVPN tunnels.

- 4. Add an OpenVPN authentication user:
 - a. Click Authentication > Users.
 - b. For **Add**, type a name for the user (for example, **OpenVPN_User**) and click %




c. Type a password for the user.

This password is used for local authentication of the user. You can also configure the user to use RADIUS or TACACS+ authentication by configuring authentication methods. See User authentication methods for information.


d. Click to expand the Groups node.



e. Click %to add a group to the user.

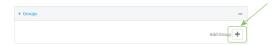

f. Select a Group with OpenVPN access enabled.

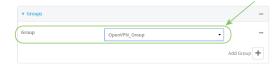

5. Click **Apply** to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Use the **add auth group** command to add a new authentication. For example, to add a group named **OpenVPN_Group**:

```
(config)> add auth group OpenVPN_Group (config auth group OpenVPN_Group)>
```

4. Enable OpenVPN access rights for users of this group:

```
(config auth group OpenVPN_Group)> acl openvpn enable true
```

- 5. Add an OpenVPN tunnel to which users of this group will have access:
 - a. Determine available tunnels:

```
(config auth group OpenVPN_Group)> ..... vpn openvpn server?
```

Servers: A list of openvpn servers

```
Additional Configuration
```

```
-----
```

OpenVPN_server1 OpenVPN server

(config auth group OpenVPN_Group)>

b. Add a tunnel:

```
(config auth group OpenVPN_Group)> add auth group test acl openvpn tunnels end /vpn/openvpn/server/OpenVPN_server1 (config auth group OpenVPN_Group)>
```

6. Save the configuration and apply the change.

```
(config)> save
Configuration saved.
```

7. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configure an OpenVPN client by using an .ovpn file

Required configuration items

- Enable the OpenVPN client.
 The OpenVPN client is enabled by default.
- The firewall zone to be used by the OpenVPN client.

Additional configuration items

- The route metric for the OpenVPN client.
- The login credentials for the OpenVPN client, if configured on the OpenVPN server.

See Configure SureLink active recovery for OpenVPN for information about OpenVPN active recovery.



- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- a. Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

- 3. Click VPN > OpenVPN > Clients.
- 4. For Add, type a name for the OpenVPN client and click %



The new OpenVPN client configuration is displayed.



- 5. The OpenVPN client is enabled by default. To disable, toggle off Enable.
- 6. The default behavior is to use an OVPN file for client configuration. To disable this behavior and configure the client manually, click Use .ovpn file to disable. If Use .ovpn file is disabled, see Configure an OpenVPN client without using an .ovpn file for configuration information.
- 7. For **Zone**, select the firewall zone for the OpenVPN client.
- 8. (Optional) Select the **Metric** for the OpenVPN client. If multiple active routes match a destination, the route with the lowest metric will be used.
- (Optional) For **Username** and **Password**, type the login credentials as configured on the OpenVPN server.
- 10. For **OVPN file**, paste the content of the client.ovpn file.
- 11. Click **Apply** to save the configuration and apply the change.

Command line

Select the device in Remote Manager and click Actions > Open Console, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

> config (config)>

3. At the config prompt, type:

(config)> add vpn openvpn client *name* (config vpn openvpn client *name*)>

where name is the name of the OpenVPN server.

The OpenVPN client is enabled by default. To disable the client, type:

(config vpn openvpn client *name*)> enable false (config vpn openvpn client *name*)>

4. Set the firewall zone for the OpenVPN client:

(config vpn openvpn client *name*)> zone *value* (config vpn openvpn client *name*)>

To view a list of available zones:

(config vpn openvpn client name)> zone?

Zone: The zone for the openvpn client interface.

Format:

any

dynamic_routes

edge

external

hotspot

internal

ipsec

loopback

setup

Current value:

(config vpn openvpn client name)>

5. (Optional) Set the route metric for the OpenVPN server. If multiple active routes match a destination, the route with the lowest metric will be used.

```
(config vpn openvpn client name)> metric value (config vpn openvpn client name)>
```

where *value* is an interger between **0** and **65535**. The default is **0**.

6. (Optional) Set the login credentials as configured on the OpenVPN server:

(config vpn openvpn client *name*)> username *value* (config vpn openvpn client *name*)> password *value* (config vpn openvpn client *name*)>

7. Paste the content of the client.ovpn file into the value of the **config_file** parameter:

(config vpn openvpn client *name*)> config_file *value* (config vpn openvpn client *name*)>

8. Save the configuration and apply the change.

(config)> save
Configuration saved.

9. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configure an OpenVPN client without using an .ovpn file

Required configuration items

- Enable the OpenVPN client.
 - The OpenVPN client is enabled by default.
- The mode used by the OpenVPN server, either routing (TUN), or bridging (TAP).
- The firewall zone to be used by the OpenVPN client.
- The IP address of the OpenVPN server.
- Certificates and keys:
 - The CA certificate (usually in a ca.crt file).
 - The Public key (for example, client.crt)
 - The Private key (for example, client.key).

Additional configuration items

- The route metric for the OpenVPN client.
- The login credentials for the OpenVPN client, if configured on the OpenVPN server.
- Additional OpenVPN parameters.

See Configure SureLink active recovery for OpenVPN for information about OpenVPN active recovery.



- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- a. Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.




The **Configuration** window is displayed.

3. Click VPN > OpenVPN > Clients.

For Add, type a name for the OpenVPN client and click
 √ω



The new OpenVPN client configuration is displayed.

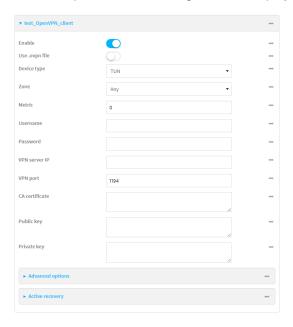

- 5. The OpenVPN client is enabled by default. To disable, toggle off **Enable**.
- 6. The default behavior is to use an OVPN file for client configuration. To disable this behavior and configure the client manually, click **Use .ovpn file** to disable.
- 7. For **Device type**, select the mode used by the OpenVPN server, either **TUN** or **TAP**.
- 8. For **Zone**, select the firewall zone for the OpenVPN client.
- 9. (Optional) Select the **Metric** for the OpenVPN client. If multiple active routes match a destination, the route with the lowest metric will be used.
- (Optional) For Username and Password, type the login credentials as configured on the OpenVPN server.
- 11. For VPN server IP, type the IP address of the OpenVPN server.
- 12. (Optional) Set the VPN port used by the OpenVPN server. The default is 1194.
- 13. Paste the contents of the CA certificate (usually in a ca.crt file), the Public key (for example, client.crt), and the Private key (for example, client.key) into their respective fields. The contents will be hidden when the configuration is saved.
- (Optional) Click to expand Advanced Options to manually set additional OpenVPN parameters.

- a. Click Enable to enable the use of additional OpenVPN parameters.
- b. Click Override if the additional OpenVPN parameters should override default options.
- c. For OpenVPN parameters, type the additional OpenVPN parameters. For example, to override the configuration by using a configuration file, enter --config filename, for example, --config/etc/config/openvpn_config.
- 15. Click **Apply** to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

> config (config)>

3. At the config prompt, type:

(config)> add vpn openvpn client *name* (config vpn openvpn client *name*)>

where name is the name of the OpenVPN server.

The OpenVPN client is enabled by default. To disable the client, type:

(config vpn openvpn client *name*)> enable false (config vpn openvpn client *name*)>

4. The default behavior is to use an OVPN file for client configuration. To disable this behavior and configure the client manually:

(config vpn openvpn client *name*)> use_file false (config vpn openvpn client *name*)>

5. Set the mode used by the OpenVPN server:

(config vpn openvpn client *name*)> device_type *value* (config vpn openvpn client *name*)>

where value is either tun or tap. The default is tun.

6. Set the firewall zone for the OpenVPN client:

(config vpn openvpn client *name*)> zone *value* (config vpn openvpn client *name*)>

To view a list of available zones:

(config vpn openvpn client name)> zone?

Zone: The zone for the openvpn client interface.

Format: any dynamic_routes edge external hotspot internal ipsec loopback setup Current value: (config vpn openvpn client name)> 7. (Optional) Set the route metric for the OpenVPN server. If multiple active routes match a destination, the route with the lowest metric will be used. (config vpn openvpn client name)> metric value (config vpn openvpn client name)> where value is an interger between 0 and 65535. The default is 0. 8. (Optional) Set the login credentials as configured on the OpenVPN server: (config vpn openvpn client name)> username value (config vpn openvpn client name)> password value (config vpn openvpn client name)> 9. Set the IP address of the OpenVPN server: (config vpn openvpn client name)> server ip_address (config vpn openvpn client name)> 10. (Optional) Set the port used by the OpenVPN server: (config vpn openvpn client name)> port port (config vpn openvpn client name)> The default is 1194. 11. Paste the contents of the CA certificate (usually in a ca.crt file) into the value of the cacert parameter: (config vpn openvpn client name)> cacert value (config vpn openvpn client name)> 12. Paste the contents of the public key (for example, client.crt) into the value of the public_cert parameter:

13. Paste the contents of the private key (for example, client.key) into the value of the **private_key** parameter:

(config vpn openvpn client name)> public_cert value

(config vpn openvpn client name)>

(config vpn openvpn client *name*)> private_key *value* (config vpn openvpn client *name*)>

- 14. (Optional) Set additional OpenVPN parameters.
 - a. Enable the use of additional OpenVPN parameters:

(config vpn openvpn client *name*)> advanced_options enable true (config vpn openvpn client *name*)>

b. Configure whether the additional OpenVPN parameters should override default options:

(config vpn openvpn client *name*)> advanced_options override true (config vpn openvpn client *name*)>

c. Set the additional OpenVPN parameters:

(config vpn openvpn client *name*)> advanced_options extra *parameters* (config vpn openvpn client *name*)>

15. Save the configuration and apply the change.

(config)> save
Configuration saved.

16. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configure SureLink active recovery for OpenVPN

You can configure the IX20 device to regularly probe OpenVPN client connections to determine if the connection has failed and take remedial action.

Required configuration items

- A valid OpenVPN client configuration. See Configure an OpenVPN client by using an .ovpn file or Configure an OpenVPN client without using an .ovpn file for configuration instructions.
- Enable OpenVPN SureLink.
- The behavior of the IX20 device upon OpenVPN failure: either
 - · Restart the OpenVPN interface
 - · Reboot the device.

Additional configuration items

- The interval between connectivity tests.
- Whether the interface should be considered to have failed if one of the test targets fails, or all of the test targets fail.
- The number of probe failures before the OpenVPN connection is considered to have failed.
- The amount of time that the device should wait for a response to a probe failures before considering it to have failed.

To configure the IX20 device to regularly probe the OpenVPN connection:



- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.


Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

- 3. Click VPN > OpenVPN > Clients.
- 4. Create a new OpenVPN client or select an existing one:
 - To create a new OpenVPN client, see Configure an OpenVPN client by using an .ovpn file or Configure an OpenVPN client without using an .ovpn file.
 - To edit an existing OpenVPN client, click to expand the appropriate client.
- 5. After creating or selecting the OpenVPN client, click SureLink.

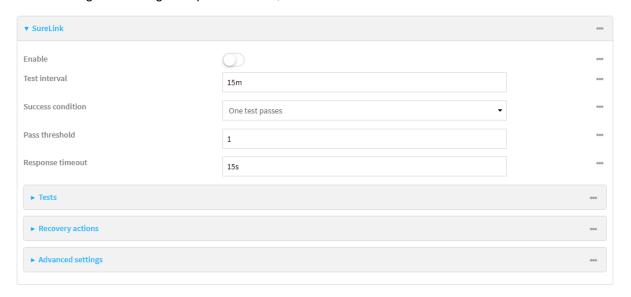

- 6. Enable SureLink.
- 7. (Optional) Change the **Test interval** between connectivity tests.

Allowed values are any number of weeks, days, hours, minutes, or seconds, and take the format *number*{w|d|h|m|s}.

For example, to set Interval to ten minutes, enter 10m or 600s.

The default is 15 minutes.

- 8. (Optional) If more than one test target is configured, for Success condition, select either:
 - One test passes: Only one test needs to pass for Surelink to consider an interface to be up.
 - All test pass: All tests need to pass for SureLink to consider the interface to be up.
- 9. (Optional) For **Pass threshold**, type or select the number of times that the test must pass after failure, before the interface is determined to be working and is reinstated.
- 10. (Optional) For **Response timeout**, type the amount of time that the device should wait for a response to a test failure before considering it to have failed.

Allowed values are any number of weeks, days, hours, minutes, or seconds, and take the format *number*(w|d|h|m|s).

For example, to set Response timeout to ten minutes, enter 10m or 600s.

The default is 15 seconds.

11. Click to expand Tests.

By default, **Test DNS servers configured for this interface** is automatically configured and enabled. This test communication with DNS servers that are either provided by DHCP, or statically configured for this interface.

a. Click %



New tests are enabled by default. To disable, click to toggle off Enable.

- b. Type a Label for the test.
- c. Click to toggle on IPv6 if the test should apply to both IPv6 rather than IPv4.
- d. Select the **Test type**.

Available test types:

- Ping test: Uses ICMP to determine connectivity.
 - If **Ping test** is selected, complete the following:
 - **Ping target:** The type of target for the ping, one of:
 - · Hostname or IP address of an external server.
 - Ping host: hostname or IP address of the server.
 - The Interface gateway. If Interface gateway is selected, an initial traceroute is sent to the hostname or IP address configured in the SureLink advanced settings, and then the first hop in that route is used for the ping test.

- The Interface address.
- The Interface DNS server.
- Ping payload size: The number of bytes to send as part of the ping payload.
- **DNS test**: Performs a DNS query to the named DNS server.

If **DNS test** is selected, complete the following:

- DNS server: The IP address of the DNS server.
- HTTP test: Uses HTTP(s) GET requests to determine connectivity to the configured web server.

If **HTTP test** is selected, complete the following:

- Web server: The URL of the web server.
- Test DNS servers configured for this interface: Tests communication with DNS servers that are either provided by DHCP, or statically configured for this interface.
- **Test the interface status**: Tests the current status of the interface. The test fails if the interface is down. Failing this test infers that all other tests fail.

If **Test the interface status** is selected, complete the following:

• **Down time**: The amount of time that the interface is down before the test can be considered to have failed.

Allowed values are any number of weeks, days, hours, minutes, or seconds, and take the format *number*{w|d|h|m|s}.

For example, to set **Down time** to ten minutes, enter **10m** or **600s**.

• Initial connection time: The amount of time to wait for the interface to connect for the first time before the test is considered to have failed.

Allowed values are any number of weeks, days, hours, minutes, or seconds, and take the format *number*{w|d|h|m|s}.

For example, to set Initial connection time to ten minutes, enter 10m or 600s.

Custom test: Tests the interface with custom commands.

If **Custom test** is selected, complete the following:

- . The Commands to run to test.
- **TCP connection test**: Tests that the interface can reach a destination port on the configured host.

If TCP connection test is selected, complete the following:


- TCP connect host: The hostname or IP address of the host to create a TCP connection to.
- TCP connect port: The TCP port to create a TCP connection to.
- Test another interface's status: Tests the status of another interface.

If Test another interface's status is selected, complete the following:

- Test interface: The interface to test.
- IP version: The type of IP connection, one of:
 - Any: Either the IPv4 or IPv6 connection must be up.
 - Both: Both the IPv4 or IPv6 connection must be up.
 - **IPv4**: The IPv4 connection must be up.
 - IPv6: The IPv6 connection must be up.
- Expected status: The status required for the test to past.
 - Up: The test will pass only if the referenced interface is up and passing its own SureLink tests (if applicable).
 - Down: The test will pass only if the referenced interface is down or failing its own SureLink tests (if applicable).
- e. Repeat for each additional test.
- 12. Add recovery actions:
 - a. Click to expand Recovery actions.

By default, there are two preconfigured recovery actions:

- Update routing: Uses the Change default gateway action, which increases the interface's metric by 100 to change the default gateway.
- Restart interface.
- b. Click %

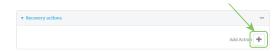

New recovery actions are enabled by default. To disable, click to toggle off **Enable**.

- c. Type a **Label** for the recovery action.
- d. For Recovery type, select Reboot device.
- e. For **Recovery type**, select the type of recovery action. If multiple recovery actions are configured, they are performed in the order that they are listed.
 - Change default gateway: Increases the interface's metric to change the default gateway.

If Change default gateway is selected, complete the following:

- **SureLink test failures**: The number of failures for this recovery action to perform, before moving to the next recovery action.
- Increase metric to change active default gateway: Increase the interface's
 metric by this amount. This should be set to a number large enough to change
 the routing table to use another default gateway. The default is 100.
- Override wait interval before performing the next recovery action: The time to
 wait before the next test is run. If set to the default value of 0s, the Test
 interval is used.
- Restart interface.

If **Restart interface** is selected, complete the following:

- **SureLink test failures**: The number of failures for this recovery action to perform, before moving to the next recovery action.
- Override wait interval before performing the next recovery action: The time to
 wait before the next test is run. If set to the default value of 0s, the Test
 interval is used.
- **Reset modem**: This recovery action is available for WWAN interfaces only.

If Reset modem is selected, complete the following:

- **SureLink test failures**: The number of failures for this recovery action to perform, before moving to the next recovery action.
- Override wait interval before performing the next recovery action: The time to
 wait before the next test is run. If set to the default value of 0s, the Test
 interval is used.
- Switch to alternate SIM: Switches to an alternate SIM. This recovery action is available for WWAN interfaces only.

If **Switch to alternate SIM** is selected, complete the following:

- **SureLink test failures**: The number of failures for this recovery action to perform, before moving to the next recovery action.
- Override wait interval before performing the next recovery action: The time to
 wait before the next test is run. If set to the default value of 0s, the Test
 interval is used.
- Reboot device.

If **Reboot device** is selected, complete the following:

- **SureLink test failures**: The number of failures for this recovery action to perform, before moving to the next recovery action.
- Override wait interval before performing the next recovery action: The time to
 wait before the next test is run. If set to the default value of 0s, the Test
 interval is used.
- Execute custom Recovery commands.

If **Recovery commands** is selected, complete the following:

- **SureLink test failures**: The number of failures for this recovery action to perform, before moving to the next recovery action.
- The Commands to run to recovery connectivity.
- Override wait interval before performing the next recovery action: The time to
 wait before the next test is run. If set to the default value of 0s, the Test
 interval is used.
- Powercycle the modem. This recovery action is available for WWAN interfaces only.

If **Powercycle the modem** is selected, complete the following:

• **SureLink test failures**: The number of failures for this recovery action to perform, before moving to the next recovery action.

- Override wait interval before performing the next recovery action: The time to
 wait before the next test is run. If set to the default value of 0s, the Test
 interval is used.
- Repeat for each additional recovery action.
- 13. (Optional) Configure advanced SureLink parameters:
 - a. Click to expand Advanced settings.
 - b. For **Delayed Start**, type the amount of time to wait while the device is starting before SureLink testing begins. This setting is bypassed when the interface is determined to be up.

Allowed values are any number of weeks, days, hours, minutes, or seconds, and take the format *number*(w|d|h|m|s).

For example, to set **Delayed start** to ten minutes, enter **10m** or **600s**.

The default is 300 seconds.

c. For **Backoff interval**, type the time to add to the test interval when restarting the list of actions. This option is capped at 15 minutes.

Allowed values are any number of weeks, days, hours, minutes, or seconds, and take the format *number*(w|d|h|m|s).

For example, to set Backoff interval to ten minutes, enter 10m or 600s.

The default is 300 seconds.

- d. Test interface gateway by pinging is used by the Interface gateway Ping test as the endpoint for traceroute to use to determine the interface gateway. The default is 8.8.8.8, and should only be changed if this IP address is not accessible due to networking issues.
- 14. Click Apply to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

> config (config)>

- 3. Create a new OpenVPN client, or edit an existing one:
 - To create a new OpenVPN client, see Configure an OpenVPN client by using an .ovpn file or Configure an OpenVPN client without using an .ovpn file.
 - To edit an existing OpenVPN client, change to the OpenVPN client's node in the configuration schema. For example, for an OpenVPN client named openvpn_client1, change to the openvpn_client1 node in the configuration schema:

(config)> vpn openvpn client openvpn_client1 (config vpn openvpn client openvpn client1)>

4. Enable SureLink:

(config vpn openvpn client openvpn_client1)> surelink enable true (config vpn openvpn client openvpn_client1)>

 By default, the **Test DNS servers configured for this interface** test is automatically configured and enabled. This tests communication with DNS servers that are either provided by DHCP, or statically configured for this interface.

To add additional tests:

a. Add a test:

(config vpn openvpn client openvpn_client1)> add surelink tests end (config vpn openvpn client openvpn_client1 surelink tests 1)>

b. New tests are enabled by default. To disable:

(config vpn openvpn client openvpn_client1 surelink tests 1)> enable false (config vpn openvpn client openvpn_client1 surelink tests 1)>

c. Create a label for the test:

(config vpn openvpn client openvpn_client1 surelink tests 1)> label *string* (config vpn openvpn client openvpn_client1 surelink tests 1)>

d. if the test should apply to both IPv6 rather than IPv4, enable IPv6:

(config vpn openvpn client openvpn_client1 surelink tests 1)> ipv6 true (config vpn openvpn client openvpn_client1 surelink tests 1)>

e. Set the test type:

(config vpn openvpn client openvpn_client1 surelink tests 1)> test *value* (config vpn openvpn client openvpn_client1 surelink tests 1)>

where value is one of:

ping: Uses ICMP to determine connectivity.
If ping is selected, complete the following:

Set the ping_method:

(config vpn openvpn client openvpn_client1 surelink tests 1)> ping_method *value* (config vpn openvpn client openvpn_client1 surelink tests 1)>

where value is one of:

- hostname: The hostname or IP address of an external server.
 - Set ping host to the hostname or IP address of the server:

(config vpn openvpn client openvpn_client1 surelink tests 1)> ping_host hostname/IP_address
(config vpn openvpn client openvpn_client1 surelink tests 1)>

- interface_gateway. If set, an initial traceroute is sent to the hostname or IP address configured in the SureLink advanced settings, and then the first hop in that route is used for the ping test.
- interface address.
- interface dns: The interface's DNS server.
- Set the number of bytes to send as part of the ping payload:

(config vpn openvpn client openvpn_client1 openvpn client openvpn_client1 surelink tests 1)> ping_size int

(config vpn openvpn client openvpn_client1 surelink tests 1)>

dns: Performs a DNS query to the named DNS server.

If **dns** is set, set the IPv4 or IPv6 address of the DNS server:

(config vpn openvpn client openvpn_client1 surelink tests 1)> dns_server *IP_address* (config vpn openvpn client openvpn_client1 surelink tests 1)>

http: Uses HTTP(s) GET requests to determine connectivity to the configured web server.

If **http** is set, set the URL of the web server.

(config vpn openvpn client openvpn_client1 surelink tests 1)> http *url* (config vpn openvpn client openvpn_client1 surelink tests 1)>

- dns_configured: Tests communication with DNS servers that are either provided by DHCP, or statically configured for this interface.
- interface_up: Tests the current status of the interface. The test fails if the interface is down. Failing this test infers that all other tests fail.

If interface_up is set, complete the following:

 Set the amount of time that the interface is down before the test can be considered to have failed.

(config vpn openvpn client openvpn_client1 surelink tests 1)> interface_down_time value

(config vpn openvpn client openvpn_client1 surelink tests 1)>

where *value* is any number of weeks, days, hours, minutes, or seconds, and takes the format *number*{w|d|h|m|s}.

For example, to set **interface_down_time** to ten minutes, enter either **10m** or **600s**:

(config vpn openvpn client openvpn_client1 surelink tests 1)> interface_down_time 600s (config)>

 Set the amount of time to wait for the interface to connect for the first time before the test is considered to have failed.

(config vpn openvpn client openvpn_client1 surelink tests 1)> interface_timeout value

(config vpn openvpn client openvpn_client1 surelink tests 1)>

where *value* is any number of weeks, days, hours, minutes, or seconds, and takes the format *number*{w|d|h|m|s}.

For example, to set **interface_timeout** to ten minutes, enter either **10m** or **600s**:

(config vpn openvpn client openvpn_client1 surelink tests 1)> interface_timeout 600s (config)>

custom_test: Tests the interface with custom commands.

If **custom_test** is set, set the commands to run to perform the test:

(config vpn openvpn client openvpn_client1 surelink tests 1)> custom_test_commands "string"

(config vpn openvpn client openvpn_client1 surelink tests 1)>

tcp_connection: Tests that the interface can reach a destination port on the configured host.

If tcp connection is selected, complete the following:

• Set the hostname or IP address of the host to create a TCP connection to:

(config vpn openvpn client openvpn_client1 surelink tests 1)> tcp_host hostname/IP_address
(config vpn openvpn client openvpn_client1 surelink tests 1)>

Set the TCP port to create a TCP connection to.

(config vpn openvpn client openvpn_client1 surelink tests 1)> tcp_port port (config vpn openvpn client openvpn_client1 surelink tests 1)>

other: Tests the status of another interface.

If **other** is selected, complete the following:

- · Set the interface to test.
 - i. Use the ?to determine available interfaces:

(config vpn openvpn client openvpn_client1 surelink tests 1)> other_interface?

Test interface: Test the status of this other interface.

Format:

/network/interface/setupip

/network/interface/setuplinklocalip

/network/interface/eth1

/network/interface/eth2

/network/interface/loopback

Current value:

(config vpn openvpn client openvpn_client1 surelink tests 1)> other_interface

ii. Set the interface. For example:

(config vpn openvpn client openvpn_client1 surelink tests 1)> other_interface /network/interface/eth1 (config vpn openvpn client openvpn_client1 surelink tests 1)>

Set the type of IP connection:

(config vpn openvpn client openvpn_client1 surelink tests 1)> other_ip_version *value* (config vpn openvpn client openvpn_client1 surelink tests 1)>

where value is one of:

- o any: Either the IPv4 or IPv6 connection must be up.
- both: Both the IPv4 or IPv6 connection must be up.
- **ipv4** The IPv4 connection must be up.
- o ipv6: The IPv6 connection must be up.
- · The status required for the test to past.

(config vpn openvpn client openvpn_client1 surelink tests 1)> other_status *value* (config vpn openvpn client openvpn_client1 surelink tests 1)>

where value is one of:

- up: The test will pass only if the referenced interface is up and passing its own SureLink tests (if applicable).
- down: The test will pass only if the referenced interface is down or failing its own SureLink tests (if applicable).
- f. Repeat for each additional test.
- 6. Add recovery actions:
 - a. Type ... to return to the root of the configuration:

(config vpn openvpn client openvpn_client1 surelink tests 1)> ... (config)>

b. Add a recovery action:

(config)> add vpn openvpn client openvpn_client1 surelink actions end (config vpn openvpn client openvpn_client1 surelink actions 0)>

c. New actions are enabled by default. To disable:

(config vpn openvpn client openvpn_client1 surelink actions 0)> enable false (config vpn openvpn client openvpn_client1 surelink actions 0)>

d. Create a label for the action:

(config vpn openvpn client openvpn_client1 surelink actions 0)> label string (config vpn openvpn client openvpn_client1 surelink actions 0)>

e. Set the type of recovery action to reboot_device:

(config vpn openvpn client openvpn_client1 surelink actions 0)> action reboot_device (config vpn openvpn client openvpn_client1 surelink actions 0)>

Set the number of failures for this recovery action to perform, before moving to the next recovery action:

(config vpn openvpn client openvpn_client1 surelink actions 0)> test_failures *int* (config vpn openvpn client openvpn_client1 surelink actions 0)>

The default is 3.

Set the time to wait before the next test is run. If set to the default value of 0s, the test interval is used.

(config vpn openvpn client openvpn_client1 surelink actions 0)> override_interval int (config vpn openvpn client openvpn_client1 surelink actions 0)>

f. Set the type of recovery action. If multiple recovery actions are configured, they are performed in the order that they are listed. The command varies depending on whether the interface is a WAN or WWAN:

(config vpn openvpn client openvpn_client1 surelink actions 0)> modem_action value (config vpn openvpn client openvpn_client1 surelink actions 0)>

WAN interfaces:

(config vpn openvpn client openvpn_client1 surelink actions 0)> action value (config vpn openvpn client openvpn_client1 surelink actions 0)>

WWAN interfaces:

(config vpn openvpn client openvpn_client1 surelink actions 0)> modem_action value (config vpn openvpn client openvpn_client1 surelink actions 0)>

where value is one of:

update_routing_table: Increases the interface's metric to change the default gateway.

If **update_routing_table** is selected, complete the following:

 Set the number of failures for this recovery action to perform, before moving to the next recovery action:

(config vpn openvpn client openvpn_client1 surelink actions 0)> test_failures *int* (config vpn openvpn client openvpn_client1 surelink actions 0)>

The default is 3.

 Set the amount that the interface's metric should be increased. This should be set to a number large enough to change the routing table to use another default gateway.

(config vpn openvpn client openvpn_client1 surelink actions 0)> metric_adjustment_modem *int*

(config vpn openvpn client openvpn_client1 surelink actions 0)>

The default is **100**.

 Set the time to wait before the next test is run. If set to the default value of 0s, the test interval is used.

(config vpn openvpn client openvpn_client1 surelink actions 0)> override_interval int (config vpn openvpn client openvpn_client1 surelink actions 0)>

restart interface.

If **restart_interface** is selected, complete the following:

 Set the number of failures for this recovery action to perform, before moving to the next recovery action:

(config vpn openvpn client openvpn_client1 surelink actions 0)> test_failures *int* (config vpn openvpn client openvpn_client1 surelink actions 0)>

The default is 3.

 Set the time to wait before the next test is run. If set to the default value of 0s, the test interval is used.

(config vpn openvpn client openvpn_client1 surelink actions 0)> override_interval int (config vpn openvpn client openvpn_client1 surelink actions 0)>

• reset_modem: This recovery action is available for WWAN interfaces only.

If reset_modem is selected, complete the following:

 Set the number of failures for this recovery action to perform, before moving to the next recovery action:

(config vpn openvpn client openvpn_client1 surelink actions 0)> test_failures int (config vpn openvpn client openvpn_client1 surelink actions 0)>

The default is 3.

 Set the time to wait before the next test is run. If set to the default value of 0s, the test interval is used.

(config vpn openvpn client openvpn_client1 surelink actions 0)> override_interval int (config vpn openvpn client openvpn_client1 surelink actions 0)>

 switch_sim: Switches to an alternate SIM. This recovery action is available for WWAN interfaces only.

If **switch** sim is selected, complete the following:

 Set the number of failures for this recovery action to perform, before moving to the next recovery action:

(config vpn openvpn client openvpn_client1 surelink actions 0)> test_failures *int* (config vpn openvpn client openvpn_client1 surelink actions 0)>

The default is 3.

 Set the time to wait before the next test is run. If set to the default value of 0s, the test interval is used.

(config vpn openvpn client openvpn_client1 surelink actions 0)> override_interval int (config vpn openvpn client openvpn_client1 surelink actions 0)>

modem_power_cycle: This recovery action is available for WWAN interfaces only.
If modem power cycle is selected, complete the following:

 Set the number of failures for this recovery action to perform, before moving to the next recovery action:

(config vpn openvpn client openvpn_client1 surelink actions 0)> test_failures int (config vpn openvpn client openvpn_client1 surelink actions 0)>

The default is 3.

 Set the time to wait before the next test is run. If set to the default value of 0s, the test interval is used.

(config vpn openvpn client openvpn_client1 surelink actions 0)> override_interval int (config vpn openvpn client openvpn_client1 surelink actions 0)>

reboot device.

If **reboot device** is selected, complete the following:

 Set the number of failures for this recovery action to perform, before moving to the next recovery action:

(config vpn openvpn client openvpn_client1 surelink actions 0)> test_failures *int* (config vpn openvpn client openvpn_client1 surelink actions 0)>

The default is 3.

 Set the time to wait before the next test is run. If set to the default value of 0s, the test interval is used.

(config vpn openvpn client openvpn_client1 surelink actions 0)> override_interval int (config vpn openvpn client openvpn_client1 surelink actions 0)>

custom_action: Execute custom recovery commands.

If **custom** action is selected, complete the following:

 Set the number of failures for this recovery action to perform, before moving to the next recovery action:

(config vpn openvpn client openvpn_client1 surelink actions 0)> test_failures *int* (config vpn openvpn client openvpn_client1 surelink actions 0)>

The default is 3.

Set the commands to run to attempt to recovery connectivity.

(config network interface my_wan surelink actions 0)> custom_action_commands_ modem "string" (config network interface my_wan surelink actions 0)>

 Set the time to wait before the next test is run. If set to the default value of 0s, the test interval is used.

(config vpn openvpn client openvpn_client1 surelink actions 0)> override_interval int (config vpn openvpn client openvpn_client1 surelink actions 0)>

- g. Repeat for each additional recovery action.
- Optional SureLink configuration parameters:
 - a. Type ... to return to the root of the configuration:

(config vpn openvpn client openvpn_client1 surelink actions 0)> ... (config)>

b. Set the test interval between connectivity tests:

(config)> vpn openvpn client openvpn_client1 surelink interval *value* (config)>

where *value* is any number of weeks, days, hours, minutes, or seconds, and takes the format *number*{w|d|h|m|s}.

For example, to set interval to ten minutes, enter either 10m or 600s:

(config)> vpn openvpn client openvpn_client1 surelink interval 600s (config)>

The default is 15m.

c. If more than one test target is configured, set the success condition:

(config)> vpn openvpn client openvpn_client1 surelink success_condition *value* (config)>

where value is either:

- one: Only one test needs to pass for Surelink to consider an interface to be up.
- all: All tests need to pass for SureLink to consider the interface to be up.
- d. Set the number of times that the test must pass after failure, before the interface is determined to be working and is reinstated.

(config)> vpn openvpn client openvpn_client1 surelink pass_threshold int (config)>

The default is 1.

e. Set the amount of time that the device should wait for a response to a test attempt before considering it to have failed:

(config)> vpn openvpn client openvpn_client1 surelink timeout *value* (config)>

where *value* is any number of weeks, days, hours, minutes, or seconds, and takes the format *number*{w|d|h|m|s}.

For example, to set timeout to ten minutes, enter either 10m or 600s:

(config)> vpn openvpn client openvpn_client1 surelink timeout 600s (config)>

The default is 15s.

f. Set the amount of time to wait while the device is starting before SureLink testing begins. This setting is bypassed when the interface is determined to be up.

(config)> vpn openvpn client openvpn_client1 surelink advanced delayed_start *value* (config)>

where *value* is any number of weeks, days, hours, minutes, or seconds, and takes the format *number*{w|d|h|m|s}.

For example, to set **delayed_start** to ten minutes, enter either **10m** or **600s**:

(config)> vpn openvpn client openvpn_client1 surelink advanced delayed_start 600s (config)>

The default is 300s.

g. Set the time to add to the test interval when restarting the list of actions. This option is capped at 15 minutes.

(config)> vpn openvpn client openvpn_client1 surelink advanced backoff_interval *value* (config)>

where *value* is any number of weeks, days, hours, minutes, or seconds, and takes the format *number*{w|d|h|m|s}.

For example, to set **backoff_interval** to ten minutes, enter either **10m** or **600s**:

(config)> vpn openvpn client openvpn_client1 surelink advanced backoff_interval 600s (config)>

The default is 300 seconds.

h. The interface_gateway parameter is used by the Interface gateway Ping test as the endpoint for traceroute to use to determine the interface gateway. The default is 8.8.8.8, and should only be changed if this IP address is not accessible due to networking issues. To set to an alternate host:

(config)> vpn openvpn client openvpn_client1 surelink advanced interface_gateway hostname/IP_address (config)>

8. Save the configuration and apply the change.

```
(config vpn openvpn client openvpn_client1 connection_monitor target 0)> save
Configuration saved.
```

9. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an Access selection **menu**. Type **quit** to disconnect from the device.

See Show SureLink status and statistics for information about showing Surelink status for OpenVPN clients.

Show OpenVPN server status and statistics

You can view status and statistics for OpenVPN servers from either the web interface or the command line:



Log into the IX20 WebUI as a user with full Admin access rights.

- 1. On the menu, select Status > OpenVPN > Servers.
 - The **OpenVPN Servers** page appears.
- To view configuration details about an OpenVPN server, click the ★ (configuration) icon in the upper right of the OpenVPN server's status pane.

Command line

- 1. Select the device in Remote Manager and click Actions > Open Console, or log into the IX20 local command line as a user with full Admin access rights.
 - Depending on your device configuration, you may be presented with an Access selection menu. Type admin to access the Admin CLI.
- 2. To display details about all configured OpenVPN servers, type the following at the prompt:

```
> show openvpn server all
               Enable Type Zone IP Address
    Server
                                                 Port
    OpenVPN_server1 true tun internal 192.168.30.1/24 1194
    OpenVPN_server2 false tun internal 192.168.40.1/24 1194
3. To display details about a specific server:
```

> show openvpn server name OpenVPN_server1

Server : OpenVPN_server1 Enable : true Type : tun

Zone : internal

IP Address : 192.168.30.1/24

 Port
 : 1194

 Use File
 : true

 Metric
 : 0

 Protocol
 : udp

 First IP
 : 80

 Last IP
 : 99

>

4. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Show OpenVPN client status and statistics

You can view status and statistics for OpenVPN clients from either web interface or the command line:



Log into the IX20 WebUI as a user with full Admin access rights.

1. On the menu, select Status > OpenVPN > Clients.

The OpenVPN Clients page appears.

 To view configuration details about an OpenVPN client, click the ★ (configuration) icon in the upper right of the OpenVPN client's status pane.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. To display details about all configured OpenVPN clients, type the following at the prompt:

Client : OpenVPN_client1

Enable : true
Status : up
Username : user1

IP address : 123.122.121.120 Remote : 120.121.122.123

MTU: 1492 Zone: internal

IP Address : 192.168.30.1/24

Port : 1194
Use File : true
Metric : 0
Protocol : udp
Port : 1194
Type : tun

>

4. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Generic Routing Encapsulation (GRE)

Generic Routing Encapsulation (GRE) is an IP packet encapsulation protocol that allow for networks and routes to be advertized from one network device to another. You can use GRE to encapsulate a wide variety of network layer protocols inside virtual point-to-point links over an IP network.

Configuring a GRE tunnel

Configuring a GRE tunnel involves the following items:

Required configuration items

- A GRE loopback endpoint interface.
- GRE tunnel configuration:
 - Enable the GRE tunnel.

The GRE tunnels are enabled by default.

- · The local endpoint interface.
- The IP address of the remote device/peer.

Additional configuration items

- A GRE key.
- Enable the device to respond to keepalive packets.

Task One: Create a GRE loopback endpoint interface



- Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

- 3. Click Network > Interfaces.
- For Add Interface, type a name for the GRE loopback endpoint interface and click ^γ/₂
- 5. **Enable** the interface.

New interfaces are enabled by default. To disable, toggle off **Enable**.

- 6. For Interface type, select Ethernet.
- 7. For **Zone**, select **Internal**.
- 8. For Device, select Ethernet: Loopback.
- 9. Click to expand IPv4.
- For Address, enter the IP address and subnet mask of the local GRE endpoint, for example 10.10.1.1/24.
- 11. Click **Apply** to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

> config (config)>

3. Add the GRE endpoint interface. For example, to add an interface named gre_endpoint:

(config)> add network interface gre_interface (config network interface gre_interface)>

4. Set the interface zone to internal:

(config network interface gre_interface)> zone internal (config network interface gre_interface)>

5. Set the interface device to loopback:

(config network interface gre_interface)> device /network/device/loopback (config network interface gre_interface)>

6. Set the IP address and subnet mask of the local GRE endpoint. For example, to set the local GRE endpoint's IP address and subnet mask to 10.10.1.1/24:

(config network interface gre_interface)> ipv4 address 10.10.1.1/24 (config network interface gre_interface)>

7. Save the configuration and apply the change.

(config network interface gre_interface)> save Configuration saved.

8. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Task Two: Configure the GRE tunnel



- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

- 3. Click VPN > IP Tunnels.
- 4. For Add IP tunnel, type a name for the GRE tunnel and click 1/2
- 5. Enable the tunnel.

New tunnels are enabled by default. To disable, toggle off **Enable**.

- 6. For Mode, select one of the following options:
 - GRE: Standard GRE point-to-point protocol.
 - mGRE: multipoint GRE protocol.
 - **GRETAP**: Ethernet over GRE.
- 7. For **Local endpoint**, select the GRE endpoint interface created in Task One.

- 8. If **GRE** is selected for the **Mode**, for **Remote endpoint**, type the IP address of the GRE endpoint on the remote peer.
- 9. If **GRETAP** is selected for **Mode**, for **Local endpoint**, select the interface.
- (Optional) For Key, enter a key that will be inserted in GRE packets created by this tunnel. It
 must match the key set by the remote endpoint. Allowed value is an integer between 0 and
 4294967295, or an IP address.
- (Optional) Enable keepalive reply to enable the device to reply to Osco GRE keepalive packets.
- 12. (Optional) **Enable open routing** to enable packets destined for an address which is not explicitly in the routing table to exit the IP tunnel.
- 13. Click Apply to save the configuration and apply the change.

Command line

- 1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.
 - Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
- 2. At the command line, type **config** to enter configuration mode:

```
> config (config)>
```

3. Add the GRE endpoint tunnel. For example, to add a tunnel named gre_example:

```
(config)> add vpn iptunnel gre_example (config vpn iptunnel gre_example)>
```

GRE tunnels are enabled by default. To disable:

```
(config vpn iptunnel gre_example)> enable false (config vpn iptunnel gre_example)>
```

4. Set the mode:

```
(config vpn iptunnel gre_example)> type value (config vpn iptunnel gre_example)>
```

where value is either:

- gre: Standard GRE point-to-point protocol.
- mgre: multipoint GRE protocol.
- **GRETAP**: Ethernet over GRE
- 5. Set the local endpoint to the GRE endpoint interface created in Task One, for example:

(config vpn iptunnel gre_example)> local /network/interface/gre_endpoint (config vpn iptunnel gre_example)>

6. If type is set to gre, set the IP address of the GRE endpoint on the remote peer:

```
(config vpn iptunnel gre_example)> remote ip_address (config vpn iptunnel gre_example)>
```

7. (Optional) Set a key that will be inserted in GRE packets created by this tunnel.

The key must match the key set by the remote endpoint.

```
(config vpn iptunnel gre_example)> key value (config vpn iptunnel gre_example)>
```

where value is an integer between 0 and 4294967295, or an IP address.

8. (Optional) Enable the device to reply to Cisco GRE keepalive packets:

```
(config vpn iptunnel gre_example)> keepalive true (config vpn iptunnel gre_example)>
```

9. (Optional) Enable the device to allow packets destined for an address which is not explicitly in the routing table to exit the IP tunnel:

```
(config vpn iptunnel gre_example)> open_routing true (config vpn iptunnel gre_example)>
```

10. Save the configuration and apply the change.

```
(config vpn iptunnel gre_example)> save Configuration saved.
```

11. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Show GRE tunnels

To view information about currently configured GRE tunnels:



Log into the IX20 WebUI as a user with full Admin access rights.

- On the menu, click Status > IP tunnels.
 The IP Tunnelspage appears.
- 2. To view configuration details about a GRE tunnel, click the * (configuration) icon in the upper right of the tunnel's status pane.

Example: GRE tunnel over an IPSec tunnel

The IX20 device can be configured as an advertised set of routes through an IPSec tunnel. This allows you to leverage the dynamic route advertisement of GRE tunnels through a secured IPSec tunnel.

The example configuration provides instructions for configuring the IX20 device with a GRE tunnel through IPsec.



IX20-1 configuration tasks

- 1. Create an IPsec tunnel named ipsec_gre1 with:
 - A pre-shared key.
 - Remote endpoint set to the public IP address of the IX20-2 device.
 - A policy with:
 - Local network set to the IP address and subnet of the local GRE tunnel, 172,30.0.1/32.
 - Remote network set to the IP address and subnet of the remote GRE tunnel, 172.30.0.2/32.
- 2. Create an IPsec endpoint interface named ipsec endpoint1:
 - Zone set to Internal.
 - b. Device set to Ethernet: Loopback.
 - c. IPv4 Address set to the IP address of the local GRE tunnel, 172.30.0.1/32.
- 3. Create a GRE tunnel named gre_tunnel1:
 - a. Local endpoint set to the IPsec endpoint interface, Interface: ipsec_endpoint1.
 - b. Remote endpoint set to the IP address of the GRE tunnel on IX20-2, 172.30.0.2.
- 4. Create an interface named **gre_interface1** and add it to the GRE tunnel:
 - a. Zone set to Internal.
 - b. Device set to IP tunnel: gre_tunnel1.
 - c. IPv4 Address set to a virtual IP address on the GRE tunnel, 172.31.0.1/30.

IX20-2 configuration tasks

- 1. Create an IPsec tunnel named **ipsec_gre2** with:
 - The same pre-shared key as the **ipsec_gre1** tunnel on IX20-1.
 - Remote endpoint set to the public IP address of IX20-1.
 - A policy with:
 - Local network set to the IP address and subnet of the local GRE tunnel, 172.30.0.2/32.
 - Remote network set to the IP address of the remote GRE tunnel, 172.30.0.1/32.

- 2. Create an IPsec endpoint interface named ipsec_endpoint2:
 - a. Zone set to Internal.
 - b. Device set to Ethernet: Loopback.
 - c. IPv4 Address set to the IP address of the local GRE tunnel, 172.30.0.2/32.
- 3. Create a GRE tunnel named gre_tunnel2:
 - a. Local endpoint set to the IPsec endpoint interface, Interface: ipsec_endpoint2.
 - b. Remote endpoint set to the IP address of the GRE tunnel on IX20-1, 172.30.0.1.
- 4. Create an interface named gre_interface2 and add it to the GRE tunnel:
 - a. Zone set to Internal.
 - b. Device set to IP tunnel: gre_tunnel2.
 - c. IPv4 Address set to a virtual IP address on the GRE tunnel, 172.31.0.2/30.

Configuration procedures

Configure the IX20-1 device Task one: Create an IPsec tunnel



- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:


a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

- 3. Click VPN > IPsec > Tunnels.
- 4. For Add IPsec Tunnel, type ipsec_gre1 and click %

- 5. Click to expand Authentication.
- 6. For Pre-shared key, type testkey.

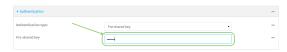

- 7. Click to expand Remote endpoint.
- 8. For Hostname, type public IP address of the IX20-2 device.



- 9. Click to expand Policies.
- 10. For **Add Policy**, click Yoto add a new policy.



- 11. Click to expand Local network.
- 12. For **Type**, select **Custom network**.
- For Address, type the IP address and subnet of the local GRE tunnel, 172.30.0.1/32.
- 14. For Remote network, type the IP address and subnet of the remote GRE tunnel, 172.30.0.2/32.



15. Click Apply to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

> config (config)>

3. Add an IPsec tunnel named **ipsec_gre1**:

(config)> add vpn ipsec tunnel ipsec_gre1 (config vpn ipsec tunnel ipsec_gre1)>

4. Set the pre-shared key to testkey:

(config vpn ipsec tunnel ipsec_gre1)> auth secret testkey (config vpn ipsec tunnel ipsec_gre1)>

5. Set the remote endpoint to public IP address of the IX20-2 device:

(config vpn ipsec tunnel ipsec_gre1)> remote hostname 192.168.101.1 (config vpn ipsec tunnel ipsec_gre1)>

6. Add a policy:

(config vpn ipsec tunnel ipsec_gre1)> add policy end (config vpn ipsec tunnel ipsec_gre1 policy 0)>

7. Set the local network policy type to **custom**:

(config vpn ipsec tunnel ipsec_gre1 policy 0)> local type custom (config vpn ipsec tunnel ipsec_gre1 policy 0)>

8. Set the local network address to the IP address and subnet of the local GRE tunnel, 172.30.0.1/32:

(config vpn ipsec tunnel ipsec_gre1 policy 0)> local custom 172.30.0.1/32 (config vpn ipsec tunnel ipsec_gre1 policy 0)>

9. Set the remote network address to the IP address and subnet of the remote GRE tunnel, 172.30.0.2/32:

(config vpn ipsec tunnel ipsec_gre1 policy 0)> remote network 172.30.0.2/32 (config vpn ipsec tunnel ipsec_gre1 policy 0)>

Save the configuration and apply the change.

(config ipsec tunnel ipsec_gre1 policy 0)> save Configuration saved.

Task two: Create an IPsec endpoint interface



- 1. Click Network > Interface.
- 2. For Add Interface, type ipsec_endpoint1 and click 1/20

| Notice | N

- 3. For **Zone**, select **Internal**.
- 4. For Device, select Ethernet: loopback.



- 5. Click to expand IPv4.
- 6. For Address, type the IP address of the local GRE tunnel, 172.30.0.1/32.



7. Click Apply to save the configuration and apply the change.

Command line

1. At the command line, type **config** to enter configuration mode:

> config (config)>

2. Add an interface named ipsec_endpoint1:

(config)> add network interface ipsec_endpoint1 (config network interface ipsec_endpoint1)>

3. Set the zone to internal:

(config network interface ipsec_endpoint1)> zone internal (config network interface ipsec_endpoint1)>

4. Set the device to /network/device/loopback:

(config network interface ipsec_endpoint1)> device /network/device/loopback (config network interface ipsec_endpoint1)>

5. Set the IPv4 address to the IP address of the local GRE tunnel, 172.30.0.1/32:

(config network interface ipsec_endpoint1)> ipv4 address 172.30.0.1/32 (config network interface ipsec_endpoint1)>

6. Save the configuration and apply the change.

(config vpn ipsec tunnel ipsec_endpoint1 policy 0)> save Configuration saved.

Task three: Create a GRE tunnel



- 1. Click VPN > IP Tunnels.
- 2. For **Add IP Tunnel**, type **gre_tunnel1** and click %



- For Local endpoint, select the IPsec endpoint interface created in Task two (Interface: ipsec_endpoint1).
- 4. For Remote endpoint, type the IP address of the GRE tunnel on IX20-2, 172.30.0.2.



5. Click **Apply** to save the configuration and apply the change.

Command line

1. At the command line, type **config** to enter configuration mode:

> config (config)>

Add a GRE tunnel named gre_tunnel1:

(config)> add vpn iptunnel gre_tunnel1 (config vpn iptunnel gre_tunnel1)>

3. Set the local endpoint to the IPsec endpoint interface created in Task two (/network/interface/ipsec_endpoint1):

(config vpn iptunnel gre_tunnel1)> local /network/interface/ipsec_endpoint1 (config vpn iptunnel gre_tunnel1)>

4. Set the remote endpoint to the IP address of the GRE tunnel on IX20-2, 172.30.0.2:

(config vpn iptunnel gre_tunnel1)> remote 172.30.0.2 (config vpn iptunnel gre_tunnel1)>


5. Save the configuration and apply the change.

(config vpn iptunnel gre_tunnel1)> save Configuration saved.

Task four: Create an interface for the GRE tunnel device




- 1. Click Network > Interfaces.
- 2. For **Add Interface**, type **gre_interface1** and click $\frac{1}{2}$

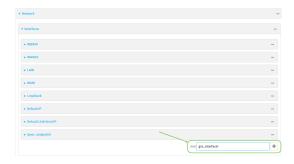

- 3. For **Zone**, select **Internal**.
- 4. For **Device**, select the GRE tunnel created in Task three (IP tunnel: gre_tunnel1).



- 5. Click to expand IPv4.
- 6. For Address, type 172.31.0.1/30 for a virtual IP address on the GRE tunnel.

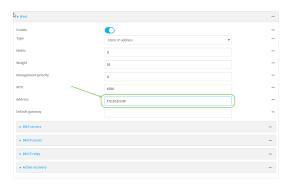

7. Click **Apply** to save the configuration and apply the change.

Command line

1. At the command line, type config to enter configuration mode:

> config (config)>

2. Add an interface named gre_interface1:

(config)> add network interface gre_interface1 (config network interface gre_interface1)>

3. Set the zone to internal:

(config network interface gre_interface1)> zone internal (config network interface gre_interface1)>

4. Set the device to the GRE tunnel created in Task three (/vpn/iptunnel/gre_tunnel1):

(config network interface gre_interface1)> device /vpn/iptunnel/gre_tunnel1 (config network interface gre_interface1)>

5. Set 172.31.0.1/30 as the virtual IP address on the GRE tunnel:

(config network interface gre_interface1)> ipv4 address 172.31.0.1/30 (config network interface gre_interface1)>

6. Save the configuration and apply the change.

(config network interface gre_interface1)> save Configuration saved.

.

7. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configure the IX20-2 device Task one: Create an IPsec tunnel



- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

- 3. Click VPN > IPsec > Tunnels.
- 4. For Add IPsec Tunnel, type ipsec_gre2 and click %



- 5. Click to expand Authentication.
- 6. For **Pre-shared key**, type the same pre-shared key that was configured for the IX20-1 (testkey).



- 7. Click to expand Remote endpoint.
- 8. For Hostname, type public IP address of the IX20-1 device.



- 9. Click to expand Policies.
- 10. For **Add Policy**, click Yoto add a new policy.



- 11. Click to expand Local network.
- 12. For Type, select Custom network.
- 13. For Address, type the IP address and subnet of the local GRE tunnel, 172.30.0.2/32.
- 14. For Remote network, type the IP address and subnet of the remote GRE tunnel, 172.30.0.1/32.



15. Click **Apply** to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

> config (config)>

3. Add an IPsec tunnel named ipsec_gre2:

(config)> add vpn ipsec tunnel ipsec_gre2 (config vpn ipsec tunnel ipsec_gre2)>

4. Set the pre-shared key to the same pre-shared key that was configured for the IX20-1 (testkey):

(config vpn ipsec tunnel ipsec_gre2)> auth secret testkey (config vpn ipsec tunnel ipsec_gre2)>

5. Set the remote endpoint to public IP address of the IX20-1 device:

(config vpn ipsec tunnel ipsec_gre2)> remote hostname 192.168.100.1 (config vpn ipsec tunnel ipsec_gre2)>

6. Add a policy:

(config vpn ipsec tunnel ipsec_gre2)> add policy end (config vpn ipsec tunnel ipsec_gre2 policy 0)>

7. Set the local network policy type to custom:

(config vpn ipsec tunnel ipsec_gre2 policy 0)> local type custom (config vpn ipsec tunnel ipsec_gre2 policy 0)>

8. Set the local network address to the IP address and subnet of the local GRE tunnel, 172.30.0.2/32:

(config vpn ipsec tunnel ipsec_gre2 policy 0)> local custom 172.30.0.2/32 (config vpn ipsec tunnel ipsec_gre2 policy 0)>

9. Set the remote network address to the IP address and subnet of the remote GRE tunnel, 172.30.0.1/32:

(config vpn ipsec tunnel ipsec_gre2 policy 0)> remote network 172.30.0.1/32 (config vpn ipsec tunnel ipsec_gre2 policy 0)>

Save the configuration and apply the change.

(config vpn ipsec tunnel ipsec_gre2 policy 0)> save Configuration saved.

Task two: Create an IPsec endpoint interface



- 1. Click Network > Interfaces.
- 2. For **Add Interface**, type **ipsec_endpoint2** and click 1/5



- 3. For **Zone**, select **Internal**.
- 4. For **Device**, select **Ethernet: loopback**.



- 5. Click to expand IPv4.
- 6. For Address, type the IP address of the local GRE tunnel, 172.30.0.2/32.



7. Click **Apply** to save the configuration and apply the change.

Command line

1. At the command line, type **config** to enter configuration mode:

> config (config)>

2. Add an interface named ipsec_endpoint2:

(config)> add network interface ipsec_endpoint2 (config network interface ipsec_endpoint2)>

3. Set the zone to internal:

(config network interface ipsec_endpoint2)> zone internal (config network interface ipsec_endpoint2)>

4. Set the device to /network/device/loopback:

(config network interface ipsec_endpoint2)> device /network/device/loopback (config network interface ipsec_endpoint2)>

5. Set the IPv4 address to the IP address of the local GRE tunnel, 172.30.0.2/32:

(config network interface ipsec_endpoint2)> ipv4 address 172.30.0.2/32 (config network interface ipsec_endpoint2)>

6. Save the configuration and apply the change.

(config vpn ipsec tunnel ipsec_endpoint2)> save Configuration saved.

Task three: Create a GRE tunnel



- 1. Click VPN > IP Tunnels.
- 2. For **Add IP Tunnel**, type **gre_tunnel2** and click ^γ₂ο



- For Local endpoint, select the IPsec endpoint interface created in Task two (Interface: ipsec_endpoint2).
- 4. For Remote endpoint, type the IP address of the GRE tunnel on IX20-1, 172.30.0.1.



5. Click **Apply** to save the configuration and apply the change.

Command line

1. At the command line, type **config** to enter configuration mode:

> config (config)>

2. Add a GRE tunnel named gre_tunnel2:

(config)> add vpn iptunnel gre_tunnel2
(config vpn iptunnel gre_tunnel2)>

3. Set the local endpoint to the IPsec endpoint interface created in Task two (/network/interface/ipsec_endpoint2):

(config vpn iptunnel gre_tunnel2)> local /network/interface/ipsec_endpoint2 (config vpn iptunnel gre_tunnel2)>

4. Set the remote endpoint to the IP address of the GRE tunnel on IX20-1, 172.30.0.1:

(config vpn iptunnel gre_tunnel2)> remote 172.30.0.1 (config vpn iptunnel gre_tunnel2)>

5. Save the configuration and apply the change.

(config vpn iptunnel gre_tunnel2)> save Configuration saved.

Task four: Create an interface for the GRE tunnel device



- 1. Click Network > Interfaces.
- 2. For **Add Interface**, type **gre_interface2** and click %



- 3. For **Zone**, select **Internal**.
- 4. For **Device**, select the GRE tunnel created in Task three (IP tunnel: gre_tunnel2).



5. Click to expand IPv4.

Totalde

Type

Static P address

Weight

Worght

TO

Management priority

Address

Default gateway

FORS servers

FORS revery

FORS revery

FORS revery

FACILIE processy

6. For Address, type 172.31.0.2/30 for a virtual IP address on the GRE tunnel.

7. Click **Apply** to save the configuration and apply the change.

Command line

1. At the command line, type **config** to enter configuration mode:

> config (config)>

2. Add an interface named gre_interface2:

(config)> add network interface gre_interface2 (config network interface gre_interface2)>

3. Set the zone to **internal**:

(config network interface gre_interface2)> zone internal (config network interface gre_interface2)>

4. Set the device to the GRE tunnel created in Task three (/vpn/iptunnel/gre_tunnel2):

(config network interface gre_interface2)> device /vpn/iptunnel/gre_tunnel2 (config network interface gre_interface2)>

5. Set 172.31.0.2/30 as the virtual IP address on the GRE tunnel:

(config network interface gre_interface2)> ipv4 address 172.31.0.2/30 (config network interface gre_interface2)>

6. Save the configuration and apply the change.

(config network interface gre_interface2)> save Configuration saved.

7. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Dynamic Multipoint VPN (DMVPN)

Dynamic Multipoint Virtual Private Network (DMVPN) is a dynamic tunneling form of a virtual private network (VPN), using a multi spoke-to-hub network in which the network addresses of the spoke routers do not need to be known, and therefore do not need to be configured in the hub router.

One advantage to this form of VPN is a scalable network in which the size of the hub configuration is minimized. When one spoke of the network needs to send traffic to another spoke, a direct transfer is possible without having to add any load onto the hub. This is achieved by the creation of a dynamic GRE tunnel directly to the other spoke. The network address of the target spoke is resolved with the use of Next Hop Resolution Protocol (NHRP).

This section contains the following topics:

Configure a DMVPN spoke	6	31	3
-------------------------	---	----	---

Configure a DMVPN spoke

To configure a DMVPN spoke:



- Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The Configuration window is displayed.

- 3. Create an IP tunnel.
 - a. Click VPN > IP Tunnels.
 - b. In **Add IP tunnel**, type the name of the tunnel and click %




- c. For Mode, select mGRE.
- d. For Local endpoint, select the interface that will serve as the local endpoint of the tunnel.
- e. For **Key**, type a four-octet value that matches the key on the remote endpoint.



- f. (Optional) Enable keep-alive reply to enable the device to reply to Osco GRE keep-alive packets.
- g. (Optional) **Enable open routing** to enable packets destined for an address which is not explicitly in the routing table to exit the IP tunnel.
- 4. Assign an IP address to the IP tunnel:
 - a. Click Network > Interfaces.
 - b. For **Add Interface**, type a name for the interface and click %




- c. For Zone, select Internal.
- d. For **Device**, select the IP tunnel created above.
- e. Click to expand IPv4.
- f. For **Address**, type the IP address and netmask of the tunnel. The netmask must be set to /32.

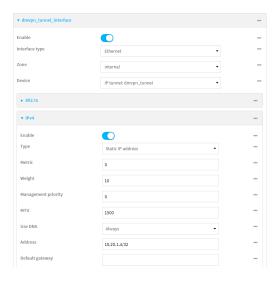


- 5. Configure NHRP:
 - a. Click Network > Routing Services.
 - b. Enable routing services.
 - c. Click to expand NHRP.
 - d. Enable NHRP.
 - e. Click to expand Network.

f. Click Yoto add a network.

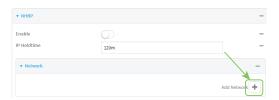


- g. For Interface, select the interface created above.
- h. For Tunnel, select the IP tunnel created above.
- i. Click to expand Next hop servers.
- j. Click Yoto add a server.
- k. For **NBMA** address, type the hostname or IP address of the node that will be the next hop server.

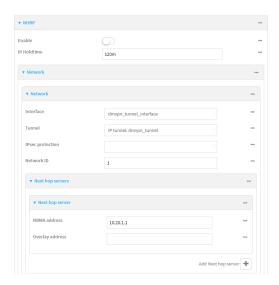

- 6. To enable redirection of packets between spokes, configure OSPF routing:
 - a. Click Network > Routes > Routing services > OSPF.
 - b. Enable OSPF.
 - c. For **ABR behavior**, choose the Area Border Router for the network.
 - d. For **Reference bandwidth**, type the link bandwidth.
 - e. Enable the Opaque-LSA standard.
 - f. Enable the RFC1583 standard.
- 7. Configure the overlay connection:
 - a. Click Network > Routing services > BGP.
 - b. Enable BGP.
 - c. For AS number, type the autonomous system number for this device.
 - d. For Best path criteria, select Multipath.
 - e. Click to expand Neighbours.
 - f. Click %to add a neighbour.

- g. For IP address, type the IP address of the hub.
- h. Click to toggle on eBGP multihop.

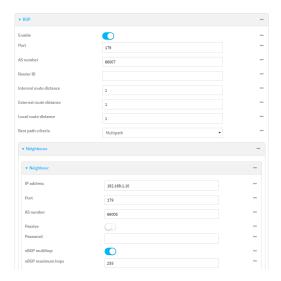

- 8. Repeat to add additional spokes.
- 9. Click Apply to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

> config (config)>

- 3. Create an IP tunnel.
 - a. Add an IP tunnel. For example, to add a tunnel named dmvpn_tunnel:

(config)> add vpn iptunnel dmvpn_tunnel
(config vpn iptunnel dmvpn_tunnel)>

b. Set the type to multipoint:

(config vpn iptunnel dmvpn_tunnel)> type multipoint (config vpn iptunnel dmvpn_tunnel)>

- c. Set the local interface:
 - i. Use the ?to determine available interfaces:

(config vpn iptunnel dmvpn_tunnel)> local?

Interface: The network interface.

Format:

/network/interface/setupip

/network/interface/setuplinklocalip

/network/interface/eth1

/network/interface/eth2

/network/interface/loopback

Current value:

(config vpn iptunnel dmvpn_tunnel)> local

ii. Set the interface. For example:

(config vpn iptunnel dmvpn_tunnel)> local /network/interface/eth1 (config vpn iptunnel dmvpn_tunnel)>

d. Set the key to a four-octet value that matches the key on the remote endpoint. For example:

(config vpn iptunnel dmvpn_tunnel)> key 1.1.1.1 (config vpn iptunnel dmvpn_tunnel)>

e. (Optional) Enable the device to reply to Cisco GRE keepalive packets:

(config vpn iptunnel dmvpn_tunnel)> keepalive true (config vpn iptunnel dmvpn_tunnel)>

f. (Optional) Enable the device to allow packets destined for an address which is not explicitly in the routing table to exit the IP tunnel:

(config vpn iptunnel dmvpn_tunnel)> open_routing true (config vpn iptunnel dmvpn_tunnel)>

- 4. Assign an IP address to the IP tunnel:
 - a. Type ... to return to the top level of the configuration schema:

(config vpn iptunnel dmvpn_tunnel)> ... (config)>

 And a network interface. For example, to add an interface named dmvpn_tunnel_ interface:

(config)> add network interface dmvpn_tunnel_interface (config network interface dmvpn_tunnel_interface)>

c. Set the zone to internal:

(config network interface dmvpn_tunnel_interface)> zone internal (config network interface dmvpn_tunnel_interface)>

d. Set the device to the IP tunnel created above:

(config network interface dmvpn_tunnel_interface)> device /vpn/iptunnel/dmvpn_tunnel (config network interface dmvpn_tunnel_interface)>

e. Set the IP address and netmask of the tunnel. The netmask must be set to /32. For example, to set the IP address to 10.20.1.4/32:

(config network interface dmvpn_tunnel_interface)> ipv4 address 10.20.1.4/32 (config network interface dmvpn_tunnel_interface)>

5. Configure NHRP:

a. Type ... to return to the top level of the configuration schema:

(config network interface dmvpn_tunnel_interface)> ... (config)>

b. Enable routing services:

(config)> network route service enable true (config)>

c. Enable NHRP:

(config)> network route service nhrp enable true (config)>

d. Add an NHRP network:

(config)> add network route service nhrp network end (config network route service nhrp network 0)>

e. Set the interface to the interface that was created above:

(config network route service nhrp network 0)> interface dmvpn_tunnel_interface (config network route service nhrp network 0)>

f. Set the tunnel to the IP tunnel created above:

(config network route service nhrp network 0)> tunnel /vpn/iptunnel/dmvpn_tunnel (config network route service nhrp network 0)> $\frac{1}{2}$

g. Add a net hop server:

(config network route service nhrp network 0)> add nhs end (config network route service nhrp network 0 nhs 0)>-

Set the hostname or IP address of the node that will be the next hop server:

(config network route service nhrp network 0 nhs 0)> nbma hostname/IP_address (config network route service nhrp network 0 nhs 0)>

7. Configure OSPF routing:

(config network route service ospf) (config)>

8. Configure the overlay connection using BGP:

a. Type ... to return to the top level of the configuration schema:

(config network interface dmvpn_tunnel_interface)> ... (config)>

b. Enable BGP:

(config)> network route service bgp enable true (config)>

c. Set the autonomous system number for this device. For example, to set the autonomous system number to 66007:

(config)> network route service bgp asn 66007 (config)>

d. Set the best path criteria to multipath:

(config)> network route service bgp as_path multipath-relax (config)>

e. Add a neighbour:

(config)> add network route service bgp neighbour end (config network route service bgp neighbour 0)>

f. Set **ip** to the IP address of the hub. For example:

(config network route service bgp neighbour 0)> ip 10.20.1.1 (config network route service bgp neighbour 0)>

g. Enable eBGP multihop:

(config network route service bgp neighbour 0)> ebgp_multihop true (config network route service bgp neighbour 0)>

- 9. Repeat to add additional spokes.
- 10. Save the configuration and apply the change.

(config)> save
Configuration saved.

11. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

L2TP

Your IX20 device supports PPP-over-L2TP (Layer 2 Tunneling Protocol).

Configure a PPP-over-L2TP tunnel

Your IX20 device supports PPP-over-L2TP (Layer 2 Tunneling Protocol). The tunnel endpoints are known as L2TP Access Concentrators (LAC) and L2TP Network Servers (LNS). Each endpoint terminates the PPP session.

Required configuration items

- For L2TP access concentrators:
 - The hostname or IP address of the L2TP network server.
 - The firewall zone for the tunnel.
- For L2TP network servers:
 - The IP address of the L2TP access concentrator.
 - The local IP address assigned to the L2TP virtual network interface.
 - The IP address assigned to the remote peer.
 - The firewall zone for the tunnel.

Additional configuration items

- The UDP port that L2TP servers will listen on, if other than the deafult of 1701.
- Access control for the L2TP tunnel.
- For L2TP access concentrators:
 - L2TP network server port.
 - The username and password of the L2TP server.
 - The metric for the tunnel.
 - Enable custom PPP configuration options for the tunnel.
 - Whether to override the default configuration and only use the custom options.
 - o Optional configuration data in the format of a pppd options file.
- For L2TP network servers:
 - The Authentication method.
 - The metric for the tunnel.
 - Enable custom PPP configuration options for the tunnel.
 - Whether to override the default configuration and only use the custom options.
 - o Optional configuration data in the format of a pppd options file.



- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.

- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

- 3. Click **VPN > L2TP**.
- 4. (Optional) Type the **UDP listening port** that L2TP servers will listen on, if other than the default of **1701**.
- 5. Set the access control for L2TP tunnels:
 - To limit access to specified IPv4 addresses and networks:
 - a. Click IPv4 Addresses.
 - b. For Add Address, click Yo
 - c. For Address, enter the IPv4 address or network that can access the device's service-type. Allowed values are:
 - · A single IP address or host name.
 - A network designation in CIDR notation, for example, 192.168.1.0/24.
 - any: No limit to IPv4 addresses that can access the service-type.
 - d. Click Ybagain to list additional IP addresses or networks.
 - To limit access to specified IPv6 addresses and networks:
 - a. Click IPv6 Addresses.
 - b. For Add Address, click Yo
 - c. For **Address**, enter the IPv6 address or network that can access the device's service-type. Allowed values are:
 - A single IP address or host name.
 - A network designation in CIDR notation, for example, 2001:db8::/48.
 - any: No limit to IPv6 addresses that can access the service-type.
 - d. Click Ybagain to list additional IP addresses or networks.
 - To limit access to hosts connected through a specified interface on the device:
 - a. Click Interfaces.
 - b. For **Add Interface**, click %
 - c. For **Interface**, select the appropriate interface from the dropdown.
 - d. Click % again to allow access through additional interfaces.
 - To limit access based on firewall zones:
 - a. Click Zones. By default, there are three firewall zones already configured: Internal, Edge, and IPsec.
 - b. For **Add Zone**, click **1**/₂o

- c. For **Zone**, select the appropriate firewall zone from the dropdown. See Firewall configuration for information about firewall zones.
- d. Click Ybagain to allow access through additional firewall zones.
- 6. To add an L2TP access concentrator:
 - a. Click to expand L2TP access concentrators.
 - b. For **Add L2TP access concentrator**, type a name for the LAC and click 1/2
 - c. LACs are enabled by default. To disable, toggle off **Enable**.
 - d. For L2TP network server, type the hostname or IP address of the L2TP network server.
 - e. (Optional) Type the L2TP network server port to use to connect to the server, if other than the default of 1701.
 - f. (Optional) Type the **Username** to use to log into the server.
 - g. (Optional) Type the **Password** to use to log into the server.
 - h. (Optional) Type the **Metric** for the tunnel, if other than the default of 1.
 - Select a firewall **Zone** for the tunnel. This is used by packet filtering rules and access control lists to restrict network traffic on the tunnel.
 - j. (Optional): Custom PPP configuration:
 - i. Enable custom PPP configuration.
 - Enable Override if the custom configuration should override the default configuration and only use the custom options.
 - iii. For **Configuration file**, paste or type the configuration data in the format of a pppd options file.
- 7. To add an L2TP network server:
 - a. Click to expand L2TP network servers.
 - b. For **Add L2TP network server**, type a name for the LNS and click 1/20
 - c. LNSs are enabled by default. To disable, toggle off **Enable**.
 - d. For **L2TP** access concentrator, type the IP addressof the L2TP access concentrator that this server will allow connections from. This can also be:
 - A range of IP addresses, using the format x.x.x.x-y.y.y, for example 192.168.188.1-192.168.188.254.
 - The keyword any, which means that the server will accept connections from any IP address.
 - e. For Local IP address, type the IP address of the L2TP virtual network interface.
 - f. For Remote IP address, type the IP address to assign to the remote peer.
 - g. (Optional) For Authentication method, select one of the following:
 - None: No authentication is required.
 - Automatic: The device will attempt to connect using CHAP first, and then PAP.
 - CHAP: Uses the Challenge Handshake Authentication Profile (CHAP) to authenticate.
 - PAP: Uses the Password Authentication Profile (PAP) to authenticate.

If **Automatic**, **CHAP**, or **PAP** is selected, enter the **Username** and **Password** required to authenticate.

The default is None.

- h. (Optional) For Authentication method, select the authentication method, one of:
 - None: No authentication is required.
 - Automatic: The device will attempt to connect using CHAP first, and then PAP.
 - CHAP: Uses the Challenge Handshake Authentication Profile (CHAP) to authenticate.
 - PAP: Uses the Password Authentication Profile (PAP) to authenticate.
 - MS-CHAPv2: Uses the Microsoft version of the Challenge Handshake Authentication Profile (CHAP) to authenticate.
 - If Automatic, CHAP, PAP, or MS-CHAPv2 is selected, enter the Username and Password required to authenticate.
 - The default is None.
- i. (Optional) Type the **Metric** for the tunnel, if other than the default of 1.
- j. Select a firewall **Zone** for the tunnel. This is used by packet filtering rules and access control lists to restrict network traffic on the tunnel.
- k. (Optional): Custom PPP configuration:
 - i. Enable custom PPP configuration.
 - Enable Override if the custom configuration should override the default configuration and only use the custom options.
 - iii. For **Configuration file**, paste or type the configuration data in the format of a pppd options file.
- 8. Click **Apply** to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

> config (config)>

3. (Optional) Set the UDP listening port that L2TP servers will listen on:

(config)> vpn l2tp port *value* (config)>

where *value* is an integer between 1 and 65535. The default is 1701.

- 4. Set the access control for L2TP tunnels:
 - To limit access to specified IPv4 addresses and networks:

(config)> add vpn l2tp acl address end *value* (config)>

Where value can be:

- · A single IP address or host name.
- A network designation in CIDR notation, for example, 192.168.1.0/24.
- any: No limit to IPv4 addresses that can access the service-type.

Repeat this step to list additional IP addresses or networks.

To limit access to specified IPv6 addresses and networks:

```
(config)> add vpn l2tp acl address6 end value (config)>
```

Where value can be:

- A single IP address or host name.
- A network designation in CIDR notation, for example, 2001:db8::/48.
- any: No limit to IPv6 addresses that can access the service-type.

Repeat this step to list additional IP addresses or networks.

To limit access to hosts connected through a specified interface on the IX20 device:

```
(config)> add vpn l2tp acl interface end value (config)>
```

Where value is an interface defined on your device.

Display a list of available interfaces:

Use ... network interface ?to display interface information:

```
(config)> ... network interface ?
```

Interfaces

Additional Configuration

setupip Setup IP

setuplinklocalip Setup Link-local IP

eth1 ETH1 eth2 ETH2

loopback Loopback modem Modem

(config)>

Repeat this step to list additional interfaces.

To limit access based on firewall zones:

```
(config)> add vpn l2tp acl zone end value (config)>
```

Where value is a firewall zone defined on your device, or the **any** keyword.

Display a list of available firewall zones:

Type ... firewall zone ?at the config prompt:

(config)> ... firewall zone?

Zones: A list of groups of network interfaces that can be referred to by packet filtering rules and access control lists.

Additional Configuration

any

dynamic_routes

edge

external

hotspot

internal

ipsec

loopback

setup

(config)>

Repeat this step to include additional firewall zones.

- 5. To add an L2TP access concentrator:
 - a. Add an LAC:

(config)> add vpn l2tp lac *name* (config add vpn l2tp lac *name*)>

where name is the name of the LAC. For example, to add an LAC named lac_tunnel:

(config)> add vpn I2tp lac lac_tunnel (config vpn I2tp lac lac_tunnel)>

LACs are enabled by default. To disable:

(config vpn |2tp |ac |ac_tunnel)> enable false (config vpn |2tp |ac |ac_tunnel)>

b. Set the hostname or IP address of the L2TP network server:

(config vpn l2tp lac lac_tunnel)> lns hostname (config vpn l2tp lac lac_tunnel)>

c. (Optional) Set the UDP port to use to connect to the L2TP network server:

(config vpn l2tp lac lac_tunnel)> port int (config vpn l2tp lac lac_tunnel)>

where int is an integer between 1 and 65535. The default is 1701.

d. (Optional) Set the username to use to log into the server:

```
(config vpn l2tp lac lac_tunnel)> username username (config vpn l2tp lac lac_tunnel)>
```

e. (Optional) Set the password to use to log into the server:

```
(config vpn |2tp |ac |ac_tunnel)> password password (config vpn |2tp |ac |ac_tunnel)>
```

f. (Optional) Set the metric for the tunnel:

```
(config vpn l2tp lac lac_tunnel)> metric int (config vpn l2tp lac lac_tunnel)>
```

where int is an integer between 0 and 65535. The default is 1.

- g. Set the firewall zone for the tunnel. This is used by packet filtering rules and access control lists to restrict network traffic on the tunnel.
 - i. Use the ?to determine available zones:

```
(config vpn l2tp lac lac_tunnel)> zone?
```

Zone: The firewall zone assigned to this tunnel. This can be used by packet filtering rules and access control lists to restrict network traffic on this tunnel.

Format:

any

dynamic_routes

edge

external

hotspot

internal

ipsec

loopback

setup

Current value:

(config vpn I2tp lac lac_tunnel)>

ii. Set the zone:

```
(config vpn l2tp lac lac_tunnel)> zone zone (config vpn l2tp lac lac_tunnel)>
```

- h. (Optional): Custom PPP configuration:
 - i. Enable custom PPP configuration:

```
(config vpn l2tp lac lac_tunnel)> custom enable true (config vpn l2tp lac lac_tunnel)>
```

ii. Enable overriding, if the custom configuration should override the default configuration and only use the custom options:

```
(config vpn l2tp lac lac_tunnel)> custom override true (config vpn l2tp lac lac_tunnel)>
```

iii. Paste or type the configuration data in the format of a pppd options file:

```
(config vpn l2tp lac lac_tunnel)> custom config_file data (config vpn l2tp lac lac_tunnel)>
```

- 6. To add an L2TP network server:
 - a. Add an LNS:

```
(config)> add vpn l2tp lns name (config add vpn l2tp lac name)>
```

where name is the name of the LNS. For example, to add an LNS named Ins_server:

```
(config)> add vpn I2tp Ins Ins_server
(config vpn I2tp Ins Ins_server)>
```

LACs are enabled by default. To disable:

```
(config vpn l2tp lns lns_server)> enable false (config vpn l2tp lns lns_server)>
```

 Set the IP address of the L2TP access concentrator that this server will allow connections from:

```
(config vpn l2tp lns lns_server)> lac IP_address (config vpn l2tp lns lns_server)>
```

This can also be:

- A range of IP addresses, using the format x.x.x.x-y.y.y.y, for example 192.168.188.1-192.168.188.254.
- The keyword any, which means that the server will accept connections from any IP address.
- c. Set the IP address of the L2TP virtual network interface:

```
(config vpn l2tp lns lns_server)> local_address IP_address (config vpn l2tp lns lns_server)>
```

d. Set the IP address to assign to the remote peer:

```
(config vpn l2tp lns lns_server)> remote_address IP_address (config vpn l2tp lns lns_server)>
```

e. (Optional) Set the authentication method:

```
(config vpn l2tp lns lns_server)> auth method (config)>
```

where method is one of the following:

- none: No authentication is required.
- auto: The device will attempt to connect using CHAP first, and then PAP.
- chap: Uses the Challenge Handshake Authentication Profile (CHAP) to authenticate.
- pap: Uses the Password Authentication Profile (PAP) to authenticate.
- mschapv2: Uses the Microsoft version of the Challenge Handshake Authentication Profile (CHAP) to authenticate.

If **auto**, **chap**, **pap** or **mschapv2** is selected, enter the **Username** and **Password** required to authenticate:

```
(config vpn l2tp lns lns_server)> username username (config vpn l2tp lns lns_server)> password password (config vpn l2tp lns lns_server)>
```

The default is none.

f. (Optional) Set the metric for the tunnel:

```
(config vpn l2tp lns lns_server)> metric int (config vpn l2tp lns lns_server)>
```

where int is an integer between 0 and 65535. The default is 1.

- g. Set the firewall zone for the tunnel. This is used by packet filtering rules and access control lists to restrict network traffic on the tunnel.
 - i. Use the ?to determine available zones:

(config vpn I2tp Ins Ins_server)> zone ?

```
Zone: The firewall zone assigned to this tunnel. This can be used by packet filtering rules and access control lists to restrict network traffic on this
```

tunnel. Format:

any

dynamic_routes

edge

external

hotspot

internal

ipsec

loopback

setup

Current value:

(config vpn l2tp lns lns_server)>

ii. Set the zone:

(config vpn I2tp Ins Ins_server)> zone zone (config vpn I2tp Ins Ins_server)>

- h. (Optional): Custom PPP configuration:
 - i. Enable custom PPP configuration:

(config vpn I2tp lac lns lns_server)> custom enable true (config vpn I2tp Ins Ins_server)>

ii. Enable overriding, if the custom configuration should override the default configuration and only use the custom options:

(config vpn I2tp Ins Ins_server)> custom override true (config vpn I2tp Ins Ins_server)>

iii. Paste or type the configuration data in the format of a pppd options file:

(config vpn I2tp Ins Ins_server)> custom config_file data (config vpn I2tp Ins Ins_server)>

7. Save the configuration and apply the change.

(config)> save Configuration saved.

8. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an Access selection menu. Type quit to disconnect from the device.

L2TP with IPsec

L2TP is commonly used in conjunction with IPsec in transport mode (to provide security).

Your IX20 supports L2TP with IPsec by configuring a transport-mode IPsec tunnel between the two endpoints, and then an L2TP tunnel with its LNS and LAC configured the same as the IPsec tunnel's endpoints. See Configure an IPsec tunnel for information about configuring an IPsec tunnel.

Note The IX20 does not currently support the configuration of IPsec protocol/port traffic selectors. This means that you cannot restrict traffic on the IPsec tunnel to L2TP traffic (typically UDP port 1701).

While multiple L2TP clients are supported on the IX20 by configuring a separate LNS for each client, multiple clients behind a Network Address Translation (NAT) device are not supported, because they will all appear to have the same IP address.

Show L2TP tunnel status



Show the status of L2TP access connectors from the WebUI

Log into the IX20 WebUI as a user with full Admin access rights.

- On the menu, select Status. Under VPN, select L2TP > Access Connectors.
 The L2TP Access Connectors page appears.
- To view configuration details about an L2TP access connector, click the ★ (configuration) icon in the upper right of the tunnel's status pane.

Show the status of L2TP network servers from the WebUl

Log into the IX20 WebUI as a user with full Admin access rights.

- On the menu, select Status. Under VPN, select L2TP > Network Servers.
 The L2TP Network Servers page appears.
- 2. To view configuration details about an L2TP network server, click the ★ (configuration) icon in the upper right of the tunnel's status pane.

Command line

Show the status of L2TP access connectors from the Admin CLI

- 1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.
 - Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
- To display details about all configured L2TP access connectors, type the following at the prompt:

```
> show I2tp lac

Name Enabled Status Device
--------
lac_test1 true up test_device0
lac_test2 true pending
>
```

3. To display details about a specific tunnel:

```
> show I2tp lac name lac_test2

lac_test2 L2TP Access Concentrator Status
------
Enabled : true
Status : pending
>
```

4. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Show the status of L2TP network servers from the Admin CLI

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

To display details about all configured L2TP access connectors, type the following at the prompt:

3. To display details about a specific tunnel:

```
> show I2tp Ins name Ins_test2

Ins_test2 L2TP Access Concentrator Status
-----
Enabled : true
Status : pending
```

4. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

L2TPv3 Ethernet

Your IX20 device supports Layer 2 Tunneling Protocol Version 3 (L2TPv3) static unmanaged Ethernet tunnels.

Configure an L2TPv3 tunnel

Your IX20 device supports Layer 2 Tunneling Protocol Version 3 (L2TPv3) static unmanaged Ethernet tunnels.

Required configuration items

- A name for the L2TPv3 tunnel.
- Enable the tunnel.
- The remote endpoint IP address.
- The local endpoint IP address.

- The session ID.
- The peer session ID.

Additional configuration items

- Encapsulation type. If UDP is selected:
 - The ID for the tunnel.
 - The ID of the peer's tunnel.
 - Determine whether to enable UDP checksum.
- The session cookie.
- The peer session cookie.
- The Layer2SpecificHeader type.
- The Sequence numbering control.



- Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- a. Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The Configuration window is displayed.

- 3. Click VPN > L2TPv3 ethernet.
- 4. For Add L2TPv3 ethernet tunnel, type a name for the tunnel and click %
- 5. For **Remote endpoint**, type the IPv4 address of the remote endpoint.
- 6. For **Local endpoint**, select the interface that will be the local endpoint.
- 7. For **Tunnel ID**, type the tunnel identifier for this tunnel. This must match the value for **Peer tunnel ID** on the remote peer. Allowed value is any integer between 1 and 4294967295.
- 8. For **Peer tunnel ID**, type the **Tunnel ID** of the remote peer.

- 9. (Optional) For **Encapsulation type**, select either **UDP** or **IP**. If **UDP** is selected:
 - a. For **UDP** source port, type the number of the source UDP port to be used for the tunnel.
 - b. For **UDP destination port**, type the number of the destination UDP port to be used for the tunnel.
 - c. (Optional) Click to enable UDP checksum to calculate and check the UDP checksum.
- 10. Click to expand Sessions.
 - a. For Add Sesssion, type a name for a session carried by the parent tunnel and click 1/20
 - For Session ID, type the session identifier for this session. This must match the value for Peer session ID on the remote peer. Allowed value is any integer between 1 and 4294967295.
 - c. For **Peer session ID**, type the **Session ID** of the remote peer.
 - d. (Optional) For **Cookie**, type the cookie value to be assigned to the session. Allowed value is 8 or 16 hex digits.
 - e. (Optional) For Peer cookie, type the Cookie value of the remote peer.
 - f. For **Layer2SpecificHeader type**, select the Layer2Specific header type. This must match what is configured on the remote peer.
 - g. For **Sequence numbering control**, determine the sequence number control to prevent or detect out of order packets. Allowed values are:
 - None: No sequence numbering.
 - Send: Add a sequence number to each outgoing packet.
 - Receive: Reorder packets if they are received out of order.
 - **Both**: Add a sequence number to each outgoing packet, and reorder packets if they are received out of order.

The default is None.

- h. Repeat for additional sessions.
- 11. Click **Apply** to save the configuration and apply the change.

Command line

Select the device in Remote Manager and click Actions > Open Console, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

> config (config)>

3. Add a L2TPv3 Ethernet tunnel. For example, to add a tunnel named L2TPv3_example:

(config)> add vpn l2tpv3 L2TPv3_example (config vpn l2tpeth L2TPv3_example)>

The tunnel is enabled by default. To disable:

(config vpn l2tpeth L2TPv3_example)> enable false (config vpn l2tpeth L2TPv3_example)>

4. Set the IPv4 address of the remote endpoint:

(config vpn l2tpeth L2TPv3_example)> remote *IP_address* (config vpn l2tpeth L2TPv3_example)>

- 5. Set the interface of the local endpoint:
 - i. Use the ?to determine available interfaces:

(config vpn l2tpeth L2TPv3_example)> local?

Local endpoint: The local network interface to connect to peer device.

Format:

/network/interface/setupip

/network/interface/setuplinklocalip

/network/interface/eth1

/network/interface/eth2

/network/interface/loopback

Current value:

(config vpn I2tpeth L2TPv3_example)> local

ii. Set the interface. For example:

(config vpn l2tpeth L2TPv3_example)> local /network/interface/eth1 (config vpn l2tpeth L2TPv3_example)>

Set the tunnel identifier for this tunnel. This must match the value for peer tunnel ID on the remote peer.

(config vpn |2tpeth L2TPv3_example)> tunnel_id *value* (config vpn |2tpeth L2TPv3_example)>

where value is any integer between 1 and 4294967295.

7. Set the tunnel ID of the remote peer:

(config vpn I2tpeth L2TPv3_example)> peer_tunnel_id *value* (config vpn I2tpeth L2TPv3_example)>

where value is any integer between 1 and 4294967295.

8. (Optional) Set the encapsulation type:

(config vpn l2tpeth L2TPv3_example)> encapsulation *value* (config vpn l2tpeth L2TPv3_example)>

where value is either udp or ip. The default is upd.

If udp is set:

a. Set the source UDP port to be used for the tunnel:

(config vpn l2tpeth L2TPv3_example)> udp_source_port port (config vpn l2tpeth L2TPv3_example)>

b. Set the destination UDP port to be used for the tunnel.

(config vpn l2tpeth L2TPv3_example)> udp_destination_port port (config vpn l2tpeth L2TPv3_example)>

c. (Optional) To calculate and check the UDP checksum:

(config vpn l2tpeth L2TPv3_example)> udp_checksum true (config vpn l2tpeth L2TPv3_example)>

9. Add a session carried by the parent tunnel:

(config vpn |2tpeth L2TPv3_example)> add session session_example (config vpn |2tpeth L2TPv3_example session_example)>

Set the session identifier for this session. This must match the value for peer session ID on the remote peer.

(config vpn l2tpeth L2TPv3_example session_example)> session_id *value* (config vpn l2tpeth L2TPv3_example session_example)>

where value is any integer between 1 and 4294967295.

11. Set the session ID of the remote peer:

(config vpn l2tpeth L2TPv3_example session_example)> peer_session_id *value* (config vpn l2tpeth L2TPv3_example session_example)>

where value is any integer between 1 and 4294967295.

12. (Optional) Set the cookie value to be assigned to the session.

(config vpn l2tpeth L2TPv3_example session_example)> cookie *value* (config vpn l2tpeth L2TPv3_example session_example)>

Allowed value is 8 or 16 hex digits.

13. (Optional) Set the cookie value of the remote peer:

(config vpn l2tpeth L2TPv3_example session_example)> peer cookie *value* (config vpn l2tpeth L2TPv3_example session_example)>

Allowed value is 8 or 16 hex digits.

Set the Layer2Specific header type. This must match what is configured on the remote peer.

(config vpn l2tpeth L2TPv3_example session_example)> l2spec_type value (config vpn l2tpeth L2TPv3_example session_example)>

where value is either none or default. The default is default.

15. Set the sequence number control to prevent or detect out of order packets.

```
(config vpn l2tpeth L2TPv3_example session_example)> seq value (config vpn l2tpeth L2TPv3_example session_example)>
```

where value is one of:

- **none**: No sequence numbering.
- send: Add a sequence number to each outgoing packet.
- recv: Reorder packets if they are received out of order.
- both: Add a sequence number to each outgoing packet, and reorder packets if they are received out of order.

The default is none.

16. Save the configuration and apply the change.

```
(config)> save
Configuration saved.
>
```

17. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Show L2TPV3 tunnel status



Log into the IX20 WebUI as a user with full Admin access rights.

1. On the menu, select Status. Under VPN, select L2TPv3 Ethernet.

The L2TPv3 Ethernet page appears.

2. To view configuration details about an L2TPV3 tunnel, click the ★ (configuration) icon in the upper right of the tunnel's status pane.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

To display details about all configured L2TPv3 Ethernet tunnels, type the following at the prompt:

```
> show I2tpeth

Tunnel Session Enabled Device Status
-----test/session/test true le_test_test up
```

>

3. To display details about a specific tunnel:

> show I2tpeth name /vpn/I2tpeth/test/session/test

test/session/test Tunnel Session Status

Enabled : true Status : up

Local IP : 4.3.2.1

Remote IP : 10.10.10.1

Tunnel ID : modem

Peer Tunnel ID : 10.10.10.1 === 4.3.2.1

Session ID : 255
Peer Session ID : 1476
Lifetime (Actual) : 600

 Device
 : le_test_test

 RX Packets
 : 2,102

 RX Bytes
 : 462

 TX Packets
 : 2,787

 TX Byptes
 : 3,120

>

4. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

MACsec

MACsec (Media Access Control Security) is a 802.1ae (Layer2) VPN protocol that can be used to create a secure MACsec tunnel over a wired Ethernet LAN. The MACsec uses keys to provide multiple authentications between hosts in a network.

A MACsec tunnel must be tied to a physical interface. You cannot create a MACsec tunnel for a bridge.

Security modes

Two security modes are available for a MACsec tunnel.

- Automatic: Uses a pre-shared key to generate association key information, which is periodically rotated through using 802.1x.
- Manual: Uses connectivity association key information that is manually entered in the CAK and CKN fields.

Configure a MACsec tunnel

Your IX20 device supports MACsec (Layer 2 Tunneling Protocol).

Required configuration items

- The local network device to connect to the peer device.
- When using **Manual** mode, the connectivity association key and key name.

₹ Web

- Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

- 3. Click VPN > MACsec.
- 4. For Add MACsec tunnel, click %
- 5. Click Enable.
- For Local endpoint, select the local network device you want to use to connect to the peer device.
- 7. For **Security mode**, select your desired mode.
 - Automatic: Uses a pre-shared key to generate association key information, which is periodically rotated through using 802.1x.
 - Manual: Uses connectivity association key information that is manually entered in the CAK and CKN fields.
- 8. If you selected Manual, additional required fields display.
 - a. For CAK, enter the connectivity associated key. The key format is 16 hex digits.
 - b. For **CKN**, enter the connectivity associated key name. The key format is 32 hex digits.
- 9. Click Apply to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

> config (config)>

Name the tunnel. At the config prompt, type:

(config)> add vpn macsec *name* (config)>

where name is a string.

4. Enable the tunnel:

(config vpn macsec tunnel1) enable true (config vpn macsec tunnel1)>

5. Specify the local endpoint:

(config vpn macsec tunnel1) local *value* (config vpn macsec tunnel1)>

where value is one of the available options.

6. Specify the security mode:

(config vpn macsec tunnel1) type value (config vpn macsec tunnel1)>

where value is one of the following:

- automatic: Uses a pre-shared key to generate association key information, which is periodically rotated through using 802.1x.
- manual: Uses connectivity association key information that is manually entered.
- If you specified the manual security mode, enter the connectivity association key and key name.
 - a. Specify the connectivity association key:

(config vpn macsec tunnel1) association cak *value* (config vpn macsec tunnel1)>

where value is the association key. The key format is 16 hex digits.

b. Specify the connectivity association key name:

(config vpn macsec tunnel1) association ckn *value* (config vpn macsec tunnel1)>

where value is the association key name. The key format is 32 hex digits.

8. Save the configuration and apply the change.

```
(config)> save
Configuration saved.
>
```


9. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

NEMO

Network Mobility (NEMO) is a mobile networking technology that provides access to one or more Local Area Networks (LANs) on your device. NEMO creates a tunnel between the home agent on the mobile private network and the IX20 device, isolating the connection from internet traffic and advertising the IP subnets of the LANs for remote access and device management.

Dynamic Mobile Network Routing (DMNR) is the implementation of NEMO for Verizon Wireless Private Networks. DMNR support requires the use of Verizon SIM cards that have DMNR enabled.

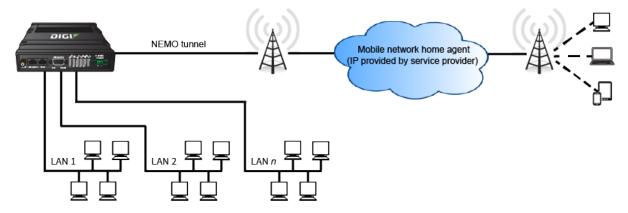

Configure a NEWO tunnel

Configuring an NEMO tunnel with a remote device involves configuring the following items:

Required configuration items

- Enable the NEMO tunnel.
 - The NEMO tunnel is enabled by default.
- The IP address of the NEMO virtual network interface.
- The firewall zone of the NEMO tunnel.
- The IP address of the NEMO home agent server. This is provided by your cellular carrier.
- The home agent's authentication key. This is provided by your cellular carrier.
- Home agent registration lifetime. This is provided by your cellular carrier.
- The local network interfaces that will be advertised on NEMO.

Additional configuration items

- The home agent Software Parameter Index (SPI).
- Path MTU discovery.

Path MTU discovery is enabled by default. If it is disabled, identify the MTU.

- Care of address: the local network interface that is used to communicate with the peer.
 - If set to Interface, identify the local interface to be used. Generally, this will be the Wirelesss WAN (Modem).
 - · If set to IP address, enter the IP address.
- The local network of the GRE endpoint negotiated by NEMO.
 - If the local network is set to Interface, identify the local interface to be used.

₹ Web

- Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

3. Click VPN > NEMO.

The NEMO tunnel is enabled by default. To disable, toggle off **Enable**.

- 4. For Home IP address, type the IPv4 address of the NEMO virtual network interface.
- 5. For **Zone**, select **Internal**.

The Internal firewall zone configures the IX20 device to trust traffic going to the tunnel and allows it through the network.

- 6. For **Home agent server IP** address, type the IPv4 address of the NEMO home agent. This is provided by your cellular carrier.
- 7. For **Key**, type the key used to authenticate to the home agent. This is provided by your cellular carrier.

- 8. For **Home agent SPI**, type the Security Parameter Index (SPI) value, which is used in the authentication extension when registering. This should be normally left at the default setting of **256** unless your service provider indicates a different value.
- 9. For **Home agent registration lifetime, in seconds**, type the number of seconds number of seconds until the authorization key expires. This is provided by your cellular carrier.
- 10. For MTU discovery, leave enabled to determine the maximum transmission unit (MTU) size. If disabled, for MTU, type the MTU size. The default MTU size for LANs on the IX20 device is 1500. The MTU size of the NEMO tunnel will be smaller, to take into account the required headers.
- Click to expand Care of address to configure the local WAN interface of the internet facing network.
 - a. For **Type**, select the method to determine the local network interface that is used to communicate with the peer.
 - If Default route is selected, the network interface that is used will be the same as the default route.
 - If Interface is selected, specify the local network interface.
 - If IP address is selected, type the IP address.

The default is **Default route**.

- 12. Click to expand **GRE tunnel local endpoint**.
 - a. For **Type**, select the local endpoint of the GRE endpoint negotiated by NEMO.
 - If Default route is selected, the network interface that is used will be the same as the default route.
 - If Interface is selected, specify the local network interface.

The default is **Default route**.

- 13. Click to expand Local networks.
 - a. For **Add Interface**, click Yoto add a local network to use as a virtual NEMO network interface.



- b. For **Interface**, select the local interface to use as a virtual NEMO network interface. Generally, this will be the a Local Area Network (LAN).
- c. (Optional) Repeat for additional interfaces.
- 14. Click Apply to save the configuration and apply the change.

Command line

Select the device in Remote Manager and click Actions > Open Console, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type config to enter configuration mode:

> config (config)>

3. Add a NEMO tunnel. For example, to add a NEMO tunnel named nemo_example:

(config)> add vpn nemo nemo_example
(config vpn nemo nemo_example)>

The NEMO tunnel is enabled by default. To disable:

(config vpn nemo nemo_example)> enable false (config vpn nemo nemo_example)>

4. Set the IPv4 address of the NEMO virtual network interface:

(config vpn nemo nemo_example)> home_address *IPv4_address* (config vpn nemo nemo_example)>

5. Set the IPv4 address of the NEMO home agent. This is provided by your cellular carrier.

(config vpn nemo nemo_example)> home_agent *IPv4_address* (config vpn nemo nemo_example)>

6. Set the key used to authenticate to the home agent. This is provided by your cellular carrier.

(config vpn nemo nemo_example)> key value (config vpn nemo nemo_example)>

7. Set the the number of seconds number of seconds until the authorization key expires. This is provided by your cellular carrier.

(config vpn nemo nemo_example)> lifetime integer (config vpn nemo nemo_example)>

Allowed values are any integer between 1 and 65535.

8. MTU discovery is enabled by default, which allows the device to determine the maximum transmission unit (MTU) size. To disable:

(config vpn nemo nemo_example)> mtu_discovery false (config vpn nemo nemo_example)>

If disabled, set the MTU size. The default MTU size for LANs on the IX20 device is 1500. The MTU size of the NEMO tunnel will be smaller, to take into account the required headers.

(config vpn nemo nemo_example)> mtu *integer* (config vpn nemo nemo_example)>

Allowed values are any integer between 68 and 1476.

Set the Security Parameter Index (SPI) value, which is used in the authentication extension
when registering. This should be normally left at the default setting of 256 unless your service
provider indicates a different value.

```
(config vpn nemo nemo_example)> spi integer (config vpn nemo nemo_example)>
```

Allowed values are any integer between 256 and 4294967295.

10. Set the firewall zone for the NEMO tunnel to internal:

```
(config vpn nemo nemo_example)> zone internal (config vpn nemo nemo_example)>
```

The Internal firewall zone configures the IX20 device to trust traffic going to the tunnel and allows it through the network.

- 11. Configure the Care-of-Address, the local WAN interface of the internet facing network.
 - Set the method to determine the Care-of-Address:

```
(config vpn nemo nemo_example)> coaddress type value (config vpn nemo nemo_example)>
```

where value is one of:

- **defaultroute**: Uses the same network interface as the default route.
- interface

If **interface** is used, set the interface:

i. Use the ?to determine available interfaces:

```
(config vpn nemo nemo_example)> coaddress interface?
```

Interface: Use the IP address of this network interface as this node's Care-of-Address.

Format:

setupip

setuplinklocalip

eth1

eth2

loopback

Current value:

(config vpn nemo nemo_example)> coaddress interface

ii. Set the interface. For example:

```
(config vpn nemo nemo_example)> coaddress interface eth1 (config vpn nemo nemo_example)>
```

■ ip

If ip is used, set the IP address:

(config vpn nemo nemo_example)> coaddress address *IP_address* (config vpn nemo nemo_example)>

The default is defaultroute.

- 12. Set the GRE tunnel local endpoint:
 - a. Set the method to determine the GRE tunnel local endpoint:

```
(config vpn nemo nemo_example)> tun_local type value (config vpn nemo nemo_example)>
```

where value is one of:

- defaultroute: Uses the same network interface as the default route.
- interface

If interface is used, set the interface.

i. Use the ?to determine available interfaces:

```
(config vpn nemo nemo_example)> tun_local interface ?
```

Interface: The network interface to use to communicate with the peer. Set this field to blank if using the default route.

Format:

setupip

setuplinklocalip

eth1

eth2

loopback

Current value:

(config vpn nemo nemo_example)> tun_local interface

ii. Set the interface. For example:

```
(config vpn nemo nemo_example)> tun_local interface eth1 (config vpn nemo nemo_example)>
```

The default is defaultroute.

- 13. Configure one or more local networks to use as a virtual NEMO network interface. Generally, this will be a Local Area Network (LAN):
 - a. Add a local network to use as a virtual NEMO network interface:

```
(config vpn nemo nemo_example)> add network end eth2 (config vpn nemo nemo_example)>
```

- b. (Optional) Repeat for additional interfaces.
- 14. Save the configuration and apply the change.

```
(config)> save
Configuration saved.
>
```

15. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Show NEMO status



Log into the IX20 WebUI as a user with full Admin access rights.

1. On the menu, select **Status > NEMO**.

The **NEMO** page appears.

 To view configuration details about an NEMO tunnel, click the ★ (configuration) icon in the upper right of the tunnel's status pane.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. To display details about all configured NEMO tunnels, type the following at the prompt:

```
> show nemo

NEMO Enable Status Address Agent CoAddress
---- ----- demo false
test true up 1.2.3.4 4.3.2.1 10.10.10.1
```

3. To display details about a specific tunnel:

```
> show nemo name test
```

test NEMO Status

Enabled : true Status : up

Home Agent : 4.3.2.1 Care of Address : 10.10.10.1

Interface : modem

GRE Tunnel : 10.10.10.1 === 4.3.2.1

Metric : 255 MTU : 1476 Lifetime (Actual) : 600

Local Network Subnet Status

lan1 192.168.2.1/24 Advertized LAN2 192.168.3.1/24 Advertized

>

4. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

WireGuard VPN

WireGuard is a VPN1 is a protocol that operates at the network layer to provide communication between devices over a public network. It encrypts and encapsulates traffic to protect information. WireGuard supports full networking capabilities including standard, policy-based, and static routes, as well as firewalls. In addition to having IPs inside the tunnel, like IPSec and OpenVPN, you can use this WireGuard tunnel for policy-based routing: send only certain traffic through the tunnel or use it for static routes to send routing and networking through regardless of the source IP. You can also have multiple tunnels.

There are two modes available when configuring a WireGuard VPN:

- Client mode: Configure the IX20 device to act as a client, so it establishes an outbound WireGuard VPN tunnel to a remote server.
- Server mode: Configure the IX20 device to act as a server, so one or more remote devices can establish an inbound WireGuard VPN tunnel to the device.

Configure the WireGuard VPN

Your IX20 device supports using WireGuard VPN. You can configure the device for either client or server mode. For client mode, your IX20 is establishing an outbound WireGuard VPN connection to the WireGuard server. For server mode, your IX20 is acting as a WireGuard server and accepts incoming WireGuard VPN connections from one or more client devices. Regardless of how you configure the device, you will need to to create a Wireguard tunnel and corresponding interface.

Before you begin

Decide whether you want your device to establish an outbound WreQuard VPN connection or if you want it to act as a WreQuard server. Each mode requires different information.

For client mode

You need the following information from the WireGuard server:

- Private key
- Remote endpoint

For server mode

You need the following information:

Client public key

Note This key can come from the client device or you can generate it from the Digi device's Admin CLI console using the wireguard generate [tunnel_name] [client_name] command after configuring the Wireguard server settings on the Digi device.

1virtual private network

address or
hostname

- Remote endpoint port
- Remote endpoint public key
- Preshared key (optional)
- Local and remote IP addresses

- Pre-shared key (optional)
- Local and remote IP addresses

₹ Web

- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

- 1. To create a WireGuard tunnel, navigate to VPN > WireGuard > WireGuard tunnel.
- 2. Click % to add a new WireGuard tunnel.
- 3. Type a name for the tunnel.
- 4. Click OK

The settings for your new tunnel appear.

Tunnel setting	UI configuration	
Enable	The new tunnel is enabled by default. It can be disabled if the tunnel is being set up for future use or if you want to stop the tunnel while testing other configuration changes.	
Peers	 a. Click Ybto add a new peer. If this IX20 is the WireGuard client, then only add one peer. The peer is the remote Wireguard server to which it connects. If this IX20 is the WireGuard server, add one or more peers. The peer(s) are the remote WireGuard clients that will connect to this device. b. Configure the settings for the new peer (s). If the new peer is to act as the WireGuard server, make sure to configure the following settings: [Remote] Public key [Remote] Pre-shared key (optional) [Remote] Endpoint address added here is sent to this peer. [Remote] Endpoint port If the new peer is to act as a remote WireGuard client, make sure to configure the following settings: [Client] Public key [Client] Pre-shared key (optional) [Local and Remote] Allowed addresses 	

Tunnel setting	UI configuration
Device managed private key	Enable to allow the IX20 to generate its own public and private keys. If this setting is enabled, it triggers the IX20 to automatically generate a private key and corresponding public key. This private and public key is used to establish the encrypted communication between the client and peer via the Wreguard tunnel. To see the public key, navigate to Status > VPN > WireGuard .
Private key	Type the private key for the Wireguard tunnel, if the Device managed private key setting is disabled.
Endpoint port	The WireGuard connection value of 51820 is populated by default.

- 5. Modify the settings.
- 6. To create the WireGuard interface, navigate to **Network > Interfaces > Interface**.
- 7. Click Yoto add a new interface.
- 8. Type a name for the interface.
- 9. Click **OK**
- 10. The settings for your new interface appear.

Tunnel setting	UI configuration	
Enable	The new interface is enabled by default. It can be disabled if it is being set up for future use or if you want to stop using the interface while testing other configuration changes.	
Zone	Select External.	
Device	Select the device the interface will use, which is the new WireGuard tunnel you created.	
IPv4	 a. Click IPv4 to expand the settings menu. b. For Address, type the IP address and netmask assigned to this interface (SYNTAX: IPv4_address/netmask). For example, 10.200.200.1/24. 	
	c. Click to expand DNS servers .	
	d. Click Yo to add a new DNS server.	
	e. For DNS Server, type the IP address of the DNS server (SYNTAX: IPv4_address). For example, 10.200.200.1.	

11. Click Apply to save the new configuration settings.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Save the configuration and apply the change.

```
(config vpn iptunnel gre_example)> save Configuration saved.
```

4. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

5. At the command line, type **VPN** to enter configuration mode for VPN:

```
> config vpn
(config vpn)>
```

6. Type wireguard to enter configuration mode for WireGuard.

```
> config vpn wireguard (config vpn wireguard)>
```

7. The table below lists the required settings for creating and configuring a client WireGuard tunnel.

Configuration	Description
add	Add a new WireGuard tunnel.
	> config vpn wireguard add <i>name</i> (config)>
	Where <i>name</i> is the name of the new WireGuard tunnel. For example, <i>newtunnel1</i> .
enable	The WireGuard tunnel is enabled by default. You may want to temporarily disable the tunnel while it is being set up, for future use, or if you want to stop the tunnel while testing other configuration changes. To disable:

	(config)> vpn wireguard <i>name</i> enable false (config)>			
	To enable:			
	(config)> vpn wireguard <i>name</i> enable true (config)>			
peer	a. Determine if the IX20 will act as a client or server. If this IX20 is the WreQuard client, then only add one peer. The peer is the remote WreQuard server to which it connects. If this IX20 is the WreQuard server, add one or more peers. The peer(s) are the remote WireQuard clients that will connect to this device. b. Create the peer(s). (config)> vpn wireguard name add peer (config)> For a peer that acts as the remote Wireguard server, configure the following settings: If [Remote] Device managed public key (config vpn wireguard [name])> generate Parameters tunnel Tunnel Name (Required) If [Remote] Public key (config)> vpn wireguard name peer public_key (config)> If [Remote] Pre-shared key (optional) (config)> vpn wireguard name peer psk (config)> If [Remote] Allowed addresses: Only traffic destined for an IP address added here will be sent to this peer. (config)> vpn wireguard name peer overlay (config)> If [Remote] Endpoint address (config)> vpn wireguard name peer endpoint (conf			

	■ [Remote] Endpoint port	
	(config)> vpn wireguard <i>name</i> peer port (config)>	
	For a peer(s) that acts as the remote WireGuard client, configure the following settings:	
	■ [Client] Public key	
	(config)> vpn wireguard <i>name</i> peer public_key (config)>	
	■ [Client] Pre-shared key (optional)	
	(config)> vpn wireguard <i>name</i> peer psk (config)>	
	■ [Local and Remote] Allowed addresses	
autogenerate	Enable to allow the IX20 to generate its own public and private keys. If this setting is enabled, it triggers the IX20 to automatically generate a private key and corresponding public key. To enable:	
	> config vpn wireguard add <i>name</i> autogenerate true (config)>	
	To disable:	
	> config vpn wireguard add <i>name</i> autogenerate false (config)>	
port	The WireGuard connection value of 51820 is populated by default.	
	(config)> vpn wireguard <i>name</i> port (config)>	
private-key	Type the private key for the Wireguard tunnel, if the Device managed private key setting is disabled.	
	> config vpn wireguard add <i>name</i> private key <i>value</i> (config)>	
	With value being a 32-byte string encoded in base 64.	

8. The table below lists the required settings for creating and configuring a new interface.

Configuration	Description
add	Add a new interface.
	> (config network interface) > add name

	(config)>
	Where name is the name of the new interface. For example, add newWGtunnel1.
enable	The interface is enabled by default. You may want to temporarily disable the tunnel while it is being set up, for future use, or if you want to stop the tunnel while testing other configuration changes. To disable:
	(config network interface) > name enable false (config)>
	To enable:
	(config network interface) > name enable true (config)>
	Where name is the name of the new interface.
zone	Set the zone to external.
	(config network interface [name]) > zone external (config)>
device	Add the network device used by this interface.
	(config network interface [name]) > device /vpn/wireguard/[name]
	For example, device /vpn/wireguard/newWGtunnel1.
IPv4	a. Add the address and netmask assigned to this interface.
	config network interface [name] ipv4) > address IPv4_[IPaddress]/ [netmask]
	For example, ipv4_10.200.200.1/24.
	b. Add the IP address of the DNS server.
	(config network interface [name] ipv4) > dns (config network interface [name] ipv4 dns) > ipv4_[address].
	Address is the IP address of the DNS server. For example, ipv4_10.200.200.1.

Services

This chapter contains the following topics:

Allow remote access for web administration and SSH	656
Configure the web administration service	
Configure SSH access	
Use SSH with key authentication	676
Configure telnet access	679
Configure DNS	684
WAN bonding	690
Simple Network Management Protocol (SNMP)	708
Location information	715
Modbus gateway	743
System time synchronization	761
Network Time Protocol	
Configure a multicast route	
Ethernet network bonding	
Enable service discovery (mDNS)	780
Use the MQTT broker service	783
Use the iPerf service	795
Configure the ping responder service	799

Allow remote access for web administration and SSH

By default, only devices connected to the IX20's LAN have access to the device via web administration and SSH. To enable these services for access from remote devices:

- The IX20 device must have a publicly reachable IP address.
- The External firewall zone must be added to the web administration or SSH service. See Firewall configuration for information on zones.
- See Set the idle timeout for IX20 users for information about setting the inactivity timeout for the web administration and SSH services.

To allow web administration or SSH for the External firewall zone:

Add the External firewall zone to the web administration service



- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- a. Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:


a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

3. Click Services > Web administration > Access Control List > Zones.

4. For Add Zone, click Yo

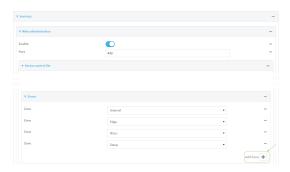

5. Select External.



6. Click Apply to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type config to enter configuration mode:

> config (config)>

3. Add the external zone to the web administration service:

(config)> add service web_admin acl zone end external (config)>

4. Save the configuration and apply the change.

(config)> save
Configuration saved.

5. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Add the External firewall zone to the SSH service



- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- a. Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.


Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

- 3. Click Configuration > Services > SSH > Access Control List > Zones.
- 4. For Add Zone, click Yo

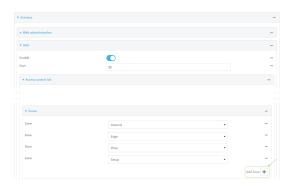

Select External.



6. Click **Apply** to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Add the External zone to the SSH service:

```
(config)> add service ssh acl zone end external (config)>
```

4. Save the configuration and apply the change.

```
(config)> save
Configuration saved.
```

5. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configure the web administration service

The web administration service allows you to monitor and configure the IX20 device by using the WebUI, a browser-based interface.

By default, the web administration service is enabled and uses the standard HTTPS port, 443. The default access control for the service uses the **Internal** firewall zone, which means that only devices connected to the IX20's LAN can access the WebUI. If this configuration is sufficient for your needs, no further configuration is required. See Allow remote access for web administration and SSH for information about configuring the web administration service to allow access from remote devices.

Required configuration items

- The web administration service is enabled by default.
- Configure access control for the service.

Additional configuration items

- Port to use for web administration service communication.
- Multicast DNS (mDNS) support.
- An SSL certificate to use for communications with the service.
- Support for legacy encryption protocols.

See Set the idle timeout for IX20 users for information about setting the inactivity timeout for the web administration services.

Enable or disable the web administration service

The web administration service is enabled by default. To disable the service, or enable it if it has been disabled:



- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

- 3. Click Services > Web administration.
- 4. Click Enable.
- 5. Click **Apply** to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

> config (config)>

- 3. Enable or disable the web administration service:
 - To enable the service:

(config)> service web_admin enable true (config)>

To disable the sevice:

(config)> service web_admin enable false
(config)>

4. Save the configuration and apply the change.

```
(config)> save
Configuration saved.
```

5. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configure the service



- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- a. Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The Configuration window is displayed.

- 3. Click Services > Web administration.
- (Optional) For Port, enter the port number for the service. Normally this should not be changed.
- 5. Click Access control list to configure access control:
 - To limit access to specified IPv4 addresses and networks:
 - a. Click IPv4 Addresses.
 - b. For Add Address, click Yo
 - c. For Address, enter the IPv4 address or network that can access the device's web administration service. Allowed values are:

- A single IP address or host name.
- A network designation in CIDR notation, for example, 192.168.1.0/24.
- any: No limit to IPv4 addresses that can access the web administration service.
- d. Click Ybagain to list additional IP addresses or networks.
- To limit access to specified IPv6 addresses and networks:
 - a. Click IPv6 Addresses.
 - b. For Add Address, click Yo
 - c. For Address, enter the IPv6 address or network that can access the device's web administration service. Allowed values are:
 - A single IP address or host name.
 - A network designation in CIDR notation, for example, 2001:db8::/48.
 - any: No limit to IPv6 addresses that can access the web administration service.
 - d. Click % again to list additional IP addresses or networks.
- To limit access to hosts connected through a specified interface on the device:
 - a. Click Interfaces.
 - b. For Add Interface, click %
 - c. For Interface, select the appropriate interface from the dropdown.
 - d. Click Ybagain to allow access through additional interfaces.
- To limit access based on firewall zones:
 - a. Click Zones. By default, there are three firewall zones already configured: Internal, Edge, and IPsec.
 - b. For **Add Zone**, click **Y**₀
 - For **Zone**, select the appropriate firewall zone from the dropdown.
 See Firewall configuration for information about firewall zones.
 - d. Click Ybagain to allow access through additional firewall zones.
- 6. Multicast DNS (mDNS) is enabled by default. mDNS is a protocol that resolves host names in small networks that do not have a DNS server. To disable mDNS, or enable it if it has been disabled, click **Enable mDNS**.
- For SSL certificate, if you have your own signed SSL certificate, paste the certificate and
 private key. If SSL certificate is blank, the device will use an automatically-generated, selfsigned certificate.
 - The SSL certificate and private key must be in PEM format.
 - The private key can use one of the following algorithms:
 - RSA
 - DSA
 - ECDSA
 - ECDH


Note Password-protected certificate keys are not supported.

Example:

a. Generate the SSL certificate and private key, for example:

openssl req -newkey rsa:2048 -nodes -keyout key.pem -x509 -days 365 -out certificate.pem

b. Paste the contents of **certificate.pem** and **key.pem** into the **SSL certificate** field. The contents of the **certificate.pem** must be first. For example:

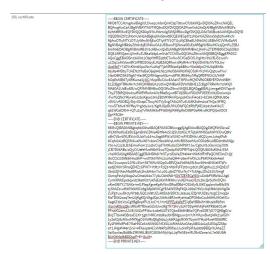

- 8. View is set to Auto by default and normally should not be changed.
- Legacy port redirection is used to redirect client HTTP requests to the HTTPS service. Legacy
 port redirection is enabled by default, and normally these settings should not be changed. To
 disable legacy port redirection, click to expand Legacy port redirection and deselect Enable.
- For Minimum TLS version, select the minimum TLS version that can be used by client to negotiate the HTTPS session.
- 11. Click Apply to save the configuration and apply the change.

Command line

Select the device in Remote Manager and click Actions > Open Console, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

> config (config)>

- 3. Configure access control:
 - To limit access to specified IPv4 addresses and networks:

(config)> add service web_admin acl address end *value* (config)>

Where value can be:

- · A single IP address or host name.
- A network designation in CIDR notation, for example, 192.168.1.0/24.
- any: No limit to IPv4 addresses that can access the web administratrion service.

Repeat this step to list additional IP addresses or networks.

To limit access to specified IPv6 addresses and networks:

```
(config)> add service web_admin acl address6 end value (config)>
```

Where value can be:

- A single IP address or host name.
- A network designation in CIDR notation, for example, 2001:db8::/48.
- any: No limit to IPv6 addresses that can access the web administratrion service.

Repeat this step to list additional IP addresses or networks.

■ To limit access to hosts connected through a specified interface on the IX20 device:

```
(config)> add service web_admin acl interface end value
(config)>
```

Where value is an interface defined on your device.

Display a list of available interfaces:

Use ... network interface ?to display interface information:

```
(config)> ... network interface ?
```

Interfaces

Additional Configuration

setupip Setup IP

setuplinklocalip Setup Link-local IP

eth1 ETH1 eth2 ETH2 loopback Loopback modem Modem

(config)>

Repeat this step to list additional interfaces.

To limit access based on firewall zones:

```
(config)> add service web_admin acl zone end value (config)>
```

Where value is a firewall zone defined on your device, or the **any** keyword.

Display a list of available firewall zones:

Type ... firewall zone ? at the config prompt:

(config)> ... firewall zone?

Zones: A list of groups of network interfaces that can be referred to by packet filtering rules and access control lists.

Additional Configuration

any

dynamic_routes

edge

external

hotspot

internal

ipsec

loopback

setup

(config)>

Repeat this step to include additional firewall zones.

4. (Optional) If you have your own signed SSL certificate, if you have your own signed SSL certificate, set the certificate and private key by pasting their contents into the service web_admin cert command. Enclose the certificate and private key contents in quotes (").

(config)> service web_admin cert "ssl-cert-and-private-key"
(config)>

- If SSL certificate is blank, the device will use an automatically-generated, self-signed certificate.
- The SSL certificate and private key must be in PEM format.
- The private key can use one of the following algorithms:
 - RSA
 - DSA
 - ECDSA
 - ECDH

Note Password-protected certificate keys are not supported.

Example

a. Generate the SSL certificate and private key, for example:

openssl req -newkey rsa:2048 -nodes -keyout key.pem -x509 -days 365 -out certificate.pem

b. Paste the contents of **certificate.pem** and **key.pem** into the **service web_admin cert** command. Enclose the contents of **certificate.pem** and **key.pem** in quotes. For example:

(config)> service web_admin cert "-----BEGIN CERTIFICATE----MIID8TCCAtmgAwlBAgIULOwezcmbnQmlC9pT9txwCfUbkWQwDQYJKoZlhvcNAQEL
BQAwgYcxCzAJBgNVBAYTAIVTMQ8wDQYDVQQIDAZPcmVnb24xDjAMBgNVBAcMBUFs

b2hhMRMwEQYDVQQKDApNY0JhbmUgSW5jMRAwDgYDVQQLDAdTdXBwb3J0MQ8wDQY D

VQQDDAZtY2JhbmUxHzAdBgkqhkiG9w0BCQEWEGptY2JhbmVAZGlnaS5jb20wHhcN MjAwOTIyMTY1OTUyWhcNMjEwOTIyMTY1OTUyWjCBhzELMAkGA1UEBhMCVVMxDzAN BgNVBAgMBk9yZWdvbjEOMAwGA1UEBwwFQWxvaGExEzARBgNVBAoMCk1jQmFuZSBJ bmMxEDAOBqNVBAsMB1N1cHBvcnQxDzANBqNVBAMMBm1jYmFuZTEfMB0GCSqGSlb3 DQEJARYQam1jYmFuZUBkaWdpLmNvbTCCASIwDQYJKoZIhvcNAQEBBQADggEPADCC AQoCqqEBAOBn19AX01LO9plYtfRZq0bETwNwSCYGeEIOGJ7qHt/rihLVBJS1woYv u1Oq1ohYxlawBY1iIPBD2GtzyEJXzBZdQRhwi/dRyRi4vr7EkjGDr0Vb/NVT0L5w UzcMeT+71DYvKYm6GpcWx+LoKqFTjbMFBIze5pbBfru+SicId6joCHIuYq8Ehflx 6sy6s4MDbyTUAEN2YhsBaOljej64LNzcsHelSbAWibXWjOSsK+N1MivQq5uwlYw/ 1fsnD8KDS43Wg57+far9fQ2MIHsgnoAGz+w6PIKJR594y/MfqQffDFNCh2lJY49F hOqEtA5B9TyXRKwoa3j/IIC/t5cpIBcCAwEAAaNTMFEwHQYDVR0OBBYEFDVtrWBH E1ZcBg9TRRxMn7chKYjXMB8GA1UdlwQYMBaAFDVtrWBHE1ZcBg9TRRxMn7chKYjX MA8GA1UdEwEB/wQFMAMBAf8wDQYJKoZlhvcNAQELBQADggEBALj/mrgaKDNTspv9 ThyZTBIRQ59wIzwRWRYRxUmkVcR8eBcjwdBTWjSBLnFID2WFOEEEnVz2Dzcixmj4 /Fw7GQNcYlKj+alGJzbcKgox10mZB3VKYRmPpnpzHCkvFi4o81+bC8HJQfK9U80e vDV0/vA5OB2j/DrjvIOrapCTkuyA0TVyGvgTASx2ATu9U45KZofm4odThQs/9FRQ +cwSTb5v47KYffeyY+q3dyJw1/KqMJGpBUYNJDIsFQC9RfzPjKE2kz41hx4VksT/ q81WGstDXH++QTu2sj7vWkFJH5xPFt80HjtWKKplfeOllBPGeRHvdH2PQibx0OOt Sa+P5O8=

- ----END CERTIFICATE----
- ----BEGIN PRIVATE KEY-----

MIIEvQIBADANBgkqhkiG9w0BAQEFAASCBKcwggSjAgEAAoIBAQDgZ9fQF9NSzvaZ WLX0WatGxE8DcEgmBnhCDhie4B7f64oS1QSUtcKGL7tTqtalWMSGsAWNYiDwQ9hr c8hCV8wWXUEYcIv3UckYuL6+xJlxg69FW/zVU9C+cFM3DHk/u9Q2LymJuhqXFsfi 6CqhU42zBQSM3uaWwX67vkonCHeo6AhyLmKvBIX5cerMurODA28k1ABDdmlbAWjp Y3o+uCzc3LB3iEmwFom11ozkrCvjdTlr0KubsCGMP9X7Jw/Cq0uN1oOe/n2q/X0N jCB7D56ABs/sOjyCiUefeMvzH6kH3wxTQodpSWOPRYTqhLQOQfU8l0SsKGt4/5SA v7eXKSAXAgMBAAECggEBAMDKdi7hSTyrclDsVeZH4044+WkK3fFNPaQCWESmZ+AY i9cCC513SlfeSiHnc8hP+wd70klVNNc2coheQH4+z6enFnXYu2cPbKVAkx9x4eel Ktx72wurpnr2JYf1v3Vx+S9T9WvN52pGuBPJQla3YdWbSf18wr5iHm9NXleMTsFc esdjEW07JRnxQEMZ1GPWT+YtH1+FzQ3+W9rFsFFzt0vcp5Lh1RGg0huzL2NQ5EcF 3brzIZjNAavMsdBFzdc2hcbYnbv7o1uGLujbtZ7WurNy7+Tc54gu2Ds25J0/0mgf OxmqFevIqVkqp2wOmeLtl4o77y6uCbhfA6I+GWTZEYECgYEA/uDzlbPMRcWuUig0 CymOKIhEpx9qxid2Ike0G57ykFaEsKxVMKHkv/yvAEHwazIEzlc2kcQrbLWnDQYx oKmXf87Y1T5AXs+ml1PlepXgveKpKrWwORsdDBd+OS34lyNJ0KCqqlzwAaf8lcSW tyShAZzvuH9GW9WICc8g3ifp9WUCgYEA4WSSfqFkQLA09sI76VLvUqMbb31bNgOk ZuPq7uxuDk3yNY58LGQCoV8tUZuHtBJdrBDCtcJa5sasJZQrWUIZ8y/5zqCZmqQn MzTD062xaqTenL0jKgKQrWig4DpUUhfc4BFJmHyeitosDPG98oCxuh6HfuMOeM1v Xag6Z391VcsCgYBgBnpfFU1JoC+L7m+IIPPZykWbPT/qBeYBBki5+0lhzebR9Stn VicrmROjojQk/sRGxR7fDixaGZoIUwcRg7N7SH/y3zA7SDp4WvhjFeKFR8b6O1d4 PFnWO2envUUiE/50ZoPFWsv1o8eK2XT67Qbn56t9NB5a7QPvzSSR7jG77QKBqD/w BrqTT9wl4DBrsxEiLK+1g0/iMKCm8dkaJbHBMgsuw1m7/K+fAzwBwtpWk21alGX+ Ly3eX2j9zNGwMYfXjgO1hViRxQEgNdqJyk9fA2gsMtYltTbymVYHyzMweMD88fRC

Ey2FIHfxIfPeE7MaHNCeXnN5N56/MCtSUJcRihh3AoGAey0BGi4xLqSJESqZZ58pe71JHg4M46rLlrxi+4FXaop64LCxM8kPpROfasJJu5nlPpYHye959BBQnYcAheZZ0siGswlauBd8BrZMlWf8JBUIC5EGkMilyNpLJqPbGEImMUXk4Zane/cL7e06U8ftBUtOtMefbBDDxpP+E+iliuM=----END PRIVATE KEY-----"
(config)>

5. (Optional) Configure Multicast DNS (mDNS):

mDNS is a protocol that resolves host names in small networks that do not have a DNS server. mDNS is enabled by default. To disable mDNS, or enable it if it has been disabled:

To enable the mDNS protocol:

(config)> service web_admin mdns enable true (config>

■ To disable the mDNS protocl:

(config)> service web_admin mdns enable false
(config)>

6. (Optional) Set the port number for this service.

The default setting of 443 normally should not be changed.

(config)> service web_admin port 444
(config)>

7. (Optional) Set the minimum TLS version that can be used by client to negotiate the HTTPS session:

(config)> service web_admin legacy_encryption *value* (config)>

where value is one of:

- TLS-1_1
- TLS-1 2
- TLS-1 3

The default is TLS-1_2.

8. (Optional) Disable legacy port redirection.

Legacy port redirection is used to redirect client HTTP requests to the HTTPS service. Legacy port redirection is enabled by default, and normally these settings should not be changed.

To disable legacy port redirection:

(config)> service web_admin legacy enable false (config)>

9. Save the configuration and apply the change.

(config)> save Configuration saved.

10. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configure SSH access

The IX20's default configuration has SSH access enabled, and allows SSH access to the device from authorized users within the **Internal** firewall zone. If this configuration is sufficient for your needs, no further configuration is required. See Allow remote access for web administration and SSH for information about configuring the SSH service to allow access from remote devices.

Required configuration items

- Enable SSH access.
- Configure access control for the SSH service.

Additional configuration items

- Port to use for communications with the SSH service.
- Multicast DNS (mDNS) support.
- A private key to use for communications with the SSH service.
- Create custom SSH configuration settings.

See Set the idle timeout for IX20 users for information about setting the inactivity timeout for the SSH service.

Enable or disable the SSH service

The SSH service is enabled by default. To disable the service, or enable it if it has been disabled:



- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- a. Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

- 3. Click Services > SSH.
- 4. Click Enable.
- 5. Click **Apply** to save the configuration and apply the change.

Command line

Select the device in Remote Manager and click Actions > Open Console, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

- 3. Enable or disable the SSH service:
 - To enable the service:

```
(config)> service ssh enable true (config)>
```

To disable the sevice:

```
(config)> service ssh enable false (config)>
```

4. Save the configuration and apply the change.

```
(config)> save
Configuration saved.
```

5. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configure the service



- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- a. Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

- 3. Click Services > SSH.
- 4. (Optional) For **Port**, enter the port number for the service. Normally this should not be changed.
- 5. Click Access control list to configure access control:
 - To limit access to specified IPv4 addresses and networks:
 - a. Click IPv4 Addresses.
 - b. For Add Address, click Yo
 - c. For Address, enter the IPv4 address or network that can access the device's SSH service. Allowed values are:
 - A single IP address or host name.
 - A network designation in CIDR notation, for example, 192.168.1.0/24.
 - any: No limit to IPv4 addresses that can access the SSH service.
 - d. Click % again to list additional IP addresses or networks.
 - To limit access to specified IPv6 addresses and networks:
 - a. Click IPv6 Addresses.
 - b. For Add Address, click Yo
 - c. For Address, enter the IPv6 address or network that can access the device's SSH service. Allowed values are:
 - A single IP address or host name.
 - A network designation in CIDR notation, for example, 2001:db8::/48.
 - any: No limit to IPv6 addresses that can access the SSH service.
 - d. Click Ybagain to list additional IP addresses or networks.
 - To limit access to hosts connected through a specified interface on the device:
 - a. Click Interfaces.
 - b. For **Add Interface**, click %
 - c. For **Interface**, select the appropriate interface from the dropdown.
 - d. Click Ybagain to allow access through additional interfaces.
 - To limit access based on firewall zones:
 - a. Click Zones. By default, there are three firewall zones already configured: Internal, Edge, and IPsec.
 - b. For **Add Zone**, click **1**/₂o
 - c. For **Zone**, select the appropriate firewall zone from the dropdown. See Firewall configuration for information about firewall zones.

- d. Click Ybagain to allow access through additional firewall zones.
- 6. Multicast DNS (mDNS) is enabled by default. mDNS is a protocol that resolves host names in small networks that do not have a DNS server. To disable mDNS, or enable it if it has been disabled, click **Enable mDNS**.
- 7. For **Private key**, type the private key in PEM format. If **Private key** is blank, the device will use an automatically-generated key.
- 8. To create custom SSH configuration settings:
 - a. Click to expand Custom configuration.
 - b. Click Enable.
 - c. For Override:
 - If Override is enabled, entries in Configuration file will be used in place of the standard SSH configuration.
 - If Override is not enabled, entries in Configuration file will be added to the standard SSH configuration.
 - d. For **Configuration file**, type configuration settings in the form of an OpenSSH sshd_config file.

For example, to enable the diffie-helman-group-sha-14 key exchange algorithm:

- i. Click Enable to enable SSH custom configuration.
- ii. Leave Override disabled.
- iii. For Configuration file, type the following:

KexAlgorithms +diffie-hellman-group14-sha1

9. Click **Apply** to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

> config (config)>

- 3. Configure access control:
 - To limit access to specified IPv4 addresses and networks:

(config)> add service ssh acl address end *value* (config)>

Where value can be:

- A single IP address or host name.
- A network designation in CIDR notation, for example, 192.168.1.0/24.
- any: No limit to IPv4 addresses that can access the SSH service.

Repeat this step to list additional IP addresses or networks.

To limit access to specified IPv6 addresses and networks:

```
(config)> add service ssh acl address6 end value (config)>
```

Where value can be:

- · A single IP address or host name.
- A network designation in CIDR notation, for example, 2001:db8::/48.
- any: No limit to IPv6 addresses that can access the SSH service.

Repeat this step to list additional IP addresses or networks.

To limit access to hosts connected through a specified interface on the IX20 device:

```
(config)> add service ssh acl interface end value (config)>
```

Where value is an interface defined on your device.

Display a list of available interfaces:

Use ... network interface ?to display interface information:

```
(config)> ... network interface ?
```

Interfaces

Additional Configuration

setupip Setup IP

setuplinklocalip Setup Link-local IP

eth1 ETH1 eth2 ETH2 loopback Loopback modem Modem

(config)>

Repeat this step to list additional interfaces.

To limit access based on firewall zones:

```
(config)> add service ssh acl zone end value (config)>
```

Where value is a firewall zone defined on your device, or the **any** keyword.

Display a list of available firewall zones:

Type ... firewall zone ? at the config prompt:

```
(config)> ... firewall zone ?
```

Zones: A list of groups of network interfaces that can be referred to by packet filtering rules and access control lists.

Repeat this step to include additional firewall zones.

4. (Optional) Set the private key in PEM format. If not set, the device will use an automaticallygenerated key.

```
(config)> service ssh key key.pem (config)>
```

5. (Optional) Configure Multicast DNS (mDNS)

mDNS is a protocol that resolves host names in small networks that do not have a DNS server. mDNS is enabled by default. To disable mDNS, or enable it if it has been disabled:

To enable the mDNS protocol:

```
(config)> service ssh mdns enable true (config>
```

■ To disable the mDNS protocl:

```
(config)> service ssh mdns enable false (config)>
```

6. (Optional) Set the port number for this service.

The default setting of 22 normally should not be changed.

```
(config)> service ssh port 24 (config)>
```

- 7. To create custom SSH configuration settings:
 - a. Enable custom configurations:

```
(config)> service ssh custom enable true (config)>
```

b. To override the standard SSH configuration and only use the **config_file** parameter:

(config)> service ssh custom override true (config)>

- If **override** is set to **true**, entries in **Configuration file** will be used in place of the standard SSH configuration.
- If override is set to false, entries in Configuration file will be added to the standard SSH configuration.

The default is false.

c. Set the configuration settings:

```
(config)> service ssh custom config_file value
(config)>
```

where value is one or more entires in the form of an OpenSSH sshd_config file. For example, to enable the diffie-helman-group-sha-14 key exchange algorithm:

(config)> service ssh custom config_file "KexAlgorithms +diffie-hellman-group14-sha1" (config)>

8. Save the configuration and apply the change.

```
(config)> save
Configuration saved.
```

9. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an Access selection menu. Type quit to disconnect from the device.

Use SSH with key authentication

Rather than using passwords, you can use SSH keys to authenticate users connecting via SSH, SFTP, or SCP. SSH keys provide security and scalability:

- **Security**: Using SSH keys for authentication is more secure than using passwords. Unlike a password that can be guessed by an unauthorized user, SSH key pairs provide more sophisticated security. A public key configured on the IX20 device is paired with a private key on the user's PC. The private key, once generated, remains on the user's PC.
- Scalability: SSH keys can be used on more than one IX20 device.

Generating SSH key pairs

On a Microsoft Windows PC, you can generate SSH key pairs using a terminal emulator application, such as **PuTTY** or **Tera Term**.

On a Linux host, an SSH key pair is usually created automatically in the user's **.ssh** directory. The private and public keys are named **id_rsa** and **id_rsa.pub**. If you need to generate an SSH key pair, you can use the **ssh-keygen** application.

For example, the following entry generates an RSA key pair in the user's .ssh directory:

```
ssh-keygen -t rsa -f ~/.ssh/id_rsa
```

The private key file is named **id_rsa** and the public key file is named **id_rsa.pub**. (The **.pub** extension is automatically appended to the name specified for the private key output file.)

Required configuration items

- Name for the user
- SSH public key for the user

Additional configuration items

If you want to access the IX20 device using SSH over a WAN interface, configure the access control list for the SSH service to allow SSH access for the External firewall zone.



- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- a. Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

- 3. Click Authentication > Users.
- 4. Select an existing user or create a new user. See User authentication for information about creating a new user.
- 5. Click SSH keys.
- 6. In Add SSH key, enter a name for the SSH key and click 1/2
- 7. Enter the public SSH key by pasting or typing a public encryption key that this user can use for passwordless SSH login.
- 8. Click Apply to save the configuration and apply the change.

Command line

You can add configure passwordless SSH login for an existing user or include the support when creating a new user. See User authentication for information about creating a new user. These instructions assume an existing user named **temp user**.

- 1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.
 - Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
- 2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Add an SSH key for the user by using the ssh_key command and pasting or typing a public encryption key:

```
(config)> add auth user maria ssh_key key_name key
(config)>
```

where:

- key_name is a name for the key.
- key is a public SSH key, which you can enter by pasting or typing a public encryption key that this user can use for passwordless SSH login
- 4. Save the configuration and apply the change.

```
(config)> save
Configuration saved.
>
```

5. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configure telnet access

By default, the telnet service is disabled.

Note Telnet is an insecure protocol and should only be used for backward-compatibility reasons, and only if the network connection is otherwise secured.

Required configuration items

- Enable telnet access.
- Configure access control for the telnet service.

Additional configuration items

- Port to use for communications with the telnet service.
- Multicast DNS (mDNS) support.

See Set the idle timeout for IX20 users for information about setting the inactivity timeout for the telnet service.

Enable the telnet service

The telnet service is disabled by default. To enable the service:



- Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

3. Click Services > telnet.

- 4. Click Enable.
- 5. Click Apply to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type config to enter configuration mode:

```
> config (config)>
```

3. Enable the telnet service:

```
(config)> service telnet enable true (config)>
```

4. Save the configuration and apply the change.

```
(config)> save
Configuration saved.
```

5. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configure the service



- Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- a. Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

- 3. Click Services > telnet.
- (Optional) For **Port**, enter the port number for the service. Normally this should not be changed.
- 5. Click Access control list to configure access control:
 - To limit access to specified IPv4 addresses and networks:
 - a. Click IPv4 Addresses.
 - b. For Add Address, click Yo
 - c. For Address, enter the IPv4 address or network that can access the device's telnet service. Allowed values are:
 - · A single IP address or host name.
 - A network designation in CIDR notation, for example, 192.168.1.0/24.
 - any: No limit to IPv4 addresses that can access the telnet service.
 - d. Click Ybagain to list additional IP addresses or networks.
 - To limit access to specified IPv6 addresses and networks:
 - a. Click IPv6 Addresses.
 - b. For Add Address, click Yo
 - c. For **Address**, enter the IPv6 address or network that can access the device's telnet service. Allowed values are:
 - A single IP address or host name.
 - A network designation in CIDR notation, for example, 2001:db8::/48.
 - any: No limit to IPv6 addresses that can access the telnet service.
 - d. Click Ybagain to list additional IP addresses or networks.
 - To limit access to hosts connected through a specified interface on the device:
 - a. Click Interfaces.
 - b. For **Add Interface**, click Υ_o
 - c. For **Interface**, select the appropriate interface from the dropdown.
 - d. Click Ybagain to allow access through additional interfaces.
 - To limit access based on firewall zones:
 - a. Click Zones. By default, there are three firewall zones already configured: Internal, Edge, and IPsec.
 - b. For Add Zone, click Yo
 - c. For **Zone**, select the appropriate firewall zone from the dropdown. See Firewall configuration for information about firewall zones.
 - d. Click % again to allow access through additional firewall zones.

6. Multicast DNS (mDNS) is disabled by default. mDNS is a protocol that resolves host names in small networks that do not have a DNS server. To enable mDNS, click **Enable mDNS**.

7. Click Apply to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

- 3. Configure access control:
 - To limit access to specified IPv4 addresses and networks:

(config)> add service telnet acl address end *value* (config)>

Where value can be:

- · A single IP address or host name.
- A network designation in CIDR notation, for example, 192.168.1.0/24.
- any: No limit to IPv4 addresses that can access the telnet service.

Repeat this step to list additional IP addresses or networks.

To limit access to specified IPv6 addresses and networks:

(config)> add service telnet acl address6 end *value* (config)>

Where value can be:

- · A single IP address or host name.
- A network designation in CIDR notation, for example, 2001:db8::/48.
- any: No limit to IPv6 addresses that can access the telnet service.

Repeat this step to list additional IP addresses or networks.

To limit access to hosts connected through a specified interface on the IX20 device:

(config)> add service telnet acl interface end *value* (config)>

Where value is an interface defined on your device.

Display a list of available interfaces:

Use ... network interface ?to display interface information:

(config)> ... network interface?

Interfaces

Additional Configuration

setupip Setup IP

setuplinklocalip Setup Link-local IP

eth1 ETH1 eth2 ETH2 loopback Loopback modem Modem

(config)>

Repeat this step to list additional interfaces.

To limit access based on firewall zones:

```
(config)> add service telnet acl zone end value (config)>
```

Where value is a firewall zone defined on your device, or the any keyword.

Display a list of available firewall zones:

Type ... firewall zone ?at the config prompt:

```
(config)> ... firewall zone?
```

Zones: A list of groups of network interfaces that can be referred to by packet filtering rules and access control lists.

Additional Configuration

any

dynamic_routes

edge

external

hotspot

internal

ipsec

loopback

setup

(config)>

Repeat this step to include additional firewall zones.

4. (Optional) Configure Multicast DNS (mDNS)

mDNS is a protocol that resolves host names in small networks that do not have a DNS server. mDNS is disabled by default. To enable:

(config)> service telnet mdns enable true (config>

Services Configure DNS

5. (Optional) Set the port number for this service.

The default setting of 23 normally should not be changed.

```
(config)> service telnet port 25 (config)>
```

6. Save the configuration and apply the change.

```
(config)> save
Configuration saved.
```

7. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configure DNS

The IX20 device includes a caching DNS server which forwards queries to the DNS servers that are associated with the network interfaces, and caches the results. This server is used within the device, and cannot be disabled. Use the access control list to restrict external access to this server.

Required configuration items

Configure access control for the DNS service.

Additional configuration items

- Whether the device should cache negative responses.
- Whether the device should always perform DNS queries to all available DNS servers.
- Whether to prevent upstream DNS servers from returning private IP addresses.
- Additional DNS servers, in addition to the ones associated with the device's network interfaces.
- Specific host names and their IP addresses.

The device is configured by default with the hostname **digi.device**, which corresponds to the **192.168.210.1** IP address.

To configure the DNS server:



- Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- Access the device configuration:

Remote Manager:

 Locate your device as described in Use Digi Remote Manager to view and manage your device.

- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The Configuration window is displayed.

- 3. Click Services > DNS.
- 4. Click Access control list to configure access control:
 - To limit access to specified IPv4 addresses and networks:
 - a. Click IPv4 Addresses.
 - b. For Add Address, click Yo
 - c. For Address, enter the IPv4 address or network that can access the device's DNS service. Allowed values are:
 - · A single IP address or host name.
 - A network designation in CIDR notation, for example, 192.168.1.0/24.
 - any: No limit to IPv4 addresses that can access the DNS service.
 - d. Click Ybagain to list additional IP addresses or networks.
 - To limit access to specified IPv6 addresses and networks:
 - a. Click IPv6 Addresses.
 - b. For Add Address, click Yo
 - c. For Address, enter the IPv6 address or network that can access the device's DNS service. Allowed values are:
 - · A single IP address or host name.
 - A network designation in CIDR notation, for example, 2001:db8::/48.
 - any: No limit to IPv6 addresses that can access the DNS service.
 - d. Click Ybagain to list additional IP addresses or networks.
 - To limit access to hosts connected through a specified interface on the device:
 - a. Click Interfaces.
 - b. For **Add Interface**, click %
 - c. For **Interface**, select the appropriate interface from the dropdown.
 - d. Click Ybagain to allow access through additional interfaces.
 - To limit access based on firewall zones:
 - a. Click Zones. By default, there are three firewall zones already configured: Internal, Edge, and IPsec.
 - b. For **Add Zone**, click **Y**_o

- For **Zone**, select the appropriate firewall zone from the dropdown.
 See Firewall configuration for information about firewall zones.
- d. Click Ybagain to allow access through additional firewall zones.
- (Optional) Cache negative responses is enabled by default. Disabling this option may improve
 performance on networks with transient DNS results, when one or more DNS servers may
 have positive results. To disable, click to toggle off Cache negative responses.
- 6. (Optional) **Query all servers** is enabled by default. This option is useful when only some DNS servers will be able to resolve hostnames. To disable, click to toggle off **Query all servers**.
- (Optional) Rebind protection, if enabled, prevents upstream DNS servers from returning private IP addresses. To enable, click Rebind protection.
- (Optional) Allow localhost rebinding is enabled by default if Rebind protection is enabled.
 This is useful for Real-time Black List (RBL) servers.
- 9. (Optional) Type the IP address of the **Fallback server**. This is a DNS server to be used in the absence of any other server. The default is **8.8.8.8**.
- 10. (Optional) To add additional DNS servers:
 - a. Click DNS servers.
 - b. For Add Server, click Yo
 - c. (Optional) Enter a label for the DNS server.
 - d. For **DNS server**, enter the IP address of the DNS server.
 - e. **Domain** restricts the device's use of this DNS server based on the domain. If no domain are listed, then all queries may be sent to this server.
- 11. (Optional) To add host names and their IP addresses that the device's DNS server will resolve:
 - a. Click Additional DNS hostnames.
 - b. For **Add Host**, click **1**/₂o
 - c. Type the IP address of the host.
 - d. For Name, type the hostname.
- 12. Click **Apply** to save the configuration and apply the change.

Command line

Select the device in Remote Manager and click Actions > Open Console, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

> config (config)>

- 3. Configure access control:
 - To limit access to specified IPv4 addresses and networks:

(config)> add service dns acl address end *value* (config)>

Where value can be:

- · A single IP address or host name.
- A network designation in CIDR notation, for example, 192.168.1.0/24.
- any: No limit to IPv4 addresses that can access the DNS service.

Repeat this step to list additional IP addresses or networks.

To limit access to specified IPv6 addresses and networks:

```
(config)> add service dns acl address6 end value (config)>
```

Where value can be:

- · A single IP address or host name.
- A network designation in CIDR notation, for example, 2001:db8::/48.
- any: No limit to IPv6 addresses that can access the DNS service.

Repeat this step to list additional IP addresses or networks.

To limit access to hosts connected through a specified interface on the IX20 device:

```
(config)> add service dns acl interface end value (config)>
```

Where value is an interface defined on your device.

Display a list of available interfaces:

Use ... network interface ?to display interface information:

```
(config)> ... network interface ?
```

Interfaces

Additional Configuration

setupip Setup IP
setuplinklocalip Setup Link-local IP

eth1 ETH1 eth2 ETH2 loopback Loopback modem Modem

(config)>

Repeat this step to list additional interfaces.

To limit access based on firewall zones:

```
(config)> add service dns acl zone end value (config)>
```

Where value is a firewall zone defined on your device, or the any keyword.

Display a list of available firewall zones:

Type ... firewall zone ?at the config prompt:

(config)> ... firewall zone ?

Zones: A list of groups of network interfaces that can be referred to by packet filtering rules and access control lists.

Additional Configuration

any

dynamic_routes

edge

external

hotspot

internal

ipsec

loopback

setup

(config)>

Repeat this step to include additional firewall zones.

4. (Optional) Cache negative responses

By default, the device's DNS server caches negative responses. Disabling this option may improve performance on networks with transient DNS results, when one or more DNS servers may have positive results. To disable:

(config)> service dns cache_negative_responses false (config>

5. (Optional) Query all servers

By default, the device's DNS server queries all available DNS servers. Disabling this option may improve performance on networks with transient DNS results, when one or more DNS servers may have positive results. To disable:

(config)> service dns query_all_servers false (config>

6. (Optional) Rebind protection

By default, rebind protection is disabled. If enabled, this prevents upstream DNS servers from returning private IP addresses. To enable:

(config)> service dns stop_dns_rebind false (config)>

7. (Optional) Allow localhost rebinding

By default, localhost rebinding is enabled by default if rebind protection is enabled. This is useful for Real-time Black List (RBL) servers. To disable:

(config)> service dns rebind_localhost_ok false
(config)>

8. (Optional) Fallback server

Configure the IP address of the DNS server to be used in the absence of any other server. The default is **8.8.8.8**.

(config)> service dns fallback_server value (config)>

- 9. (Optional) Add additional DNS servers
 - a. Add a DNS server:

(config)> add service dns server end (config service dns server 0)>

b. Set the IP address of the DNS server:

(config service dns server 0)> address *ip-addr* (config service dns server 0)>

c. To restrict the device's use of this DNS server based on the domain, use the **domain** command. If no domain are listed, then all queries may be sent to this server.

(config service dns server 0)> domain *domain* (config service dns server 0)>

d. (Optional) Set a label for this DNS server:

(config service dns server 0)> label *label* (config service dns server 0)>

- 10. (Optional) Add host names and their IP addresses that the device's DNS server will resolve
 - a. Add a host:

(config)> add service dns host end (config service dns host 0)>

b. Set the IP address of the host:

(config service dns host 0)> address *ip-addr* (config service dns host 0)>

c. Set the host name:

(config service dns host 0)> name *host-name* (config service dns host 0)>

11. Save the configuration and apply the change.

(config)> save
Configuration saved.

1X20 User Guide

689

12. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Show DNS server

You can display status for DNS servers. This command is available only at the Admin CLI.

Command line

Show DNS information

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. Use the show dns command at the system prompt:

3. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

WAN bonding

Digi International Inc. offers a WAN bonding service as a licensed feature.

WAN bonding, a part of SD WAN (Software Defined Wide Area Networking), allows multiple internet connections to be piped together to provide increased throughput. It also provides for assured data delivery by duplicating packets inside the bonded tunnel to insure that latency and connection issues on different internet connections do not result in dropped packets.



WAN bonding also provides seamless failover by automatically using multiple pipes within the bonded tunnel.

The WAN bonding service for your IX20 device must be enabled in Digi Remote Manager.	Contact
your Digi sales representative for information.	

This section	contains the	following	tonics:
11113 35011011	CONTRAINS THE	TOHOWING	tupius.

Use Digi Remote Manager to enable and configure WAN bonding on multiple devices	.692
Configure WAN bonding on your local device	. 697
Show WAN bonding details and statistics	705

Use Digi Remote Manager to enable and configure WAN bonding on multiple devices

Note WAN bonding support must be enabled in Digi Remote Manager. Contact your Digi sales representative for information.


You must also set up the WAN bonding server. This can be done using one of three mechanisms:

- Set up a WAN bonding server on physical hardware or a Virtual Private Server (VPS) in your local environment. See Bondix documentation for instructions.
- Unwired Networks maintains a number of WAN Bonding servers throughout the world, focused mainly on locations in the United States, Europe, and Australia. Contact them for WAN bonding hosting and configuration services.
- Digi Professional Services can setup, manage, and maintain your WAN bonding servers.

You can also setup a trial server at the Bondix website for testing purposes.


To use Remote Manager to enable and configure WAN bonding on multiple devices:

- 1. Add the WAN bonding entitlement to your device in Remote Manager:
 - a. Log into Remote Manager.
 - b. From the Remote Manager main menu, click *** Management** > *** Subscriptions**.
 - c. In the WAN Bonding entitlement card, click and select Assign to Device.

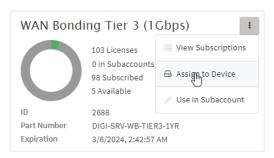


- d. Select the appropriate devices.
- In Remote Manager, create a Configuration template. See the Remote Manager User Guide for instructions.
- 3. For the **Settings** step in the configuration:
 - a. Click Network > SD-WAN > WAN bonding.
 - b. Click the toggle to **Enable** WAN bonding.
 - c. Click to expand Servers.
 - a. Click %to add a server.
 - b. For **Hostname**, type the hostname or IPv4 address of the external server hosting the WAN bonding server.
 - c. (Optional) For **Host Port**, type the port number that the external server uses for the WAN bonding connection. The default is 443.
 - d. (Optional) For Channel UDP Listener Port, type the number of the UDP port for the

- external hosting server. The default is 44343. Repeat procedure to add additional servers.
- d. Select Tunnel username and Tunnel password, and set them to Require override. Later in this procedure we will create an override file that includes the username and password that you created when you configure device-specific tunnel settings on the WAN bonding server:
- e. Select Tunnel username.
- f. From the **Common value** menu, select **Require override**:

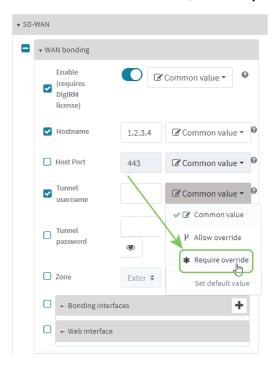

- g. Select for Tunnel password.
- h. From the Common value menu, select Require override:
- i. Configure the device's WAN interfaces that will be bonded:
 - a. ClickNetwork > SD-WAN > WAN bonding > Bonding interfaces.
 - b. Click %to add an interface.

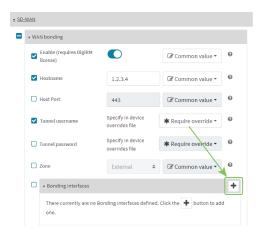

Select Interfaces and select a WAN interface to be bonded.

Note By default, IX20 devices prioritize their WAN Ethernet connection over any WWAN cellular connections. Consider this prioritization if using both wired Ethernet and cellular Internet connections. Make sure to add the highest priority in-use interface(s) to the WAN Bonding settings.

- i. Enable Bonding Proxy to further optimize standard TCP traffic.
- ii. Enable **Encryption** to encrypt the traffic between the client and the WAN bonding server.
- iii. Click to expand Client devices.
 - i. Click Yoto add a new device to the bonding proxy.
 - ii. In the **Device** list, choose the device that needs to be added.
 - iii. Add as many devices as needed to the bonding proxy.
- iv. You can change the **Mode** that the interface will use:
 - Automatic: Automatically sets the mode to Cellular Optimized for Speedmode for cellular, and Ethernet for non-cellular. This is the default mode.
 Cellular Optimized for Speed: A general-purpose configuration suitable for most lines (4G, DSL, etc), with a fair tolerance for packet loss and latency.
 - Cellular Optimized for Latency: Another preset for mobile connections with an even higher focus on latency.
 - Ethernet: A preset for direct Ethernet connections, very sensitive to latency and packet loss.
 - Low Latency: Similar to Ethernet preset, but with higher tolerance for packet loss.
 - **TCP Mode**: Utilizes TCP instead of UDP. Higher throughput rate at the cost of latency. Useful in scenarios where UDP is throttled or blocked.


Repeat for additional interfaces.

For example, if you want to bond a wired WAN Ethernet with a cellular modem, add two bonded interfaces: the ETH1 Ethernet interface and Modem cellular interface.


 a. Click to expand SureLink. You can validate the connection of the WAN Bonding connection by setting up tests, as well as actions to be taken if those tests fail.

- a. Click the toggle to Enable.
- b. (Optional) Change the **Test interval** (default is every 15 minutes) if you want to change the period of time that occurs between tests.
- c. (Optional) For Success condition, change how many tests must pass for SureLink testing to be considered successful. The default is one test must pass.
- d. (Optional) For **Pass threshold**, change how many times every test must pass before WAN bonding is connected and working. The default is 1 time per test.
- e. (Optional) For **Response timeout**, change the maximum allowed time SureLink is to wait for each test response. The default is 15s.
- f. Click to expand **Tests** to add each test you would like SureLink to run to validate the WAN bonding interface connection. You can test the WAN bonding interface using any of the following types:
 - Ping test
 - DNS test
 - HTTP test
 - Test the DNS servers configured for this interface
 - Test the interface status this test has already been created by default and is automatically enabled
 - Custom test
 - TCP connection
 - Test another interface's status
 - i. To create a new test, click % The new test is enabled by default.
 - ii. (Optional) Type a Label to identify the test.
 - iii. (Optional) Enable IPv6 if the test is for this internet protocol.
 - iv. Choose the Test type.
 - v. (Optional) Change the type-specific settings for the option you created.
- g. Click to expand **Recovery actions**. You can choose to do one or more of these actions if any of the tests fail:
 - Change default gateway this action is already created by default and is automatically enabled
 - Restart interface this action is already created by default and is automatically enabled
 - Reset modem
 - Switch to alternate SIM
 - Reboot device
 - Recovery commands
 - Power cycle modem


- i. To create a new recovery action, click % The new test is enabled by default.
- ii. (Optional) Type a Label to identify the recovery action.
- iii. Choose the Recovery type.
- iv. (Optional) Change the **SureLink test failures**, which is the number of failures that must occur for a particular test before the recovery action begins.
- v. (Optional) Change the type-specific settings for the option you created.
- (Optional) For Test interface gateway by pinging, to determine the interface gateway, enter the target IP address to use as the endpoint for traceroute. This is used by the WAN bonding gateway ping test. The default is 8.8.8.8.
- i. Click to expand Advanced settings.
 - (Optional) For **Delayed start**, change the maximum amount of time to wait after system start-up for WAN bonding to obtain an IP address before SureLink begins monitoring. The default is 300s.
 - ii. (Optional) For **Test interface gateway by pinging**, to determine the interface gateway, enter the target IP address to use as the endpoint for traceroute. This is used by the WAN bonding gateway ping test. The default is 8.8.8.8.
- j. Click Save.

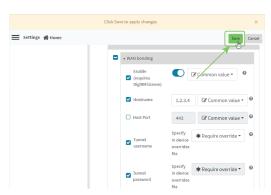

- 4. Create a site-specific settings file for the Tunnel username and Tunnel password options:
 - a. Click Home.

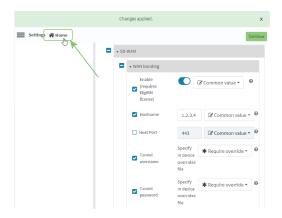

b. Click and select **Download** to download a CSV file to your local filesystem, which you can use to set site-specific settings.

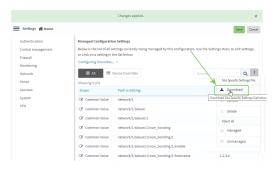

c. Open the CSV file in a spreadsheet editor (such as Excel).

The file consists **key_type** and **key_value** columns, used to identify the device that the site-specific setting applies to, followed by columns for each setting that you designated as **Require site specific settings**.

- key_type is either device_name or device_id.
- key_value is either the device name, or the device ID, depending on the value of key_type.
- d. Include the username and password in the CSV file:



- e. Save and close the CSV file.
- f. In Remote Manager, click and select **9 Upload**. Select the edited CSV file.
- g. Click Continue.
- 5. For the Automation step in the configuration:
 - a. Toggle on Enable Scanning.
 - b. For Action Plan, toggle on Alert and Remediate.
 - c. Click Save.
- 6. To apply these configuration settings immediately to the devices linked to this configuration template, instead of waiting for the next automated scan and remediation to occur:
 - a. From the Remote Manager main menu, click Templates.
 - b. Select the configuration.
 - c. Click Actions > Scan Now.

Configure WAN bonding on your local device

Note WAN bonding support must be enabled in Digi Remote Manager. Contact your Digi sales representative for information.

You must also set up the WAN bonding server. This can be done using one of three mechanisms:

- Set up a WAN bonding server on physical hardware or a Virtual Private Server (VPS) in your local environment. See Bondix documentation for instructions.
- Unwired Networks maintains a number of WAN Bonding servers throughout the world, focused mainly on locations in the United States, Europe, and Australia. Contact them for

WAN bonding hosting and configuration services.

Digi Professional Services can setup, manage, and maintain your WAN bonding servers.

You can also setup a trial server at the Bondix website for testing purposes.

Required configuration items

- Enable the WAN bonding service.
- Hostname for each external server that will host the WAN bonding service.
- Port for each external hosting server that will be used for the WAN bonding service.
- The username and password to authenticate with the hosting service.
- WAN interfaces that will be bonded.
- The password used to authenticate with the web interface.

Additional configuration items

■ The firewall zone for the new bonded interface, if other than External.



- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- a. Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.




The **Configuration** window is displayed.

3. Click Network > SD-WAN > WAN bonding.


Note The WAN bonding service must be enabled for this device in Digi Remote Manager. Contact your Digi sales representative for information.

- 4. Click the toggle to **Enable** WAN bonding.
- 5. Click to expand Servers.

- a. Click %to add a server.
- b. For **Hostname**, type the hostname or IPv4 address of the external server hosting the WAN bonding server.
- c. (Optional) For **Host Port**, type the port number that the external server uses for the WAN bonding connection. The default is 443.
- d. (Optional) For Channel UDP Listener Port, type the number of the UDP port for the external hosting server. The default is 44343.
 - Repeat procedure to add additional servers.
- For Tunnel username and Tunnel password, type the username and password to authenticate with the WAN bondingserver. These values are created when you configure device-specific tunnel settings on the WAN bonding server.
- 7. From the **Common value** menu, select **Require override**:

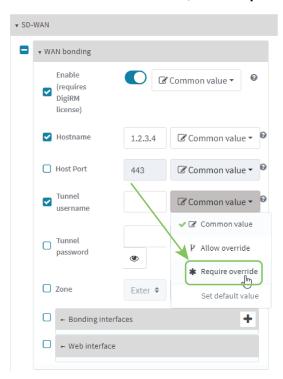

- 8. Select for Tunnel password.
- 9. From the **Common value** menu, select **Require override**:
- 10. For **Zone**, select the firewall zone for the bonded interface. To treat the interface as a normal WAN interface, this would be set at the default of **External**.
- 11. Configure the device's WAN interfaces that will be bonded:
 - a. Click to expand Bonding interfaces.
 - b. Click %to add an interface.

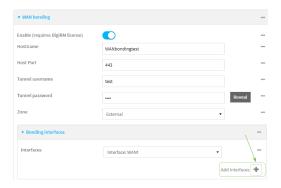

c. For Interfaces, select a WAN interface to be bonded.

Note By default, IX20 devices prioritize their WAN Ethernet connection over any WWAN cellular connections. Consider this prioritization if using both wired Ethernet and cellular Internet connections. Make sure to add the highest priority in-use interface(s) to the WAN Bonding settings.

- i. Enable Bonding Proxy to further optimize standard TCP traffic.
- ii. Enable **Encryption** to encrypt the traffic between the client and the WAN bonding server.
- iii. Click to expand Client devices.
 - i. Click Yoto add a new device to the bonding proxy.
 - ii. In the **Device** list, choose the device that needs to be added.
 - iii. Add as many devices as needed to the bonding proxy.
- iv. For **Mode**, select the mode that the interface will use:
 - Automatic: Automatically sets the mode to Cellular Optimized for Speed-mode for cellular, and Ethernet for non-cellular. This is the default mode.
 - **Cellular Optimized for Speed**: A general-purpose configuration suitable for most lines (4G, DSL, etc), with a fair tolerance for packet loss and latency.
 - **Cellular Optimized for Latency**: Another preset for mobile connections with an even higher focus on latency.
 - Ethernet: A preset for direct Ethernet connections, very sensitive to latency and packet loss.
 - Low Latency: Similar to Ethernet preset, but with higher tolerance for packet loss.
 - **TCP Mode**: Utilizes TCP instead of UDP. Higher throughput rate at the cost of latency. Useful in scenarios where UDP is throttled or blocked.

Repeat for additional interfaces.

For example, if you want to bond a wired WAN Ethernet with a cellular modem, add two bonded interfaces: the ETH1 Ethernet interface and Modem cellular interface.

1. Configure authentication for the WAN bonding web interface.

The WAN bonding web interface can be used to view detailed WAN bonding statistics and to fine-tune the WAN bonding process, and is accessed via a web browser at http://ip-

address:8088, where ip-address is the IP address of the local IX20 device.

- a. Click to expand Web interface.
- b. For **Interface password**, type the unique password to log into the WAN bonding web interface.
- 2. Enable **Prefer TCP** to use TCP channels, if the server supports them. This is useful if UDP is blocked or throttled.
- 3. Click to expand **SureLink**. You can validate the connection of the WAN Bonding connection by setting up tests, as well as actions to be taken if those tests fail.
 - a. Click the toggle to Enable.
 - b. (Optional) Change the **Test interval** (default is every 15 minutes) if you want to change the period of time that occurs between tests.
 - c. (Optional) For Success condition, change how many tests must pass for SureLink testing to be considered successful. The default is one test must pass.
 - d. (Optional) For **Pass threshold**, change how many times every test must pass before WAN bonding is connected and working. The default is 1 time per test.
 - e. (Optional) For **Response timeout**, change the maximum allowed time SureLink is to wait for each test response. The default is 15s.
 - f. Click to expand **Tests** to add each test you would like SureLink to run to validate the WAN bonding interface connection. You can test the WAN bonding interface using any of the following types:
 - Ping test
 - DNS test
 - HTTP test
 - Test the DNS servers configured for this interface
 - Test the interface status this test has already been created by default and is automatically enabled
 - Custom test
 - TCP connection
 - Test another interface's status
 - i. To create a new test, click 1/2 The new test is enabled by default.
 - ii. (Optional) Type a Label to identify the test.
 - iii. (Optional) Enable **IPv6** if the test is for this internet protocol.
 - iv. Choose the Test type.
 - v. (Optional) Change the type-specific settings for the option you created.
 - g. Qick to expand **Recovery actions**. You can choose to do one or more of these actions if any of the tests fail:
 - Change default gateway this action is already created by default and is automatically enabled
 - Restart interface this action is already created by default and is automatically enabled
 - Reset modem

- Switch to alternate SIM
- Reboot device
- Recovery commands
- Power cycle modem
- i. To create a new recovery action, click $\frac{1}{2}$ The new test is enabled by default.
- ii. (Optional) Type a **Label** to identify the recovery action.
- iii. Choose the Recovery type.
- iv. (Optional) Change the **SureLink test failures**, which is the number of failures that must occur for a particular test before the recovery action begins.
- v. (Optional) Change the type-specific settings for the option you created.
- (Optional) For Test interface gateway by pinging, to determine the interface gateway, enter the target IP address to use as the endpoint for traceroute. This is used by the WAN bonding gateway ping test. The default is 8.8.8.8.
- i. Click to expand Advanced settings.
 - (Optional) For **Delayed start**, change the maximum amount of time to wait after system start-up for WAN bonding to obtain an IP address before SureLink begins monitoring. The default is 300s.
 - ii. (Optional) For **Test interface gateway by pinging**, to determine the interface gateway, enter the target IP address to use as the endpoint for traceroute. This is used by the WAN bonding gateway ping test. The default is 8.8.8.8.
- 12. Click Apply to save the configuration and apply the change.

Command line

- Select the device in Remote Manager and click Actions > Open Console, or log into the IX20 local command line as a user with full Admin access rights.
 - Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
- 2. At the command line, type **config** to enter configuration mode:

> config		
(config)>		

3. Enable the WAN bonding service:

(config)> network sdwan wan_bonding enable true (config)>

Note The WAN bonding service must be enabled for this device in Digi Remote Manager. Contact your Digi sales representative for information.

4. Add a new external server, which will host the WAN bonding service. Add as many servers as needed.

```
(config)> network sdwan wan_bonding servers
(config network sdwan wan_bonding servers)> add end
(config network sdwan wan_bonding servers 0)>
```

5. Set the hostname or IPv4 address of the external server hosting the WAN bonding service:

(config network sdwan wan_bonding servers 0)>hostname-or-IPv4-address (config)>

6. (Optional) Set the port number that the external server uses for the WAN bonding connection:

```
(config network sdwan wan_bonding servers 0)>host_port value (config)>
```

Allowed values are any port number, or the keyword any. The default is 443.

7. (Optional) Set the Channel UDP Listener Port:

```
(config network sdwan wan_bonding servers 0)>udpListenerPort value (config)>
```

Allowed values are any Channel UDP Listener Port, or the keywork **any**. The default is **44344**. Add as many external servers as needed.

8. Set the username and password to authenticate with the WAN bonding service:

```
(config)> network sdwan wan_bonding username username (config)> network sdwan wan_bonding password password (config)>
```

- 9. Set the firewall zone for this interface. To treat the interface as a normal WAN interface, this would be left at the default of **external**.
 - a. Use the ?to determine available zones:

```
(config)> network sdwan wan_bonding zone?
```

Zone: The zone for the new bonded interface. To treat the interface as a typical WAN interface, this should be set to External.

```
Format:
any
dynamic_routes
edge
external
hotspot
internal
ipsec
loopback
setup
```

Default value: external Current value: external

(config)>

b. Set the zone:

(config)> network sdwan wan_bonding zone zone (config)>

10. Configure the device's WAN interfaces that will be bonded:

a. Add the first interface:

(config)> add network sdwan wan_bonding interfaces end (config network sdwan wan_bonding interfaces 0)>

i. Set the interface:

i. Use the ?to determine available interfaces:

(config network sdwan wan_bonding interfaces 0)> interface ?

Interface: The network interface.

Format:

/network/interface/setupip

/network/interface/setuplinklocalip

/network/interface/eth1

/network/interface/eth2

/network/interface/loopback

Current value:

(config network sdwan wan_bonding interfaces 0)> interface

ii. Set the interface. For example:

(config network sdwan wan_bonding interfaces 0)> interface /network/interface/eth1 (config network sdwan wan_bonding interfaces 0)>

ii. (Optional) Set the mode for the interface:

(config network sdwan wan_bonding interfaces 0)> mode *value* (config network sdwan wan_bonding interfaces 0)>

where value is one of:

- auto: Automatically sets the mode to Cellular Optimized for Speed-mode for cellular, and Ethernet for non-cellular. This is the default mode.
- mobileAggressive: A general-purpose configuration suitable for most lines (4G, DSL, etc), with a fair tolerance for packet loss and latency.
- mobileLowLatency: Another preset for mobile connections with an even higher focus on latency.
- ethernet: A preset for direct Ethernet connections, very sensitive to latency and packet loss.
- lowLatency: Similar to Ethernet preset, but with higher tolerance for packet loss.
- genericTCP: Utilizes TCP instead of UDP. Higher throughput rate at the cost of latency. Useful in scenarios where UDP is throttled or blocked.

- b. Repeat for each additional interface.
- 11. (Optional) Enable **Encryption** to encrypt the traffic between the client and the WAN bonding server.

12. Enable **Bonding Proxy** to further optimize standard TCP traffic.

(config network sdwan wan_bonding)
(config)>

13. Set the password for authentication to the WAN bonding web interface.

The WAN bonding web interface can be used to view detailed WAN bonding statistics and to fine-tune the WAN bonding process, and is accessed via a web browser at http://ip-address:8088, where ip-address is the IP address of the local IX20 device.

(config)> network sdwan wan_bonding web_interface password password (config)>

14. Enable **SureLink** to validate the WAN Bonding connection by adding tests, and then the actions to be taken if those tests fail.

(config) > network sdwan wan_bonding surelink) >

Parameters

enable	false	Enable
interval	15m	Test interval
pass_threshold	1	Pass threshold
success_condition	one	Success condition
timeout	15s	Response timeout

Additional Configuration

actions Recovery actions
advanced Advanced settings
tests Tests

1. Save the configuration and apply the change.

(config)> save Configuration saved.

2. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Show WAN bonding details and statistics

You can display the status of WAN bonding for a particular device in the Web UI or command line. You can obtain statistics about WAN bonding for multiple devices in Digi Remote Manager.

Digi Remote Manager

To see WAN bonding statistics for multiple devices in Digi Remote Manager:

- 1. Log in to Digi Remote Manager.
- 2. Click Devices.
- 3. In the Devices list, click the device you want to view.

The Details page displays.

- 4. Click the Metrics tab.
- 5. Click Sdwan Details to expand.

The WAN bonding details display.



- 1. Log into the IX20 WebUI as a user with full Admin access rights.
- 2. On the main menu, click Status.
- 3. In **Networking**, click **WAN Bonding** to expand the settings.

The WAN bonding details display.

Command line

To show WAN bonding information:

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. Use the show wan-bonding command at the system prompt:

> show wan-bonding

WAN Bonding Status

Status : Connected

Server Address : 133.183.203.237

Tunnel Username : test1

Tunnel Address : 146.78.40.226

WAN Bonded Interfaces

Channel #0: : eth1 (eth1)

Channel #1: : modem (wwan0.1)

>

3. Use the show wan-bonding command to view additional status and statistics:

> show wan-bonding verbose

WAN Bonding Status

Tunnel Info

Status connected

Endpoint 133.183.203.237:443 (#0)

Network 146.78.40.226/255.255.255.0 gw 146.78.40.1

Total Bytes 0 in, 427 out

Channel Online 2

Channel #0 (eth1)

Enabled Yes

Status "connected"

Uptime 5 sec

Latency 41ms (current) / 41ms (idle)

In Transit 0 Last Error null

Current (1sec) RX 4 sent, 0 lost; TX 5 sent, 0 lost, 4 acked Total RX 16 sent, 0 lost; TX 18 sent, 0 lost, 18 acked

Channel #1 (wwan0.1)

Enabled Yes

Status "connected"

Uptime 5 sec

Latency 55ms (current) / 57ms (idle)

In Transit 0 Last Error null

Current (1sec) RX 4 sent, 0 lost; TX 4 sent, 0 lost, 4 acked Total RX 17 sent, 0 lost; TX 19 sent, 0 lost, 19 acked

>

4. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Simple Network Management Protocol (SNMP)

Simple Network Management Protocol (SNMP) is a protocol for remotely managing and monitoring network devices. Network administrators can use the SNMP architecture to manage nodes, including servers, workstations, routers, switches, hubs, and other equipment on an IP network, manage network performance, find and solve network problems, and plan for network growth.

The IX20 device supports both SNMPv3 and SNMPv2c in read-only mode. Both are disabled by default. SNMPv1 is not supported.

SNMP Security

By default, the IX20 device automatically blocks SNMP packets from being received over WAN and LAN interfaces. As a result, if you want a IX20 device to receive SNMP packets, you must configure the SNMP access control list to allow the device to receive the packets. See Configure Simple Network Management Protocol (SNMP).

Standard and custom Management Information Bases (MIB)

The standard MIB defines the properties and access permissions for various managed objects so that you can query standard information about a device, like *system contact* or *system location* via SNMP monitoring. The custom MIB defines the unique properties and access permissions not found in the standard MIB. To view the MIB list, see <u>Download MIBs</u>.

Dynamic SNMP

To expose a specific device property for SNMP monitoring that is not included in the standard MIB-properties like *serial number*, *system firmware version*, *hardware model name*, and *dynamic properties* - you can query the runtime database for the property value and then add a Dynamic SNMP. The device property is added to the custom MIB.

Configure Simple Network Management Protocol (SNMP)

Required configuration items

- Enable SNMP.
- Firewall configuration using access control to allow remote connections to the SNMP agent.
- The user name and password used to connect to the SNMP agent.

Additional configuration items

- The port used by the SNMP agent.
- Authentication type (either MD5 or SHA1).
- Privacy protocol (either DES or AES128).
- Privacy passphrase, if different that the SNMP user password.
- Enable Multicast DNS (mDNS) support.

To configure the SNMP agent on your IX20 device:

₹ Web

- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- a. Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The Configuration window is displayed.

- 3. Click Services > SNMP.
- 4. Click Enable.
- 5. Click Access control list to configure access control:
 - To limit access to specified IPv4 addresses and networks:
 - a. Click IPv4 Addresses.
 - b. For Add Address, click Yo
 - c. For Address, enter the IPv4 address or network that can access the device's SNMP agent. Allowed values are:
 - A single IP address or host name.
 - A network designation in CIDR notation, for example, 192.168.1.0/24.
 - any: No limit to IPv4 addresses that can access the SNMP agent.
 - d. Click Ybagain to list additional IP addresses or networks.
 - To limit access to specified IPv6 addresses and networks:
 - a. Click IPv6 Addresses.
 - b. For Add Address, click Yo
 - c. For Address, enter the IPv6 address or network that can access the device's SNMP agent. Allowed values are:
 - A single IP address or host name.
 - A network designation in CIDR notation, for example, 2001:db8::/48.
 - any: No limit to IPv6 addresses that can access the SNMP agent.
 - d. Click Ybagain to list additional IP addresses or networks.

- To limit access to hosts connected through a specified interface on the device:
 - a. Click Interfaces.
 - b. For **Add Interface**, click 1/90
 - c. For **Interface**, select the appropriate interface from the dropdown.
 - d. Click % again to allow access through additional interfaces.
- To limit access based on firewall zones:
 - a. Click Zones. By default, there are three firewall zones already configured: Internal, Edge, and IPsec.
 - b. For **Add Zone**, click Υ_o
 - For **Zone**, select the appropriate firewall zone from the dropdown.
 See Firewall configuration for information about firewall zones.
 - d. Click % again to allow access through additional firewall zones.
- 6. Type the **Username** used to connect to the SNMP agent.
- 7. Type the **Password** used to connect to the SNMP agent.
- 8. (Optional) For Port, type the port number. The default is 161.
- (Optional) Multicast DNS (mDNS) is disabled by default. mDNS is a protocol that resolves host names in small networks that do not have a DNS server. To enable mDNS, click Enable mDNS.
- (Optional) Select the Authentication type, either MD5 or SHA1. The default is MD5.
- 11. (Optional) Type the Privacy passphrase. If not set, the password, entered above, is used.
- 12. (Optional) Select the Privacy protocol, either DES or AES128. The default is DES.
- 13. (Optional) Add Dynamic SNMP Properties to expose specific details about your device for SNMP monitoring that are not included in the standard MIB. To query the runtime database to find the device property you want to expose to SNMP, see Use digidevice runtime to access the runtime database.
 - a. Click 1/2
 - b. For **Property**, type the device property (e.g., "system.cpu_temp" or "system.name").
 - c. Click % again to add another dynamic SNMP property.
- (Optional) Enable read-only access to SNMP version 2c.
 - a. Click **Enable version 2c access** to enable read-only access to SNMP version 2c.
 - b. The **Community Name** field displays. The default name is **public**. You can change the name if needed.
- 15. Click **Apply** to save the configuration and apply the change.

Command line

- 1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.
 - Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type config to enter configuration mode:

> config (config)>

3. Enable the SNMP agent:

(config)> service snmp enable true (config)>

- 4. Configure access control:
 - To limit access to specified IPv4 addresses and networks:

(config)> add service snmp acl address end *value* (config)>

Where value can be:

- · A single IP address or host name.
- A network designation in CIDR notation, for example, 192.168.1.0/24.
- any: No limit to IPv4 addresses that can access the SNMP service.

Repeat this step to list additional IP addresses or networks.

To limit access to specified IPv6 addresses and networks:

(config)> add service snmp acl address6 end *value* (config)>

Where value can be:

- · A single IP address or host name.
- A network designation in CIDR notation, for example, 2001:db8::/48.
- any: No limit to IPv6 addresses that can access the SNMP service.

Repeat this step to list additional IP addresses or networks.

To limit access to hosts connected through a specified interface on the IX20 device:

(config)> add service snmp acl interface end *value* (config)>

Where value is an interface defined on your device.

Display a list of available interfaces:

Use ... network interface ?to display interface information:

(config)> ... network interface ?

Interfaces

Additional Configuration

_ _ _ _

setupip Setup IP

setuplinklocalip Setup Link-local IP

eth1 ETH1
eth2 ETH2
loopback Loopback
modem Modem

(config)>

Repeat this step to list additional interfaces.

To limit access based on firewall zones:

(config)> add service snmp acl zone end *value* (config)>

Where value is a firewall zone defined on your device, or the any keyword.

Display a list of available firewall zones:

Type ... firewall zone ?at the config prompt:

```
(config)> ... firewall zone ?
```

Zones: A list of groups of network interfaces that can be referred to by packet filtering rules and access control lists.

Additional Configuration

any

dynamic_routes

edge

external

hotspot

internal

ipsec

loopback

setup

(config)>

Repeat this step to include additional firewall zones.

5. Set the name of the user that will be used to connect to the SNMP agent.

(config)> service snmp username *name* (config)>

6. Set the password for the user that will be used to connect to the SNMP agent:

(config)> service snmp password *pwd* (config)>

7. (Optional) Set the port number for the SNMP agent. The default is 161.

(config)> service snmp port port
(config)>

8. (Optional) Configure Multicast DNS (mDNS)

mDNS is a protocol that resolves host names in small networks that do not have a DNS server. For the SNMP agent, mDNS is disabled by default. To enable:

(config)> service snmp mdns enable true (config>

9. (Optional) Set the authentication type. Allowed values are MD5 or SHA1. The default is MD5.

(config)> service snmp auth_type SHA1
(config)>

(Optional) Set the privacy passphrase. If not set, the password, entered above, is used.

(config)> service snmp privacy *pwd* (config)>

11. (Optional) Set the privacy protocol, either DES or AES128. The default is DES.

(config)> service snmp privacy_protocol AES128 (config)>

12. (Optional) Add **Dynamic SNMP Properties** to expose specific details about your device for SNMP monitoring that are not included in the standard MIB.

(config) service snmp runt> add end *value* (config)>

Where *value* can be any element in the runtime table you want to expose to SNMP monitoring (for example, "system.cpu_temp" or "system.name").

13. (Optional) Enable read-only access to to SNMP version 2c.

(config)> service snmp enable 2c true (config)>

The community name is set to **public** by default. You can change it if desired.

(config)> service snmp community_name <name>
(config)>

Where name is the new community name.

14. Save the configuration and apply the change.

(config)> save
Configuration saved.

15. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Download MIBs

This procedure is available from the WebUI only.

Required configuration items

■ Enable SNMP.

To download a .zip archive of the SNMP MIBs supported by this device:



- 1. Log into the IX20 WebUI as a user with full Admin access rights.
- 2. Enable SNMP.

See Configure Simple Network Management Protocol (SNMP) for information about enabling and configuring SNMP support on the IX20 device.

3. On the main menu, click Status. Under Services, click SNMP.

Note If you have recently enabled SNMP and the SNMP option is not visible, refresh your browser.



The **SNMP** page is displayed.



4. Click Download.

Location information

Your IX20 device can be configured to use the following location sources:

In conjunction with the CORE modem (models CM07 or CMG4), the modem's internal Global Navigation Satellite System (GNSS) module provides information about the current location of the device.

- User-defined static location.
- Location messages forwarded to the device from other location-enabled devices.

By default, the modem's internal GNSS module is enabled.

You can also configure your IX20 device to forward location messages, either from the IX20 device or from external sources, to a remote host. Additionally, the device can be configured to use a geofence, to allow you to determine actions that will be taken based on the physical location of the device.

This section contains the following topics:

Enable modem GNSS support	716
Configure the device to use a user-defined static location	
Configure the device to accept location messages from external sources	720
Forward location information to a remote host	724
Configure geofencing	730
Show location information	

Enable modem GNSS support

Note GNSS support is only available on the CORE modems that integrate GNSS functionality, which include the CM07 and the CMG4 models.

To enable GNSS support on your IX20 device that uses either the CM07 or the CMG4 CORE modem:



- Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The Configuration window is displayed.

- 3. Click Services > Location > Location sources > modem.
- 4. (Optional) Type a Label for the Modem GNSS location source.
- 5. For **Type of location source**, leave the selection at **Modem GNSS**.
- Click Enable the location source to disable the GNSS receiver, or to enable it if it has been disabled.
- 7. Alternatively, you can also delete the **modem** location source:
 - a. Click the menu icon (...) next to the modem location source.
 - b. Click Delete.



8. Click Apply to save the configuration and apply the change.

Command line

Select the device in Remote Manager and click Actions > Open Console, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

- 3. Enable or disable the modem GNSS module:
 - Use the show command to determine the index number of the modem GNSS location source:

```
(config)> show service location source
0
enable true
no label
type modem
(config)>
```

- b. Use the index number to enable or disable the module:
 - To enable the module:

```
(config)> service location source 0 enable true (config)>
```

To disable the module:

```
(config)> service location source 0 enable false (config)>
```

Alternatively, you can use the index number to delete the USB location source:

```
(config)> del service location 0
(config)>
```

4. (Optional) Set a label for this location source:

```
(config)> service location source 0 label "label" (config)>
```

5. Save the configuration and apply the change.

```
(config)> save
Configuration saved.
>
```

6. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configure the device to use a user-defined static location

You can configured your IX20 device to use a user-defined static location.



- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- a. Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

- Click Services > Location > Location sources.
- 4. Click %to add a location source.
- 5. (Optional) Type a Label for this location source.
- 6. For Type of location source, select User-defined location.
- 7. The location source is enabled by default. Click **Enable the location source** to disable the location source, or to enable it if it has been disabled.
- 8. For **Latitude**, type the latitude of the device. Allowed values are **-90** and **90**, with up to six decimal places.
- 9. For **Longitude**, type the longitude of the device. Allowed values are **-180** and **180**, with up to six decimal places.
- For Attitude, type the altitude of the device. Allowed values are an integer followed by m or km, for example, 100m or 1km.
- 11. Click Apply to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

> config (config)>

3. Add a location source:

(config) > add service location source end (config service location source 1) >

The location source is enabled by default. To disable:

(config service location source 1)> enable false (config service location source 1)>

4. (Optional) Set a label for this location source:

(config service location source 1)> label "label" (config)>

5. Set the **type** of location source to **user_defined**:

(config service location source 1)> type user_defined (config service location source 1)>

6. Set the latitude of the device:

(config service location source 1 coordinates latitude *int* (config service location source 1)>

where int is any integer between -90 and 90, with up to six decimal places.

7. Set the longitude of the device:

(config service location source 1 coordinates longitude *int* (config service location source 1)>

where int is any integer between -180 and 180, with up to six decimal places.

8. Set the altitude of the device:

(config service location source 1 coordinates altitude *alt* (config service location source 1)>

Where alt is an integer followed by m or km, for example, 100m or 1km.

9. Save the configuration and apply the change.

(config)> save Configuration saved. >

10. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configure the device to accept location messages from external sources

You can configure the IX20 device to accept NMEA and TAIP messages from external sources. For example, location-enabled devices connected to the IX20 device can forward their location information to the device, and then the IX20 device can serve as a central repository for this location information and forward it to a remote host. See Forward location information to a remote host for information about configuring the IX20 device to forward location messages.

This procedure configures a UDP port on the IX20 device that will be used to listen for incoming messages.

Required configuration items

- The location server must be enabled.
- UDP port that the IX20 device will listen to for incoming location messages.
- Access control list configuration to provide access to the port through the firewall.

To configure the device to accept location messages from external sources:



- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

- 3. Click Services > Location > Location sources.
- 4. Click %to add a location source.
- 5. (Optional) Type a Label for this location source.
- 6. For Type of location source, select Server.

7. For **Location server port**, type the number of the UDP port that will receive incoming location messages.

- 8. Click Access control list to configure access control:
 - To limit access to specified IPv4 addresses and networks:
 - a. Click IPv4 Addresses.
 - b. For Add Address, click Yo
 - c. For Address, enter the IPv4 address or network that can access the device's location server UDP port. Allowed values are:
 - · A single IP address or host name.
 - A network designation in CIDR notation, for example, 192.168.1.0/24.
 - any: No limit to IPv4 addresses that can access the location server UDP port.
 - d. Click Ybagain to list additional IP addresses or networks.
 - To limit access to specified IPv6 addresses and networks:
 - a. Click IPv6 Addresses.
 - b. For Add Address, click Yo
 - c. For Address, enter the IPv6 address or network that can access the device's location server UDP port. Allowed values are:
 - · A single IP address or host name.
 - A network designation in CIDR notation, for example, 2001:db8::/48.
 - any: No limit to IPv6 addresses that can access the location server UDP port.
 - d. Click Ybagain to list additional IP addresses or networks.
 - To limit access to hosts connected through a specified interface on the device:
 - a. Click Interfaces.
 - b. For **Add Interface**, click %
 - c. For **Interface**, select the appropriate interface from the dropdown.
 - d. Click % again to allow access through additional interfaces.
 - To limit access based on firewall zones:
 - a. Click Zones. By default, there are three firewall zones already configured: Internal, Edge, and IPsec.
 - b. For **Add Zone**, click **Y**_o
 - For **Zone**, select the appropriate firewall zone from the dropdown.
 See Firewall configuration for information about firewall zones.
 - d. Click Ybagain to allow access through additional firewall zones.
- 9. Click **Apply** to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type config to enter configuration mode:

> config (config)>

3. Add a location source:

(config)> add service location source end (config service location source 1)>

4. (Optional) Set a label for this location source:

(config service location source 1)> label "label" (config service location source 1)>

5. Set the **type** of location source to **server**:

(config service location source 1)> type server (config service location source 1)>

6. Set the UDP port that will receive incoming location messages.

(config service location source 1)> server port *port* (config service location source 1)>

- 7. Click Access control list to configure access control:
 - To limit access to specified IPv4 addresses and networks:

(config)> add service location source 1 acl address end *value* (config)>

Where value can be:

- · A single IP address or host name.
- A network designation in CIDR notation, for example, 192.168.1.0/24.
- any: No limit to IPv4 addresses that can access the location server UDP port.

Repeat this step to list additional IP addresses or networks.

To limit access to specified IPv6 addresses and networks:

(config)> add service location source 1 acl address6 end *value* (config)>

Where *value* can be:

- · A single IP address or host name.
- A network designation in CIDR notation, for example, 2001:db8::/48.
- any: No limit to IPv6 addresses that can access the location server UDP port.

Repeat this step to list additional IP addresses or networks.

■ To limit access to hosts connected through a specified interface on the IX20 device:

(config)> add service location source 1 acl interface end *value* (config)>

Where value is an interface defined on your device.

Display a list of available interfaces:

Use ... network interface ?to display interface information:

Repeat this step to list additional interfaces.

Modem

To limit access based on firewall zones:

modem

(config)>

```
(config)> add service location source 1 acl zone end value (config)>
```

Where value is a firewall zone defined on your device, or the any keyword.

Display a list of available firewall zones:

Type ... firewall zone ?at the config prompt:

```
(config)> ... firewall zone ?
```

Zones: A list of groups of network interfaces that can be referred to by packet filtering rules and access control lists.

Repeat this step to include additional firewall zones.

(config)>

8. Save the configuration and apply the change.

(config)> save Configuration saved.

>

2. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Forward location information to a remote host

You can configure location clients on the IX20 device that forward location messages in either NMEA or TAIP format to a remote host.

Required configuration items

- Enable the location service.
- The hostname or IP address of the remote host to which the location messages will be forwarded.
- The communication protocol, either TCP or UDP.
- The destination port on the remote host to which the messages will be forwarded.
- Message protocol type of the messages being forwarded, either NMEA or TAIP.

Additional configuration items

- Additional remote hosts to which the location messages will be forwarded.
- Location update interval, which determines how often the device will forward location information to the remote hosts.
- A description of the remote hosts.
- Specific types of NMEA or TAIP messages that should be forwarded.
- If the message protocol is NMEA, configure a talker ID to be used for all messages.
- Text that will be prepended to the forwarded message.
- A vehicle ID that is used in the TAIP ID message and can also be prepended to the forwarded message.

Configure the IX20 device to forward location information:



- Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.

- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

- 3. Click Services > Location > Destination servers.
- 4. For Add destination server, click %
- 5. (Optional) For **Label**, type a description of the location destination server.
- For **Destination server**, enter the hostname or IP address of the remote host to which location messages will be sent.
- For **Destination server port**, enter the UDP or TCP port on the remote host to which location messages will be sent.
- 8. For Communication protocol, select either UDP or TCP.
- For Forward interval multiplier, select the number of Location update intervals to wait before
 forwarding location data to this server. See Configure the location service for more
 information about setting the Location update interval.
- For NMEA filters, select the filters that represent the types of messages that will be forwarded. By default, all message types are forwarded.
 - To remove a filter:
 - a. Click the down arrow (<) next to the appropriate message type.
 - b. Click Delete.
 - To add a message type:
 - a. For Add NMEA filter or Add TAIP filter, click 1/2
 - b. Select the filter type. Allowed values are:
 - GGA: Reports time, position, and fix related data.
 - GLL: Reports position data: position fix, time of position fix, and status.
 - GSA: Reports GPS DOP and active satellites.
 - GSV: Reports the number of SVs in view, PRN, elevation, azimuth, and SNR.
 - RMC: Reports position, velocity, and time.
 - VTG: Reports direction and speed over ground.
- 11. For **TAP filters**, select the filters that represent the types of messages that will be forwarded. By default, all message types are forwarded.
 - To remove a filter:
 - a. Click the down arrow (<) next to the appropriate message type.
 - b. Click Delete.

- To add a message type:
 - a. For Add NMEA filter or Add TAIP filter, click 1/2
 - b. Select the filter type. Allowed values are:
 - AL: Reports altitude and vertical velocity.
 - **CP**: Compact position: reports time, latitude, and longitude.
 - ID: Reports the vehicle ID.
 - **LN**: Long navigation: reports the latitude, longitude, and altitude, the horizontal and vertical speed, and heading.
 - PV: Position/velocity: reports the latitude, longitude, and heading.
- For Outgoing message type, select either NMEA or TAIP for the type of message that the device will forward to a remote host.

(Optional) If **NMEA** is selected:

Select a Talker ID.

The talker ID is a two-character prefix in the NMEA message that identifies the source type. The talker ID set here will override the talker ID from all sources, and all forwarded sentences will use the configured ID. The default setting is **Default**, which means that the talker ID provided by the source will be used.

- b. Determine the Behavior when fix is invalid:
 - None: No messages are sent.
 - Empty: Send messages with empty fields.
 - Last fix: Send messages with information from the last valid fix.
- 13. (Optional) For **Prepend text**, enter text to prepend to the forwarded message. Two variables can be included in the prepended text:
 - %s: Includes the IX20 device's serial number in the prepended text.
 - %v: Includes the vehicle ID in the prepended text.

For example, to include both the device's serial number and vehicle ID in the prepend message, you can enter the following in the **Prepend** field:

%s %v			

- 14. Type a four-digit alphanumeric **Vehicle ID** that will be included with to location messages. If no vehicle ID is configured, this setting defaults to 0000.
- 15. Click **Apply** to save the configuration and apply the change.

Command line

Select the device in Remote Manager and click Actions > Open Console, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

> config	
(config)>	

3. Add a remote host to which location messages will be sent:

(config)> add service location forward end (config service location forward 0)>

4. Set the hostname or IP address of the remote host to which location messages will be sent:

(config service location forward 0)> server *host* (config service location forward 0)>

5. Set the communication protocol to either **upd** or **tcp**:

(config service location forward 0)> protocol *protocol* (config service location forward 0)>

6. Set the TCP or UDP port on the remote host to which location messages will be sent:

(config service location forward 0)> server_port 8000 (config service location forward 0)>

 Set the number of Location update intervals to wait before forwarding location data to this server. See Configure the location service for more information about setting the Location update interval.

(config service location forward 0)> interval_multiplier int (config service location forward 0)>

8. Set the protocol type for the messages. Allowed values are taip or nmea; the default is taip:

(config service location forward 0)> type nmea (config service location forward 0)>

(Optional) If the protocol type is set to **nmea**:

a. Configure a Talker ID.

The talker ID is a two-character prefix in the NMEA message that identifies the source type. The talker ID set here will override the talker ID from all sources, and all forwarded sentences will use the configured ID.

i. Use the ?to determine available talker IDs:

(config service location forward 0)> talker_id?

Talker ID: Setting a talker ID will override the talker ID from all remote sources, and all forwarded sentences from remote sources will use the configured ID.

Format:

Default

GΑ

GB

GΙ

GL

GN

GP

GQ

Default value: Default Current value: Default

(config service location forward 0)>

ii. Set the talker ID:

(config service location forward 0)> talker_id *value* (config service location forward 0)>

The default setting is **Default**, which means that the talker ID provided by the source will be used.

b. Determine the behavior when fix is invalid:

(config service location forward 0)> no_fix *value* (config service location forward 0)>

where value is one of:

- none: No messages are sent.
- empty: Send messages with empty fields.
- last_fix: Send messages with information from the last valid fix.

The default is empty.

- (Optional) Set the text to prepend to the forwarded message. Two variables can be included in the prepended text:
 - %s: Includes the IX20 device's serial number in the prepended text.
 - %v: Includes the vehicle ID in the prepended text.

(config service location forward 0)> prepend __|%s|__|%v|__ (config service location forward 0)>

10. (Optional) Set the vehicle ID.

Allowed value is a four digit alphanumerical string (for example, 01A3 or 1234). If no vehicle ID is configured, this setting defaults to 0000.

(config service location forward 0)> vehicle-id 1234 (config service location forward 0)>

11. (Optional) Provide a description of the remote host:

(config service location forward 0)> label "Remote host 1" (config service location forward 0)>

- 12. (Optional) Specify types of messages that will be forwarded. Allowed values vary depending on the message protocol type. By default, all message types are forwarded.
 - If the message protocol type is NMEA:

Allowed values are:

- gga: Reports time, position, and fix related data.
- gll: Reports position data: position fix, time of position fix, and status.

- gsa: Reports GPS DOP and active satellites.
- gsv: Reports the number of SVs in view, PRN, elevation, azimuth, and SNR.
- rmc: Reports position, velocity, and time.
- vtg: Reports direction and speed over ground.

To remove a message type:

 Use the **show** command to determine the index number of the message type to be deleted:

(config service location forward 0)> show filter_nmea
0 gga
1 gll
2 gsa
3 gsv
4 rmc
5 vtg
(config service location forward 0)>

 Use the index number to delete the message type. For example, to delete the gsa (index number 2) message type:

```
(config service location forward 0)> del filter_nmea 2 (config service location forward 0)>
```

To add a message type:

a. Change to the filter_nmea node:

```
(config service location forward 0)> filter_nmea (config service location forward 0 filter_nmea)>
```

 Use the add command to add the message type. For example, to add the gsa message type:

```
(config service location forward 0 filter_nmea)> add gsa end (config service location forward 0 filter_nmea)>
```

If the message protocol type is TAIP:

Allowed values are:

- al: Reports altitude and vertical velocity.
- cp: Compact position: reports time, latitude, and longitude.
- id: Reports the vehicle ID.
- **In**: Long navigation: reports the latitude, longitude, and altitude, the horizontal and vertical speed, and heading.
- pv: Position/velocity: reports the latitude, longitude, and heading.

To remove a message type:

a. Use the **show** command to determine the index number of the message type to be deleted:

(config service location forward 0)> show filter_taip
0 al
1 cp
2 id
3 ln
4 pv

b. Use the index number to delete the message type. For example, to delete the **id** (index number 2) message type:

(config service location forward 0)> del filter_taip 2 (config service location forward 0)>

To add a message type:

a. Change to the filter_taip node:

(config service location forward 0)>

(config service location forward 0)> filter_taip (config service location forward 0 filter_taip)>

 Use the add command to add the message type. For example, to add the id message type:

(config service location forward 0 filter_taip)> add id end (config service location forward 0 filter_taip)>

13. Save the configuration and apply the change.

```
(config)> save
Configuration saved.
```

14. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configure geofencing

Geofencing is a mechanism to create a virtual perimeter that allows you configure your IX20 device to perform actions when entering or exiting the perimeter. For example, you can configure a device to factory default if its location service indicates that it has been moved outside of the geofence.

Multiple geofences can be defined for one device, allowing for a complex configuration in which different actions are taken depending on the physical location of the device.

Required configuration items

- Location services must be enabled.
- The geofence must be enabled.
- The boundary type of the geofence, either circular or polygonal.
 - If boundary type is circular, the latitude and longitude of the center point of the circle, and the radius.

- If boundary type is polygonal, the latitude and longitude of the polygon's vertices (a
 vertex is the point at which two sides of a polygon meet). Three vertices will create a
 triangular polygon; four will create a square, etc. Complex polygons can be defined.
- Actions that will be taken when the device's location triggers a geofence event. You can define actions for two types of events:
 - Actions taken when the device enters the boundary of the geofence, or is inside the boundary when the device boots.
 - Actions taken when the device exits the boundary of the geofence, or is outside the boundary when the device boots.

For each event type:

- Determine if the action(s) associated with the event type should be performed when the device boots inside or outside of the geofence boundary.
- The number of update intervals that should take place before the action(s) are taken.

Multiple actions can be configured for each type of event. For each action:

- The type of action, either a factory erase or executing a custom script.
- · If a custom script is used:
 - The script that will be executed.
 - Whether to log output and errors from the script.
 - The maximum memory that the script will have available.
 - Whether the script should be executed within a sandbox that will prevent the script from affecting the system itself.

Additional configuration items

 Update interval, which determines the amount of time that the geofence should wait between polling for updated location data.



- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.


Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

- 3. Click Services > Location > Geofence.
- 4. For **Add Geofence**, type a name for the geofence and click ^γ₂

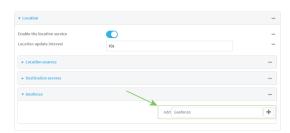

The geofence is enabled by default. To disable, toggle off **Enable**.


5. For **Update interval**, type the amount of time that the geofence should wait between polling for updated location data. The default is one minute.

Allowed values are any number of weeks, days, hours, minutes, or seconds, and take the format *number*{w|d|h|m|s}.


For example, to set **Update interval** to ten minutes, enter **10m** or **600s**.

- 6. For **Boundary type**, select the type of boundary that the geofence will have.
 - If Circular is selected:
 - a. Click to expand Center.
 - b. Type the **Latitude** and **Longitude** of the center point of the circle. Allowed values are:
 - For Latitude, any integer between -90 and 90, with up to six decimal places.
 - For Longitude, any integer between -180 and 180, with up to six decimal places.
 - For Radius, type the radius of the circle. Allowed values are an integer followed by m or km, for example, 100m or 1km.
 - If Polygonal is selected:
 - a. Click to expand Coordinates.
 - b. Click Yoto add a point that represents a vertex of the polygon. A vertex is the point at which two sides of a polygon meet.
 - c. Type the **Latitude** and **Longitude** of one of the vertices of the polygon. Allowed values are:
 - For Latitude, any integer between -90 and 90, with up to six decimal places.
 - For Longitude, any integer between -180 and 180, with up to six decimal places.
 - d. Click %again to add an additional point, and continue adding points to create the desired polygon.

For example, to configure a square polygon around the Digi headquarters, configure a polygon with four points:

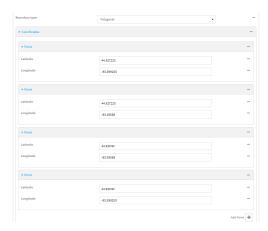

This defines a square-shaped polygon equivalent to the following:

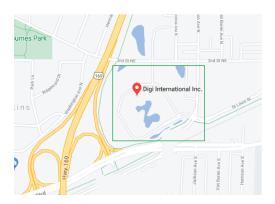


- 7. Define actions to be taken when the device's location triggers a geofence event:
 - To define actions that will be taken when the device enters the geofence, or is inside the geofence when it boots:
 - a. Click to expand On entry.



- b. (Optional) Enable **Bootup action** to configure the device to perform the **On entry** actions if the device is inside the geofence when it boots.
- c. For Number of intervals, type or select the number of Update Intervals that must take place prior to performing the On entry actions.
 - For example, if the **Update interval** is **1m** (one minute) and the **Number of intervals** is **3**, the **On entry** actions will not be performed until the device has been inside the geofence for three minutes.

d. Click to expand Actions.

e. Click %to create a new action.

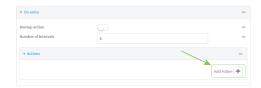

- f. For Action type, select either:
 - Factory erase to erase the device configuration when the action is triggered.
 - Custom script to execute a custom script when the action is triggered.


If Custom script is selected:

- i. Click to expand Custom script.
- ii. For Commands, type the script that will be executed when the action is triggered. If the script begins with #!, then the proceeding file path will be used to invoke the script interpreter. If not, then the default shell will be used.
- iii. Enable Log script output to log the output of the script to the system log.
- iv. Enable Log script errors to log errors from the script to the system log.
- v. (Optional) For **Maximum memory**, type the maximum amount of system memory that will be available for the script and it spawned processes.
 Allowed values are any integer followed by one of the following:
 - b|bytes|KB|k|MB|M|GB|G|TB|T.
 - For example, the allocate one megabyte of memory to the script and its spawned processes, type **1MB** or **1M**.
- vi. **Sandbox** is enabled by default. This prevents the script from adversely affecting the system. If you disable **Sandbox**, the script may render the system unusable.
- vii. Repeat for any additional actions.
- To define actions that will be taken when the device exits the geofence, or is outside the geofence when it boots:
 - a. Click to expand On exit.



- b. (Optional) Enable **Bootup action** to configure the device to perform the **On exit** actions if the device is inside the geofence when it boots.
- c. For **Number of intervals**, type or select the number of **Update Intervals** that must take place prior to performing the **On exit** actions.
 - For example, if the **Update interval** is **1m** (one minute) and the **Number of intervals** is **3**, the **On entry** actions will not be performed until the device has been inside the geofence for three minutes.
- d. Click to expand Actions.

e. Click %to create a new action.

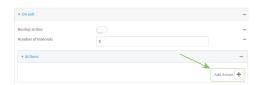

- f. For Action type, select either:
 - Factory erase to erase the device configuration when the action is triggered.
 - Custom script to execute a custom script when the action is triggered.

If Custom script is selected:

- Click to expand Custom script.
- ii. For **Commands**, type the script that will be executed when the action is triggered. If the script begins with #!, then the proceeding file path will be used to invoke the script interpreter. If not, then the default shell will be used.
- iii. Enable Log script output to log the output of the script to the system log.
- iv. Enable Log script errors to log errors from the script to the system log.
- v. (Optional) For **Maximum memory**, type the maximum amount of system memory that will be available for the script and it spawned processes.
 - Allowed values are any integer followed by one of the following: **b|bytes|KB|k|MB|M|GB|G|TB|T**.
 - For example, the allocate one megabyte of memory to the script and its spawned processes, type **1MB** or **1M**.
- vi. **Sandbox** is enabled by default. This prevents the script from adversely affecting the system. If you disable **Sandbox**, the script may render the system unusable.
- vii. Repeat for any additional actions.
- 8. Click Apply to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

f:		
> CONTIO		
> config		
config)>		
contia)>		
g/		

Add a geofence:

(config)> add service location geofence *name* (config service location geofence *name*)>

where name is a name for the geofence. For example:

(config)> add service location geofence test_geofence (config service location geofence test_geofence)>

The geofence is enabled by default. To disable:

(config service location geofence test_geofence)> enable false (config service location geofence test_geofence)>

4. Set the amount of time that the geofence should wait between polling for updated location data:

(config service location geofence test_geofence)> update_interval *value* (config service location geofence test_geofence)>

where *value* is any number of weeks, days, hours, minutes, or seconds, and takes the format *number*(w|d|h|m|s).

For example, to set update interval to ten minutes, enter either 10m or 600s:

(config service location geofence test_geofence)> update_interval 600s (config service location geofence test_geofence)>

The default is 1m (one minute).

5. Set the boundary type for the geofence:

(config service location geofence test_geofence)> boundary *value* (config service location geofence test_geofence)>

where value is either circular or polygonal.

- If boundary is set to circular :
 - a. Set the latitude and longitude of the center point of the circle:

(config service location geofence test_geofence)> center latitude *int* (config service location geofence test_geofence)> center longitude *int* (config service location geofence test_geofence)>

where int is:

- For latitude, any integer between -90 and 90, with up to six decimal places.
- For **longitude**, any integer between **-180** and **180**, with up to six decimal places.
- b. Set the radius of the circle:

(config service location geofence test_geofence)> radius radius (config service location geofence test_geofence)>

where radius is an integer followed by m or km, for example, 100m or 1km.

- If boundary is set to polygonal:
 - a. Set the coordinates of one vertex of the polygon. A vertex is the point at which two sides of a polygon meet.

i. Add a vertex:

(config service location geofence test_geofence)> add coordinates end (config service location geofence test_geofence coordinates 0)>

ii. Set the latitude and longitude of the vertex:

(config service location geofence test_geofence coordinates 0)> latitude *int* (config service location geofence test_geofence coordinates 0)> longitude *int* (config service location geofence test_geofence coordinates 0)>

where int is:

- For latitude, any integer between -90 and 90, with up to six decimal places.
- For longitude, any integer between -180 and 180, with up to six decimal places.

iii. Configure additional vortices:

(config service location geofence test_geofence coordinates 0)> ..
(config service location geofence test_geofence coordinates)> add end
(config service location geofence test_geofence coordinates 1)> latitude *int*(config service location geofence test_geofence coordinates 1)> longitude *int*(config service location geofence test_geofence coordinates 1)>

where int is:

- For latitude, any integer between -90 and 90, with up to six decimal places.
- For longitude, any integer between -180 and 180, with up to six decimal places.

Repeat for each vortex of the polygon.

For example, to configure a square polygon around the Digi headquarters, configure a polygon with four points:

(config service location geofence test_geofence)> add coordinates end (config service location geofence test_geofence coordinates 0)> latitude 44.927220 (config service location geofence test_geofence coordinates 0)> longitude - 93.399200

(config service location geofence test_geofence coordinates 0)> .. (config service location geofence test_geofence coordinates)> add end (config service location geofence test_geofence coordinates 1)> latitude 44.927220

(config service location geofence test_geofence coordinates 1)> longitude - 93.39589

(config service location geofence test_geofence coordinates 1)> \dots

(config service location geofence test_geofence coordinates)> add end (config service location geofence test_geofence coordinates 2)> latitude 44.925161 (config service location geofence test_geofence coordinates 2)> longitude -

(config service location geofence test_geofence coordinates 2)> longitude - 93.39589

(config service location geofence test_geofence coordinates 2)> ...

(config service location geofence test_geofence coordinates)> add end (config service location geofence test_geofence coordinates 3)> latitude 44.925161 (config service location geofence test_geofence coordinates 3)> longitude - 93.399200

(config service location geofence test_geofence coordinates 3)>

This defines a square-shaped polygon equivalent to the following:



- 6. Define actions to be taken when the device's location triggers a geofence event:
 - To define actions that will be taken when the device enters the geofence, or is inside the geofence when it boots:
 - a. (Optional) Configure the device to preform the actions if the device is inside the geofence when it boots:

(config)> service location geofence test_geofence on_entry bootup true (config)>

b. Set the number of update_intervals that must take place prior to performing the actions:

(config)> service location geofence test_geofence on_entry num_intervals *int* (config)>

For example, if the update interval is **1m** (one minute) and the **num_intervals** is set to **3**, the actions will not be performed until the device has been inside the geofence for three minutes.

- c. Add an action:
 - i. Type ... to return to the root of the configuration:

(config service location geofence test_geofence coordinates 3)> ... (config)>

ii. Add the action:

(config)> add service location geofence test_geofence on_entry action end (config service location geofence test_geofence on_entry action 0)>

d. Set the type of action:

(config service location geofence test_geofence on_entry action 0)> type *value* (config service location geofence test_geofence on_entry action 0)>

where value is either:

- factory_erase—Erases the device configuration when the action is triggered.
- script—Executes a custom script when the action is triggered.

factory_erase or script.

If type is set to script:

i. Type or paste the script, closed in quote marks:

(config service location geofence test_geofence on_entry action 0)> commands "script"

(config service location geofence test_geofence on_entry action 0)>

If the script begins with #!, then the proceeding file path will be used to invoke the script interpreter. If not, then the default shell will be used.

ii. To log the output of the script to the system log:

(config service location geofence test_geofence on_entry action 0)> syslog_stdout true

(config service location geofence test_geofence on_entry action 0)>

iii. To log the errors from the script to the system log:

(config service location geofence test_geofence on_entry action 0)> syslog_stderr true

(config service location geofence test_geofence on_entry action 0)>

iv. (Optional) Set the maximum amount of system memory that will be available for the script and it spawned processes:

(config service location geofence test_geofence on_entry action 0)> max_memory value

(config service location geofence test_geofence on_entry action 0)>

where *value* is any integer followed by one of the following: **b|bytes|KB|K|MB|M|GB|G|TB|T**.

For example, the allocate one megabyte of memory to the script and its spawned processes:

(config service location geofence test_geofence on_entry action 0)> max_memory 1MB

(config service location geofence test_geofence on_entry action 0)>

v. A sandbox is enabled by default to prevent the script from adversely affecting the system. To disable the sandbox:

(config service location geofence test_geofence on_entry action 0)> sandbox false (config service location geofence test_geofence on_entry action 0)>

If you disable the sandbox, the script may render the system unusable.

- vi. Repeat for any additional actions.
- To define actions that will be taken when the device exits the geofence, or is outside the geofence when it boots:
 - a. (Optional) Configure the device to preform the actions if the device is outside the geofence when it boots:

(config)> service location geofence test_geofence on_exit bootup true (config)>

 Set the number of update_intervals that must take place prior to performing the actions:

(config)> service location geofence test_geofence on_exit num_intervals int (config)>

For example, if the update interval is **1m** (one minute) and the **num_intervals** is set to **3**, the actions will not be performed until the device has been outside the geofence for three minutes.

- c. Add an action:
 - i. Type ... to return to the root of the configuration:

(config service location geofence test_geofence coordinates 3)> ... (config)>

ii. Add the action:

(config)> add service location geofence test_geofence on_exit action end (config service location geofence test_geofence on_exit action 0)>

d. Set the type of action:

(config service location geofence test_geofence on_exit action 0)> type *value* (config service location geofence test_geofence on_exit action 0)>

where value is either:

- factory_erase Erases the device configuration when the action is triggered.
- script—Executes a custom script when the action is triggered.

factory_erase or script.

If type is set to script:

i. Type or paste the script, closed in quote marks:

(config service location geofence test_geofence on_exit action 0)> commands "script"

(config service location geofence test_geofence on_exit action 0)>

If the script begins with #!, then the proceeding file path will be used to invoke the script interpreter. If not, then the default shell will be used.

ii. To log the output of the script to the system log:

(config service location geofence test_geofence on_exit action 0)> syslog_stdout true

(config service location geofence test_geofence on_exit action 0)>

iii. To log the errors from the script to the system log:

(config service location geofence test_geofence on_exit action 0)> syslog_stderr true

(config service location geofence test_geofence on_exit action 0)>

iv. (Optional) Set the maximum amount of system memory that will be available for the script and it spawned processes:

(config service location geofence test_geofence on_exit action 0)> max_memory value

(config service location geofence test_geofence on_exit action 0)>

where *value* is any integer followed by one of the following: **b|bytes|KB|K|MB|M|GB|G|TB|T**.

For example, the allocate one megabyte of memory to the script and its spawned processes:

(config service location geofence test_geofence on_exit action 0)> max_memory 1MB

(config service location geofence test_geofence on_exit action 0)>

v. A sandbox is enabled by default to prevent the script from adversely affecting the system. To disable the sandbox:

(config service location geofence test_geofence on_exit action 0)> sandbox false (config service location geofence test_geofence on_exit action 0)>

If you disable the sandbox, the script may render the system unusable.

- vi. Repeat for any additional actions.
- 7. Save the configuration and apply the change.

(config)> save
Configuration saved.

8. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Show location information

You can view status and statistics about location information from either the WebUI or the command line.



Log into the IX20 WebUI as a user with full Admin access rights.

- 1. On the main menu, click Status.
- Under Services, click Location.

The device's current location is displayed, along with the status of any configured geofences.

Command line

Show location information

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. Use the show location command at the system prompt:

```
> show location
```

Location Status

State : enabled Source : 192.168.2.3

Latitude : 44* 55' 14.809" N (44.92078) Longitude : 93* 24' 47.262" w (-93.413128)

Altitude : 279 meters

Velocity: 0 meters per second

Direction : None

Quality: Standard GNSS (2D/3D)

UTC Date and Time: Fri, Jan 12, 2024 12:10:00 03

No. of Satellites: 7

>

3. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Show geofence information

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. Use the show location geofence command at the system prompt:

```
> show location geofence

Geofence Status State Transitions Last Transition
-----test_geofence Up Inside 0
```

>

3. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Modbus gateway

The IX20 supports the ability to function as a Modbus gateway, to provide serial-to-Ethernet connectivity to Programmable Logic Controllers (PLCs), Remote Terminal Units (RTUs), and other industrial devices. MODBUS provides client/server communication between devices connected on different types of buses and networks, and the Modbus gateway allows for communication between buses and networks that use the Modbus protocol.

This section contains the following topics:

Configure the Modbus gateway	744
Modbus hardening	757
Show Modbus gateway status and statistics	758

Configure the Modbus gateway

Required configuration items

- Server configuration:
 - · Enable the server.
 - · Connection type, either socket or serial.
 - If the connection type is socket, the IP protocol to be used.
 - If the connection type is serial, the serial port to be used.
- Client configuration:
 - · Enable the client.
 - · Connection type, either socket or serial.
 - o If the connection type is socket:
 - The IP protocol to be used.
 - The hostname or IPv4 address of the remote host on which the Modbus server is running.
 - If the connection type is serial:
 - The serial port to be used.
 - Modbus address or addresses to determine if messages should be forwarded to a
 destination device.

Additional configuration items

- Server configuration:
 - The packet mode.
 - · The maximum time between bytes in a packet.
 - If the connection type is set to socket:
 - The port to use.
 - The inactivity timeout.
 - o Access control list.
 - · If the connection type is set to serial:
 - Whether to use half duplex (two wire) mode.
- Client configuration:
 - The packet mode.
 - The maximum time between bytes in a packets.
 - · Whether to send broadcast messages.
 - · Response timeout
 - · If connection type is set to socket:
 - The port to use.
 - The inactivity timeout.
 - If connection type is set to serial:
 - Whether to use half duplex (two wire) mode.

- · Whether packets should be delivered to a fixed Modbus address.
- Whether packets should have their Modbus address adjusted downward before to delivery.



- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.



The **Configuration** window is displayed.


3. Click Services > Modbus Gateway.




- 4. Click **Enable** to enable the gateway.
- 5. Click **Debug** to allow verbose logging in the system log.

Configure gateway servers

- 1. Click to expand Gateway Servers.
- 2. For Add Modbus server, type a name for the server and click 1/2.

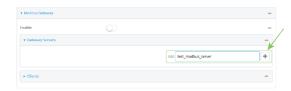

The new Modbus gateway server configuration is displayed.

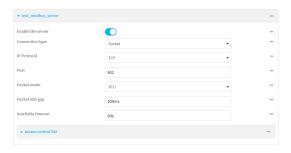


- The new Modbus gateway server is enabled by default. Toggle off Enable the server to disable.
- For Connection type, select Socket or Serial. Available options in the gateway server configuration vary depending on this setting.
 - If Socket is selected for Connection type:
 - a. For IP Protocol, select TCP or UDP. The default is TCP.
 - b. For **Port**, enter or select an appropriate port. The default is port **502**.
 - If Serialis selected for Connection type:
 - a. For **Serial port**, select the appropriate serial port on the IX20 device.
- For Packet mode, select RTU or RAW (if Connection type is set to Socket) or ASCI (if Connection type is set to Serial) for the type of packet that will be used by this connection. The default is RTU.
- For Packet idle gap, type the maximum allowable time between bytes in a packet.
 Allowed values are between 10 milliseconds and one second, and take the format number {ms|s}.
 - For example, to set Packet idle gap to 20 milliseconds, enter 20ms.
- 7. If **Connection type** is set to **Socket**, for **Inactivity timeout**, type the amount of time to wait before disconnecting the socket when it has become inactive.
 - Allowed values are any number of minutes or seconds up to a maximum of 15 minutes, and take the format **number**{mis}.
 - For example, to set **Inactivity timeout** to ten minutes, enter **10m** or **600s**.
- 8. (Optional) If **Connection type** is set to **Serial**, click **Half duplex** to enable half duplex (two wire) mode.
- 9. (Optional) If Connection type is set to Socket, click to expand Access control list:
 - To limit access to specified IPv4 addresses and networks:
 - a. Click IPv4 Addresses.
 - b. For **Add Address**, click **1**/₂o
 - c. For Address, enter the IPv4 address or network that can access the device's web administration service. Allowed values are:
 - A single IP address or host name.
 - A network designation in CIDR notation, for example, 192.168.1.0/24.
 - any: No limit to IPv4 addresses that can access the web administration service.
 - d. Click Ybagain to list additional IP addresses or networks.


- To limit access to specified IPv6 addresses and networks:
 - a. Click IPv6 Addresses.
 - b. For Add Address, click Yo
 - c. For **Address**, enter the IPv6 address or network that can access the device's web administration service. Allowed values are:
 - A single IP address or host name.
 - A network designation in CIDR notation, for example, 2001:db8::/48.
 - any: No limit to IPv6 addresses that can access the web administration service.
 - d. Click Ybagain to list additional IP addresses or networks.
- To limit access to hosts connected through a specified interface on the device:
 - a. Click Interfaces.
 - b. For **Add Interface**, click %
 - c. For **Interface**, select the appropriate interface from the dropdown.
 - d. Click Ybagain to allow access through additional interfaces.
- To limit access based on firewall zones:
 - a. Click Zones. By default, there are three firewall zones already configured: Internal, Edge, and IPsec.
 - b. For Add Zone, click Yo
 - For **Zone**, select the appropriate firewall zone from the dropdown.
 See Firewall configuration for information about firewall zones.
 - d. Click Ybagain to allow access through additional firewall zones.
- Repeat these steps to configure additional servers.

Configure clients

- 1. Click to expand Clients.
- 2. For Add Modbus client, type a name for the client and click 1/2.

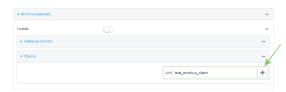


The new Modbus gateway client configuration is displayed.

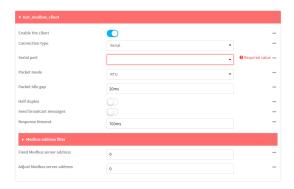

- 3. The new Modbus gateway client is enabled by default. Toggle off **Enable the client** to disable.
- 4. For **Connection type**, select **Socket** or **Serial**. Available options in the gateway server configuration vary depending on this setting.
 - If Socket is selected for Connection type:
 - a. For IP Protocol, select TCP or UDP. The default is TCP.
 - b. For **Port**, enter or select an appropriate port. The default is port **502**.
 - c. For **Remote host**, type the hostname or IP address of the remote host on which the Modbus server is running.
 - If Serialis selected for Connection type:
 - a. For **Serial port**, select the appropriate serial port on the IX20 device.
- For Packet mode, select RTU or RAW (if Connection type is set to Socket) or ASCI (if Connection type is set to Serial) for the type of packet that will be used by this connection. The default is RTU.
- For Packet idle gap, type the maximum allowable time between bytes in a packet.
 Allowed values are between 10 milliseconds and one second, and take the format number {ms|s}.
 - For example, to set Packet idle gap to 20 milliseconds, enter 20ms.
- 7. If **Connection type** is set to **Socket**, for **Inactivity timeout**, type the amount of time to wait before disconnecting the socket when it has become inactive.
 - Allowed values are any number of minutes or seconds up to a maximum of 15 minutes, and take the format *number*{m|s}.
 - For example, to set **Inactivity timeout** to ten minutes, enter **10m** or **600s**.
- 8. (Optional) If **Connection type** is set to **Serial**, click **Half duplex** to enable half duplex (two wire) mode.
- 9. (Optional) If Connection type is set to Socket, click to expand Access control list:
 - To limit access to specified IPv4 addresses and networks:
 - a. Click IPv4 Addresses.
 - b. For Add Address, click Yo
 - c. For **Address**, enter the IPv4 address or network that can access the device's web administration service. Allowed values are:
 - · A single IP address or host name.
 - A network designation in CIDR notation, for example, 192.168.1.0/24.

- any: No limit to IPv4 addresses that can access the web administration service.
- d. Click Ybagain to list additional IP addresses or networks.
- To limit access to specified IPv6 addresses and networks:
 - a. Click IPv6 Addresses.
 - b. For Add Address, click Yo
 - c. For Address, enter the IPv6 address or network that can access the device's web administration service. Allowed values are:
 - · A single IP address or host name.
 - A network designation in CIDR notation, for example, 2001:db8::/48.
 - any: No limit to IPv6 addresses that can access the web administration service.
 - d. Click Ybagain to list additional IP addresses or networks.
- To limit access to hosts connected through a specified interface on the device:
 - a. Click Interfaces.
 - b. For **Add Interface**, click 1/20
 - c. For **Interface**, select the appropriate interface from the dropdown.
 - d. Click Ybagain to allow access through additional interfaces.
- To limit access based on firewall zones:
 - a. Click Zones. By default, there are three firewall zones already configured: Internal, Edge, and IPsec.
 - b. For **Add Zone**, click **Y**_o
 - For **Zone**, select the appropriate firewall zone from the dropdown.
 See Firewall configuration for information about firewall zones.
 - d. Click Ybagain to allow access through additional firewall zones.
- (Optional) Enable Send broadcast messages to configure the gateway to send broadcast messages to this client.
- 11. For **Response timeout**, type the maximum time to wait for a response to a message. Allowed values are between 1 millisecond and 700 milliseconds, and take the format **numberms**.
 - For example, to set **Response timeout** to 100 milliseconds, enter **100ms**. The default is **700ms**.
- 12. Click to expand Modbus address filter.
 - This filter is used by the gateway to determine if a message should be forwarded to a destination device. If the Modbus address in the message matches one or more of the filters, the message is forwarded. If it does not match the filters, the message is not forwarded.
- 13. For **Address or address range**, type a Modbus address or range of addresses. Allowed values are **1** through **255** or a hyphen-separated range.
 - For example, to have this client filter for incoming messages that contain the Modbus address of 10, type **10**. To filter for all messages with addresses in the range of 20 to 30, type **20-30**. To add additional address filters for this client, click **1**/₆

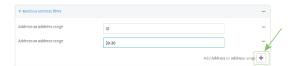

14. For Fixed Modbus server address, if request messages handled by this client should always be forwarded to a specific device, type the device's Modbus address. Leave at the default setting of 0 to allow messages that match the Modbus address filter to be forwarded to devices based on the Modbuss address in the message.

15. For **Adjust Modbus server address**, type a value to adjust the Modbus server address downward by the specified value prior to delivering the message. Allowed values are **0** through **255**. Leave at the default setting of **0** to not adjust the server address.

If a packet contains a Modbus server address above the amount entered here, the address will be adjusted downward by this amount before the packet is delivered. This allows you to configure clients on the gateway that will forward messages to remote devices with the same Modbus address on different buses. For example, if there are two devices on two different buses that have the same Modbus address of 10, you can create two clients on the gateway:

- Client one:
 - Modbus address filter set to 10.

This will configure the gateway to deliver all messages that have the Modbus server address of 10 to this device.

- Client two:
 - Modbus address filter set to 20.
 - Adjust Modbus server address set to 10.

This will configure the gateway to deliver all messages that have the Modbus server address address of 20 to the device with address 10.

- 16. Repeat these steps to configure additional clients.
- 17. Click **Apply** to save the configuration and apply the change.

Command line

Select the device in Remote Manager and click Actions > Open Console, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

> config (config)>

3. Enable the Modbus gateway:

(config)> service modbus_gateway enable true (config)>

4. Configure servers:

a. Add a server:

(config)> add service modbus_gateway server name (config service modbus_gateway server name)>

where *name* is a name for the server, for example:

(config)> add service modbus_gateway server test_modbus_server (config service modbus_gateway server test_modbus_server)>

The Modbus server is enabled by default. To disable:

(config service modbus_gateway server test_modbus_server)> enable false (config service modbus_gateway server test_modbus_server)>

b. Set the connection type:

(config service modbus_gateway server test_modbus_server)> connection_type *type* (config service modbus_gateway server test_modbus_server)>

where type is either socket or serial. The default is socket.

- If connection_type is set to socket:
 - i. Set the IP protocol:

 $({\tt config\ service\ modbus_gateway\ server\ test_modbus_server}) {\tt >\ socket\ protocol\ } \\ value$

(config service modbus_gateway server test_modbus_server)>

where value is either tcp or udp.

ii. Set the port:

(config service modbus_gateway server test_modbus_server)> socket *port* (config service modbus_gateway server test_modbus_server)>

where port is an integer between 1 and 65535. The default is 502.

iii. Set the packet mode:

(config service modbus_gateway server test_modbus_server)> socket packet_mode *value*

(config service modbus_gateway server test_modbus_server)>

where value is either rtu or raw. The default is rtu.

iv. Set the maximum allowable time between bytes in a packet:

(config service modbus_gateway server test_modbus_server)> socket idle_gap value

(config service modbus_gateway server test_modbus_server)>

where *value* is any number between 10 milliseconds and one second, and take the format *number*{ms|s}.

For example, to set idle_gap to 20 milliseconds, enter 20ms.

v. Set the amount of time to wait before disconnecting the socket when it has become inactive:

(config service modbus_gateway server test_modbus_server)> inactivity_timeout value

(config service modbus_gateway server test_modbus_server)>

where *value* is any number of minutes or seconds up to a maximum of 15 minutes, and takes the format *number*{m|s}.

For example, to set **inactivity_timeout** to ten minutes, enter either **10m** or **600s**:

(config service modbus_gateway server test_modbus_server)> inactivity_timeout 600s

(config service modbus_gateway server test_modbus_server)>

- If connection_type is set to serial:
 - i. Set the serial port:
 - i. Use the ?to determine available serial ports:

(config service modbus_gateway server test_modbus_server)> ... serial port ?

Serial

Additional Configuration

port1 Port 1

(config service modbus_gateway server test_modbus_server)>

ii. Set the port:

(config service modbus_gateway server test_modbus_server)> serial *port* (config service modbus_gateway server test_modbus_server)>

ii. Set the packet mode:

(config service modbus_gateway server test_modbus_server)> serial packet_mode value

(config service modbus_gateway server test_modbus_server)>

where value is either rtu or ascii. The default is rtu.

iii. Set the maximum allowable time between bytes in a packet:

(config service modbus_gateway server test_modbus_server)> serial idle_gap value

(config service modbus_gateway server test_modbus_server)>

where *value* is any number between 10 milliseconds and one second, and take the format *number*{ms|s}.

For example, to set idle_gap to one second, enter 1000ms or 1s.

iv. (Optional) Enable half-duplex (two wire) mode:

(config service modbus_gateway server test_modbus_server)> serial half_duplex true (config service modbus_gateway server test_modbus_server)>

c. Repeat the above instructions for additional servers.

5. Configure clients:

a. Type ... to return to the root of the configuration:

(config)> add service modbus_gateway server test_modbus_server)> ... (config)>

b. Add a client:

(config)> add service modbus_gateway client *name* (config service modbus_gateway client *name*)>

where name is a name for the client, for example:

(config)> add service modbus_gateway client test_modbus_client (config service modbus_gateway client test_modbus_client)>

The Modbus client is enabled by default. To disable:

(config service modbus_gateway client test_modbus_client)> enable false (config service modbus_gateway client test_modbus_client)>

c. Set the connection type:

(config service modbus_gateway client test_modbus_client)> connection_type type (config service modbus_gateway client test_modbus_client)>

where type is either **socket** or **serial**. The default is **socket**.

- If connection_type is set to socket:
 - i. Set the IP protocol:

(config service modbus_gateway client test_modbus_client)> socket protocol *value* (config service modbus_gateway client test_modbus_client)>

where value is either tcp or udp.

ii. Set the port:

(config service modbus_gateway client test_modbus_client)> socket *port* (config service modbus_gateway client test_modbus_client)>

where port is an integer between 1 and 65535. The default is 502.

iii. Set the packet mode:

(config service modbus_gateway client test_modbus_client)> socket packet_mode value

(config service modbus_gateway client test_modbus_client)>

where value is either rtu or ascii. The default is rtu.

iv. Set the maximum allowable time between bytes in a packet:

(config service modbus_gateway client test_modbus_client)> socket idle_gap value (config service modbus_gateway client test_modbus_client)>

where *value* is any number between 10 milliseconds and one second, and take the format *number*{ms|s}.

For example, to set idle_gap to 20 milliseconds, enter 20ms.

v. Set the amount of time to wait before disconnecting the socket when it has become inactive:

(config service modbus_gateway client test_modbus_client)> inactivity_timeout value

(config service modbus_gateway client test_modbus_client)>

where *value* is any number of minutes or seconds up to a maximum of 15 minutes, and takes the format *number*{m|s}.

For example, to set **inactivity_timeout** to ten minutes, enter either **10m** or **600s**:

(config service modbus_gateway client test_modbus_client)> inactivity_timeout 600s

(config service modbus_gateway client test_modbus_client)>

vi. Set the hostname or IP address of the remote host on which the Modbus server is running:

(config service modbus_gateway client test_modbus_client)> remote_host $ip_address|hostname$

(config service modbus_gateway client test_modbus_client)>

- If connection_type is set to serial:
 - i. Set the serial port:
 - i. Use the ?to determine available serial ports:

(config service modbus_gateway client test_modbus_client)> ... serial port ?

Serial

Additional Configuration

port1 Port 1

(config service modbus_gateway client test_modbus_client)>

ii. Set the port:

(config service modbus_gateway client test_modbus_client)> serial *port* (config service modbus_gateway client test_modbus_client)>

ii. Set the packet mode:

(config service modbus_gateway client test_modbus_client)> serial packet_mode value

(config service modbus_gateway client test_modbus_client)>

where value is either rtu or ascii. The default is rtu.

iii. Set the maximum allowable time between bytes in a packet:

(config service modbus_gateway client test_modbus_client)> serial idle_gap value (config service modbus_gateway client test_modbus_client)>

where *value* is any number between 10 milliseconds and one second, and take the format *number*{ms|s}.

For example, to set idle_gap to one second, enter 1000ms or 1s.

iv. (Optional) Enable half-duplex (two wire) mode:

(config service modbus_gateway client test_modbus_client)> serial half_duplex true

(config service modbus_gateway client test_modbus_client)>

d. (Optional) Enable the gateway to send broadcast messages to this client:

(config service modbus_gateway client test_modbus_client)> broadcast true (config service modbus_gateway client test_modbus_client)>

e. Set the maximum time to wait for a response to a message:

(config service modbus_gateway client test_modbus_client)> response_timeout *value* (config service modbus_gateway client test_modbus_client)>

Allowed values are between 1 millisecond and 700 milliseconds, and take the format **numberms**.

For example, to set response_timeout to 100 milliseconds:

(config service modbus_gateway client test_modbus_client)> response_timeout 100ms (config service modbus_gateway client test_modbus_client)>

The default is 700ms.

f. Configure the address filter:

This filter is used by the gateway to determine if a message should be forwarded to a destination device. If the Modbus address in the message matches one or more of the filters, the message is forwarded. If it does not match the filters, the message is not forwarded. Allowed values are 1 through 255 or a hyphen-separated range.

For example:

To have this client filter for incoming messages that contain the Modbus address of 10, set the index 0 entry to 10:

```
(config service modbus_gateway client test_modbus_client)> filter 0 10 (config service modbus_gateway client test_modbus_client)>
```

To filter for all messages with addresses in the range of 20 to 30, set the index 0 entry to 20-30:

```
(config service modbus_gateway client test_modbus_client)> filter 0 20-30 (config service modbus_gateway client test_modbus_client)>
```

To add additional filters, increment the index number. For example, to add an additional filter for addresses in the range of 50-100:

```
(config service modbus_gateway client test_modbus_client)> filter 1 50-100 (config service modbus_gateway client test_modbus_client)>
```

g. If request messages handled by this client should always be forwarded to a specific device, , use fixed_server_address to set the device's Modbus address:

```
(config service modbus_gateway client test_modbus_client)> fixed_server_address value (config service modbus_gateway client test_modbus_client)>
```

Leave at the default setting of **0** to allow messages that match the Modbus address filter to be forwarded to devices based on the Modbuss address in the message.

h. To adjust the Modbus server address downward by the specified value prior to delivering the message, use **adjust_server_address**:

```
(config service modbus_gateway client test_modbus_client)> adjust_server_address value (config service modbus_gateway client test_modbus_client)>
```

where *value* is an integer from **0** to **255**. Leave at the default setting of **0** to not adjust the server address.

If a packet contains a Modbus server address above the amount entered here, the address will be adjusted downward by this amount before the packet is delivered. This allows you to configure clients on the gateway that will forward messages to remote devices with the same Modbus address on different buses. For example, if there are two devices on two different buses that have the same Modbus address of 10, you can create two clients on the gateway:

- Client one:
 - filter set to 10.

This will configure the gateway to deliver all messages that have the Modbus server address of 10 to this device.

- Client two:
 - filter set to 20.
 - adjust_server_address set to 10.

This will configure the gateway to deliver all messages that have the Modbus server address address of 20 to the device with address 10.

i. Repeat the above instructions for additional clients.

6. Save the configuration and apply the change.

(config)> save Configuration saved.

>

7. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Modbus hardening

Modbus hardening refers to the process of enhancing the security and reliability of Modbus communications between devices over a network by implementing various protective measures. This includes configuring the Modbus systems to minimize vulnerabilities, applying access controls, using encryption, segmenting networks, upgrading firmware on the devices, as well as monitoring and logging. Modbus hardening is about making the serial communication between devices over a network more secure against cyber threats.

Hardening can involve implementing various security measures, such as:

Access control

Update the **Services > Modbus Gateway > Gateway servers > Access control list** settings to only allow access to the Modbus service on the specific network interfaces, firewall zones, and source IP addresses that you expect the Modbus queries to come from. See Configure the Modbus gateway for more information.

Encryption

Further lock down access to the Modbus gateway service on the IX20 by configuring it to establish a VPN tunnel, then update the access control list as mentioned above to only allow access to the Modbus service through the VPN connection.

Network segmentation

Use a separate firewall zone for the network interface(s) and/or VPN tunnels that the user will be accessing the Modbus gateway service through to ensure that the Modbus access is separate from other network traffic

Monitoring and logging

Utilize Digi Remote Manager or an external logging service to monitor the activity on your Digi router

■ Firmware upgrades

Keep your firmware current so your IX20 has the most recent security patches and bug fixes.

Note To see how you can implement security measures for you Modbus gateway service, see Use case | Secure your Modbus gateway service.

Use case | Secure your Modbus gateway service

Do you want to secure Modbus messaging across an internet connection to safeguard the information being communicated between Digi devices over your network?

You can by implementing security measures, such as access control, encryption, network segmentation, monitoring and logging, and firmware upgrades to ensure the integrity and confidentiality of Modbus communications between Digi devices on your network.

- Determine the devices on your network that need to communicate with each other via the Modbus Gateway service.
- 2. Isolate Modbus traffic using VLANS or separate network interfaces.
- Implement strong authentication.
- 4. Define access policies.

Update the **Services > Modbus Gateway > Gateway servers > Access control list** settings to only allow access to the Modbus service on the specific network interfaces, firewall zones, and source IP addresses that you expect the Modbus queries to come from. See Configure the Modbus gateway for more information.

- Create a VPN tunnel, such as IPsec or Wreguard, to protect data in transit between your devices.
- 6. Configure firewalls to monitor and control incoming and outgoing traffic.

By implementing these advanced security protocols and ensuring reliable data transmission, this service effectively addresses the challenges of data integrity and privacy on your network.

Show Modbus gateway status and statistics

You can view status and statistics about location information from either the WebUI or the command line.



Log into the IX20 WebUI as a user with full Admin access rights.

1. On the menu, select **Status > Modbus Gateway**.

The **Modbus Gateway** page appears.

Statistics related to the Modbus gateway server are displayed. If the message **Server connections not available** is displayed, this indicates that there are no connected clients.

- To view information about Modbus gateway clients, click Clients.
- To view statistics that are common to both the clients and server, click Common Statistics.
- To view configuration details about the gateway, click the * (configuration) icon in the upper right of the gateway's status pane.

Command line

Select the device in Remote Manager and click Actions > Open Console, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. Use the show modbus-gateway command at the system prompt:

If the message **Server connections not available** is displayed, this indicates that there are no connected clients.

Use the show modbus-gateway verbose command at the system prompt to display more information:

```
> show modbus-gateway verbose
Client
             Uptime
modbus_socket_41
modbus_socket_21
modbus_serial_client 506
Common Statistics
Configuration Updates
Client Configuration Failure : 0
Server Configuration Failure: 0
Configuration Load Failure : 0
Incoming Connections
                          : 4
Internal Error
                         : 0
Resource Shortages
Servers
modbus_socket
Client Lookup Errors
                        : 0
Incoming Connections
                          : 4
Packet Errors
                     : 0
RX Broadcasts
                      : 0
RX Requests
                      : 12
TX Exceptions
                      : 0
```

```
TX Responses
                     : 12
Clients
-----
modbus_socket_41
Address Translation Errors : 0
Connection Errors
                      : 0
Packet Errors
                   : 0
RX Responses
                    : 4
RX Timeouts
                    : 0
TX Broadcasts
                    : 0
TX Requests
                    : 4
modbus_socket_21
Address Translation Errors : 0
Connection Errors
                     : 0
                    : 0
Packet Errors
RX Responses
                    : 4
RX Timeouts
                    : 0
TX Broadcasts
                    : 0
TX Requests
                    : 4
modbus_serial_client
Address Translation Errors : 0
Connection Errors
                     : 0
Packet Errors
                    : 0
RX Responses
                     : 4
                    : 0
RX Timeouts
TX Broadcasts
                     : 0
TX Requests
                    : 4
```

4. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

System time synchronization

System time synchronization refers to the process of coordinating the system time of your IX20 device with an external, more accurate time source. By default, this synchronization occurs one time per day, but will also synchronize at startup, and in response to a change in the route. There are two configuration parameters that control system time synchronization: **ntpdate** and **system.time.resyn_interval**.

The **ntpdate** default configurations include the following:

■ Time zone: UTC

■ NTP server: the Digi NTP server, time.digicloud.com

The **system.time.resyn_interval** default configuration includes the following:

• Frequency of the synchronization: **1d** (one day). Set to **0** (zero) for no synchronization except at startup and route change.

No additional configuration is required for the synchronization if this default configuration is sufficient for your setup. However, you can change per-day synchronization, the default time zone, and the default NTP server, as well as adding additional NTP servers. If multiple NTP servers are added, time samples are obtained from each server. Selection algorithms are used to determine the most accurate time. See Configure the system time synchronization for details about changing the default configuration.

The IX20 device can also be configured to serve as an NTP server, providing NTP services to downstream devices. See Network Time Protocol for more information about NTP server support.

You can also set the local date and time manually, if there is no access to the configured NTP servers or modem time sources. See Manually set the system date and time for more information.

Configure the system time synchronization

To configure or change the system time synchronization:



- Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

- 3. Click System > Time.
- 4. Modify the settings.



CAUTION! If you enable the NTP service, either disable the server configured in system time or make sure to match the server(s) configured in service ntp server. If you do not do one of these options, then the System time synchronization may fail, which could result in the following error message: ntpdate[2901]: the NTP socket is in use, exiting.

System time setting	UI Configuration
Timezone	Choose the time zone closest to where the device is located. The default time zone is UTC .
Resynchronization interval	Type the frequency of the daily update. The default is 1d (one day). Set to O (zero) for no synchronization.
Time sources	 a. Click Yoto add a new time source. The time source is now enabled by default.
	 In Type of time source, choose whether you want to use an NTP or Modem as the external source to which the device synchronizes.
	If using an NTP, click Yoto add the Server hostname. The default is time.devicecloud.com.
	Note If multiple NTP servers are added, time samples are obtained from each server. Selection algorithms are used to determine the most accurate time.
	 If using a modem, specify the Modem and Modem time offset. The default offset is Local.

5. Click **Apply** to save the configuration and apply the change.

Command line

Select the device in Remote Manager and click Actions > Open Console, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

> config (config)>

3. Type **system time** to enter configuration mode for system time.

> config system time (config system time)>

4. Add a new time source or modify the settings.



CAUTION! If you enable the NTP service, either disable the server configured in system time or make sure to match the server(s) configured in service ntp server. If you do not do one of these options, then the System time synchronization may fail, which could result in the following error message: ntpdate[2901]: the NTP socket is in use, exiting.

System time	
setting	UI Configuration
Timezone	(Optional) Set the timezone for the location of your IX20 device. The default is UTC .
	(config)> system time timezone <i>value</i> (config)>
	Where <i>value</i> is the timezone using the format specified with the following command:
	(config)> system time timezone ?
	Timezone: The timezone for the location of this device. This is used to adjust the time for log
	messages. It also affects actions that occur at a specific time of day. Format:
	Africa/Abidjan
	Africa/Accra
	Africa/Addis_Ababa
	(config)>
Resynchronizati on interval	Type the frequency of the daily update. The default is 1d (one day). Set to O (zero) for no synchronization.
	(config) system time resync_interval <i>value</i> (config) >

System time setting	UI Configuration
	Where value is {w d h m s}. For more information:
	(config)> system time resync_interval ?
	Format: number {w d h m s} Optional: yes
	Dafault value: 1 d
	Current value: 1 d (config)>
Time sources	Add a new time source, either an NTP server or a modem.
	Note The default NTP server is time.devicecloud.com.
	If adding one or more NTP servers:
	add service ntp server 0 time.server.com
	Note If multiple NTP servers are added, time samples are obtained from each server. Selection algorithms are used to determine the most accurate time.
	Note This list is synchronized with the list of servers included with NTP server configuration, and changes made to one will be reflected in the other. See Configure the device as an NTP server for more information about NTP server configuration.
	If adding a modem, specify the mode and time offset: The default offset is Local .
	(config system time source)> add end (config system time source 1)> (config system time source 1)> type modem (config time source 1) > modem modem
	■ To see the modem and its settings:
	(config system time source 1)> show enable true no label
	modem modem
	offset local type modem

5. Save the configuration and apply the change.

```
(config)> save
Configuration saved.
```

6. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Test the connection to the NTP servers

The following procedure tests the configured NTP servers for connectivity. This test does not affect the device's current local date and time.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. Test the configured NTP servers for connectivity:

```
> system time test
Testing NTP server time.devicecloud.com on UDP port 123...
server 52.2.40.158, stratum 2, offset -0.000216, delay 0.05800
server 35.164.164.69, stratum 2, offset -0.000991, delay 0.07188
24 Aug 22:01:20 ntpdate[28496]: adjust time server 52.2.40.158 offset -0.000216 sec
NTP test sync successful
```

```
Testing NTP server time.accns.com on UDP port 123... server 128.136.167.120, stratum 3, offset -0.001671, delay 0.08455 24 Aug 22:01:20 ntpdate[28497]: adjust time server 128.136.167.120 offset -0.001671 sec NTP test sync successful
```

3. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Manually synchronize with the NTP server

The following procedure perform a NTP query to the configured servers and set the local time to the first server that responds.

Select the device in Remote Manager and click Actions > Open Console, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. Synchronize the device's local date and time:

```
> system time sync
24 Aug 22:03:55 ntpdate[2520]: step time server 52.2.40.158 offset -0.000487 sec
NTP sync to time.devicecloud.com successful
```

3. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Manually set the system date and time

If your network restricts access to NTP servers, use this procedure to set the local date and time. This procedure is available at the Admin CLI only.

Command line

Select the device in Remote Manager and click Actions > Open Console, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. Set the device's local date and time:

```
> system time set value
>
where value is the date in year-month-day hour:minute:second format. The value must be surrounded by double quotes. For example:
```

```
> system time set "2024-01-12 12:10:00"
```

3. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Network Time Protocol

Network Time Protocol (NTP) enables devices connected on local and worldwide networks to synchronize their internal software and hardware clocks to the same time source. The IX20 device can be configured as an NTP server, allowing downstream hosts that are attached to the device's Local Area Networks to synchronize with the device.

When the device is configured as an NTP server, it also functions as an NTP client. The NTP client will be consistently synchronized with one or more upstream NTP servers, which means that NTP packets are transferred every few seconds. A minimum of one upstream NTP server is required. Additional NTP servers can be configured. If multiple servers are configured, a number of time samples are obtained from each of the servers and a subset of the NTP clock filter and selection algorithms are applied to select the best of these.

See Configure the device as an NTP server for information about configuring your device as an NTP server.

Configure the device as an NTP server

Required Configuration Items

- Enable the NTP service.
- At least one upstream NTP server for synchronization. The default setting is the Digi NTP server, time.devicecloud.com.

Additional Configuration Options

- Additional upstream NTP servers.
- Access control list to limit downstream access to the IX20 device's NTP service.
- The time zone setting, if the default setting of UTC is not appropriate.

To configure the IX20 device's NTP service:



- Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- a. Locate your device as described in Use Digi Remote Manager to view and manage your device
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The Configuration window is displayed.

- 3. Click Services > NTP.
- 4. Enable the IX20 device's NTP service by clicking **Enable**.
- (Optional) Configure the access control list to limit downstream access to the IX20 device's NTP service.
 - To limit access to specified IPv4 addresses and networks:
 - a. Click IPv4 Addresses.
 - b. For Add Address, click Yo
 - c. For Address, enter the IPv4 address or network that can access the device's NTP service. Allowed values are:

- A single IP address or host name.
- A network designation in CIDR notation, for example, 192.168.1.0/24.
- any: No limit to IPv4 addresses that can access the NTP service.
- d. Click Ybagain to list additional IP addresses or networks.
- To limit access to specified IPv6 addresses and networks:
 - a. Click IPv6 Addresses.
 - b. For Add Address, click Yo
 - c. For Address, enter the IPv6 address or network that can access the device's NTP service. Allowed values are:
 - · A single IP address or host name.
 - A network designation in CIDR notation, for example, 2001:db8::/48.
 - any: No limit to IPv6 addresses that can access the NTP service.
 - d. Click Ybagain to list additional IP addresses or networks.
- To limit access to hosts connected through a specified interface on the device:
 - a. Click Interfaces.
 - b. For Add Interface, click 1/20
 - c. For **Interface**, select the appropriate interface from the dropdown.
 - d. Click Ybagain to allow access through additional interfaces.
- To limit access based on firewall zones:
 - a. Click Zones. By default, there are three firewall zones already configured: Internal, Edge, and IPsec.
 - b. For **Add Zone**, click **Y**_o
 - c. For **Zone**, select the appropriate firewall zone from the dropdown. See Firewall configuration for information about firewall zones.
 - d. Click Ybagain to allow access through additional firewall zones.

Note By default, the access control list for the NTP service is empty, which means that all downstream hosts connected to the IX20 device can use the NTP service.

- 6. Enable **Fall back to local clock** to allow the device's local system clock to be used as backup time source.
- 7. (Optional) Add upstream NTP servers that the device will use to synchronize its time. The default setting is **time.devicecloud.com**.
 - To change the default value of the NTP server:
 - a. Click NTP servers.
 - b. For **Server**, type a new server name.
 - To add an NTP server:
 - a. Click NTP servers.
 - b. For **Add Server**, click **1**/₂o
 - c. For **Server**, enter the hostname of the upstream NTP server that the device will use to synchronize its time.

d. Click Yoto add additional NTP servers. If multiple servers are included, servers are tried in the order listed until one succeeds.

Note This list is synchronized with the list of servers included with NTP client configuration, and changes made to one will be reflected in the other. See Configure the system time synchronization for more information about NTP client configuration.

- 8. (Optional) Configure the system time zone. The default is UTC.
 - a. Click System > Time
 - b. Select the **Timezone** for the location of your IX20 device.
- 9. Click **Apply** to save the configuration and apply the change.

Command line

Select the device in Remote Manager and click Actions > Open Console, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type config to enter configuration mode:

```
> config
(config)>
```

3. Enable the ntp service:

```
(config)> service ntp enable true (config)>
```

- 4. (Optional) Add an upstream NTP server that the device will use to synchronize its time to the appropriate location in the list of NTP servers. The default setting is **time.devicecloud.com**.
 - To delete the default NTP server, time.devicecloud.com:

```
(config)> del service ntp server 0 (config)>
```

■ To add the NTP server to the beginning of the list, use the index value of **0** to indicate that it should be added as the first server:

```
(config)> add service ntp server 0 time.server.com (config)>
```

To add the NTP server to the end of the list, use the index keyword end:

```
(config)> add service ntp server end time.server.com (config)>
```

■ To add the NTP server in another location in the list, use an index value to indicate the appropriate position. For example:

```
(config)> add service ntp server 1 time.server.com (config)>
```

Note This list is synchronized with the list of servers included with NTP client configuration, and changes made to one will be reflected in the other. See Configure the system time synchronization for more information about NTP client configuration.

5. Allow the device's local system clock to be used as backup time source:

(config)> service ntp local true (config)>

- (Optional) Configure the access control list to limit downstream access to the IX20 device's NTP service.
 - To limit access to specified IPv4 addresses and networks:

(config)> add service ntp acl address end *value* (config)>

Where value can be:

- · A single IP address or host name.
- A network designation in CIDR notation, for example, 192.168.1.0/24.
- any: No limit to IPv4 addresses that can access the NTP server agent.

Repeat this step to list additional IP addresses or networks.

To limit access to specified IPv6 addresses and networks:

(config)> add service ntp acl address6 end *value* (config)>

Where value can be:

- A single IP address or host name.
- A network designation in CIDR notation, for example, 2001:db8::/48.
- any: No limit to IPv6 addresses that can access the NTP server agent.

Repeat this step to list additional IP addresses or networks.

To limit access to hosts connected through a specified interface on the IX20 device:

(config)> add service ntp acl interface end *value* (config)>

Where value is an interface defined on your device.

Display a list of available interfaces:

Use ... **network interface** ?to display interface information:

(config)> ... network interface ?
Interfaces

Additional Configuration

setupip Setup IP

setuplinklocalip Setup Link-local IP
eth1 ETH1
eth2 ETH2
loopback Loopback
modem Modem

(config)>

Repeat this step to list additional interfaces.

To limit access based on firewall zones:

```
(config)> add service ntp acl zone end value (config)>
```

Where value is a firewall zone defined on your device, or the any keyword.

Display a list of available firewall zones:

Type ... firewall zone ?at the config prompt:

```
(config)> ... firewall zone?
```

Zones: A list of groups of network interfaces that can be referred to by packet filtering rules and access control lists.

Additional Configuration

any

dynamic_routes

edge

external

hotspot

internal

ipsec

loopback

setup

(config)>

Repeat this step to include additional firewall zones.

Note By default, the access control list for the NTP service is empty, which means that all downstream hosts connected to the IX20 device can use the NTP service.

7. (Optional) Set the timezone for the location of your IX20 device. The default is UTC.

(config)> system time timezone *value* (config)>

Where value is the timezone using the format specified with the following command:

(config)> system time timezone?

Timezone: The timezone for the location of this device. This is used to adjust the time for log messages. It also affects actions that occur at a specific time of day.

Format:

Africa/Abidjan Africa/Accra

Africa/Addis_Ababa

...

(config)>

8. Save the configuration and apply the change.

(config)> save
Configuration saved.

>

9. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Show status and statistics of the NTP server

You can display status and statistics for active NTP servers



Log into the IX20 WebUI as a user with full Admin access rights.

- 1. On the main menu, click Status.
- 2. Under Services, click NTP.

The NTP server status page is displayed.

Command line

Show NTP information

Select the device in Remote Manager and click Actions > Open Console, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. Use the show ntp command at the system prompt:

> show ntp

NTP Status Status

```
Status : Up
Sync Status : Up

Remote Refid ST T When Poll Reach Delay Offset Jitter

*ec2-52-2-40-158 129.6.15.32 2 u 191 1024 377 33.570 +1.561 0.991
128.136.167.120 128.227.205.3 3 u 153 1024 1 43.583 -1.895 0.382
```

3. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configure a multicast route

Multicast routing allows a device to transmit data to a single multicast address, which is then distributed to a group of devices that are configured to be members of that group.

To configure a multicast route:



- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

- 3. Click Services > Multicast.
- 4. For **Add Multicast route**, type a name for the route and click %
- 5. The new route is enabled by default. To disable, toggle off **Enable**.
- Type the Source address for the route. This must be a multicast IP address between 224.0.0.1 and 239.255.255.255.

- 7. Select a Source interface where multicast packets will arrive.
- 8. To add one or more destination interface that the IX20 device will send mutlicast packets to:
 - a. Click to expand Destination interfaces.
 - b. Click 1/2
 - c. For **Destination interface**, select the interface.
 - d. Repeat for additional destination interfaces.
- 9. Click **Apply** to save the configuration and apply the change.

Command line

Select the device in Remote Manager and click Actions > Open Console, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Add the multicast route. For example, to add a route named test:

```
(config)> add service multicast test (config service multicast test)>
```

4. The multicast route is enabled by default. If it has been disabled, enable the route:

```
(config service multicast test)> enable true (config service multicast test)>
```

5. Set the source address for the route. This must be a multicast IP address between 224.0.0.1 and 239.255.255.255.

```
(config service multicast test)> dst ip-address (config service multicast test)>
```

- 6. Set the source interface for the route where multicast packets will arrive:
 - a. Use the ?to determine available interfaces:

```
(config service multicast test)> src_interface ?
```

Source interface: Where the multicast packets will arrive. IP routes do not have an effect in the incoming stream.

Format:

/network/interface/setupip

/network/interface/setuplinklocalip

/network/interface/eth1

/network/interface/eth2

/network/interface/loopback

Current value:

(config service multicast test)> src_interface

b. Set the interface. For example:

(config service multicast test)> src_interface /network/interface/eth1 (config service multicast test)>

- 7. Set a destination interface that the IX20 device will send mutlicast packets to:
 - a. Use the ?to determine available interfaces:

(config service multicast test)> src_interface ?

Destination interface: Which interface to send the multicast packets.

Format:

/network/interface/setupip

/network/interface/setuplinklocalip

/network/interface/eth1

/network/interface/eth2

/network/interface/loopback

Current value:

(config service multicast test)> src_interface

b. Set the interface. For example:

(config service multicast test)> add interface end /network/interface/eth1 (config service multicast test)>

- c. Repeat for each additional destination interface.
- 8. Save the configuration and apply the change.

(config)> save Configuration saved.

-

9. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Ethernet network bonding

The IX20 device supports bonding mode for the Ethernet network. This allows you to configure the device so that Ethernet ports share one IP address. When both ports are being used, they act as one Ethernet network port.

Required configuration items

- Enable Ethernet bonding.
- The mode, either:
 - · Active-backup. Provides fault tolerance.
 - Round-robin. Provides load balancing as well as fault tolerance.

- The Ethernet devices in the bonded pool.
- Create a new network interface for the bonded Ethernet devices, and disable the any interfaces associated with those Ethernet devices..



- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.



The **Configuration** window is displayed.

- 3. Click Network > Ethernet bonding.
- 4. For Add Bond device, click Yo



The bond device is enabled by default. To disable, toggle off **Enable**.

- 5. For **Mode**, selected either:
 - Active-backup: Transmits data on only one of the bonded devices at a time. When the active device fails, the next available device in the list is chosen. This mode provides for fault tolerance.
 - Round-robin: Alternates between bonded devices to provide load balancing as well as fault tolerance.
- 6. Click to expand Devices.

- 7. Add Ethernet devices:
 - a. For Add device, click Yo




- b. For **Device**, select an Ethernet device to participate in the bond pool.
- c. Repeat for each appropriate Ethernet device.



- 8. Create a new network interface that is linked to the Ethernet bond:
 - a. Click Network > Interface.
 - b. For Add Interface, type a name for the interface and click %



c. For **Device**, select the Ethernet bond created above:

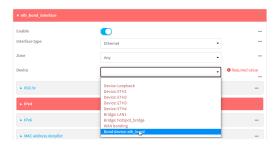

- d. Complete the rest of the interface configuration. See Configure a Wide Area Network (WAN) or Configure a Local Area Network (LAN) for further information.
- e. Disable any other interfaces associated with the devices that were added to the Ethernet bond.

For example, if ETH1 and ETH2 were added to the Ethernet bond, disable the ETH1 and ETH2 interfaces:



In some cases, the device may be a part of a bridge, in which case you should remove the device from the bridge.

See Configure a bridge for more information.

9. Click **Apply** to save the configuration and apply the change.

Command line

Select the device in Remote Manager and click Actions > Open Console, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

> config (config)>

3. Add a network bond:

(config)> add network bond *name* (config network bond *name*)>

For example, to create an Ethernet bond named eth_bond:

(config> add network bond eth_bond (config network bond eth_bond)>

4. The new network bond is enabled by default. To disable:

(config network bond eth_bond)> enable false (config network bond eth_bond)>

5. Set the mode:

(config network bond eth_bond)> mode *value* (config network bond eth_bond)>

where value is either:

active-backup: Transmits data on only one of the bonded devices at a time. When the active device fails, the next available device in the list is chosen. This mode provides for fault tolerance.

 round-robin: Alternates between bonded devices to provide load balancing as well as fault tolerance.

6. Add Ethernet devices:

a. Use the ?to determine available devices:

(config network bond eth_bond)> ... network device ?

Additional Configuration
------eth1
eth2
loopback
(config network bond eth_bond)>

b. To add this device name to the end of the list:

(config network bond eth_bond)> add device end /network/device/eth1 (config network bond eth_bond)>

- c. Repeat to add additional device names to the list.
- 7. Create a new network interface that is linked to the Ethernet bond:
 - a. Type ... to return to the root of the configuration:

```
(config network bond eth_bond)> ... (config)>
```

b. Create a new interface, for example:

```
(config)> add network interface eth_bond_interface
(config network interface eth_bond_interface)>
```

c. For device, select the Ethernet bond created above:

(config network interface eth_bonding_interface)> device /network/bond/eth_bond (config network interface eth_bonding_interface)>

- d. Complete the rest of the interface configuration. See Configure a Wide Area Network (WAN) or Configure a Local Area Network (LAN) for further information.
- 8. Disable any other interfaces associated with the devices that were added to the Ethernet bond.

For example, if ETH1 and ETH2 were added to the Ethernet bond, and they are included with the ETH1 and ETH2 interfaces:

a. Type ... to return to the root of the configuration:

```
(config network interface eth_bonding_interface)> ...
(config)>
```

b. Disable the interfaces:

```
(config)> network interface eth1 enable false (config)> network interface eth2 enable false (config)>
```

In some cases, the device may be a part of a bridge, in which case you should remove the device from the bridge.

See Configure a bridge for more information.

9. Save the configuration and apply the change.

```
(config)> save
Configuration saved.
```

Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Enable service discovery (mDNS)

Multicast DNS mDNS is a protocol that resolves host names in small networks that do not have a DNS server. You can enable the IX20 device to use mDNS.



- Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The Configuration window is displayed.

- 3. Click Services > Service Discovery (mDNS).
- 4. Enable the mDNS service.

- 5. Click Access control list to configure access control:
 - To limit access to specified IPv4 addresses and networks:
 - a. Click IPv4 Addresses.
 - b. For Add Address, click Yo
 - c. For Address, enter the IPv4 address or network that can access the device's mDNS service. Allowed values are:
 - A single IP address or host name.
 - A network designation in CIDR notation, for example, 192.168.1.0/24.
 - any: No limit to IPv4 addresses that can access the mDNS service.
 - d. Click % again to list additional IP addresses or networks.
 - To limit access to specified IPv6 addresses and networks:
 - a. Click IPv6 Addresses.
 - b. For Add Address, click Yo
 - c. For Address, enter the IPv6 address or network that can access the device's mDNS service. Allowed values are:
 - A single IP address or host name.
 - A network designation in CIDR notation, for example, 2001:db8::/48.
 - any: No limit to IPv6 addresses that can access the mDNS service.
 - d. Click Ybagain to list additional IP addresses or networks.
 - To limit access to hosts connected through a specified interface on the device:
 - a. Click Interfaces.
 - b. For **Add Interface**, click %
 - c. For **Interface**, select the appropriate interface from the dropdown.
 - d. Click Ybagain to allow access through additional interfaces.
 - To limit access based on firewall zones:
 - a. Click Zones. By default, there are three firewall zones already configured: Internal, Edge, and IPsec.
 - b. For Add Zone, click Yo
 - For **Zone**, select the appropriate firewall zone from the dropdown.
 See Firewall configuration for information about firewall zones.
 - d. Click % again to allow access through additional firewall zones.
- 6. Click **Apply** to save the configuration and apply the change.

Command line

 Select the device in Remote Manager and click Actions > Open Console, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type config to enter configuration mode:

> config (config)>

3. Enable the mDNS service:

(config)> service mdns enable true (config)>

- 4. Configure access control:
 - To limit access to specified IPv4 addresses and networks:

(config)> add service mdns acl address end *value* (config)>

Where value can be:

- A single IP address or host name.
- A network designation in CIDR notation, for example, 192.168.1.0/24.
- any: No limit to IPv4 addresses that can access the mDNS service.

Repeat this step to list additional IP addresses or networks.

To limit access to specified IPv6 addresses and networks:

(config)> add service mdns acl address6 end *value* (config)>

Where value can be:

- · A single IP address or host name.
- A network designation in CIDR notation, for example, 2001:db8::/48.
- any: No limit to IPv6 addresses that can access the mDNS service.

Repeat this step to list additional IP addresses or networks.

To limit access to hosts connected through a specified interface on the IX20 device:

(config)> add service mdns acl interface end *value* (config)>

Where value is an interface defined on your device.

Display a list of available interfaces:

Use ... network interface ?to display interface information:

(config)> ... network interface ?

Interfaces

Additional Configuration

setupip Setup IP

setuplinklocalip Setup Link-local IP

eth1 ETH1
eth2 ETH2
loopback Loopback
modem Modem

(config)>

Repeat this step to list additional interfaces.

To limit access based on firewall zones:

```
(config)> add service mdns acl zone end value (config)>
```

Where value is a firewall zone defined on your device, or the any keyword.

Display a list of available firewall zones:

Type ... firewall zone ?at the config prompt:

```
(config)> ... firewall zone ?
```

Zones: A list of groups of network interfaces that can be referred to by packet filtering rules and access control lists.

Additional Configuration

any

dynamic_routes

edge

external

hotspot

internal

ipsec

loopback

setup

(config)>

Repeat this step to include additional firewall zones.

5. Save the configuration and apply the change.

```
(config)> save
Configuration saved.
>
```

6. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Use the MQTT broker service

MQTT is a lightweight publish/subscribe messaging protocol for the Internet of Things (IoT) applications, designed to connect devices using a small footprint and minimum network bandwidth.

Your IX20 device includes an MQTT broker service that serves as an intermediary between MQTT clients. The broker receives and distributes client messages.

Required configuration items

- Enable the MQTT broker.
- MQTT client usernames and passwords.
 - Topic access control for each client.
- Encryption type.
- How to control client access to topics on the MQTT broker.

Additional configuration Items

- The port used by the MQTT broker.
- Access control list to limit downstream access to the IX20 device's MQTT broker.
- Include debug messages in the system log.
- Whether to allow anonymous clients.
- Whether to allow clients that have no client ID to connect.
- Whether replace the client's ID with its username.

₹ Web

- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.




The Configuration window is displayed.

- 3. Click Services > MQTT broker.
- 4. Click Enable.
- 5. (Optional) For **Port**, type the port number for the MQTT broker to listen for incoming connections. The default is **1883**.

- (Optional) Click to expand Access control list to restrict access to the MQTT broker:
 - To limit access to specified IPv4 addresses and networks:
 - a. Click IPv4 Addresses.
 - b. For **Add Address**, click **1**/₂o
 - c. For Address, enter the IPv4 address or network that can access the device's iperf service. Allowed values are:
 - A single IP address or host name.
 - A network designation in CIDR notation, for example, 192.168.1.0/24.
 - any: No limit to IPv4 addresses that can access the iperf service.
 - d. Click Ybagain to list additional IP addresses or networks.
 - To limit access to specified IPv6 addresses and networks:
 - a. Click IPv6 Addresses.
 - b. For Add Address, click Yo
 - c. For Address, enter the IPv6 address or network that can access the device's iperf service. Allowed values are:
 - · A single IP address or host name.
 - A network designation in CIDR notation, for example, 2001:db8::/48.
 - any: No limit to IPv6 addresses that can access the iperf service.
 - d. Click Ybagain to list additional IP addresses or networks.
 - To limit access to hosts connected through a specified interface on the device:
 - a. Click Interfaces.
 - b. For **Add Interface**, click %
 - c. For **Interface**, select the appropriate interface from the dropdown.
 - d. Click Ybagain to allow access through additional interfaces.
 - To limit access based on firewall zones:
 - a. Click Zones. By default, there are three firewall zones already configured: Internal, Edge, and IPsec.
 - b. For **Add Zone**, click Υ₀
 - For **Zone**, select the appropriate firewall zone from the dropdown.
 See Firewall configuration for information about firewall zones.
 - d. Click % again to allow access through additional firewall zones.
- 7. Click to toggle on **Debug** to write MQTT debug messages to the system log.
- 8. Click to toggle on **Allow anonymous clients** to allow connections from clients that do not provide a username.
- 9. By default, the MQTT broker will allow clients without client IDs to connect, and will generate a client ID for them. To disable, click to toggle off **Allow zero length client id**.
- 10. Click to toggle on Use username as client id. When enabled, the broker will replace the client ID with the username, which will prevent one client from disconnecting another by using the same client ID.
- 11. Add a client:

- a. Click to expand Clients.
- b. Click Yoto add a client.

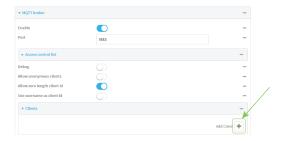

- c. Type the Username and Password for the client.
- d. Add a topic to control this client's access to:
 - i. Click to expand Topic access control list.
 - ii. Click Yoto add a topic.
 - iii. For **Topic**, type the topic. The signal level wildcard, **+**, and multi-level wildcard, **#**, are supported.
 - iv. For Access, select the level of access that the client will have:
 - Read
 - Write
 - Read/write
 - Deny
 - v. Click %again to add additional topics.
- e. Click %again to add additional clients.
- 12. Click to expand Encryption.
- 13. For **Type**, select either **None** or **PSK**.
 - If **PSK** is selected:
 - a. Click to enable Use PSK identity as username to use the PSK identity sent by the client as its username.
 - b. (Optional) For **Identifier**, type a string that identifies the listener and is sent to the clients.
 - c. Click to expand Pre-shared keys.
 - d. Click %to add a pre-shared key.
 - e. For **Identity**, type the identity sent to the client.
 - f. For **Key**, type or paste the pre-shared key in hexadecimal format that is associated with the client identity.
 - g. Click %again to add additional pre-shared keys.
- 14. Click to expand Topic access control list.

The topic access control lists controls what topics clients can access. If no topics are included, then clients have access to all topics. If any topics are listed, access is restricted to only the listed topics.

- To restrict access for anonymous clients to particular topics:
 - a. Click to expand Anonymous.
 - b. Click Yoto add a topic.
 - c. For **Topic**, type the topic. The signal level wildcard, +, and multi-level wildcard, #, are supported.
 - d. For **Access**, select the level of access that the client will have:
 - Read
 - Write
 - · Read/write
 - Deny
 - e. Click %again to add additional topics.
- To restrict access to topics based on pattern substitution:
 - a. Click to expand Pattern.
 - b. Click Yoto add a topic.
 - c. For **Topic**, type the topic. The variables **%c** and **%u** can be used as substitutes for the client ID or username. If a variable is used, it can be the only text for that level of the hierarchy..
 - d. For Access, select the level of access that the client will have:
 - Read
 - Write
 - Read/write
 - Deny
 - e. Click %again to add additional topics.
- 15. Click **Apply** to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

> config (config)>

3. Enable the MQTT broker:

(config)> service mqtt enable true (config)>

4. (Optional) Set the port number for the MQTT broker to listen for incoming connections:

(config)> service mqtt port int
(config)>

The default is 1883.

- 5. (Optional) Set the access control list to restrict access to the MQTT broker:
 - To limit access to specified IPv4 addresses and networks:

```
(config)> add service mqtt acl address end value (config)>
```

Where value can be:

- · A single IP address or host name.
- A network designation in CIDR notation, for example, 192.168.1.0/24.
- any: No limit to IPv4 addresses that can access the iperf service.

Repeat this step to list additional IP addresses or networks.

To limit access to specified IPv6 addresses and networks:

```
(config)> add service mqtt acl address6 end value (config)>
```

Where value can be:

- A single IP address or host name.
- A network designation in CIDR notation, for example, 2001:db8::/48.
- any: No limit to IPv6 addresses that can access the iperf service.

Repeat this step to list additional IP addresses or networks.

To limit access to hosts connected through a specified interface on the IX20 device:

```
(config)> add service mqtt acl interface end value (config)>
```

Where value is an interface defined on your device.

Display a list of available interfaces:

Use ... network interface ?to display interface information:

```
(config)> ... network interface ?

Interfaces

Additional Configuration
------setupip Setup IP
setuplinklocalip Setup Link-local IP
eth1 ETH1
eth2 ETH2
loopback Loopback
```

modem Modem (config)>

Repeat this step to list additional interfaces.

To limit access based on firewall zones:

(config)> add service mqtt acl zone end *value* (config)>

Where *value* is a firewall zone defined on your device, or the **any** keyword.

Display a list of available firewall zones:

Type ... firewall zone ?at the config prompt:

(config)> ... firewall zone?

Zones: A list of groups of network interfaces that can be referred to by packet filtering rules and access control lists.

Additional Configuration

any

dynamic_routes

edge

external

hotspot

internal

ipsec

loopback

setup

(config)>

Repeat this step to include additional firewall zones.

6. Enable the system to write MQTT debug messages to the system log:

(config)> service mqtt debug true (config)>

7. Enable connections from clients that do not provide a username:

(config)> service mqtt allow_anonymous true (config)>

8. By default, the MQTT broker will allow clients without client IDs to connect, and will generate a client ID for them. To disable:

(config)> service mqtt allow_zero_length_client_id false (config)>

9. Enable the broker to replace the client ID with the username, which will prevent one client from disconnecting another by using the same client ID:

(config)> service mqtt use_username_as_client_id true (config)>

10. Add and configure clients that are allowed to connect to the broker:

a. Add a client:

(config)> add service mqtt client end (config service mqtt client 0)>

b. Set the username and password for the client:

(config service mqtt client 0)> username value (config service mqtt client 0)> password value (config service mqtt client 0)>

- c. Add a topic to control this client's access to:
 - i. Add a topic:

(config service mqtt client 0)> add topic_acl end (config service mqtt client 0 topic_acl 0)>

ii. Set the topic:

(config service mqtt client 0 topic_acl 0)> topic *value* (config service mqtt client 0 topic_acl 0)>

where value is one of:

- The topic.
- The signal level wildcard, +.
- The multi-level wildcard, #.
- iii. Set the access type to apply to the topic:

(config service mqtt client 0 topic_acl 0)> access value (config service mqtt client 0 topic_acl 0)>

where value is one of:

- deny
- read
- readwrite
- write

The default is readwrite.

iv. Add additional topics:

(config service mqtt client 0 topic_acl 0)> add topic_acl end (config service mqtt client 0 topic_acl 1)>

- v. Repeat the above steps to set the topic and access type.
- 11. Set the encryption:
 - a. Return to the root of the configuration:

(config service mqtt client 0 topic_acl 1)> ... (config)>

b. Set the encryption type:

(config)> service mqtt encryption type *value* (config)>

where value is either:

- none
- psk

If **psk** is used:

a. (Optional) Set a string that identifies the listener and is sent to the clients:

(config)> service mqtt encryption identifier *string* (config)>

b. Enable the PSK identity sent by the client to be used as its username:

(config)> service mqtt encryption use_identity_as_username true (config)>

- c. Set the pre-shared keys:
 - i. Add a pre-shared key:

(config)> add service mqtt encryption psk end (config service mqtt encryption psk 0)>

ii. Set the identity sent to the client:

(config service mqtt encryption psk 0)> indentity *value* (config service mqtt encryption psk 0)>

iii. Set the pre-shared key:

(config service mqtt encryption psk 0)> key *value* (config service mqtt encryption psk 0)>

where *value* is the pre-shared key in hexadecimal format that is associated with the client identity.

iv. Add additional keys:

(config service mqtt encryption psk 0)> add .. end (config service mqtt encryption psk 1)>

Repeat the above steps to set the identity and the pre-shared key.

12. The topic access control lists controls what topics clients can access. If no topics are included, then clients have access to all topics. If any topics are listed, access is restricted to only the listed topics.

- To restrict access for anonymous clients to particular topics:
 - a. Return to the service mqtt node of the schema:

(config service mqtt encryption psk 1)> ... service mqtt (config service mqtt)>

b. Add a topic:

(config service mqtt)> add topic_acl anonymous end (config service mqtt topic_acl anonymous 0)>

c. Set the topic:

(config service mqtt topic_acl anonymous 0)> topic *value* (config service mqtt topic_acl anonymous 0)>

where value is one of:

- · The topic.
- The signal level wildcard, +.
- The multi-level wildcard, #.
- d. Set the access type to apply to the topic:

(config service mqtt topic_acl anonymous 0)> access *value* (config service mqtt topic_acl anonymous 0)>

where value is one of:

- deny
- read
- · readwrite
- write

The default is readwrite.

e. Add additional topics:

(config service mqtt topic_acl anonymous 0)> add anonymous end (config service mqtt topic_acl anonymous 1)>

- f. Repeat the above steps to set the topic and access type.
- To restrict access to topics based on pattern substitution:
 - a. Return to the service mgtt node of the schema:

(config service mqtt encryption psk 1)> ... service mqtt (config service mqtt)>

b. Add a topic:

(config service mqtt)> add topic_acl pattern end (config service mqtt topic_acl pattern 0)>

c. Set the topic:

(config service mqtt topic_acl pattern 0)> topic *value* (config service mqtt topic_acl pattern 0)>

where value is one of:

- · The topic.
- The variable %c as a substitute for the client ID.
- The variable %u as a substitute for the username.

If a variable is used, it can be the only text for that level of the hierarchy.

d. Set the access type to apply to the topic:

```
(config service mqtt topic_acl pattern 0)> access value (config service mqtt topic_acl pattern 0)>
```

where value is one of:

- deny
- read
- · readwrite
- write

The default is readwrite.

e. Add additional topics:

```
(config service mqtt topic_acl pattern 0)> add .... pattern end (config service mqtt topic_acl pattern 1)>
```

- f. Repeat the above steps to set the topic and access type.
- 13. Save the configuration and apply the change.

```
(config)> save
Configuration saved.
```

14. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Show MQTT broker information

You can view status and statistics about the MQTT broker from either the WebUI or the command line.



Log into the IX20 WebUI as a user with full Admin access rights.

- 1. On the main menu, click Status.
- 2. Under Services, click MQTT Broker.

Command line

Show MQTT broker information

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. Use the show mqtt command at the system prompt:

```
> show location
```

MQTT Broker Status

Enabled : true Status : up

Version : mosquitto version 2.0.14

Uptime : (202s)

Totals

Bytes sent : 158400 Bytes received : 4500 Messages sent : 0 Messages received : 0

Clients

Total : 1

Maximum : 5

Connected : 1

Disconnected : 0

Expired : 0

Subscriptions

Total : 1 Shared : 1

Message Store

Bytes: 151
Messages: 35
Retained messages: 40

PUBLISH Messages

Bytes sent : 0
Bytes received : 0
Messages sent : 0
Messages received : 0
Messages dropped : 0

Services Use the iPerf service

>

3. Use the show mqtt command to return additional information, including averages over one, five, and fifteen minutes.

4. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Use the iPerf service

Your IX20 device includes an iPerf3 server that you can use to test the performance of your network. iPerf3 is a command-line tool that measures the maximum network throughput an interface can handle. This is useful when diagnosing network speed issues, to determine, for example, whether a cellular connection is providing expected throughput.

The IX20 implementation of iPerf3 supports testing with both TCP and UDP.

Note Using iPerf clients that are at a version earlier than iPerf3 to connect to the IX20 device's iPerf3 server may result in unpredictable results. As a result, Digi recommends using an iPerf client at version 3 or newer to connect to the IX20 device's iPerf3 server.

Required configuration items

- Enable the iPerf server on the IX20 device.
- An iPerf3 client installed on a remote host. iPerf3 software can be downloaded at https://iperf.fr/iperf-download.php.

Additional configuration Items

- The port that the IX20 device's iPerf server will use to listen for incoming connections.
- The access control list for the iPerf server.

When the iPerf server is enabled, the IX20 device will automatically configure its firewall rules to allow incoming connections on the configured listening port. You can restrict access by configuring the access control list for the iPerf server.

To enable the iPerf3 server:



- Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- a. Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.

Services Use the iPerf service

- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The Configuration window is displayed.

- 3. Click Services > iPerf.
- 4. Click Enable.
- (Optional) For IPerf Server Port, type the appropriate port number for the iPerf server listening port.
- 6. (Optional) Click to expand Access control list to restrict access to the iPerf server:
 - To limit access to specified IPv4 addresses and networks:
 - a. Click IPv4 Addresses.
 - b. For Add Address, click Yo
 - c. For Address, enter the IPv4 address or network that can access the device's iperf service. Allowed values are:
 - A single IP address or host name.
 - A network designation in CIDR notation, for example, 192.168.1.0/24.
 - any: No limit to IPv4 addresses that can access the iperf service.
 - d. Click Ybagain to list additional IP addresses or networks.
 - To limit access to specified IPv6 addresses and networks:
 - a. Click IPv6 Addresses.
 - b. For Add Address, click Yo
 - c. For Address, enter the IPv6 address or network that can access the device's iperf service. Allowed values are:
 - · A single IP address or host name.
 - A network designation in CIDR notation, for example, 2001:db8::/48.
 - any: No limit to IPv6 addresses that can access the iperf service.
 - d. Click % again to list additional IP addresses or networks.
 - To limit access to hosts connected through a specified interface on the device:
 - a. Click Interfaces.
 - b. For **Add Interface**, click %
 - c. For **Interface**, select the appropriate interface from the dropdown.
 - d. Click Ybagain to allow access through additional interfaces.
 - To limit access based on firewall zones:
 - a. Click Zones. By default, there are three firewall zones already configured: Internal, Edge, and IPsec.

Services Use the iPerf service

- b. For **Add Zone**, click **1**/₂o
- For **Zone**, select the appropriate firewall zone from the dropdown.
 See Firewall configuration for information about firewall zones.
- d. Click % again to allow access through additional firewall zones.
- 7. Click Apply to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

> config (config)>

3. Enable the iPerf server:

(config)> service iperf enable true (config)>

4. (Optional) Set the port number for the iPerf server listening port. The default is 5201.

(config)> service iperf port port_number (config)>

- (Optional) Set the access control list to restrict access to the iPerf server:
 - To limit access to specified IPv4 addresses and networks:

(config)> add service iperf acl address end *value* (config)>

Where value can be:

- A single IP address or host name.
- A network designation in CIDR notation, for example, 192.168.1.0/24.
- any: No limit to IPv4 addresses that can access the service-type.

Repeat this step to list additional IP addresses or networks.

To limit access to specified IPv6 addresses and networks:

(config)> add service iperf acl address6 end *value* (config)>

Where value can be:

- A single IP address or host name.
- A network designation in CIDR notation, for example, 2001:db8::/48.
- any: No limit to IPv6 addresses that can access the service-type.

Repeat this step to list additional IP addresses or networks.

Services Use the iPerf service

To limit access to hosts connected through a specified interface on the IX20 device:

(config)> add service iperf acl interface end value (config)>

Where value is an interface defined on your device.

Display a list of available interfaces:

Use ... network interface ?to display interface information:

(config)> ... network interface ?

Interfaces

setupip

Additional Configuration

Setup IP setuplinklocalip Setup Link-local IP

ETH1 eth1 eth2 ETH2

Loopback loopback modem Modem

(config)>

Repeat this step to list additional interfaces.

To limit access based on firewall zones:

(config)> add service iperf acl zone end value (config)>

Where value is a firewall zone defined on your device, or the any keyword.

Display a list of available firewall zones:

Type ... firewall zone ?at the config prompt:

(config)> ... firewall zone?

Zones: A list of groups of network interfaces that can be referred to by packet filtering rules and access control lists.

Additional Configuration

any

dynamic_routes

edge

external

hotspot

internal

ipsec

loopback

setup
(config)>

Repeat this step to include additional firewall zones.

6. Save the configuration and apply the change.

```
(config)> save
Configuration saved.
>
```

7. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Example performance test using iPerf3

On a remote host with iPerf3 installed, enter the following command:

```
$ iperf3 -c device_ip
where device ip is the IP address of the IX20 device. For example:
$ iperf3 -c 192.168.2.1
Connecting to host 192.168.2.1, port 5201
[ 4] local 192.168.3.100 port 54934 connected to 192.168.1.1 port 5201
[ID] Interval
                Transfer Bandwidth
                                      Retr Cwnd
[ 4] 0.00-1.00 sec 26.7 MBytes 224 Mbits/sec 8 2.68 MBytes
[ 4] 1.00-2.00 sec 28.4 MBytes 238 Mbits/sec 29 1.39 MBytes
[ 4] 2.00-3.00 sec 29.8 MBytes 250 Mbits/sec 0 1.46 MBytes
[ 4] 3.00-4.00 sec 31.2 MBytes 262 Mbits/sec 0 1.52 MBytes
[4] 4.00-5.00 sec 32.1 MBytes 269 Mbits/sec 0 1.56 MBytes
[ 4] 5.00-6.00 sec 32.5 MBytes 273 Mbits/sec 0 1.58 MBytes
[ 4] 6.00-7.00 sec 33.9 MBytes 284 Mbits/sec 0 1.60 MBytes
[ 4] 7.00-8.00 sec 33.7 MBytes 282 Mbits/sec 0 1.60 MBytes
[4] 8.00-9.00 sec 33.5 MBytes 281 Mbits/sec 0 1.60 MBytes
[4] 9.00-10.00 sec 33.2 MBytes 279 Mbits/sec 0 1.60 MBytes
[ID] Interval
                Transfer Bandwidth
                                       Retr
[ 4] 0.00-10.00 sec 315 MBytes 264 Mbits/sec 37
                                                       sender
[ 4] 0.00-10.00 sec 313 MBytes 262 Mbits/sec
                                                     receiver
iperf Done.
```

Configure the ping responder service

Your IX20 device's ping responder service replies to ICMP and ICMPv6 echo requests. The service is enabled by default. You can disable the service, or you can configure the service to use an access control list to limit the service to specified IP address, interfaces, and/or zones.

To enable the iPerf3 server:



- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- a. Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The Configuration window is displayed.

3. Click Services > Ping responder.

The ping responder service is enabled by default. Click **Enable** to disable all ping responses.

- 4. Click to expand **Access control list** to restrict ping responses to specified IP address, interfaces, and/or zones:
 - To limit access to specified IPv4 addresses and networks:
 - a. Click IPv4 Addresses.
 - b. For Add Address, click Yo
 - c. For **Address**, enter the IPv4 address or network that can access the device's ping responder. Allowed values are:
 - · A single IP address or host name.
 - A network designation in CIDR notation, for example, 192.168.1.0/24.
 - any: No limit to IPv4 addresses that can access the ping responder.
 - d. Click Ybagain to list additional IP addresses or networks.
 - To limit access to specified IPv6 addresses and networks:
 - a. Click IPv6 Addresses.
 - b. For Add Address, click Yo
 - c. For Address, enter the IPv6 address or network that can access the device's ping responder. Allowed values are:
 - · A single IP address or host name.
 - A network designation in CIDR notation, for example, 2001:db8::/48.
 - any: No limit to IPv6 addresses that can access the ping responder.
 - d. Click % again to list additional IP addresses or networks.

- To limit access to hosts connected through a specified interface on the device:
 - a. Click Interfaces.
 - b. For **Add Interface**, click 1/90
 - c. For **Interface**, select the appropriate interface from the dropdown.
 - d. Click % again to allow access through additional interfaces.
- To limit access based on firewall zones:
 - a. Click Zones. By default, there are three firewall zones already configured: Internal, Edge, and IPsec.
 - b. For **Add Zone**, click Υ_o
 - For **Zone**, select the appropriate firewall zone from the dropdown.
 See Firewall configuration for information about firewall zones.
 - d. Click % again to allow access through additional firewall zones.
- 5. Click Apply to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

> config (config)>

3. Enable the iPerf server:

(config)> service iperf enable true (config)>

4. (Optional) Set the port number for the iPerf server listening port. The default is 5201.

(config)> service iperf port port_number (config)>

- 5. (Optional) Set the access control list to restrict access to the iPerf server:
 - To limit access to specified IPv4 addresses and networks:

(config)> add service iperf acl address end *value* (config)>

Where value can be:

- · A single IP address or host name.
- A network designation in CIDR notation, for example, 192.168.1.0/24.
- any: No limit to IPv4 addresses that can access the service-type.

Repeat this step to list additional IP addresses or networks.

To limit access to specified IPv6 addresses and networks:

(config)> add service iperf acl address6 end *value* (config)>

Where value can be:

- · A single IP address or host name.
- A network designation in CIDR notation, for example, 2001:db8::/48.
- any: No limit to IPv6 addresses that can access the service-type.

Repeat this step to list additional IP addresses or networks.

To limit access to hosts connected through a specified interface on the IX20 device:

(config)> add service iperf acl interface end *value* (config)>

Where value is an interface defined on your device.

Display a list of available interfaces:

Use ... network interface ?to display interface information:

(config)> ... network interface ?

Interfaces

Additional Configuration

setupip Setup IP

setupip Setup IP setuplinklocalip Setup Link-local IP

eth1 ETH1 eth2 ETH2 loopback Loopback modem Modem

(config)>

Repeat this step to list additional interfaces.

To limit access based on firewall zones:

(config)> add service iperf acl zone end *value* (config)>

Where value is a firewall zone defined on your device, or the any keyword.

Display a list of available firewall zones:

Type ... firewall zone ? at the config prompt:

(config)> ... firewall zone?

Zones: A list of groups of network interfaces that can be referred to by packet filtering rules and access control lists.

```
Additional Configuration

any
dynamic_routes
edge
external
hotspot
internal
ipsec
loopback
setup

(config)>
```

Repeat this step to include additional firewall zones.

6. Save the configuration and apply the change.

```
(config)> save
Configuration saved.
>
```

Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Example performance test using iPerf3

On a remote host with Iperf3 installed, enter the following command:

```
$ iperf3 -c device_ip
where device ip is the IP address of the IX20 device. For example:
$ iperf3 -c 192.168.2.1
Connecting to host 192.168.2.1, port 5201
[ 4] local 192.168.3.100 port 54934 connected to 192.168.1.1 port 5201
               Transfer Bandwidth Retr Cwnd
[ID] Interval
[ 4] 0.00-1.00 sec 26.7 MBytes 224 Mbits/sec 8 2.68 MBytes
[ 4] 1.00-2.00 sec 28.4 MBytes 238 Mbits/sec 29 1.39 MBytes
[ 4] 2.00-3.00 sec 29.8 MBytes 250 Mbits/sec 0 1.46 MBytes
[ 4] 3.00-4.00 sec 31.2 MBytes 262 Mbits/sec 0 1.52 MBytes
[ 4] 4.00-5.00 sec 32.1 MBytes 269 Mbits/sec 0 1.56 MBytes
[4] 5.00-6.00 sec 32.5 MBytes 273 Mbits/sec 0 1.58 MBytes
[4] 6.00-7.00 sec 33.9 MBytes 284 Mbits/sec 0 1.60 MBytes
[ 4] 7.00-8.00 sec 33.7 MBytes 282 Mbits/sec 0 1.60 MBytes
[ 4] 8.00-9.00 sec 33.5 MBytes 281 Mbits/sec 0 1.60 MBytes
[ 4] 9.00-10.00 sec 33.2 MBytes 279 Mbits/sec 0 1.60 MBytes
[ID] Interval
                Transfer Bandwidth
[ 4] 0.00-10.00 sec 315 MBytes 264 Mbits/sec 37
                                                      sender
[ 4] 0.00-10.00 sec 313 MBytes 262 Mbits/sec
                                                     receiver
iperf Done.
```

Applications

The IX20 supports Python 3.6 and provides you with the ability to run Python applications on the device interactively or from a file. You can also specify Python applications and other scripts to be run each time the device system restarts, at specific intervals, or at a specified time.

This chapter contains the following topics:

Develop Python applications	805
The use(led) function	
Releasing the LEDs to system control	
Use Python to control the color of multi-colored LEDs	
Set up the IX20 to automatically run your applications	
Start an interactive Python session	
Run a Python application at the shell prompt	
Configure scripts to run manually	
Start a manual script	
Python versions and corresponding DAL OS firmware versions	

Develop Python applications

Note Beginning with firmware release 21.11.x, Python is no longer included as part of the base firmware for the IX20 device. If you require Python in your environment and your device is running firmware 21.11.x or newer, see Install Python for information about installing Python on your device.

Note Beginning with firmware release 24.12.153.x, Python is no longer included as part of the base DAL OS firmware for the IX20 device. If you require Python in your environment and your device is running 24.12.x or newer, see Install Python for information about installing Python on your device.

The IX20 features a standard Python 3.6 distribution. Python is a dynamic, object-oriented language for developing software applications, from simple programs to complex embedded applications. Digi offers the Digi IoT PyCharm Plugin to help you while writing, building, and testing your application. See Create and test a Python application.

In addition to the standard Python library, the IX20 includes a set of extensions to access its configuration and interfaces. See Python modules.

The IX20 provides you with the ability to:

- Run Python applications on the device interactively or from a file.
- Specify Python applications and other scripts to be run each time the device system restarts, at specific intervals, or at a specified time. See Configure scripts to run automatically.
- Use pip to install Python packages.

Note Although pip is provided to help facilitate the installation of Python packages, there are limitations in Python package support due to package dependencies, storage limitations, and other issues.

This section contains the following topics:

Install Python	806
Set up the IX20 for Python development	
Create and test a Python application	
Python modules	

Install Python

Beginning with firmware release 21.11.x, python is no longer included as part of the base firmware for the IX20 device. To install Python, you must first upgrade your device's firmware to release 22.5.50.62 or greater. Python is also available as part of the base firmware firmware with release 21.8.x and earlier.


There are two options for installing Python on your IX20 device running 22.5.50.62 or greater:

- Option 1: Enable Python via Digi Remote Manager
- Option 2: Install Python via the local device

Option 1: Enable Python via Digi Remote Manager

As part of creating or updating a configuration profile for IX20 devices, you can enable the Python add-on at the automation tab for the configuration:

- 1. In Remote Manager, create a new configuration or edit an existing configuration for the IX20 device type.
- 2. At the **Automation** tab, under **Add-ons**, click to enable **Python**.

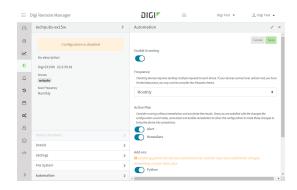

If the configuration is enabled and **Remediate** is selected, Remote Manager will install and enable Python on all IX20 devices to which the configuration applies.

Option 2: Install Python via the local device

1. On your PC, download the Python live image for the IX20 to your local filesystem. To download the Python live image for firm version 25.2:

To download the Python live image for older firmware versions:

- For firmware version 22.5.50.62:
- For firmware version 22.8.33.50:
- For firmware version 22.11.48.10:
- Rename the downloaded file to python_live_image.sqfs. The filename must exactly match this in order for the Digi device to load the python live image properly.

3. Create a /opt/lib/live_images directory on the local device:

menu. Type admin to access the Admin CLI.

- a. Log into the IX20 local command line as a user with full Admin access rights.
 Depending on your device configuration, you may be presented with an Access selection
- b. Create the directory:

> mkdir /opt/lib/live_images

- 4. Upload the **python_live_image.sqfs** file to the **/opt/lib/live_images** directory:
 - From the Web UI:

Log into the IX20 WebUI as a user with full Admin access rights.

- Select System > File System.
- b. Highlight the **opt** directory and click \triangle to move into that directory.
- c. Highlight the **lib** directory and click \triangle to move into that directory.
- d. Highlight the **live_images** directory and click \triangle to move into that directory.
- e. Click 3 (upload).
- f. Browse to the location of the python_live_image.sqfs file on your local machine. Select the file and click Open to upload the file.
- From the Admin CLI:
 - a. Log into the IX20 local command line.
 - b. Use the scp command to upload the file:

scp host remote_host user username remote remote-path local /opt/lib/live_images/ to local

where:

- remote_host is the hostname or IP address of the remote host where the **python_live_image.sqfs** file was downloaded.
- username is the name of the user on the remote host.
- remote-path is the path and filename of the python_live_image.sqfs file on the remote host.

Set up the IX20 for Python development

- 1. Access the IX20 local web interface
 - Use an Ethernet cable to connect the IX20 to your local laptop or PC.
 The factory Setup IP address is 192.168.2.1
 - b. Log into the IX20 WebUI as a user with full admin access rights.
 The default user name is admin and the default password is the unique password printed on the label packaged with your device.
- 2. Go to the Configuration window
 - On the menu, click System.
 - b. Under Configuration, click Device Configuration. The Configuration window displays.

- 3. Enable service discovery (mDNS)
 - a. Click Services > Service Discovery (mDNS).
 - b. Enable the mDNS service.

Note For more information, see Enable service discovery (mDNS).

- 4. Configure SSH access
 - a. Click Services > SSH.
 - b. Click Enable.

Note For more information, see the following topics: Configure SSH access, Use SSH with key authentication, and Allow remote access for web administration and SSH.

- 5. Enable shell access
 - a. Click Authentication > Groups > admin.
 - b. Click the Interactive shell access option.
 - c. If this option is not displayed, see Disable shell access.
- Glick Apply to save the configuration and apply the changes.
 The Apply button is located at the top of the WebUI page. You may need to scroll to the top of the page to locate it.

Create and test a Python application

To develop a Python application for the IX20:

- 1. Set up the IX20 for Python development.
- 2. Create and test your application with:
- PyCharm. You can create, build, and remotely launch your application in the IX20.
- Your preferred editor and manually transfer the application, install dependencies, and launch in the IX20.

Develop an application in PyCharm

The Digi IoT PyCharm Plugin allows you to write, build and run Python applications for Digi devices in a quick and easy way. See the Digi XBee PyCharm IDE Plugin User Guide for details.

This is what you can do with it:

- Create Python projects from scratch or import one of the available examples.
- Get help while you write your code thanks to the syntax highlight, quick documentation, and code completion features.
- Build and upload Python applications to your Digi device with just one click.
- Add libraries that facilitate the usage of external peripherals or non-standard APIs.
- Communicate with your Digi device through the integrated SSH console to see the application output or execute quick tests.

Manually install and launch an application


To create, build, and launch your application:

- 1. Write your Python application code. Code can include:
 - Any Python 3.6 standard feature.
 - Access to the IX20 configuration and hardware with the Python modules.
 - Third-party modules included in the IX20, for example:
 - pySerial 3.4
 - Eclipse Paho MQTT Python Client
 - Any other third-party module implemented in Python.
- 2. Install the application in /etc/config/scripts directory.
- 3. Launch your application:
 - Run your application at the shell prompt.
 - Configure your application to run automatically.

PyCharm FAQ: My IX20 is not listed in Digi Device Selector

If an IX20 does not appear on the list of the Digi Device Selector:

- Ensure that your device has the mDNS service enabled and is on the same network as the computer. See Set up the IX20 for Python development.
- Or click the link Click here to add it manually to specify the IP address, port, username, and password.

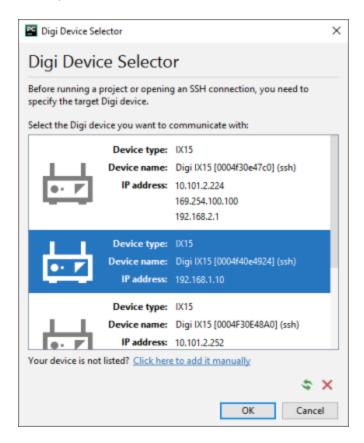

Example: Configure a custom port to listen for incoming socket connections

The following example Python script configures a custom port, port 9999, to accept incoming socket connections.

You will also need to add a custom firewall rule to accept the incoming traffic on this port.

Example script

```
import socket
import socketserver
class MyTCPHandler(socketserver.BaseRequestHandler):
  The request handler class for our server.
  It is instantiated once per connection to the server, and must
  override the handle() method to implement communication to the
  client.
  def handle(self):
    # self.request is the TCP socket connected to the client
    self.data = self.request.recv(1024).strip()
    print("{} wrote:".format(self.client_address[0]))
    print(self.data)
    # just send back the same data, but upper-cased
    self.request.sendall(self.data.upper())
if __name__ == "__main ":
  HOST, PORT =", 9999
  # Create the server, binding to localhost on port 9999
  with socketserver.TCPServer((HOST, PORT), MyTCPHandler) as server:
    # Activate the server; this will keep running until you
    # interrupt the program with Ctrl-C
    print("Waiting for data...")
    server.serve_forever()
```

Create a custom firewall rule



- Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

- 3. Click Firewall > Custom rules.
- 4. Enable the custom rules.
- 5. For Rules, type the following:

iptables -I INPUT -p tcp --dport 9999 -j ACCEPT



6. Click **Apply** to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

> config (config)>

3. Enable custom firewall rules:

(config)> firewall custom enable true(config)>

4. Set the shell command that will execute the custom firewall rules script:

(config)> firewall custom rules "iptables -I INPUT -p tcp --dport 9999 -j ACCEPT" (config)> $\,$

5. Save the configuration and apply the change.

(config)> save Configuration saved. >

6. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Python modules

The IX20 supports Python 3.6 and provides you with the ability to run Python applications on the device interactively or from a file. It also offers extensions to manage your IX20:

■ The **digidevice** module provides platform-specific extensions that allow you to interact with the device's configuration and interfaces.

The following submodules are included with the **digidevice** module:

- LEDs: digidevice.led
- SMS: digidevice.sms
- GPS: digidevice.location
- · Digi Remote Manager:
 - digidevice.datapoint
 - o digidevice.device_request
 - o digidevice.name
- Device configuration: digidevice.config
- Command line interface: digidevice.cli
- Access runtime database: digidevice.runt
- Set the maintenance window: digidevice.maintenance
- Use the Python serial module—pySerial—to access the serial ports.
- Eclipse Paho MQTT Python client enables applications to connect to an MQTT broker to publish messages, and to subscribe to topics and receive published messages.

Note Module-related documentation is in the Digidevice module section.

Digidevice module

The Python **digidevice** module provides platform-specific extensions that allow you to interact with the device's configuration and interfaces. The following submodules are included with the **digidevice** module:

This section contains the following topics:

Use digidevice.cli to execute CLI commands

Use the **digidevice.cli** Python module to issue CLI commands from Python to retrieve status and statistical information about the device.

For example, to display the system status and statistics by using an interactive Python session, use the show system command with the **cli** module:

 Select a device in Remote Manager that is configured to allow shell access to the admin user, and click **Actions > Open Console**. Alternatively, log into the IX20 local command line as a user with shell access.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **shell** to access the device shell.

2. At the shell prompt, use the **python** command with no parameters to enter an interactive Python session:

```
# python
Python 3.10.1 (main, Mar 30 2023, 23:47:13) [GCC 11.2.0] on linux
Type "help", "copyright", "credits" or "license" for more information.
>>>
```

3. Import the cli submodule:

```
>>> from digidevice import cli
>>>
```

4. Execute a CLI command using the **cli.execute**(**command**) function. For example, to print the system status and statistics to stdout using the **show system** command:

```
>>> response = cli.execute("show system")
>>> print (response)
             : Digi IX20
 Model
 Serial Number : IX20xxxxxxxxyyyyxx
       : IX20
 SKU
Hostname : IX20
MAC Address : DF:DD:E2:AE:21:18
 Hardware Version : 50001947-01 1P
 Firmware Version
                   : 25.2
 Alt. Firmware Version : 25.2
 Alt. Firmware Build Date: Fri, Jan 12, 2024 12:10:00
 Bootloader Version : 19.7.23.0-15f936e0ed
 Current Time
                 : Thu, Jan 11, 2024 12:10:00 +0000
 CPU
               : 1.4%
 Uptime
               : 6 days, 6 hours, 21 minutes, 57 seconds (541317s)
 Temperature
                 : 40C
 Location
 Contact
>>>
```

Use Ctrl-D to exit the Python session. You can also exit the session using exit() or quit().

Help for using Python to execute IX20 CLI commands

Get help executing a CLI command from Python by accessing help for cli.execute:

 Select a device in Remote Manager that is configured to allow shell access to the admin user, and click **Actions > Open Console**. Alternatively, log into the IX20 local command line as a user with shell access.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **shell** to access the device shell.

2. At the shell prompt, use the **python** command with no parameters to enter an interactive Python session:

```
# python
Python 3.10.1 (main, Mar 30 2023, 23:47:13) [GCC 11.2.0] on linux
Type "help", "copyright", "credits" or "license" for more information.
>>>

3. Import the cli submodule:

>>> from digidevice import cli
>>>

4. Use the help command with cli.execute:

>>> help(cli.execute)
Help on function execute in module digidevice.cli:

execute(command, timeout=5)
```

Use Ctrl-D to exit the Python session. You can also exit the session using exit() or quit().

Use digidevice.datapoint to upload custom datapoints to Digi Remote Manager

Execute a CLI command with the timeout specified returning the results.

Use the datapoint Python module to upload custom datapoints to Digi Remote Manager.

The following characteristics can be defined for a datapoint:

- Stream ID
- Value
- (Optional) Data type
 - integer
 - long
 - float
 - double
 - string
 - binary
- Units (optional)
- Timestamp (optional)
- Location (optional)

- · Tuple of latitude, longitude and altitude
- Description (optional)
- Quality (optional)
 - An integer describing the quality of the data point

For example, to use an interactive Python session to upload datapoints related to velocity, temperature, and the state of the emergency door:

 Select a device in Remote Manager that is configured to allow shell access to the admin user, and click **Actions > Open Console**. Alternatively, log into the IX20 local command line as a user with shell access.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **shell** to access the device shell.

2. At the shell prompt, use the **python** command with no parameters to enter an interactive Python session:

```
# python
Python 3.10.1 (main, Mar 30 2023, 23:47:13) [GCC 11.2.0] on linux
Type "help", "copyright", "credits" or "license" for more information.
>>>
```

3. Import the **datapoint** submodule and other necessary modules:

```
>>> from digidevice import datapoint 
>>> import time 
>>>
```

4. Upload the datapoints to Remote Manager:

```
>>> datapoint.upload("Velocity", 69, units="mph")
>>> datapoint.upload("Temperature", 24, geo_location=(54.409469, -1.718836, 129))
>>> datapoint.upload("Emergency_Door", "closed", timestamp=time.time())
```

5. Use Ctrl-D to exit the Python session. You can also exit the session using exit() or quit().

You can also upload multiple datapoints:

 Select a device in Remote Manager that is configured to allow shell access to the admin user, and click **Actions** > **Open Console**. Alternatively, log into the IX20 local command line as a user with shell access.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **shell** to access the device shell.

2. At the shell prompt, use the **python** command with no parameters to enter an interactive Python session:

```
# python
Python 3.10.1 (main, Mar 30 2023, 23:47:13) [GCC 11.2.0] on linux
Type "help", "copyright", "credits" or "license" for more information.
>>>
```

3. Import the datapoint submodule and other necessary modules:

```
>>> from digidevice import datapoint
>>> import time
>>>
```

4. Create datapoint objects:

```
>>> p1 = datapoint.DataPoint("Velocity", 69, units="mph")
>>> p2 = datapoint.DataPoint("Temperature", 24, geo_location=(54.409469, -1.718836, 129))
>>> p3 = datapoint.DataPoint("Emergency_Door", "closed", timestamp=time.time())
>>>
```

5. Upload the datapoints to Remote Manager:

```
>>> datapoint.upload_multiple([p1, p2, p3])
>>>
```

6. Use Ctrl-D to exit the Python session. You can also exit the session using exit() or quit().

Once the datapoints have been uploaded to Remote Manager, they can be viewed via Remote Manager or accessed using Web Services calls. See the *Digi Remote Manager Programmers Quide* for more information on web services and datapoints.

Help for using Python to upload custom datapoints to Remote Manager

Get help for uploading datapoints to your Digi Remote Manager account by accessing help for datapoint.upload and datapoint.upload_multiple:

 Select a device in Remote Manager that is configured to allow shell access to the admin user, and click **Actions > Open Console**. Alternatively, log into the IX20 local command line as a user with shell access.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **shell** to access the device shell.

2. At the shell prompt, use the **python** command with no parameters to enter an interactive Python session:

```
# python
Python 3.10.1 (main, Mar 30 2023, 23:47:13) [GCC 11.2.0] on linux
Type "help", "copyright", "credits" or "license" for more information.
>>>
```

3. Import the datapoint submodule and other necessary modules:

```
>>> from digidevice import datapoint
>>>
```

4. Use the help command with datapoint.upload:

```
>>> help(datapoint.upload)
Help on function upload in module digidevice.datapoint:

upload(stream_id:str, data, *, description:str=None, timestamp:float=None, units:str=None, geo_location:Tuple[float, float, float]=None, quality:int=None,
```

```
data_type:digidevice.datapoint.DataType=None, timeout:float=None)
...

5. Use the help command with datapoint.upload_multiple:

>>> help(datapoint.upload_multiple)
Help on function upload_multiple in module digidevice.datapoint:

upload_multiple(datapoints:List[digidevice.datapoint.DataPoint], timeout:float=None)
```

Use Ctrl-D to exit the Python session. You can also exit the session using exit() or quit().

Use digidevice.config for device configuration

Use the config Python module to access and modify the device configuration.

Read the device configuration

 Select a device in Remote Manager that is configured to allow shell access to the admin user, and click **Actions > Open Console**. Alternatively, log into the IX20 local command line as a user with shell access.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **shell** to access the device shell.

2. At the shell prompt, use the **python** command with no parameters to enter an interactive Python session:

```
# python
Python 3.10.1 (main, Mar 30 2023, 23:47:13) [GCC 11.2.0] on linux
Type "help", "copyright", "credits" or "license" for more information.
>>>
```

3. Import the config submodule:

```
>>> from digidevice import config
```

- 4. Use **config.load()** and the **get()** method to return the device's configuration:
 - a. Return the entire configuration:

```
>>> from pprint import pprint # use pprint vs. print to make the output easier to read >>> cfg = config.load() >>> pprint(cfg.dump().splitlines())
```

This returns the device configuration:

```
network.interface.lan1.device=/network/bridge/lan1
network.interface.lan1.enable=true
network.interface.lan1.ipv4.address=192.168.2.1/24
network.interface.lan1.ipv4.connection_monitor.attempts=3
...
```

b. Print a list of available interfaces:

```
>>> cfg = config.load()
>>> interfaces = cfg.get("network.interface")
>>> print(interfaces.keys())

This returns the following:

['setupip', 'setuplinklocal', 'lan1', 'loopback', 'wan1', 'wwan1', 'wwan2']

c. Print the IPv4 address of the LAN interface:

>>> cfg = config.load()
>>> interfaces = cfg.get("network.interfaces")
>>> print(interfaces.get("lan.ipv4.address"))

Which returns:

192.168.2.1/24
```

Modify the device configuration

Use the **set()** and **commit()** methods to modify the device configuration:

 Select a device in Remote Manager that is configured to allow shell access to the admin user, and click **Actions > Open Console**. Alternatively, log into the IX20 local command line as a user with shell access.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **shell** to access the device shell.

2. At the shell prompt, use the **python** command with no parameters to enter an interactive Python session:

```
# python
Python 3.10.1 (main, Mar 30 2023, 23:47:13) [GCC 11.2.0] on linux
Type "help", "copyright", "credits" or "license" for more information.
>>>
```

3. Import the config submodule:

```
>>> from digidevice import config
>>>
```

4. Use config.load(writable=True) to enable write mode for the configuration:

```
>>> cfg = config.load(writable=True)
>>>
```

5. Use the **set()** method to make changes to the configuration:

```
>>> cfg.set("system.name", "New-Name")
>>>
```

6. Use the commit() method to save the changes:

```
>>> cfg.commit()
True
>>>

7. Use the get() method to verify the change:

>>> print(cfg.get("system.name"))
New-Name
>>>
```

Help for using Python to read and modify device configuration

Get help for reading and modifying the device configuration by accessing help for digidevice.config:

 Select a device in Remote Manager that is configured to allow shell access to the admin user, and click **Actions > Open Console**. Alternatively, log into the IX20 local command line as a user with shell access.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **shell** to access the device shell.

2. At the shell prompt, use the **python** command with no parameters to enter an interactive Python session:

```
# python
Python 3.10.1 (main, Mar 30 2023, 23:47:13) [GCC 11.2.0] on linux
Type "help", "copyright", "credits" or "license" for more information.
>>>
```

3. Import the **config** submodule:

```
>>> from digidevice import config
>>>
```

4. Use the help command with config:

```
>>> help(config)
Help on module acl.config in acl:

NAME
acl.config - Python interface to ACL configuration (libconfig).
...
```

5. Use Ctrl-D to exit the Python session. You can also exit the session using exit() or quit().

Use Python to respond to Digi Remote Manager SCI requests

The **device_request** Python module allows you to interact with Digi Remote Manager by using Remote Manager's Server Command Interface (SCI), a web service that allows users to access information and perform commands that relate to their devices.

Use Remote Manager's SCI interface to create SCI requests that are sent to your IX20 device, and use the **device_request** module to send responses to those requests to Remote Manager.

See the Digi Remote Manager Programmers Quide for more information on SQ.

Task one: Use the device_request module on your IX20 device to create a response

 Select a device in Remote Manager that is configured to allow shell access to the admin user, and click **Actions > Open Console**. Alternatively, log into the IX20 local command line as a user with shell access.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **shell** to access the device shell.

2. At the shell prompt, use the **python** command with no parameters to enter an interactive Python session:

```
# python
Python 3.10.1 (main, Mar 30 2023, 23:47:13) [GCC 11.2.0] on linux
Type "help", "copyright", "credits" or "license" for more information.
>>>
```

3. Import the device_request module:

```
>>> from digidevice import device_request
>>>
```

4. Create a function to handle the request from Remote Manager:

```
>>> def handler(target, request):
print ("received request %s for target %s" % (request, target))
return "OK"
>>>
```

5. Register a callbackup function that will be called when the device receives a SCI request from Remote Manager:

```
>>> device_request.register("myTarget", handler)
>>>
```

Note Leave the interactive Python session active while completing task two, below. Once you have completed task two, exit the interactive session by using **Ctrl-D**. You can also exit the session using **exit()** or **quit()**.

Task two: Create and send an SCI request from Digi Remote Manager

The second step in using the **device_request** module is to create an SCI request that Remote Manager will forward to the device. For example, you can create in SCI request a the Remote Manager API explorer:

- 1. In Remote Manager, click **Documentation > API Explorer**.
- 2. Select the device to use as the SCI target:
 - a. Click SCI Targets.
 - b. Click Add Targets.
 - c. Enter or select the device ID of the device.
 - d. Click Add.
 - e. Click OK.

3. Click Examples > SCI > Data Service > Send Request.

Code similar to the following will be displayed in the HTTP message body text box:

Note The value of the **target_name** parameter in the **device_request** element must correspond to the **target** parameter of the **device_request.register** function in the Python script. In this example, the two are the same.

4. Click Send.

Once that the request has been sent to the device, the handler on the device is executed.

• On the device, you will receive the following output:

```
>>> received request
my payload string
for target myTarget
>>>
```

In Remote Manager, you will receive a response similar to the following:

```
<sci_reply version="1.0">
  <data_service>
  <device id="00000000-0000000-0000FFF-A83CF6A3"/>
  <requests>
   <device_request target_name="myTarget" status="0">OK</device_request>
  </requests>
  </device>
  </data_service>
  </sci_request>
```

Example: Use digidevice.cli with digidevice.device request

In this example, we will use the **digidevice.cli** module in conjunction with the **digidevice.device_request** module to return information about multiple devices to Remote Manager.

 Create a Python application, called showsystem.py, that uses the digidevice.cli module to create a response containing information about device and the device_request module to respond with this information to a request from Remote Manager:

```
from digidevice import device_request from digidevice import cli
```

```
import time

def handler(target, request):
    return cli.execute("show system verbose")

def status_cb(error_code, error_description):
    if error_code != 0:
        print("error handling showSystem device request: %s" % error_description)

device_request.register("showSystem", handler, status_callback = status_cb)

# Do not let the process finish so that it handles device requests
while True:
    time.sleep(10)
```

 Upload the showsystem.py application to the /etc/config/scripts directory on two or more Digi devices. In this example, we will upload it to two devices, and use the same request in Remote Manager to query both devices.

See Configure scripts to run automatically for information about uploading Python applications to your device. You can also create the script on the device by using the **vi** command when logged in with shell access.

- 3. For both devices:
 - a. Configure the device to automatically run the showsystem.py application on reboot, and to restart the application if it crashes. This can be done from either the WebUI or the command line:



- Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- ii. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- ii. Click the Device ID.
- iii. Click Settings.
- iv. Click to expand Config.

Local Web UI:


i. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

iii. Click System > Scheduled tasks > Custom scripts.

iv. Click %to add a custom script.

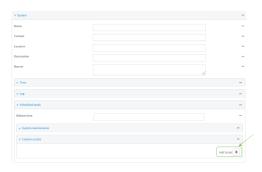

- v. For Label, type Show system application.
- vi. For Run mode, select On boot.
- vii. For Exit action, select Restart script.
- viii. For Commands, type python /etc/config/scripts/showsystem.py.



ix. Click Apply to save the configuration and apply the change.

Command line

 Select the device in Remote Manager and click Actions > Open Console, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

ii. At the command line, type **config** to enter configuration mode:

> config (config)>

iii. Add an application entry:

(config)> add system schedule script end (config system schedule script 0)>

Scheduled scripts are enabled by default. To disable:

(config system schedule script 0)> enable false (config system schedule script 0)>

iv. Provide a label for the script:

(config system schedule script 0)> label "Show system application"

v. Configure the application to run automatically when the device reboots:

```
(config system schedule script 0)> when boot (config system schedule script 0)>
```

vi. Configure the application to restart if it crashes:

```
(config system schedule script 0)> exit_action restart (config system schedule script 0)>
```

vii. Set the command that will execute the application:

(config system schedule script 0)> commands "python /etc/config/scripts/showsystem.py" (config system schedule script 0)>

viii. Save the configuration and apply the change:

```
(config)> save
Configuration saved.
>
```

- b. Run the showsystem.py application. You can run the application by either rebooting the device, or by running it from the shell prompt.
 - To reboot the device:
 - i. From the WebUI:
 - From the main menu, click System.
 - ii. Click Reboot.
 - i. From the command line, at the Admin CLI prompt, type:

```
> reboot
```

- To run the application from the shell prompt:
 - Select a device in Remote Manager that is configured to allow shell access to the admin user, and click **Actions > Open Console**. Alternatively, log into the IX20 local command line as a user with shell access.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **shell** to access the device shell.

ii. Type the following at the shell prompt:

python /etc/config/scripts/showsystem.py &
#

iii. Exit the shell:

exit

- 4. In Remote Manager, click **Documentation > API Explorer**.
- 5. Select the devices to use as the SCI targest:
 - a. Click SCI Targets.
 - b. Click Add Targets.
 - c. Enter or select the device ID of one of the devices.
 - d. Click Add.
 - Enter or select the device ID of the second device and click Add.
 - f. Click OK
- 6. Click Examples > SCI > Data Service > Send Request.

Code similar to the following will be displayed in the HTTP message body text box:

For the device_request element, replace the value of target_name with showSystem. This
matches the target parameter of the device_request.register function in the showsystem.py
application.

```
<device_request target_name="showSystem">
```

8. Click Send.

You should receive a response similar to the following:

```
<sci reply version="1.0">
 <data service>
 <device id="00000000-0000000-0000FFFF-A83CF6A3"/>
  <requests>
   <device_request target_name="showSystem" status="0">Model
                                                                     : Digi IX20
    Serial Number : IX20-000068
                     : IX20
    Hostname
    MAC
                  : 00:40:D0:13:35:36
    Hardware Version
                      : 50001959-01 A
    Firmware Version : 25.2
    Bootloader Version : 1
    Firmware Build Date : Fri, Jan 12, 2024 12:10:00
    Schema Version
                      : 461
                    : UTC
    Timezone
                     : Thu, Jan 11, 2024 12:10:00
    Current Time
```

```
CPU
                   : 1.1
    Uptime
                   : 1 day, 21 hours, 49 minutes, 47 seconds (164987s)
    Temperature
                      : 39C
                   : Jane Smith
    Contact
    Disk
    Load Average
                       : 0.10, 0.05, 0.00
    RAM Usage
                      : 85.176MB/250.484MB(34%)
    Disk /etc/config Usage : 0.068MB/13.416MB(1%)
    Disk /opt Usage
                      : 47.724MB/5309.752MB(1%)
    Disk /overlay Usage : MB/MB(%)
                       : 0.004MB/40.96MB(0%)
    Disk /tmp Usage
    Disk /var Usage
                       : 0.820MB/32.768MB(3%)</device_request>
  </requests>
 </device>
 <device id="00000000-0000000-0000FFF-485740BC"/>
  <requests>
   <device_request target_name="showSystem" status="0">Model
                                                                       : Digi IX20
    Serial Number
                      : IX20-000023
    Hostname
                     : IX20
    MAC
                   : 00:40:D0:26:79:1C
    Hardware Version
                        : 50001959-01 A
    Firmware Version
                        : 25.2
    Bootloader Version
                        : 1
    Firmware Build Date : Fri, Jan 12, 2024 12:10:00
    Schema Version
                        : 461
                     : UTC
    Timezone
    Current Time
                      : Thu, Jan 11, 2024 12:10:00
    CPU
                   : 1.1
    Uptime
                   : 4 day, 13 hours, 43 minutes, 22 seconds (395002s)
    Temperature
    Contact
                   : Omar Ahmad
    Disk
    Load Average
                       : 0.10, 0.05, 0.00
    RAM Usage
                      : 85.176MB/250.484MB(34%)
    Disk /etc/config Usage : 0.068MB/13.416MB(1%)
    Disk /opt Usage : 47.724MB/5309.752MB(1%)
    Disk /overlay Usage : MB/MB(%)
    Disk /tmp Usage
                       : 0.004MB/40.96MB(0%)
    Disk /var Usage
                       : 0.820MB/32.768MB(3%)</device_request>
  </requests>
 </device>
 </data_service>
</sci_request>
```

Help for using Python to respond to Digi Remote Manager SCI requests

Get help for respond to Digi Remote Manager Server Command Interface (SCI) requests by accessing help for digidevice.device_request:

1. Select a device in Remote Manager that is configured to allow shell access to the admin user, and click **Actions** > **Open Console**. Alternatively, log into the IX20 local command line as a user with shell access.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **shell** to access the device shell.

2. At the shell prompt, use the **python** command with no parameters to enter an interactive Python session:

```
# python
Python 3.10.1 (main, Mar 30 2023, 23:47:13) [GCC 11.2.0] on linux
Type "help", "copyright", "credits" or "license" for more information.
>>>
```

3. Import the device_request submodule:

```
>>> from digidevice import device_request >>>
```

4. Use the help command with **device_request**:

```
>>> help(device_request)

Help on module digidevice.device_request in digidevice:

NAME

digidevice.device_request - APIs for registering device request handlers
...
```

You can also use the help command with available device_request functions:

Use the help command with device request.register:

```
>>> help(device_request.register)
Help on function register in module digidevice.device_request:

register(target:str, response_callback:Callable[[str, str], str], status_callback:Callable[[int, str], NoneType]=None, xml_encoding:str='UTF-8')
...
```

Use the help command with device_request.unregister:

```
>>> help(device_request.unregister)
Help on function unregister in module digidevice.device_request:
unregister(target:str) -> bool
...
```

5. Use Ctrl-D to exit the Python session. You can also exit the session using exit() or quit().

Use digidevice runtime to access the runtime database

Use the **runt** submodule to access and modify the device runtime database.

Read from the runtime database

Use the keys() and get() methods to read the device configuration:

 Select a device in Remote Manager that is configured to allow shell access to the admin user, and click **Actions > Open Console**. Alternatively, log into the IX20 local command line as a user with shell access.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **shell** to access the device shell.

2. At the shell prompt, use the **python** command with no parameters to enter an interactive Python session:

```
# python
Python 3.10.1 (main, Mar 30 2023, 23:47:13) [GCC 11.2.0] on linux
Type "help", "copyright", "credits" or "license" for more information.
>>>
```

3. Import the runt submodule:

```
>>> from digidevice import runt >>>
```

4. Use the **start()** method to open the runtime database:

```
>>> runt.start()
```

- 5. Use the **keys()** method to display available keys in the runtime database, and use the **get()** method to print information from the runtime database:
 - a. Print available keys:

```
>>> print(runt.keys(""))
```

This returns available keys:

['advanced', 'drm', 'firmware', 'location', 'manufacture', 'metrics', 'mm', 'network', 'pam', 'serial', 'system']

b. Print available keys for the system key:

```
>>> print(runt.keys("system"))
```

This will return the following:

['boot_count', 'chassis', 'cpu_temp', 'cpu_usage', 'disk', 'load_avg', 'local_time', 'mac', 'mcu', 'model', 'ram', 'serial', 'uptime']

c. Use the **get()** method to print the device's MAC address:

```
>>> print(runt.get("system.mac"))
```

This will return the MAC address of the device.

- 6. Use the **stop()** method to close the runtime database:
- 7. Use Ctrl-D to exit the Python session. You can also exit the session using exit() or quit().

Modify the runtime database

Use the set() method to modify the runtime database:

1. Select a device in Remote Manager that is configured to allow shell access to the admin user, and click **Actions > Open Console**. Alternatively, log into the IX20 local command line as a

user with shell access.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **shell** to access the device shell.

2. At the shell prompt, use the **python** command with no parameters to enter an interactive Python session:

```
# python
Python 3.10.1 (main, Mar 30 2023, 23:47:13) [GCC 11.2.0] on linux
Type "help", "copyright", "credits" or "license" for more information.
>>>
```

3. Import the runt submodule:

```
>>> from digidevice import runt
>>>
```

4. Use **start()** method to open the runtime database:

```
>>> runt.start()
>>>
```

Use the set() method to make changes to the runtime database:

```
>>> runt.set("my-variable", "my-value")
>>>
```

6. Use the **get()** method to verify the change:

```
>>> print(runt.get("my-variable"))
my-variable
>>>
```

7. Close the runtime database:

```
>>> runt.stop()
>>>
```

8. Use Ctrl-D to exit the Python session. You can also exit the session using exit() or quit().

Help for using Python to access the runtime database

Get help for reading and modifying the device runtime database by accessing help for digidevice.runt:

 Select a device in Remote Manager that is configured to allow shell access to the admin user, and click **Actions > Open Console**. Alternatively, log into the IX20 local command line as a user with shell access.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **shell** to access the device shell.

2. At the shell prompt, use the **python** command with no parameters to enter an interactive Python session:

```
# python
Python 3.10.1 (main, Mar 30 2023, 23:47:13) [GCC 11.2.0] on linux
Type "help", "copyright", "credits" or "license" for more information.
>>>

3. Import the runt submodule:

>>> from digidevice import runt
>>>

4. Use the help command with runt:

>>> help(runt)

Help on module acl.runt in digidevice:

NAME
```

5. Use Ctrl-D to exit the Python session. You can also exit the session using exit() or quit().

Use Python to upload the device name to Digi Remote Manager

acl.runt - Python interface to ACL runtime database (runtd).

The **name** submodule can be used to upload a custom name for your device to Digi Remote Manager.

When you use the **name** submodule to upload a custom device name to Remote Manager, the following issues apply:

- If the name is being used by to another device in your Remote Manager account, the name will be removed from the previous device and added to the new device.
- If Remote Manager is configured to apply a profile to a device based on the device name, changing the name of the device may cause Remote Manager to automatically push a profile onto the device.

Together, these two features allow you to swap one device for another by using the **name** submodule to change the device name, while guaranteeing that the new device will have the same configuration as the previous one.

Note Because causing a profile to be automatically pushed from Remote Manager may change the behavior of the device, including overwriting existing usernames and passwords, the **name** submodule should be used with caution. As a result, support for this functionality is disabled by default on Remote Manager.

Enable support on Digi Remote Manager for uploading custom device names

- 1. In Remote Manager, click **API Explorer**.
- 2. For the HTTP method, select PUT.
- For Enter and API or select an example, type /ws/v1/settings/inventory/AllowDeviceToSetOwnNameEnabled.

4. In the HTTP message body text box, type the following:

```
{
    "name" : "AllowDeviceToSetOwnNameEnabled",
    "value" : "true"
}
```

5. Click Send.

Upload a custom name

 Select a device in Remote Manager that is configured to allow shell access to the admin user, and click **Actions > Open Console**. Alternatively, log into the IX20 local command line as a user with shell access.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **shell** to access the device shell.

2. At the shell prompt, use the **python** command with no parameters to enter an interactive Python session:

```
# python
Python 3.10.1 (main, Mar 30 2023, 23:47:13) [GCC 11.2.0] on linux
Type "help", "copyright", "credits" or "license" for more information.
>>>
```

3. Import the name submodule:

```
>>> from digidevice import name
```

4. Upload the name to Remote Manager:

```
>>> name.upload("my_name")
```

5. Use Ctrl-D to exit the Python session. You can also exit the session using exit() or quit().

Help for uploading the device name to Digi Remote Manager

Get help for uploading the device name to Digi Remote Managerby accessing help for digidevice.name:

 Select a device in Remote Manager that is configured to allow shell access to the admin user, and click **Actions > Open Console**. Alternatively, log into the IX20 local command line as a user with shell access.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **shell** to access the device shell.

2. At the shell prompt, use the **python** command with no parameters to enter an interactive Python session:

```
# python
Python 3.10.1 (main, Mar 30 2023, 23:47:13) [GCC 11.2.0] on linux
Type "help", "copyright", "credits" or "license" for more information.
>>>
```

3. Import the name submodule:

```
>>> from digidevice import name
>>>

4. Use the help command with name:

>>> help(name)

Help on module digidevice.name in digidevice:

NAME
digidevice.name - API for uploading name from the device
```

5. Use Ctrl-D to exit the Python session. You can also exit the session using exit() or quit().

Use Python to set the maintenance window

The **maintenance** Python module allows you to set the service state of a device. When the module sets the device to out of service, this can be used as trigger to begin maintenance activity. See Schedule system maintenance tasks for more details.

 Select a device in Remote Manager that is configured to allow shell access to the admin user, and click **Actions > Open Console**. Alternatively, log into the IX20 local command line as a user with shell access.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **shell** to access the device shell.

2. At the shell prompt, use the **python** command with no parameters to enter an interactive Python session:

```
# python
Python 3.10.1 (main, Mar 30 2023, 23:47:13) [GCC 11.2.0] on linux
Type "help", "copyright", "credits" or "license" for more information.
>>>
```

3. Import the maintenance module:

```
>>> from digidevice import maintenance
>>>
```

4. To determine the current service state of the device:

```
>>> maintenance.state()
'IN_SERVICE'
>>>
```

5. To set the device to out of service:

```
>>> maintenance.out_of_service()
>>> maintenance.state()
'OUT_OF_SERVICE'
>>>
```

6. To set the device to in service:

```
>>> maintenance.in_service()
>>> maintenance.state()
'IN_SERVICE'
>>>
```

Note Leave the interactive Python session active while completing task two, below. Once you have completed task two, exit the interactive session by using Ctrl-D. You can also exit the session using exit() or quit().

Help for the digidevice maintenance module

Get help for the digidevice maintenance module:

 Select a device in Remote Manager that is configured to allow shell access to the admin user, and click **Actions > Open Console**. Alternatively, log into the IX20 local command line as a user with shell access.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **shell** to access the device shell.

2. At the shell prompt, use the **python** command with no parameters to enter an interactive Python session:

```
# python
Python 3.10.1 (main, Mar 30 2023, 23:47:13) [GCC 11.2.0] on linux
Type "help", "copyright", "credits" or "license" for more information.
>>>
```

3. Import the maintenance submodule:

```
>>> from digidevice import maintenance
>>>
```

4. Use the help command with **maintenance**:

```
>>> help(maintenance)
Help on module digidevice.maintenance in digidevice:

NAME
digidevice.maintenance

DESCRIPTION
API for setting the device's service state. The service state is stored in runt.
...
```

5. Use Ctrl-D to exit the Python session. You can also exit the session using exit() or quit().

The digidevice led submodule

Use the **led** submodule to redefine the purpose of any front-panel LED on the IX20 device. With this submodule, you can:

- Gain control of the LED with the led.acquire() function.
- Define the state of the LED with the led.set() function.
- Use the use() function to create a function that acquires, sets, and releases an LED.
- Optionally release control of the LED with the led.release() function.

See The use(led) function for instructions on using these methods.

Available LEDs

LED		Attribute name	Color
All available LEDs		Led.ALL	
Online indicator		Led.LAN3_RX	Blue
WI-FI (IX20Wonly)		Led.LAN3_TX	Green
SIM indicators	SIM1	Led.SIM1	Green
	SIM2	Led.SIM2	Green
LTE connection indicator		Led.COM	Red
		Led.ETH	Green
		Led.ONLINE	Blue
Signal strength indicators	1	Led.RSS1	Green
	2	Led.RSS2	
	3	Led.RSS3	
	4	Led.RSS4	
	5	Led.RSS5	

Available LED states

State	Attribute name
Solid on	State.ON
Off	State.OFF
Flash	State.FLASH

Use Python to set the state of LEDs

The following example uses an interactive Python session to set the state of all LEDs to flashing:

1. At the shell prompt, use the **python** command with no parameters to enter an interactive Python session:

Applications The use(led) function

```
# python
Python 3.10.1 (main, Mar 30 2023, 23:47:13) [GCC 11.2.0] on linux
Type "help", "copyright", "credits" or "license" for more information.
>>>
```

Import the led submodule:

>>> from digidevice import led

3. Import the **Led** and **State** objects from the **led** submodule:

>>> from digidevice.led import Led, State

4. Use led.acquire() to gain control of the all LEDs:

>>> led.acquire(Led.ALL)

Use led.set() to set the state of the LEDs:

>>> led.set(Led.ALL, State.FLASH)

6. (Optional) Use led.release() to release the LEDs to system control:

>>> led.release(Led.ALL)

7. Use Ctrl-D to exit the Python session. You can also exit the session using exit() or quit().

The use(led) function

The use(led) function can be used to acquire control of LEDs and then release them back to system control.

To create a function that acquires control of the power LED, sets it to a state of fast flashing, and then releases control when the function has completed, use the following code in a python application:

```
with use(Led.POWER) as pwr: pwr(State.FLASH)
```

Releasing the LEDs to system control

During a Python interactive session, or from within a Python script, you can release control of the LED from Python to system control using the led.release() method.

If the Python script or session terminates prior to releasing control to the system, the LEDs will continue to have the state that Python set to them, until the device is rebooted. See Configure scripts to run automatically for information about configuring the device so that the LED state is controlled by the Python script even after reboot.

If any system processes attempt to take control of the LED while Python is in control of it, the state information from the system process is recorded but the LED state is not updated until Python releases control of the LED. When the LED is returned to system control, the state of the LED will reflect the correct, recorded state information.


Setting the state of multi-colored LEDs.

Use Python to control the color of multi-colored LEDs

One or more LEDs in the IX20 are RGB (red, green, and blue) LEDs, capable of producing a wide range of colors. You can use the digidevice.led Python module to control the color as well as the state of these LEDs.

For example, the LTE connection indicator can be set to various colors:

LED attribute name	Color	State
Led.COM	Red	ON
Led.ETH		OFF
Led.ONLINE		OFF
Led.COM	Red flashing	FLASH
Led.ETH		OFF
Led.ONLINE		OFF
Led.COM	Green	OFF
Led.ETH	_	ON
Led.ONLINE		OFF
Led.COM	Green flashing	OFF
Led.ETH		FLASH
Led.ONLINE		OFF
Led.COM	Blue	OFF
Led.ETH	_	OFF
Led.ONLINE		ON
Led.COM	Blue flashing	OFF
Led.ETH		OFF
Led.ONLINE		FLASH
Led.COM	White	ON
Led.ETH	-	ON
Led.ONLINE		ON
Led.COM	White flashing	FLASH
Led.ETH	7	FLASH
Led.ONLINE		FLASH

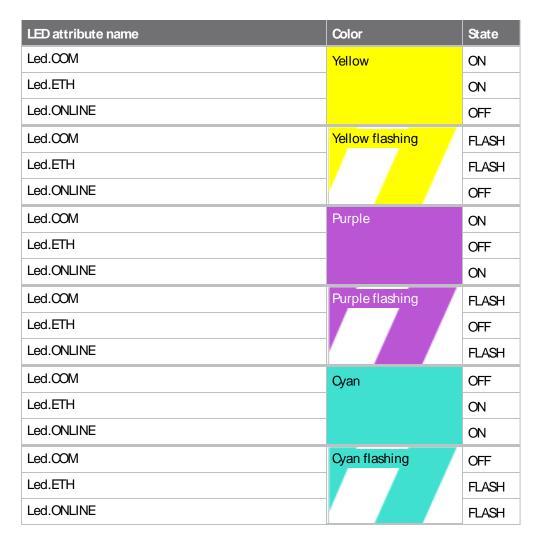

See The digidevice led submodule for a definition of the IX20's LEDs, including RGB leds, and the names of the attributes for each LED that will be used by the digidevice.led module.

Example: Set the LTE connection indicator to flashing purple

1. At the shell prompt, use the **python** command with no parameters to enter an interactive Python session:

python
Python 3.10.1 (main, Mar 30 2023, 23:47:13) [GCC 11.2.0] on linux
Type "help", "copyright", "credits" or "license" for more information.
>>>

2. Import the led submodule:

>>> from digidevice import led

3. Import the **Led** and **State** objects from the **led** submodule:

```
>>> from digidevice.led import Led, State
```

4. Use led.acquire() to gain control of the all LEDs:

```
>>> led.acquire(Led.ALL)
```

5. Use led.set() to set the state of the Led.COM and Led.ONLINE to FLASH:

```
>>> led.set(Led.COM, State.FLASH)
>>> led.set(Led.ONLINE, State.FLASH)
```

6. Set the state of the Led.ETH to OFF:

```
>>> led.set(Led.ETH, State.OFF)
```

7. (Optional) Use led.release() to release the LEDs to system control:

```
>>> led.release(Led.ALL)
```

8. Use Ctrl-D to exit the Python session. You can also exit the session using exit() or quit().

Use Python to send and receive SMS messages

You can create Python scripts that send and receive SMS message in tandem with the Digi Remote Manager by using the digidevice.sms module. To use a script to send or receive SMS messages, you must also enable the ability to schedule SMS scripting.

Enable the ability to schedule SMS scripting



- Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.


Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

- 3. Click System > Scheduled tasks.
- Click to enable Allow scheduled scripts to handle SMS.

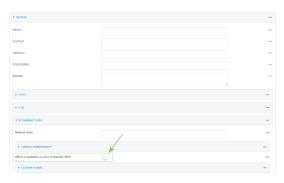

5. Click Apply to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

> config (config)>

3. At the config prompt, type:

(config)> system schedule sms_script_handling true (config)>

4. Save the configuration and apply the change.

(config)> save Configuration saved.

5. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

See Configure scripts to run automatically for more information about scheduling scripts.

Example digidevice.sms script

The following example script receives an SMS message and sends a response:

#!/usr/bin/python3.10.1

import os import threading

```
import sys
from digidevice.sms import Callback, send
COND = threading.Condition()
def sms_test_callback(sms, info):
  print(f"SMS message from {info['content.number']} received")
  print(sms)
  print(info)
  COND.acquire()
  COND.notify()
  COND.release()
def send_sms(destination, msg):
  print("sending SMS message", msg)
  if len(destination) == 10:
   destination = "+1" + destination
  send(destination, msg)
  _name__ == '__main__':
  if len(sys.argv) > 1:
   dest = sys.argv[1]
  else:
   dest = '+15005550006'
  my_callback = Callback(sms_test_callback, metadata=True)
  send_sms(dest, 'Hello World!')
  print("Please send an SMS message now.")
  print("Execution halted until a message is received or 60 seconds have passed.")
  # acquire the semaphore and wait until a callback occurs
  COND.acquire()
  try:
    COND.wait(60.0)
  except Exception as err:
   print("exception occured while waiting")
    print(err)
  COND.release()
  my_callback.unregister_callback()
```

Example script using digidevice.sms to send CLI commands

The following example script listens for an incoming SMS message from a specific phone number (2223334444) and then executes the SMS message as a CLI command. If the CLI command being run has output, it will send that output as a response SMS message. If the CLI command being run has no output but ran successfully, the script will instead send an OK response SMS message. Errors in running the CLI will have those error messages sent as a SMS response.

```
#!/usr/bin/python

# Take an incoming SMS message from a specified phone number and run it as

# a CLI command. Send a reponse SMS to the sender before running the command

import os
import threading
import sys
from digidevice import cli
from digidevice.sms import Callback, send

COND = threading.Condition()
allowed_incoming_phone_number = '2223334444'

def sms_test_callback(sms, info):
```

```
if info['content.number'] == allowed_incoming_phone_number:
   print(f"SMS message from {info['content.number']} received")
   print(sms)
   print(info)
   #if sms == "Reboot":
   # send_sms(dest, 'Reboot message received, rebooting device...')
   # response = cli.execute("reboot")
   # print (response)
   send_sms(dest, 'Message received (' + sms + '). Performing as CLI command...')
   response = cli.execute(sms)
   if not response:
      response = 'OK'
   send_sms(dest, 'CLI results: ' + response)
   print (response)
  COND.acquire()
  COND.notify()
  COND.release()
def send_sms(destination, msg):
  print("sending SMS message", msg)
  if len(destination) == 10:
  destination = "+1" + destination
  send(destination, msg)
  _name__ == '__main__':
  if len(sys.argv) > 1:
   dest = sys.argv[1]
  else:
   dest = allowed_incoming_phone_number
  my_callback = Callback(sms_test_callback, metadata=True)
  #send_sms(dest, 'Ready to receive incoming SMS message')
  print("Waiting up to 60 seconds for incoming SMS message")
  # acquire the semaphore and wait until a callback occurs
  COND.acquire()
  try:
    COND.wait(60.0)
  except Exception as err:
   print("exception occured while waiting")
    print(err)
  COND.release()
  my_callback.unregister_callback()
  os.system('rm -f /var/run/sms/scripts/*') # remove all stored SMS messages, since we've processed them
  print("SMS script finished. Please re-run if you want to check for more incoming SMS messages")
  os._exit(0)
```

Use Python to access serial ports

You can use the Python **serial** module to access serial ports on your IX20 device that are configured to be in Application mode. See Configure Application mode for a serial port for information about configuring a serial port in Application mode.

To use Python to access serial ports:

 Select a device in Remote Manager that is configured to allow shell access to the admin user, and click **Actions > Open Console**. Alternatively, log into the IX20 local command line as a user with shell access.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **shell** to access the device shell.

2. Determine the path to the serial port:

```
# Is /dev/serial/
by-id by-path port1
#
```

3. At the shell prompt, use the **python** command with no parameters to enter an interactive Python session:

```
# python
Python 3.10.1 (main, Mar 30 2023, 23:47:13) [GCC 11.2.0] on linux
Type "help", "copyright", "credits" or "license" for more information.
>>>
```

4. Import the serial module:

```
>>> import serial
>>>
```

5. You can now perform operations on the serial port. For example, to write a message to the serial port:

```
>>> s = serial.Serial("/dev/serial/port1", 115200)
>>> s.write(b"Hello from serial port")
26
>>>
```

Use Ctrl-D to exit the Python session. You can also exit the session using exit() or quit().

Use the Paho MQTT python library

Your IX20 device includes support for the Paho MQTT python library. MQTT is a lightweight messaging protocol used to communicate with various applications including cloud-based applications such as Amazon Web Services and Microsoft Azure. The following is example code that reads CPU and RAM usage on the device, updates the device firmware, then publishes information about DHCP clients and system information to the MQTT server at 192.168.1.100. The MQTT server IP is configurable.

.....

MQTT client example:

- Reporting some device metrics from runt
- Reporting DHCP clients
- Firmware update feature (simple implementation, read TODO in cmd_fwupdate)

import sys
import time
import paho.mqtt.client as mqtt
import json
from acl import runt, config
from http import HTTPStatus
import urllib.request
import tempfile
import os
from digidevice import cli

```
POLL_TIME = 60
def cmd_reboot(params):
  print("Rebooting unit...")
  try:
    cli.execute("reboot", 10)
  except:
    print("Failed to run 'reboot' command")
    return HTTPStatus.INTERNAL_SERVER_ERROR
return HTTPStatus.OK
def cmd_fwupdate(params):
    fw_uri = params["uri"]
  except:
    print("Firmware file URI not passed")
    return HTTPStatus.BAD_REQUEST
  print("Request to update firmware with URI: {}".format(fw_uri))
    fd, fname = tempfile.mkstemp()
    os.close(fd)
    try:
      urllib.request.urlretrieve(fw_uri, fname)
      print("Failed to download FW file from URI {}".format(fw_uri))
      return HTTPStatus.NOT_FOUND
      ret = cli.execute("system firmware update file " + fname, 60)
      print("Failed to run firmware update command")
      return HTTPStatus.INTERNAL_SERVER_ERROR
    if not "Firmware update completed" in ret:
      print("Failed to update firmware")
      return HTTPStatus.INTERNAL_SERVER_ERROR
  finally:
    os.remove(fname)
  print("Firmware update finished")
  return HTTPStatus.OK
CMD_HANDLERS = {
  "reboot": cmd_reboot,
  "fw-update": cmd_fwupdate
}
def send_cmd_reply(client, cmd_path, cid, cmd, status):
  if not status or not cid:
    return
  if cmd_path.startswith(PREFIX_CMD):
    path = cmd_path[len(PREFIX_CMD):]
    print("Invalid command path ({}), cannot send reply".format(cmd_path))
```

```
return
  reply = {
    "cmd": cmd,
    "status": status
  client.publish(PREFIX_RSP + path + "/" + cid, json.dumps(reply, separators=(',',':')))
def on_connect(client, userdata, flags, rc):
  print("Connected to MQTT server")
  client.subscribe(PREFIX_CMD + "/system")
def on_message(client, userdata, msg):
  """ Supporting only a single topic for now, no need for filters
  Expects the following message format:
    "cid": "<client-id>",
    "cmd": "<command>",
    "params": {
     <optional_parameters>
 }
  Supported commands:
  - "fw-update"
   params:
     - "uri": "<firmware_file_URL>"
  - "reboot"
 params:
  try:
   m = json.loads(msg.payload)
   cid = m["cid"]
   cmd = m["cmd"]
     payload = m["params"]
   except:
     payload = None
  except:
   print("Invalid command format: {}".format(msg.payload))
   if not cid:
     # Return if client-ID not passed
     return None
   send_cmd_reply(client, msg.topic, cid, cmd, HTTPStatus.BAD_REQUEST)
  try:
   status = CMD_HANDLERS[cmd](payload)
  except:
   print("Invalid command: {}".format(cmd))
   status = HTTPStatus.NOT_IMPLEMENTED
  send_cmd_reply(client, msg.topic, cid, cmd, status)
def publish_dhcp_leases():
  leases = []
  try:
   with open('/etc/config/dhcp.leases', 'r') as f:
```

```
for line in f:
        elems = line.split()
        if len(elems) != 5:
          continue
        leases.append({"mac": elems[1], "ip": elems[2], "host": elems[3]})
   if leases:
      client.publish(PREFIX_EVENT + "/leases", json.dumps(leases, separators=(',',':')))
  except:
   print("Failed to open DHCP leases file")
def publish_system():
  avg1, avg5, avg15 = runt.get("system.load_avg").split(', ')
  ram_used = runt.get("system.ram.per")
  disk_opt = runt.get("system.disk./opt.per")
  disk_config = runt.get("system.disk./etc/config.per")
  msg = json.dumps({
    "load_avg": {
      "1min": avg1,
      "5min": avg5,
      "15min": avg15
    "disk_usage": {
      "/opt": disk_opt,
      "/etc/config:": disk_config,
      "ram": ram_used
   }
 })
  client.publish(PREFIX_EVENT + "/system", json.dumps(msg))
runt.start()
serial = runt.get("system.serial")
PREFIX = "router/" + serial
PREFIX_EVENT = "event/" + PREFIX
PREFIX_CMD = "cmd/" + PREFIX
PREFIX_RSP = "rsp/" + PREFIX
client = mqtt.Client()
client.on_connect = on_connect
client.on_message = on_message
try:
  client.connect("192.168.1.100", 1883, 60)
  client.loop_start()
except:
  print("Failed to connect to MQTT server")
  sys.exit(1)
while True:
  publish_dhcp_leases()
  publish_system()
  time.sleep(POLL_TIME)
```

Set up the IX20 to automatically run your applications

This section contains the following topics:

- Configure scripts to run automatically
- Show script information
- Stop a script that is currently running

Configure scripts to run automatically

You can configure a script or a python application to run automatically when the system restarts, at specific intervals, or at a specified time. By default, scripts execute in a "sandbox," which restricts access to the file system and available commands that can be used by the script.

Required configuration items

- Upload or create the script. The script must be uploaded to /etc/config/scripts or a subdirectory.
- Enable the script.
- Select whether the script should run:
 - · When the device boots.
 - · At a specified time.
 - At a specified interval.
 - During system maintenance.

Additional configuration items

- If the script is a Python application, include the full path to the script.
- A label used to identify the script.
- The action to take if the script finishes. The actions that can be taken are:
 - · None.
 - Restart the script.
 - · Reboot the device.
- Whether to write the script output and errors to the system log.
- If the script is set to run at a specified interval, whether another instance of the script should be run at the specified interval if the previous instance is still running.
- The memory available to be used by the script .
- Whether the script should run one time only.

Task one: Upload the application



Log into the IX20 WebUI as a user with full Admin access rights.

1. On the menu, click System. Under Administration, click File System.



The File System page appears.



- 2. Highlight the **scripts** directory and click \triangle to open the directory.
- 3. Click @ (upload).
- Browse to the location of the script on your local machine. Select the file and click **Open** to upload the file.

The uploaded file is uploaded to the /etc/config/scripts directory.

Command line

- 1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.
 - Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
- 2. At the command line, use the scp command to upload the Python application script to the IX20 device:

> scp host hostname-or-ip user username remote remote-path local local-path to local

where:

- hostname-or-ip is the hostname or IP address of the remote host.
- username is the name of the user on the remote host.
- remote-path is the path and filename of the file on the remote host that will be copied to the IX20 device.
- local-path is the location on the IX20 device where the copied file will be placed.

For example:

To upload a script from a remote host with an IP address of 192.168.4.1 to the /etc/config/scripts directory on the IX20 device, issue the following command:

```
> scp host 192.168.4.1 user admin remote /home/admin/bin/test.py local /etc/config/scripts/ to local admin@192.168.4.1's password: adminpwd test.py 100% 36MB 11.1MB/s 00:03 >
```

3. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Note You can also create scripts by using the vi command when logged in with shell access.

Task two: Configure the application to run automatically

Note This feature does not provide syntax or error checking. Certain commands can render the device inoperable. Use with care.



- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:


a. On the menu, click System. Under Configuration, click Device Configuration.




The **Configuration** window is displayed.

3. Click System > Scheduled tasks > Custom scripts.

4. For Add Script, click Yo

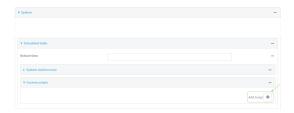

The script configuration window is displayed.

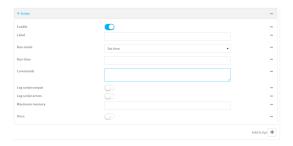

Custom scripts are enabled by default. To disable, toggle off Enable to toggle off.

- 5. (Optional) For Label, provide a label for the script.
- 6. For Run mode, select the mode that will be used to run the script. Available options are:
 - On boot: The script will run once each time the device boots.
 - If **On boot** is selected, select the action that will be taken when the script completes in **Exit action**. Available options are:
 - None: Action taken when the script exits.
 - Restart script: Runs the script repeatedly.
 - Reboot: The device will reboot when the script completes.
 - Interval: The script will start running at the specified interval, within 30 seconds after the configuration change is saved.
 - If Interval is selected, in Interval, type the interval.
 - Allowed values are any number of weeks, days, hours, minutes, or seconds, and take the format *number*{w|d|h|m|s}.
 - For example, to set Interval to ten minutes, enter 10m or 600s.
 - Click to enable Run single to run only a single instance of the script at a time.
 If Run single is not enabled, a new instance of the script will be started at every interval, regardless of whether the script is still running from a previous interval.
 - Set time: Runs the script at a specified time of the day.
 - If **Set Time** is selected, specify the time that the script should run in **Run time**, using the format *HH.MM*.
 - During system maintenance: The script will run during the system maintenance time window.
- 7. For **Commands**, type the commands that will execute the script.

If a Python script is being used, include the full path to the Python script. For example:

python /etc/config/scripts/test.py

- If the script begins with #!, then the script will be invoked in the location specified by the path for the script command. Otherwise, the default shell will be used (equivalent to #!/bin/sh).
- 8. Script logging options:
 - a. Click to enable **Log script output** to log the script's output to the system log.
 - b. Click to enable **Log script errors** to log script errors to the system log.

If neither option is selected, only the script's exit code is written to the system log.

- 9. For **Maximum memory**, enter the maximum amount of memory available to be used by the script and its subprocesses, using the format *number*{b|bytes|KB|K|MB|MB|M|GB|G|TB|T}.
- 10. Sandbox is enabled by default, which restricts access to the file system and available commands that can be used by the script. This option protects the script from accidentally destroying the system it is running on.
- 11. Click to enable **Once** to configure the script to run only once at the specified time.

If **Once** is enabled, rebooting the device will cause the script to not run again. The only way to re-run the script is to:

- Remove the script from the device and add it again.
- Make a change to the script.
- Uncheck Once.
- 12. Click Apply to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

> config		
(config)>		

Add a script:

(config)> add system schedule script end (config system schedule script 0)>

Scheduled scripts are enabled by default. To disable:

(config system schedule script 0)> enable false (config system schedule script 0)>

4. (Optional) Provide a label for the script.

(config system schedule script 0)> label *value* (config system schedule script 0)>

where value is any string. if spaces are used, enclose value within double quotes.

5. Set the mode that will be used to run the script:

(config system schedule script 0)> when *mode* (config system schedule script 0)>

where *mode* is one of the following:

- boot: The script will run once each time the device boots.
 - If boot is selected, set the action that will be taken when the script completes:

```
(config system schedule script 0)> exit_action action (config system schedule script 0)>
```

where action is one of the following:

- o none: Action taken when the script exits.
- o restart: Runs the script repeatedly.
- reboot: The device will reboot when the script completes.
- interval: The script will start running at the specified interval, within 30 seconds after the configuration change is saved. If interval is selected:
 - · Set the interval:

```
(config system schedule script 0)> on_interval value (config system schedule script 0)>
```

where *value* is any number of weeks, days, hours, minutes, or seconds, and takes the format *number*{w|d|h|m|s}.

For example, to set **on_interval** to ten minutes, enter either **10m** or **600s**:

```
(config system schedule script 0)> on_interval 600s (config system schedule script 0)>
```

(Optional) Configure the script to run only a single instance at a time:

```
(config system schedule script 0)> once true (config system schedule script 0)>
```

If **once** is set to **false**, a new instance of the script will be started at every interval, regardless of whether the script is still running from a previous interval.

- set_time: Runs the script at a specified time of the day.
 - If **set_time** is set, set the time that the script should run, using the format *HH.MM*.

```
(config system schedule script 0)> run_time HH:MM (config system schedule script 0)>
```

maintenance_time: The script will run during the system maintenance time window.

6. Set the commands that will execute the script:

(config system schedule script 0)> commands *filename* (config system schedule script 0)>

where *filename* is the path and filename of the script, and any related command line information.

If a Python script is being used, include the full path to the Python script and enclose in quotation marks. For example:

(config system schedule script 0)> commands python "/etc/config/scripts/test.py" (config system schedule script 0)>

- If the script begins with #!, then the script will be invoked in the location specified by the path for the script command. Otherwise, the default shell will be used (equivalent to #!/bin/sh).
- 7. Script logging options:
 - To log the script's output to the system log:

(config system schedule script 0)> syslog_stdout true (config system schedule script 0)>

To log script errors to the system log:

(config system schedule script 0)> syslog_stderr true (config system schedule script 0)>

If **syslog_stdout** and **syslog_stderr** are not enabled, only the script's exit code is written to the system log.

8. Set the maximum amount of memory available to be used by the script and its subprocesses:

(config system schedule script 0)> max_memory value (config system schedule script 0)>

where value uses the syntax **number(b|bytes|KB|k|MB|MB|M|GB|G|TB|T)**.

9. To run the script only once at the specified time:

(config system schedule script 0)> once true (config system schedule script 0)>

If **once** is enabled, rebooting the device will cause the script to run again. The only way to rerun the script is to:

- Remove the script from the device and add it again.
- Make a change to the script.
- Disable once.
- Sandbox is enabled by default. This option protects the script from accidentally destroying the system it is running on.

(config system schedule script 0)> sandbox true (config system schedule script 0)>

11. Save the configuration and apply the change.

```
(config)> save
Configuration saved.
>
```

12. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Show script information

You can view status and statistics about location information from either the WebUl or the command line.



Log into the IX20 WebUI as a user with full Admin access rights.

1. At the Status page, click Scripts.

The **Scripts** page displays:



Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. Use the show scripts command at the system prompt:



3. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Stop a script that is currently running

You can stop a script that is currently running.



Log into the IX20 WebUI as a user with full Admin access rights.

1. At the Status page, click Scripts.

The Scripts page displays:



2. For scripts that are currently running, click **Stop Script** to stop the script.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. Determine the name of scripts that are currently running:



Scripts that are currently running have the status of active.

3. Stop the appropriate script:

)> system script stop script1 >

4. Save the configuration and apply the change.

```
(config)> save
Configuration saved.
>
```

5. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Start an interactive Python session

Use the **python** command without specifying any parameters to start an interactive Python session. The Python session operates interactively using REPL (Read Evaluate Print Loop) to allow you to write Python code on the command line.

Note The Python interactive session is not available from the Admin CLI. You must access the device shell in order to run Python applications from the command line. See Authentication groups for information about configuring authentication groups that include shell access.

 Select a device in Remote Manager that is configured to allow shell access to the admin user, and click **Actions > Open Console**. Alternatively, log into the IX20 local command line as a user with shell access.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **shell** to access the device shell.

2. At the shell prompt, use the **python** command with no parameters to enter an interactive Python session:

```
# python
Python 3.10.1 (main, Mar 30 2023, 23:47:13) [GCC 11.2.0] on linux
Type "help", "copyright", "credits" or "license" for more information.
>>>
```

3. Type Python commands at the Python prompt. For example, to view help for the digidevice module, type:

```
>>> help("digidevice")
Help on package digidevice:

NAME
digidevice - Digi device python extensions

DESCRIPTION
This module includes various extensions that allow Python to interact with additional features offered by the device.
```

4. Use Ctrl-D to exit the Python session. You can also exit the session using exit() or quit().

Run a Python application at the shell prompt

Python applications can be run from a file at the shell prompt. The Python application will run until it completes, displaying output and prompting for additional user input if needed. To interrupt the application, enter **CTRL-C**.


Note Python applications cannot be run from the Admin CLI. You must access the device shell in order to run Python applications from the command line. See Authentication groups for information about configuring authentication groups that include shell access.

1. Upload the Python application to the IX20 device:



Log into the IX20 WebUI as a user with full Admin access rights.

a. On the menu, click System. Under Administration, click File System.

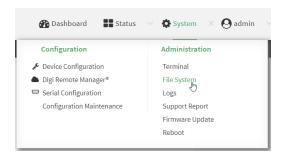

The File System page appears.



- b. Highlight the **scripts** directory and click Ω to open the directory.
- c. Click @ (upload).
- d. Browse to the location of the script on your local machine. Select the file and click **Open** to upload the file.

The uploaded file is uploaded to the /etc/config/scripts directory.

Command line

- a. Select the device in Remote Manager and click Actions > Open Console, or log into the IX20 local command line as a user with full Admin access rights.
 - Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
- b. At the command line, use the scp command to upload the Python application script to the IX20 device:

> scp host hostname-or-ip user username remote remote-path local local-path to local

where:

- hostname-or-ip is the hostname or IP address of the remote host.
- username is the name of the user on the remote host.
- remote-path is the path and filename of the file on the remote host that will be copied to the IX20 device.
- local-path is the location on the IX20 device where the copied file will be placed.

For example:

To upload a script from a remote host with an IP address of 192.168.4.1 to the /etc/config/scripts directory on the IX20 device, issue the following command:

```
> scp host 192.168.4.1 user admin remote /home/admin/bin/test.py local /etc/config/scripts/ to local admin@192.168.4.1's password: adminpwd test.py 100% 36MB 11.1MB/s 00:03 >
```

c. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Note You can also create scripts by using the vi command when logged in with shell access.

 Select a device in Remote Manager that is configured to allow shell access to the admin user, and click **Actions > Open Console**. Alternatively, log into the IX20 local command line as a user with shell access.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **shell** to access the device shell.

3. Use the **python** command to run the Python application. In the following example, the Python application, **test.py**, takes 3 parameters: **120**, **ports** and **storage**:

python /etc/config/scripts/test.py 120 ports storage

Configure scripts to run manually

You can configure an scripts to be manually run.

Required configuration items

- Upload or create the script.
- Enable the script.
- Set the script to run manually.

Additional configuration items

- A label used to identify the script.
- The arguments for the script.

- Whether to write the script output and errors to the system log.
- The memory available to be used by the script.
- Whether the script should run one time only.

Task one: Upload the application



Log into the IX20 WebUI as a user with full Admin access rights.

1. On the menu, click System. Under Administration, click File System.



The File System page appears.



- 2. Highlight the **scripts** directory and click \triangle to open the directory.
- 3. Click (upload).
- Browse to the location of the script on your local machine. Select the file and click **Open** to upload the file.

The uploaded file is uploaded to the /etc/config/scripts directory.

Command line

- Select the device in Remote Manager and click Actions > Open Console, or log into the IX20 local command line as a user with full Admin access rights.
 - Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
- 2. At the command line, use the scp command to upload the Python application script to the IX20 device:

> scp host hostname-or-ip user username remote remote-path local local-path to local

where:

- hostname-or-ip is the hostname or IP address of the remote host.
- username is the name of the user on the remote host.
- remote-path is the path and filename of the file on the remote host that will be copied to the IX20 device.
- local-path is the location on the IX20 device where the copied file will be placed.

For example:

To upload a script from a remote host with an IP address of 192.168.4.1 to the /etc/config/scripts directory on the IX20 device, issue the following command:

3. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Note You can also create scripts by using the vi command when logged in with shell access.

Task two: Configure the application to run automatically

Note This feature does not provide syntax or error checking. Certain commands can render the device inoperable. Use with care.



- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.


Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.




The **Configuration** window is displayed.

- 3. Click System > Scheduled tasks > Custom scripts.
- 4. For Add Script, click Yo

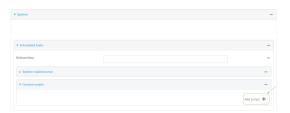

The script configuration window is displayed.

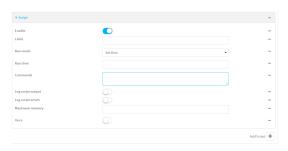

Custom scripts are enabled by default. To disable, toggle off **Enable** to toggle off.

- 5. (Optional) For **Label**, provide a label for the script.
- 6. For Run mode, select Manual.
- 7. For **Commands**, type the commands that will execute the script.
 - If a Python script is being used, include the full path to the Python script. For example:

python /etc/config/scripts/test.py

- If the script begins with #!, then the script will be invoked in the location specified by the path for the script command. Otherwise, the default shell will be used (equivalent to #!/bin/sh).
- 8. Script logging options:
 - a. Click to enable Log script output to log the script's output to the system log.
 - b. Click to enable **Log script errors** to log script errors to the system log.

If neither option is selected, only the script's exit code is written to the system log.

- For Maximum memory, enter the maximum amount of memory available to be used by the script and its subprocesses, using the format number{b|bytes|KB|k|MB|MB|M|GB|G|TB|T}.
- 10. Sandbox is enabled by default, which restricts access to the file system and available commands that can be used by the script. This option protects the script from accidentally destroying the system it is running on.

Click to enable Once to configure the script to run only once at the specified time.

If **Once** is enabled, rebooting the device will cause the script to not run again. The only way to re-run the script is to:

- Remove the script from the device and add it again.
- Make a change to the script.
- Uncheck Once.
- 12. Click **Apply** to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Add a script:

(config)> add system schedule script end (config system schedule script 0)>

Scheduled scripts are enabled by default. To disable:

(config system schedule script 0)> enable false (config system schedule script 0)>

4. (Optional) Provide a label for the script.

(config system schedule script 0)> label *value* (config system schedule script 0)>

where value is any string, if spaces are used, enclose value within double quotes.

5. Set the run mode to manual:

(config system schedule script 0)> when manual (config system schedule script 0)>

6. Set the commands that will execute the script:

(config system schedule script 0)> commands *filename* (config system schedule script 0)>

where *filename* is the path and filename of the script, and any related command line information.

If a Python script is being used, include the full path to the Python script and enclose in quotation marks. For example:

(config system schedule script 0)> commands python "/etc/config/scripts/test.py" (config system schedule script 0)>

If the script begins with #!, then the script will be invoked in the location specified by the path for the script command. Otherwise, the default shell will be used (equivalent to #!/bin/sh).

- 7. Script logging options:
 - To log the script's output to the system log:

(config system schedule script 0)> syslog_stdout true (config system schedule script 0)>

To log script errors to the system log:

(config system schedule script 0)> syslog_stderr true (config system schedule script 0)>

If **syslog_stdout** and **syslog_stderr** are not enabled, only the script's exit code is written to the system log.

8. Set the maximum amount of memory available to be used by the script and its subprocesses:

(config system schedule script 0)> max_memory value (config system schedule script 0)>

where value uses the syntax number(b|bytes|KB|k|MB|MB|M|GB|G|TB|T).

9. To run the script only once at the specified time:

(config system schedule script 0)> once true (config system schedule script 0)>

If **once** is enabled, rebooting the device will cause the script to run again. The only way to rerun the script is to:

- Remove the script from the device and add it again.
- Make a change to the script.
- Disable once.
- Sandbox is enabled by default. This option protects the script from accidentally destroying the system it is running on.

(config system schedule script 0)> sandbox true (config system schedule script 0)>

11. Save the configuration and apply the change.

(config)> save Configuration saved.

12. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Applications Start a manual script

Start a manual script


You can start a script that is enabled and configured to have a run mode of Manual.



Log into the IX20 WebUI as a user with full Admin access rights.

1. At the Status page, click Scripts.

The **Scripts** page displays:

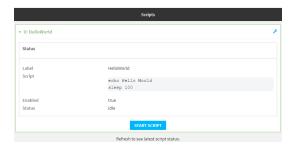

2. For scripts that are enabled and configured to have a run mode of **Manual**, click **Start Script** to start the script.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. Determine the name of scripts that are currently running:



3. Start the script:

```
)> system script start script1 >
```

4. Save the configuration and apply the change.

```
(config)> save
Configuration saved.
>
```

5. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Python versions and corresponding DAL OS firmware versions

The table lists the Python versions where changes were made the to programming language and the corresponding DAL OS version to which those changes align.

Python version history	DAL OS version history
Python 3.13	DAL OS 24.12.153.120
Python 3.10.13	DAL OS 24.3.28.88
Python 3.6.15	DAL OS 21.11.60.63

To see the Python change log, go to https://docs.python.org/3/whatsnew/changelog.html#.

User authentication

This chapter contains the following topics:

IX20 user authentication	866
User authentication methods	866
Authentication groups	873
Local users	
Terminal Access Controller Access-Control System Plus (TACACS+)	896
Remote Authentication Dial-In User Service (RADIUS)	
LDAP	
Configure serial authentication	917
Disable shell access	
Set the idle timeout for IX20 users	
Example user configuration	923

User authentication IX20 user authentication

IX20 user authentication

User authentication on the IX20 has the following features and default configuration:

Feature	Description	Default configuration
Idle timeout	Determines how long a user session can be idle before the system automatically disconnects.	■ 10 minutes
Allow shell	If disabled, prevents all authentication prohibits access to the shell prompt for all authentication groups. This does not prevent access to the Admin CLI.	■ Enabled
	Note If shell access is disabled, re-enabling it will erase the device's configuration and perform a factory reset.	
Methods	Determines how users are authenticated for access: local users, TACACS+, or RADIUS.	local users
Groups	Associates access permissions for a group. You can modify the released groups and create additional groups as needed for your site. A user can be assigned to more than one group.	 admin: Provides the logged-in user with administrative and shell access. serial: Provides the logged-in user with access to serial ports.
Users	Defines local users for the IX20.	 admin: Belongs to both the admin and serial groups.
TACACS+	Configures support for TACACS+ (Terminal Access Controller Access-Control System Plus) servers and users.	■ Not configured
RADIUS	Configures support for RADIUS (Remote Authentication Dial- In User Service) servers and users.	Not configured
LDAP	Configures support for LDAP (Lightweight Directory Access Protocol) servers and users.	Not configured
Serial	Configures authentication for serial TCP and autoconnect services.	Not configured

User authentication methods

Authentication methods determine how users of the IX20 device are authenticated. Available authentication methods are:

- Local users: User are authenticated on the local device.
- RADIUS: Users authenticated by using a remote RADIUS server for authentication.

 See Remote Authentication Dial-In User Service (RADIUS) for information about configuring RADIUS authentication.
- TACACS+: Users authenticated by using a remote TACACS+ server for authentication.

 See Terminal Access Controller Access-Control System Plus (TACACS+) for information about configuring TACACS+ authentication.
- LDAP: Users authenticated by using a remote LDAP server for authentication. See LDAP for information about configuring LDAP authentication.

Add a new authentication method

Required configuration items

The types of authentication method to be used:

To add an authentication method:



- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

- 3. Click Authentication > Methods.
- 4. For Add Method, click Yo



5. Select the appropriate authentication type for the new method from the **Method** drop-down.



Note Authentication methods are attempted in the order they are listed until the first successful authentication result is returned. See Rearrange the position of authentication methods for information about how to reorder the authentication methods.

- Repeat these steps to add additional methods.
- 7. Click Apply to save the configuration and apply the change.

Command line

Authentication methods are attempted in the order they are listed until the first successful authentication result is returned. This procedure describes how to add methods to various places in the list.

- 1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.
 - Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
- 2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

- 3. Add the new authentication method to the appropriate location in the list:
 - To determine the current list of authentication methods:
 - a. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.
 - Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
 - b. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

c. Use the **show auth method** command to display the current authentication methods configuration:

```
(config)> show auth method 0 local (config)>
```

To add the new authentication method to the beginning of the list, use the index value of 0 to indicate that it should be added as the first method:

```
(config)> add auth method 0 auth_type
(config)>
```

where *auth_type* is one of **local**, **radius**, **tacacs+**, or **Idap**.

To add the new authentication method to the end of the list, use the index keyword end:

(config)> add auth method end auth_type
(config)>

where auth_type is one of local, radius, tacacs+, or ldap.

■ To add the new authentication in another location in the list, use an index value to indicate the appropriate position. For example:

(config)> add auth method 1 auth_type
(config)>

where auth_type is one of local, radius, tacacs+, or Idap.

- You can also use the move command to rearrange existing methods. See Rearrange the position of authentication methods for information about how to reorder the authentication methods.
- 4. Save the configuration and apply the change.

(config)> save
Configuration saved.

5. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Delete an authentication method



- Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

- 3. Click Authentication > Methods.
- 4. Click the menu icon (...) next to the method and select Delete.



5. Click **Apply** to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Use the **show auth method** command to determine the index number of the authentication method to be deleted:

```
(config)> show auth method
0 local
1 radius
2 tacacs+
(config)>
```

4. Delete the appropriate authentication method:

```
(config)> del auth method n
```

Where *n* is index number of the authentication method to be deleted. For example, to delete the TACACS+ authentication method as displayed by the example **show** command, above:

```
(config)> del auth method 2
```

5. Save the configuration and apply the change.

```
(config)> save
Configuration saved.
>
```

6. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Rearrange the position of authentication methods

₹ Web

Authentication methods are reordered by changing the method type in the **Method** drop-down for each authentication method to match the appropriate order.

For example, the following configuration has **Local users** as the first method, and **RADIUS** as the second.



To reorder these so that **RADIUS** is first and **Local users** is second:

- Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- a. Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.



The **Configuration** window is displayed.

- 3. Click to expand the first Method.
- 4. In the **Method** drop-down, select **RADIUS**.



- 5. Click to expand the second **Method**.
- 6. In the Method drop-down, select Local users.



7. Click Apply to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Use the **show** command to display current configuration:

```
(config)> show auth method
0 local
1 radius
(config)>
```

4. Use the **move** command to rearrange the methods:

```
(config)> move auth method 1 0 (config)>
```

5. Use the **show** command again to verify the change:

```
(config)> show auth method
0 radius
1 local
(config)>
```

6. Save the configuration and apply the change.

```
(config)> save
Configuration saved.
>
```

7. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Authentication groups

Authentication groups are used to assign access rights to IX20 users. Three types of access rights can be assigned:

- Admin access: Users with Admin access can be configured to have either:
 - The ability to manage the IX20 device by using the WebUI or the Admin CLI.
 - · Read-only access to the WebUI and Admin CLI.
- **Shell access**: Users with Shell access have the ability to access the shell when logging into the IX20 via ssh, telnet, or the serial console.

Shell access is not available if the **Allow shell** parameter has been disabled. See Disable shell access for more information about the **Allow shell** parameter.

Note When Primary Responder mode is enabled, Telnet is not available. For more information about Primary Responder mode, see Differences between standard firmware operation and Primary Responder mode.

■ Serial access: Users with Serial access have the ability to log into the IX20 device by using the serial console.

Preconfigured authentication groups

The IX20 device has two preconfigured authentication groups:

- The admin group is configured by default to have full Admin access.
- The serial group is configured by default to have Serial access.

The preconfigured authentication groups cannot be deleted, but the access rights defined for the group are configurable.

This section contains the following topics:

Change the access rights for a predefined group	875
Add an authentication group	877
Delete an authentication group	881

Change the access rights for a predefined group

By default, two authentication groups are predefined: **admin** and **serial**. To change the access rights of the predefined groups:



- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

- 3. Click Authentication > Groups.
- 4. Click the authentication group to be changed, either **admin** or **serial**, to expand its configuration node.
- 5. Click the box next to the following options, as appropriate, to enable or disable access rights for each:
 - Admin access


For groups assigned Admin access, you can also determine whether the **Access level** should be **Full access** or **Read-only access**.

- **Full access** provides users of this group with the ability to manage the IX20 device by using the WebUI or the Admin CLI.
- Read-only access provides users of this group with read-only access to the WebUl and Admin CLI.

The default is Full access.

- Serial access
- Interactive shell access

Shell access is not available if the **Allow shell** parameter has been disabled. See Disable shell access for more information about the **Allow shell** parameter.

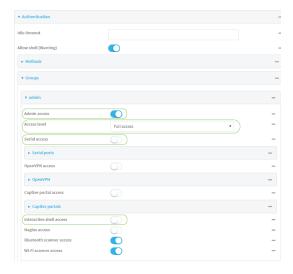

6. Click Apply to save the configuration and apply the change.

Command line

Select the device in Remote Manager and click Actions > Open Console, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

```
> config (config)>
```

- 3. Enable or disable access rights for the group. For example:
 - Admin access:
 - To set the access level for Admin access of the admin group:

```
(config)> auth group admin acl admin level value (config)>
```

where value is either:

- **full**: provides users of this group with the ability to manage the IX20 device by using the WebUI or the Admin CLI.
- read-only: provides users of this group with read-only access to the WebUI and Admin CLI.

The default is full.

• To disable Admin access for the admin group:

(config)> auth group admin acl admin enable false (config)>

Shell access:

• To enable Shell access for the **serial** group:

(config)> auth group serial acl shell enable true (config)>

Shell access is not available if the **Allow shell** parameter has been disabled. See Disable shell access for more information about the **Allow shell** parameter.

- Serial access:
 - To enable Serial access for the admin group:

(config)> auth group admin acl serial enable true (config)>

4. Save the configuration and apply the change.

(config)> save
Configuration saved.

5. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Add an authentication group

Required configuration items

The access rights to be assigned to users that are assigned to this group.

Additional configuration items

- Access rights to OpenVPN tunnels, and the tunnels to which they have access.
- Access rights to captive portals, and the portals to which they have access.
- Access rights to query the device for Nagios monitoring.

To add an authentication group:



- Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.


Local Web UI:

a. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.




The **Configuration** window is displayed.

- 3. Click Authentication > Groups.
- 4. For **Add**, type a name for the group and click %

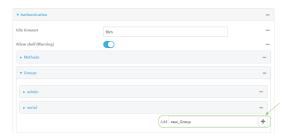

The group configuration window is displayed.

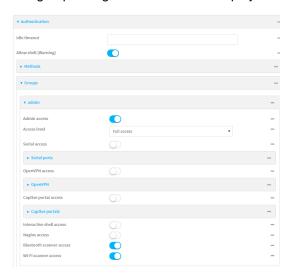

5. Click the following options, as appropriate, to enable or disable access rights for each:

Admin access

For groups assigned Admin access, you can also determine whether the **Access level** should be **Full access** or **Read-only access**.

where value is either:

- Full access full: provides users of this group with the ability to manage the IX20 device by using the WebUI or the Admin CLI.
- Read-only access read-only: provides users of this group with read-only access to the WebUI and Admin CLI.

The default is Full access full.

User authentication Authentication Groups

Serial access

- 6. (Optional) Configure the serial ports to which users of this group have access:
 - a. Click Serial ports to expand the Serial ports node.
 - b. For **Add Port**, click **1**/₂o
 - c. In the **Port** dropdown, select a port.
 - d. Click % again to add additional serial ports.
- 7. (Optional) Configure OpenVPN access. See for further information.
- 8. (Optional) Configure captive portal access:
 - Enable captive portal access rights for users of this group by checking the box next to Captive portal access.
 - b. Click Captive portals to expand the Captive portal node.
 - c. For Add Captive portal, click 1/30
 - d. In the **Captive portal** dropdown, select a captive portal to which users of this group will have access.
 - e. Click Ybagain to add additional captive portals.
- 9. Interactive shell access

Shell access is not available if the **Allow shell** parameter has been disabled. See Disable shell access for more information about the **Allow shell** parameter.

- (Optional) Enable users that belong to this group to query the device for Nagios monitoring by checking the box next to Nagios access.
- 11. (Optional) Enable users that belong to this group to access the Wi-Fi scanning service by checking the box next to **Wi-Fi scanner access**.
- 12. Click **Apply** to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

> config (config)>

3. Use the **add auth group** command to add a new authentication. For example, to add a group named **test**:

(config)> add auth group test (config auth group test)>

User authentication Authentication groups

- 4. Enable access rights for the group:
 - Admin access:

(config auth group test)> acl admin enable true (config)>

Set the access level for Admin access:

(config)> auth group admin acl admin level *value* (config)>

where value is either:

- **full**: provides users of this group with the ability to manage the IX20 device by using the WebUI or the Admin CLI.
- read-only: provides users of this group with read-only access to the WebUI and Admin CLI.

The default is full.

Shell access:

(config auth group test)> acl shell enable true (config)>

Shell access is not available if the **Allow shell** parameter has been disabled. See Disable shell access for more information about the **Allow shell** parameter.

Serial access:

(config auth group test)> acl serial enable true (config)>

- 5. (Optional) Configure captive portal access:
 - a. Return to the config prompt by typing three periods (...):

```
(config auth group test)> ... (config)>
```

b. Enable captive portal access rights for users of this group:

```
(config)> auth group test acl portal enable true (config)>
```

- c. Add a captive portal to which users of this group will have access:
 - i. Determine available portals:

```
(config)> show firewall portal portal1

auth none
enable true
http redirect
no interface
no message
```

```
no redirect_url
no terms
timeout 24h
no title
(config)>
```

ii. Add a captive portal:

(config)> add auth group test acl portal portals end portal1 (config)>

6. (Optional) Configure Nagios monitoring:

(config)> auth group test acl nagios enable true (config)>

7. (Optional) Enable users that belong to this group to access the Wi-Fi scanning service:

(config)> auth group group test acl wifi_scanner enable true (config)>

8. Save the configuration and apply the change.

```
(config)> save
Configuration saved.
>
```

9. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Delete an authentication group

By default, the IX20 device has two preconfigured authentication groups: **admin** and **serial**. These groups cannot be deleted.

To delete an authentication group that you have created:



- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

- 3. Click Authentication > Groups.
- 4. Click the menu icon (...) next to the group to be deleted and select Delete.



5. Click Apply to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. At the config prompt, type:

(config)> del auth group groupname

4. Save the configuration and apply the change.

```
(config)> save
Configuration saved.
>
```

5. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Local users

Local users are authenticated on the device without using an external authentication mechanism such as TACACS+ or RADIUS. Local user authentication is enabled by default, with one preconfiged default user.

Default user

At manufacturing time, each IX20 device comes with a default user configured as follows:

- Username: admin.
- Password: The default password is displayed on the label on the bottom of the device.

Note The default password is a unique password for the device, and is the most critical security feature for the device. If you reset the device to factory defaults, you must log in using the default user and password, and you should immediately change the password to a custom password. Before deploying or mounting the IX20 device, record the default password, so you have the information available when you need it even if you cannot physically access the label on the bottom of the device.

The default **admin** user is preconfigured with both Admin and Serial access. You can configure the **admin** user account to fit with the needs of your environment.

This section contains the following topics:

Change a local user's password	884
Configure a local user	886
Delete a local user	893

Change a local user's password

Note When updating the password for the local user, you will be prompted to enter the current password before applying the configuration update.

To change a user's password:



1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.

2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.




The Configuration window is displayed.

- 3. Click Authentication > Users.
- 4. Click the username to expand the user's configuration node.
- For Password, enter the new password. The password must be at least eight characters long and must contain at least one uppercase letter, one lowercase letter, one number, and one special character.

Note If the Primary Responder feature is enabled, the password must be at least 10 characters long and must contain at least one uppercase letter, one lowercase letter, one number, and one special character.

For the **admin** user, the password field can be left blank:

- If the password field for the admin user is left blank, the admin user's password will be the default password printed on the device's label.
- If the admin user's password has been changed from the default and the configuration saved, if you then clear the password field for the admin user, this will result in the device device's configuration being erased and reset to the default configuration.

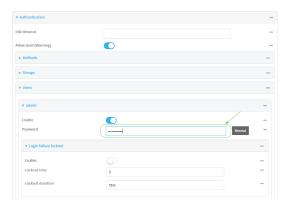

You can also change the password for the active user by clicking the user name in the menu bar:



The active user must have full Admin access rights to be able to change the password.

6. Click Apply to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

> config (config)>

3. At the config prompt, type:

(config)> auth user username password pwd

Where:

- username is the name of the user.
- pwd is the new password for the user. The password must be at least eight characters long and must contain at least one uppercase letter, one lowercase letter, one number, and one special character.
- 4. Save the configuration and apply the change.

(config)> save
Configuration saved.
>

5. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configure a local user

Required configuration items

- A username.
- A password. The password must be at least eight characters long and must contain at least one uppercase letter, one lowercase letter, one number, and one special character. For security reasons, passwords are stored in hash form. There is no way to get or display passwords in clear-text form, although prior to saving the configuration, the password can be shown by clicking Reveal.

Note If the Primary Responder feature is enabled, the password must be at least 10 characters long and must contain at least one uppercase letter, one lowercase letter, one number, and one special character.

 The authentication group or groups from which the user will inherit access rights. See Authentication groups for information about configuring groups.

Additional configuration items

- An alias for the user. Because the username cannot contain any special characters, such as hyphens (-) or periods (.), an alias allows the user to log in using a name that contains special characters.
- The number of unsuccessful login attempts before the user is locked out of the system.
- The amount of time that the user is locked out of the system after the specified number of unsuccessful login attempts.
- An optional public ssh key, to authenticate the user when using passwordless SSH login.
- Two-factor authentication information for user login over SSH, telnet, and the serial console:
 - The verification type for two-factor authentication: Either time-based or counter-based.
 - · The security key.
 - Whether to allow passcode reuse (time based verification only).
 - The passcode refresh interval (time based verification only).
 - · The valid code window size.
 - · The login limit.
 - · The login limit period.
 - · One-time use eight-digit emergency scratch codes.

To configure a local user:



 Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.

2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.


Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

- 3. Click Authentication > Users.
- 4. In Add User, type a name for the user and click %

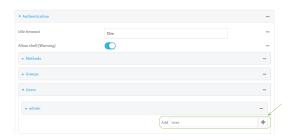

The user configuration window is displayed.



The user is enabled by default. To disable, toggle off **Enable**.

5. (Optional) For **Username alias**, type an alias for the user.

Because the name used to create the user and cannot contain special characters such as hyphens (-) or periods (.), an alias allows the user to log in using a name that contains special characters. For security purposes, if two users have the same alias, the alias will be disabled.

Enter a password for the user. The password must be at least eight characters long and must contain at least one uppercase letter, one lowercase letter, one number, and one special character.

7. Click to expand Login failure lockout.

The login failure lockout feature is enabled by default. To disable, toggle off **Enable**.

- a. For **Lockout tries**, type the number of unsuccessful login attempts before the user is locked out of the device. The default is **5**.
- b. For **Lockout duration**, type the amount of time that the user is locked out after the number of unsuccessful login attempts defined in **Lockout tries**.

Allowed values are any number of minutes, or seconds, and take the format <code>number(m|s)</code>.

For example, to set Lockout duration to ten minutes, enter 10m or 600s.

The minimum value is 1 second, and the maximum is 15 minutes. The default is 15 minutes.

8. Add groups for the user.

Groups define user access rights. See Authentication groups for information about configuring groups.

- a. Click to expand Groups.
- b. For Add Group, click Yo



c. For **Group**, select an appropriate group.



Note Every user must be configured with at least one group. You can add multiple groups to a user by clicking **Add** again and selecting the next group.

- 9. (Optional) Add SSH keys for the user to use passwordless SSH login:
 - a. Click SSH keys.
 - b. In **Add SSH key**, paste or type a public encryption key that this user can use for passwordless SSH login and click 1/2o
- 10. (Optional) Configure two-factor authentication for SSH, telnet, and serial console login:
 - a. Click Two-factor authentication.
 - b. Check **Enable** to enable two-factor authentication for this user.
 - c. Select the **Verification type**:
 - Time-based (TOTP): Time-based One-Time Password (TOTP) authentication uses the current time to generate a one-time password.
 - Counter-based (HOTP): HMAC-based One-Time Password (HOTP) uses a counter to validate a one-time password.

d. Generate a Secret key:

i. Click ... next to the field label and select Generate secret key.



- ii. Copy the secret key for use with an application or mobile device to generate passcodes.
- e. For time-based verification only, select **Disallow code reuse** to prevent a code from being used more than once during the time that it is valid.
- f. For time-based verification only, in **Code refresh interval**, type the amount of time that a code will remain valid.
 - Allowed values are any number of weeks, days, hours, minutes, or seconds, and take the format *number*{w|d|h|m|s}. For example, to set **Code refresh interval** to ten minutes, enter **10m** or **600s**.
- g. In Valid code window size, type the allowed number of concurrently valid codes. In cases where TOTP is being used, increasing the Valid code window size may be necessary when the clocks used by the server and client are not synchronized.
- h. For **Login limit**, type the number of times that the user is allowed to attempt to log in during the **Login limit period**. Set **Login limit** to **0** to allow an unlimited number of login attempts during the **Login limit period**.
- For Login limit period, type the amount of time that the user is allowed to attempt to log in.
 - Allowed values are any number of weeks, days, hours, minutes, or seconds, and take the format *number*{w|d|h|m|s}. For example, to set **Login limit period** to ten minutes, enter **10m** or **600s**.
- j. Scratch codes are emergency codes that may be used once, at any time. To add a scratch code:
 - Click Scratch codes.
 - ii. For Add Code, click Yo
 - iii. For **Code**, enter the scratch code. The code must be eight digits, with a minimum of 10000000.
 - iv. Click %again to add additional scratch codes.
- 11. Click **Apply** to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

> config (config)>

3. Add a user. For example, to create a user named **new_user**:

(config)> add auth user new_user (config auth user new_user)>

The user is enabled by default. To disable the user, type:

(config auth user new_user)> enable false (config auth user new_user)>

4. (Optional) Create a username alias for the user.

Because the name to create the user cannot contain special characters such as hyphens (-) or periods (.), an alias allows the user to log in using a name that contains special characters. For security purposes, if two users have the same alias, the alias will be disabled.

(config auth user new_user> username username_alias (config auth user new_user)>

Set the user's password. The password must be at least eight characters long and must contain at least one uppercase letter, one lowercase letter, one number, and one special character.

(config auth user new_user> password pwd (config auth user new_user)>

6. Configure login failure lockout settings:

The login failure lockout feature is enabled by default. To disable:

(config auth user new_user> lockout enable false (config auth user new_user)>

 Set the number of unsuccessful login attempts before the user is locked out of the device.

where value is any integer. The minimum value is 1, and the default value is 5.

b. Set the amount of time that the user is locked out after the number of unsuccessful login attempts defined in **lockout tries**:

(config auth user new_user> lockout duration *value* (config auth user new_user)>

where *value* is any number of minutes, or seconds, and takes the format *number*{m|s}. For example, to set **duration** to ten minutes, enter either **10m** or **600s**:

(config auth user new_user)> lockout duration 600s (config auth user new_user)>

The minimum value is 1 second, and the maximum is 15 minutes. The default is 15 minutes.

7. Add groups for the user.

Groups define user access rights. See Authentication groups for information about configuring groups.

a. Add a group to the user. For example, to add the admin group to the user:

```
(config auth user new_user> add group end admin (config auth user new_user)>
```

Note Every user must be configured with at least one group.

b. (Optional) Add additional groups by repeating the add group command:

```
(config auth user new_user> add group end serial (config auth user new_user)>
```

To remove a group from a user:

a. Use the **show** command to determine the index number of the group to be deleted:

```
(config auth user new_user> show group 0 admin 1 serial (config auth user new_user>
```

b. Type the following:

```
(config auth user new_user)> del group n (config auth user new_user)>
```

Where *n* is index number of the authentication method to be deleted. For example, to delete the serial group as displayed by the example **show** command, above:

```
(config auth user new_user)> del group 1
(config auth user new_user)>
```

- 8. (Optional) Add SSH keys for the user to use passwordless SSH login:
 - a. Change to the user's ssh_key node:

```
(config auth user new_user)> ssh_key
(config auth user new_user ssh_key)>
```

b. Add the key by using the ssh_key command and pasting or typing a public encryption key that this user can use for passwordless SSH login:

```
(config auth user new_user ssh_key)> ssh_key key (config auth user new_user ssh_key)>
```

9. (Optional) Configure two-factor authentication for SSH, telnet, and serial console login:

a. Change to the user's two-factor authentication node:

```
(config auth user new_user)> 2fa
(config auth user new_user 2fa)>
```

b. Enable two-factor authentication for this user:

```
(config auth user new_user 2fa)> enable true (config auth user new_user 2fa)>
```

- c. Configure the verification type. Allowed values are:
 - totp: Time-based One-Time Password (TOTP) authentication uses the current time to generate a one-time password.
 - hotp: HMAC-based One-Time Password (HOTP) uses a counter to validate a one-time password.

The default value is totp.

```
(config auth user new_user 2fa)> type totp
(config auth user new_user 2fa)>
```

d. Add a secret key:

```
(config auth user new_user 2fa)> secret key (config auth user new_user 2fa)>
```

This key should be used by an application or mobile device to generate passcodes.

e. For time-based verification only, enable **disallow_reuse** to prevent a code from being used more than once during the time that it is valid.

```
(config auth user new_user 2fa)> disallow_reuse true (config auth user new_user 2fa)>
```

f. For time-based verification only, configure the code refresh interval. This is the amount of time that a code will remain valid.

```
(config auth user new_user 2fa)> refresh_interval value (config auth user new_user 2fa)>
```

where *value* is any number of weeks, days, hours, minutes, or seconds, and takes the format *number*{w|d|h|m|s}.

For example, to set refresh interval to ten minutes, enter either 10m or 600s:

```
(config auth user name 2fa)> refresh_interval 600s (config auth user name 2fa)>
```

The default is 30s.

g. Configure the valid code window size. This represents the allowed number of concurrently valid codes. In cases where TOTP is being used, increasing the valid code window size may be necessary when the clocks used by the server and client are not synchronized.

```
(config auth user new_user 2fa)> window_size 3 (config auth user new_user 2fa)>
```

h. Configure the login limit. This represents the number of times that the user is allowed to attempt to log in during the Login limit period. Set to 0 to allow an unlimited number of login attempts during the Login limit period

```
(config auth user new_user 2fa)> login_limit 3 (config auth user new_user 2fa)>
```

i. Configure the login limit period. This is the amount of time that the user is allowed to attempt to log in.

```
(config auth user new_user 2fa)> login_limit_period value (config auth user new_user 2fa)>
```

where *value* is any number of weeks, days, hours, minutes, or seconds, and takes the format *number*{w|d|h|m|s}.

For example, to set login_limit_period to ten minutes, enter either 10m or 600s:

```
(config auth user name 2fa)> login_limit_period 600s (config auth user name 2fa)>
```

The default is 30s.

- j. Scratch codes are emergency codes that may be used once, at any time. To add a scratch code:
 - i. Change to the user's scratch code node:

```
(config auth user new_user 2fa)> scratch_code
(config auth user new_user 2fa scratch_code)>
```

ii. Add a scratch code:

```
(config auth user new_user 2fa scratch_code)> add end code (config auth user new_user 2fa scratch_code)>
```

Where code is an digit number, with a minimum of 10000000.

- iii. To add additional scratch codes, use the add end code command again.
- 10. Save the configuration and apply the change.

```
(config auth user new 2fa scratch_code)> save Configuration saved.
```

11. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Delete a local user

To delete a user from your IX20:



1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.

2. Access the device configuration:

Remote Manager:

- a. Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The Configuration window is displayed.

- 3. Click Authentication > Users.
- 4. Click the menu icon (...) next to the name of the user to be deleted and select **Delete**.



5. Click Apply to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

> config (config)>

3. At the config prompt, type:

(config)> del auth user username

4. Save the configuration and apply the change.

(config)> save
Configuration saved.
>

5. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Terminal Access Controller Access-Control System Plus (TACACS+)

Your IX20 device supports Terminal Access Controller Access-Control System Plus (TACACS+), a networking protocol that provides centralized authentication and authorization management for users who connect to the device. With TACACS+ support, the IX20 device acts as a TACACS+ client, which sends user credentials and connection parameters to a TACACS+ server over TCP. The TACACS+ server then authenticates the TACACS+ client requests and sends back a response message to the device.

When you are using TACACS+ authentication, you can have both local users and TACACS+ users able to log in to the device. To use TACACS+ authentication, you must set up a TACACS+ server that is accessible by the IX20 device prior to configuration. The process of setting up a TACACS+ server varies by the server environment.

This section contains the following topics:

TACACS+ user configuration	897
TACACS+ server failover and fallback to local authentication	898
Configure your IX20 device to use a TACACS+ server	.898

TACACS+ user configuration

When configured to use TACACS+ support, the IX20 device uses a remote TACACS+ server for user authentication (password verification) and authorization (assigning the access level of the user). Additional TACACS+ servers can be configured as backup servers for user authentication.

This section outlines how to configure a TACACS+ server to be used for user authentication on your IX20 device.

Example TACACS+ configuration

With TACACS+, users are defined in the server configuration file. On Ubuntu, the default location and filename for the server configuration file is /etc/tacacs+/tac plus.conf.

Note TACACS+ configuration, including filenames and locations, may vary depending on your platform and installation. This example assumes a Ubuntu installation.

To define users:

1. Open the TACACS+ server configuration file in a text editor. For example:

```
$ sudo gedit /etc/tacacs+/tac_plus.conf
```

2. Add users to the file using the following format. This example will create two users, one with admin and serial access, and one with only serial access.

```
user = user1 {
    name ="User1 for IX20"
    pap = cleartext password1
    service = system {
        groupname = admin,serial
    }
}
user = user2 {
    name ="User2 for IX20"
    pap = cleartext password2
    service = system {
        groupname = serial
    }
}
```

The **groupname** attribute is optional. If used, the value must correspond to authentication groups configured on your IX20. Alternatively, if the user is also configured as a local user on the IX20 device and the LDAP server authenticates the user but does not return any groups, the local configuration determines the list of groups. See Authentication groups for more information about authentication groups. The **groupname** attribute can contain one group or multiple groups in a comma-separated list.

- 3. Save and close the file.
- 4. Verify that your changes did not introduce any syntax errors:

```
$ sudo tac_plus -C /etc/tacacs+/tac_plus.conf -P
```

If successful, this command will echo the configuration file to standard out. If the command encounters any syntax errors, a message similar to this will display:

Error: Unrecognised token on line 1

5. Restart the TACACS+ server:

\$ sudo /etc/init.d/tacacs_plus restart

TACACS+ server failover and fallback to local authentication

In addition to the primary TACACS+ server, you can also configure your IX20 device to use backup TACACS+ servers. Backup TACACS+ servers are used for authentication requests when the primary TACACS+ server is unavailable.

Falling back to local authentication

With user authentication methods, you can configure your IX20 device to use multiple types of authentication. For example, you can configure both TACACS+ authentication and local authentication, so that local authentication can be used as a fallback mechanism if the primary and backup TACACS+ servers are unavailable. Additionally, users who are configured locally but are not configured on the TACACS+ server are still able to log into the device. Authentication methods are attempted in the order they are listed until the first successful authentication result is returned; therefore if you want to ensure that users are authenticated first through the TACACS+ server, and only authenticated locally if the TACACS+ server is unavailable or if the user is not defined on the TACACS+ server, then you should list the TACACS+ authentication method prior to the Local users authentication method.

See User authentication methods for more information about authentication methods.

If the TACACS+ servers are unavailable and the IX20 device falls back to local authentication, only users defined locally on the device are able to log in. TACACS+ users cannot log in until the TACACS+ servers are brought back online.

Configure your IX20 device to use a TACACS+ server

This section describes how to configure a IX20 device to use a TACACS+ server for authentication and authorization.

Required configuration items

- Define the TACACS+ server IP address or domain name.
- Define the TACACS+ server shared secret.
- The group attribute configured in the TACACS+ server configuration.
- The service field configured in the TACACS+ server configuration.
- Add TACACS+ as an authentication method for your IX20 device.

Additional configuration items

- Whether other user authentication methods should be used in addition to the TACACS+ server, or if the TACACS+ server should be considered the authoritative login method.
- Enable command authorization, so that the device will communicate with the TACACS+ server to determine if the user is authorized to execute a specific command. Beginning with firmware release 21.11.x, Python is no longer included as part of the base firmware for the IX20 device. If you require Python in your environment and your device is running firmware 21.11.x or newer, see Install Python for information about installing Python on your device.

- Enable command accounting, so that the device will communicate with the TACACS+ server to log commands that the user executes. Beginning with firmware release 21.11.x, Python is no longer included as part of the base firmware for the IX20 device. If you require Python in your environment and your device is running firmware 21.11.x or newer, see Install Python for information about installing Python on your device.
- The TACACS+ server port. It is configured to 49 by default.
- Add additional TACACS+ servers in case the first TACACS+ server is unavailable.



- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.


Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

- 3. Click Authentication > TACACS+ > Servers.
- 4. Add TACACS+ servers:
 - a. For Add server, click Yo

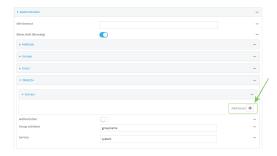

- b. For **Hostname**, type the hostname or IP address of the TACACS+ server.
- c. (Optional) Change the default **Port** setting to the appropriate port. Normally this should be left at the default setting of port 49.

d. For **Secret**, type the TACACS+ server's shared secret. This is configured in the key parameter of the TACACS+ server's tac plus.conf file, for example:

key = testing123

Note DAL authentication does not support the use of the # character in the key (e.g., DAL#123;&). If included, the server will be unable to decipher the request.

- e. (Optional) Click 1/2 again to add additional TACACS+ servers.
- 5. (Optional) Enable **Authoritative** to prevent other authentication methods from being attempted if TACACS+ login fails.
- 6. (Optional) For Group attribute, type the name of the attribute used in the TACACS+ server's configuration to identify the IX20 authentication group or groups that the user is a member of. For example, in TACACS+ user configuration, the group attribute in the sample tac_plus.conf file is groupname, which is also the default setting in the IX20 configuration.
- 7. (Optional) For Service, type the value of the service attribute in the the TACACS+ server's configuration. For example, in TACACS+ user configuration, the value of the service attribute in the sample tac_plus.conf file is system, which is also the default setting in the IX20 configuration.
- (Optional) Enable Command authorization, which instructs the device to communicate with the TACACS+ server to determine if the user is authorized to execute a specific command.
 Only the first configured TACACS+ server will be used for command authorization.

Note Beginning with firmware release 21.11.x, Python is no longer included as part of the base firmware for the IX20 device. If you require Python in your environment and your device is running firmware 21.11.x or newer, see Install Python for information about installing Python on your device.

 (Optional) Enable Command accounting, which instructs the device to communicate with the TACACS+ server to log commands that the user executes. Only the first configured TACACS+ server will be used for command accounting.

Note Beginning with firmware release 21.11.x, Python is no longer included as part of the base firmware for the IX20 device. If you require Python in your environment and your device is running firmware 21.11.x or newer, see Install Python for information about installing Python on your device.

- 10. Add TACACS+ to the authentication methods:
 - a. Click Authentication > Methods.
 - b. For **Add method**, click **1**/₂o



c. Select TACACS+ for the new method from the Method drop-down.



Authentication methods are attempted in the order they are listed until an authentication response, either pass or fail, is received. If **Authoritative** is enabled (see above), non-authoritative methods are not attempted. See Rearrange the position of authentication methods for information about rearranging the position of the methods in the list.

11. Click **Apply** to save the configuration and apply the change.

Command line

- Select the device in Remote Manager and click Actions > Open Console, or log into the IX20 local command line as a user with full Admin access rights.
 - Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
- 2. At the command line, type **config** to enter configuration mode:

> config (config)>

3. (Optional) Prevent other authentication methods from being used if TACACS+ authentication fails. Other authentication methods will only be used if the TACACS+ server is unavailable.

(config)> auth tacacs+ authoritative true (config)>

4. (Optional) Configure the group_attribute. This is the name of the attribute used in the TACACS+ server's configuration to identify the IX20 authentication group or groups that the user is a member of. For example, in TACACS+ user configuration, the group attribute in the sample tac_plus.conf file is groupname, which is also the default setting for the group_attribute in the IX20 configuration.

(config)> auth tacacs+ group_attribute attribute-name (config)>

5. (Optional) Configure the type of service. This is the value of the service attribute in the the TACACS+ server's configuration. For example, in TACACS+ user configuration, the value of the service attribute in the sample tac_plus.conf file is system, which is also the default setting in the IX20 configuration.

(config)> auth tacacs+ service service-name
(config)>

 (Optional) Enable command authorization, which instructs the device to communicate with the TACACS+ server to determine if the user is authorized to execute a specific command.
 Only the first configured TACACS+ server will be used for command authorization.

Note Beginning with firmware release 21.11.x, Python is no longer included as part of the base firmware for the IX20 device. If you require Python in your environment and your device is running firmware 21.11.x or newer, see Install Python for information about installing Python on your device.

(config)> auth tacacs+ command_authorization true (config)>

 (Optional) Enable command accounting, which instructs the device to communicate with the TACACS+ server to log commands that the user executes. Only the first configured TACACS+ server will be used for command accounting.

Note Beginning with firmware release 21.11.x, Python is no longer included as part of the base firmware for the IX20 device. If you require Python in your environment and your device is running firmware 21.11.x or newer, see Install Python for information about installing Python on your device.

(config)> auth tacacs+ command_accounting true (config)>

- 8. Add a TACACS+ server:
 - a. Add the server:

(config) > add auth tacacs+ server end (config auth tacacs+ server 0) >

b. Enter the TACACS+ server's IP address or hostname:

(config auth tacacs+ server 0)> hostname hostname|ip-address (config auth tacacs+ server 0)>

c. (Optional) Change the default port setting to the appropriate port:

(config auth tacacs+ server 0)> port port (config auth tacacs+ server 0)>

- d. (Optional) Repeat the above steps to add additional TACACS+ servers.
- 9. Add TACACS+ to the authentication methods. Authentication methods are attempted in the order they are listed until the first successful authentication result is returned. This example will add TACACS+ to the end of the list. See User authentication methods for information about adding methods to the beginning or middle of the list.

(config)> add auth method end tacacs+ (config)>

10. Save the configuration and apply the change.

(config)> save
Configuration saved.

11. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Remote Authentication Dial-In User Service (RADIUS)

Your IX20 device supports Remote Authentication Dial-In User Service (RADIUS), a networking protocol that provides centralized authentication and authorization management for users who connect to the device. With RADIUS support, the IX20 device acts as a RADIUS client, which sends user credentials and connection parameters to a RADIUS server over UDP. The RADIUS server then authenticates the RADIUS client requests and sends back a response message to the device.

When you are using RADIUS authentication, you can have both local users and RADIUS users able to log in to the device. To use RADIUS authentication, you must set up a RADIUS server that is accessible by the IX20 device prior to configuration. The process of setting up a RADIUS server varies by the server environment. An example of a RADIUS server is FreeRADIUS.

This section contains the following topics:

RADIUS user configuration	905
RADIUS server failover and fallback to local configuration	
Configure your IX20 device to use a RADIUS server	

RADIUS user configuration

When configured to use RADIUS support, the IX20 device uses a remote RADIUS server for user authentication (password verification) and authorization (assigning the access level of the user). Additional RADIUS servers can be configured as backup servers for user authentication.

This section outlines how to configure a RADIUS server to be used for user authentication on your IX20 device.

Example FreeRADIUS configuration

With FreeRADIUS, users are defined in the users file in your FreeRADIUS installation. To define users:

1. Open the FreeRadius user file in a text editor. For example:

\$ sudo gedit /etc/freeradius/3.0/users

2. Add users to the file using the following format:

```
user1 Cleartext-Password := "user1"
Unix-FTP-Group-Names := "admin"
```

user2 Cleartext-Password := "user2" Unix-FTP-Group-Names := "serial"

The **Unix-FTP-Group-Names** attribute is optional. If used, the value must correspond to authentication groups configured on your IX20. Alternatively, if the user is also configured as a local user on the IX20 device and the RADIUS server authenticates the user but does not return any groups, the local configuration determines the list of groups. See Authentication groups for more information about authentication groups. The **Unix-FTP-Group-Names** attribute can contain one group or multiple groups in a comma-separated list.

- 3. Save and close the file.
- 4. Verify that your changes did not introduce any syntax errors:

\$ sudo freeradius -CX

This should return a message that completes similar to:

...

Configuration appears to be OK

5. Restart the FreeRADIUS server:

\$ sudo /etc/init.d/freeradius restart

RADIUS server failover and fallback to local configuration

In addition to the primary RADIUS server, you can also configure your IX20 device to use backup RADIUS servers. Backup RADIUS servers are used for authentication requests when the primary RADIUS server is unavailable.

Falling back to local authentication

With user authentication methods, you can configure your IX20 device to use multiple types of authentication. For example, you can configure both RADIUS authentication and local authentication, so that local authentication can be used as a fallback mechanism if the primary and

backup RADIUS servers are unavailable. Additionally, users who are configured locally but are not configured on the RADIUS server are still able to log into the device. Authentication methods are attempted in the order they are listed until the first successful authentication result is returned; therefore if you want to ensure that users are authenticated first through the RADIUS server, and only authenticated locally if the RADIUS server is unavailable or if the user is not defined on the RADIUS server, then you should list the RADIUS authentication method prior to the Local users authentication method.

See User authentication methods for more information about authentication methods.

If the RADIUS servers are unavailable and the IX20 device falls back to local authentication, only users defined locally on the device are able to log in. RADIUS users cannot log in until the RADIUS servers are brought back online.

Configure your IX20 device to use a RADIUS server

This section describes how to configure a IX20 device to use a RADIUS server for authentication and authorization.

Required configuration items

- Define the RADIUS server IP address or domain name.
- Define the RADIUS server shared secret.
- Add RADIUS as an authentication method for your IX20 device.

Additional configuration items

- Whether other user authentication methods should be used in addition to the RADIUS server, or if the RADIUS server should be considered the authoritative login method.
- The RADIUS server port. It is configured to 1812 by default.
- Add additional RADIUS servers in case the first RADIUS server is unavailable.
- The server NASID. If left blank, the default value is used:
 - If you are access the IX20 device by using the WebUI, the default value is for NAS ID is httpd.
 - If you are access the IX20 device by using ssh, the default value is sshd.
- Time in seconds before the request to the server times out. The default is 3 seconds and the maximum possible value is 60 seconds.
- Enable additional debug messages from the RADIUS client.



- Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.

d. Click to expand Config.


Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

- 3. Click Authentication > RADIUS > Servers.
- 4. Add RADIUS servers:
 - a. For Add server, click Yo

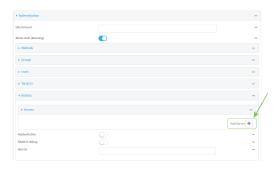

- b. For **Hostname**, type the hostname or IP address of the RADIUS server.
- c. (Optional) Change the default **Port** setting to the appropriate port. Normally this should be left at the default setting of port 1812.
- d. For **Secret**, type the RADIUS server's shared secret. This is configured in the secret parameter of the RADIUS server's client.conf file, for example:

secret=testing123

- e. For **Timeout**, type or select the amount of time in seconds to wait for the RADIUS server to respond. Allowed value is any integer from **3** to **60**. The default value is **3**.
- f. (Optional) Click Ybagain to add additional RADIUS servers.
- 5. (Optional) Enable **Authoritative** to prevent other authentication methods from being attempted if RADIUS login fails.
- 6. (Optional) Click RADIUS debug to enable additional debug messages from the RADIUS client.
- 7. (Optional) For NAS ID, type the unique identifier for this network access server (NAS). You can use the fully-qualified domain name of the NAS or any arbitrary string. If not set, the default value is used:
 - If you are accessing the IX20 device by using the WebUI, the default value is for NAS ID is httpd.
 - If you are accessing the IX20 device by using ssh, the default value is sshd.

- 8. Add RADIUS to the authentication methods:
 - a. Click Authentication > Methods.
 - b. For **Add method**, click **1**/₂o



c. Select **RADIUS** for the new method from the **Method** drop-down.



Authentication methods are attempted in the order they are listed until an authentication response, either pass or fail, is received. If **Authoritative** is enabled (see above), non-authoritative methods are not attempted. See Rearrange the position of authentication methods for information about rearranging the position of the methods in the list.

9. Click Apply to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:



3. (Optional) Prevent other authentication methods from being used if RADIUS authentication fails. Other authentication methods will only be used if the RADIUS server is unavailable.

(config)> auth radius authoritative true (config)>

4. (Optional) Enable debug messages from the RADIUS client:

(config)> auth radius debug true (config)>

- 5. (Optional) Configure the NAS ID. This is a unique identifier for this network access server (NAS). You can use the fully-qualified domain name of the NAS or any arbitrary string. If not set, the default value is used:
 - If you are accessing the IX20 device by using the WebUI, the default value is for NAS ID is httpd.
 - If you are accessing the IX20 device by using ssh, the default value is sshd.

(config)> auth radius nas_id id (config)>

6. Add a RADIUS server:

a. Add the server:

(config) > add auth radius server end (config auth radius server 0) >

b. Enter the RADIUS server's IP address or hostname:

(config auth radius server 0)> hostname hostname|ip-address (config auth radius server 0)>

c. (Optional) Change the default port setting to the appropriate port:

(config auth radius server 0)> port *port* (config auth radius server 0)>

d. Configure the amount of time in seconds to wait for the RADIUS server to respond. Allowed value is any integer from **3** to **60**. The default value is **3**.

(config auth radius server 0)> timeout *value* (config auth radius server 0)>

- e. (Optional) Repeat the above steps to add additional RADIUS servers.
- 7. Add RADIUS to the authentication methods. Authentication methods are attempted in the order they are listed until the first successful authentication result is returned. This example will add RADIUS to the end of the list. See User authentication methods for information about adding methods to the beginning or middle of the list.

(config)> add auth method end radius (config)>

8. Save the configuration and apply the change.

(config)> save Configuration saved.

9. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

LDAP

Your IX20 device supports LDAP (Lightweight Directory Access Protocol), a protocol used for directory information services over an IP network. LDAP can be used with your IX20 device for centralized authentication and authorization management for users who connect to the device. With LDAP support, the IX20 device acts as an LDAP client, which sends user credentials and connection parameters to an LDAP server. The LDAP server then authenticates the LDAP client requests and sends back a response message to the device.

When you are using LDAP authentication, you can have both local users and LDAP users able to log in to the device. To use LDAP authentication, you must set up a LDAP server that is accessible by the IX20 device prior to configuration. The process of setting up a LDAP server varies by the server environment.

This section contains the following topics:

LDAP user configuration	91	1
LDAP server failover and fallback to local configuration		
Configure your IX20 device to use an LDAP server		

LDAP user configuration

When configured to use LDAP support, the IX20 device uses a remote LDAP server for user authentication (password verification) and authorization (assigning the access level of the user). Additional LDAP servers can be configured as backup servers for user authentication.

This section outlines how to configure a LDAP server to be used for user authentication on your IX20 device.

There are several different implementations of LDAP, including Microsoft Active Directory. This section uses OpenLDAP as an example configuration. Other implementations of LDAP will have different configuration methods.

Example OpenLDAP configuration

With OpenLDAP, users can be configured in a text file using the LDAP Data Interchange Format (LDIF). In this case, we will be using a file called **add_user.ldif**.

1. Create the add_user.ldif file in a text editor. For example:

\$ gedit ./add_user.ldif

2. Add users to the file using the following format:

dn: uid=john,dc=example,dc=com objectClass: inetOrgPerson cn: John Smith sn: Smith uid: john

userPassword: password

ou: admin serial

- The value of **uid** and **userPassword** must correspond to the username and password used to log into the IX20 device.
- The **ou** attribute is optional. If used, the value must correspond to authentication groups configured on your IX20. Alternatively, if the user is also configured as a local user on the IX20 device and the LDAP server authenticates the user but does not return any groups, the local configuration determines the list of groups. See Authentication groups for more information about authentication groups.

Other attributes may be required by the user's objectClass. Any objectClass may be used as long it allows the **uid**, **userPassword**, and **ou** attributes.

- 3. Save and close the file.
- 4. Add the user to the OpenLDAP server:

\$ Idapadd -x -H 'Idap:///' -D 'cn=admin,dc=example,dc=com' -W -f add_user.ldif adding new entry "uid=john,dc=example,dc=com"

5. Verify that the user has been added by performing an LDAP search:

\$ Idapsearch -x -LLL -H 'Idap:///' -b 'dc=example,dc=com' uid=john dn: uid=john,dc=example,dc=com objectClass: inetOrgPerson cn: John Smith

sn: Smith uid: john ou: admin serial

LDAP server failover and fallback to local configuration

In addition to the primary LDAP server, you can also configure your IX20 device to use backup LDAP servers. Backup LDAP servers are used for authentication requests when the primary LDAP server is unavailable.

Falling back to local authentication

With user authentication methods, you can configure your IX20 device to use multiple types of authentication. For example, you can configure both LDAP authentication and local authentication, so that local authentication can be used as a fallback mechanism if the primary and backup LDAP servers are unavailable. Additionally, users who are configured locally but are not configured on the LDAP server are still able to log into the device. Authentication methods are attempted in the order they are listed until the first successful authentication result is returned; therefore if you want to ensure that users are authenticated first through the LDAP server, and only authenticated locally if the LDAP server is unavailable or if the user is not defined on the LDAP server, then you should list the LDAP authentication method prior to the Local users authentication method.

See User authentication methods for more information about authentication methods.

If the LDAP servers are unavailable and the IX20 device falls back to local authentication, only users defined locally on the device are able to log in. LDAP users cannot log in until the LDAP servers are brought back online.

Configure your IX20 device to use an LDAP server

This section describes how to configure a IX20 device to use an LDAP server for authentication and authorization.

Required configuration items

- Define the LDAP server IP address or domain name.
- Add LDAP as an authentication method for your IX20 device.

Additional configuration items

- Whether other user authentication methods should be used in addition to the LDAP server, or if the LDAP server should be considered the authoritative login method.
- The LDAP server port. It is configured to 389 by default.
- Whether to use Transport Layer Security (TLS) when communicating with the LDAP server.
- The distinguished name (DN) and password used to communicate with the server.
- The distinguished name used to search to user base.
- The group attribute.
- The number of seconds to wait to receive a message from the server.
- Add additional LDAP servers in case the first LDAP server is unavailable.



1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.

2. Access the device configuration:

Remote Manager:

- a. Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.


Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.


- 3. Click Authentication > LDAP > Servers.
- 4. Add LDAP servers:
 - a. For Add server, click Yo

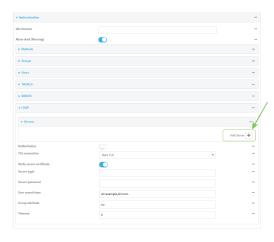

- b. For **Hostname**, type the hostname or IP address of the LDAP server.
- c. (Optional) Change the default **Port** setting to the appropriate port. Normally this should be left at the default setting of port 389 for non-TLS and 636 for TLS.
- d. (Optional) Click Ybagain to add additional LDAP servers.
- (Optional) Enable Authoritative to prevent other authentication methods from being attempted if LDAP login fails.
- 6. For **TLS connection**, select the type of TLS connection used by the server:
 - Disable TLS: Uses a non-secure TCP connection on the LDAP standard port, 389.
 - Enable TLS: Uses an SSL/TLS encrypted connection on port 636.

 Start TLS: Makes a non-secure TCP connection to the LDAP server on port 389, then sends a request to upgrade the connection to a secure TLS connection. This is the preferred method for LDAP.

- 7. If Enable TLS or Start TLS are selected for TLS connection:
 - Leave Verify server certificate at the default setting of enabled to verify the server certificate with a known Certificate Authority.
 - Disable Verify server certificate if the server is using a self-signed certificate.
- (Optional) For Server login, type a distinguished name (DN) that is used to bind to the LDAP server and search for users, for example cn=user,dc=example,dc=com. Leave this field blank if the server allows anonymous connections.
- 9. (Optional) For **Server password**, type the password used to log into the LDAP server. Leave this field blank if the server allows anonymous connections.
- For User search base, type the distinguished name (DN) on the server to search for users. This
 can be the root of the directory tree (for example, dc=example,dc=com) or a sub-tree (for
 example. ou=People,dc=example,dc=com).
- For Login attribute, enter the user attribute containing the login of the authenticated user.
 For example, in the LDAP user configuration, the login attribute is uid. If this attribute is not set, the user will be denied access.
- 12. (Optional) For **Group attribute**, type the name of the user attribute that contains the list of IX20 authentication groups that the authenticated user has access to. See LDAP user configuration for further information about the group attribute.
- 13. For **Timeout**, type or select the amount of time in seconds to wait for the LDAP server to respond. Allowed value is between **3** and **60** seconds.
- 14. Add LDAP to the authentication methods:
 - a. Click Authentication > Methods.
 - b. For **Add method**, click **1**/₂o

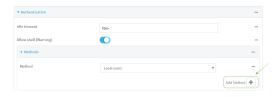

c. Select LDAP for the new method from the Method drop-down.



Authentication methods are attempted in the order they are listed until an authentication response, either pass or fail, is received. If **Authoritative** is enabled (see above), non-authoritative methods are not attempted. See Rearrange the position of authentication methods for information about rearranging the position of the methods in the list.

15. Click **Apply** to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

> config (config)>

3. (Optional) Prevent other authentication methods from being used if LDAP authentication fails. Other authentication methods will only be used if the LDAP server is unavailable.

(config)> auth Idap authoritative true (config)>

4. Set the type of TLS connection used by the LDAP server:

(config)> auth ldap tls *value* (config)>

where value is one of:

- off: Uses a non-secure TCP connection on the LDAP standard port, 389.
- on: Uses an SSL/TLS encrypted connection on port 636.
- start_tls: Makes a non-secure TCP connection to the LDAP server on port 389, then sends a request to upgrade the connection to a secure TLS connection. This is the preferred method for LDAP.

The default is off.

5. If tls is set to on or start_tls, configure whether to verify the server certificate:

(config)> auth ldap verify_server_cert value (config)>

where value is either:

- true: Verifies the server certificate with a known Certificate Authority.
- false: Does not verify the certificate. Use this option if the server is using a self-signed certificate.

The default is true.

6. Set the distinguished name (DN) that is used to bind to the LDAP server and search for users. Leave this option unset if the server allows anonymous connections.

(config)> auth ldap bind_dn dn_value (config)>

For example:

(config)> auth ldap bind_dn cn=user,dc=example,dc=com (config)>

7. Set the password used to log into the LDAP server. Leave this option unset if the server allows anonymous connections.

(config)> auth Idap bind_password password
(config)>

 Set the distinguished name (DN) on the server to search for users. This can be the root of the directory tree (for example, dc=example,dc=com) or a sub-tree (for example. ou=People,dc=example,dc=com).

(config)> auth ldap base_dn value
(config)>

9. Set the login attribute:

(config)> auth Idap login_attribute value (config)>

where value is the user attribute containing the login of the authenticated user. For example, in the LDAP user configuration, the login attribute is **uid**. If this attribute is not set, the user will be denied access.

 (Optional) Set the name of the user attribute that contains the list of IX20 authentication groups that the authenticated user has access to. See LDAP user configuration for further information about the group attribute.

(config)> auth ldap group_attribute value (config)>

For example:

(config)> auth ldap group_attribute ou (config)>

11. Configure the amount of time in seconds to wait for the LDAP server to respond.

(config)> auth Idap timeout *value* (config)>

where value is any integer from 3 to 60. The default value is 3.

- 12. Add an LDAP server:
 - a. Add the server:

(config)> add auth Idap server end (config auth Idap server 0)>

b. Enter the LDAP server's IP address or hostname:

(config auth Idap server 0)> hostname hostname|ip-address (config auth Idap server 0)>

c. (Optional) Change the default port setting to the appropriate port:

```
(config auth ldap server 0)> port port (config auth ldap server 0)>
```

- d. (Optional) Repeat the above steps to add additional LDAP servers.
- 13. Add LDAP to the authentication methods. Authentication methods are attempted in the order they are listed until the first successful authentication result is returned. This example will add LDAP to the end of the list. See User authentication methods for information about adding methods to the beginning or middle of the list.

```
(config)> add auth method end ldap (config)>
```

14. Save the configuration and apply the change.

```
(config)> save
Configuration saved.
```

>

Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configure serial authentication

This section describes how to configure authentication for serial access.



- Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

Click Authentication > Serial.

- 4. (Optional) For TLS identity certificate, paste a TLS certificate and private key in PEM format. If empty, the certificate for the web administration service is used. See Configure the web administration service for more information.
- For Peer authentication, select the method used to verify the certificate of a remote peer.
- 6. **Include standard CAs** is enabled by default. This allows peers with certificates that have been signed by standard Certificate Authorities (CAs) to authenticate.
- 7. Click to expand Custom certificate authorities to add the public certificates of custom CAs.
 - a. For Add CA certificate, type the name of a custom CA and click Yo
 - b. Paste the public certificate for the custom CA in PEM format.
 - c. Repeat for additional custom CA certificates.
- 8. Click to expand **Peer certificates** to add the public certificates of trusted peers.
 - a. For Add Peer certificate, type the name of a trusted peer and click 1/2
 - b. Paste the public certificate for the trusted peer in PEM format.
 - c. Repeat for additional trusted peer certificates.
- 9. Enable **TelNet Login**, which requires a user to login via the TelNet connection before accessing a port.
- 10. Click **Apply** to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

> config (config)>

3. (Optional) Paste a TLS certificate and private key in PEM format:

(config)> auth serial identiy "cert-and-private-key" (config)>

4. Set the method used to verify the certificate of a remote peer:

(config)> auth serial verify *value* (config)>

where value is either:

- ca: Uses certificate authorities (CAs) to verify.
- peer: Uses the remote peer's public certificate to verify.
- 5. By default, peers with certificates that have been signed by standard Certificate Authorities (CAs) are allowed to authenticate. To disable:

(config)> auth serial ca_standard false
(config)>

User authentication Disable shell access

6. Add the public certificate for a custom certificate authority:

(config)> add auth serial ca_certs CA-cert-name "cert-and-private-key"
(config)>

where:

- CA-cert-name is the name of the certificate for the custom certificate authority.
- cert-and-private-key is the certificate and private key for the custom certificate authority.

Repeat for additional custom certificate authorities.

7. Require a user to login via the TelNet connection before accessing a port.

```
(config)> auth serial telnet_login?
(config)>
```

1. Save the configuration and apply the change.

```
(config)> save
Configuration saved.
```

2. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Disable shell access

To prohibit access to the shell prompt for all authentication groups, disable the **Allow shell** parameter.. This does not prevent access to the Admin CLI.

Note If shell access is disabled, re-enabling it will erase the device's configuration and perform a factory reset.



- Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

User authentication Disable shell access

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

- 3. Click Authentication.
- 4. Click to disable Allow shell.



Note If shell access is disabled, re-enabling it will erase the device's configuration and perform a factory reset.

5. Click Apply to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

> config (config)>

3. Set the allow_shell parameter to false:

(config)> auth allow_shell false

Note If shell access is disabled, re-enabling it will erase the device's configuration and perform a factory reset.

4. Save the configuration and apply the change.

(config)> save Configuration saved.

5. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Set the idle timeout for IX20 users

To configure the amount of time that the user's active session can be inactive before it is automatically disconnected, set the **Idle timeout** parameter.

By default, the Idle timeout is set to 10 minutes.



- Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- a. Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The Configuration window is displayed.

- 3. Click Authentication.
- 4. For **Idle timeout**, enter the amount of time that the active session can be idle before the user is automatically logged out.

Allowed values are any number of weeks, days, hours, minutes, or seconds, and take the format *number*{w|d|h|m|s}.

For example, to set Idle timeout to ten minutes, enter 10m or 600s.



5. Click **Apply** to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

> config (config)>

3. At the config prompt, type:

(config)> auth idle_timeout value

where *value* is any number of weeks, days, hours, minutes, or seconds, and takes the format *number*{w|d|h|m|s}.

For example, to set idle_timeout to ten minutes, enter either 10m or 600s:

(config)> auth idle_timeout 600s
(config)>

4. Save the configuration and apply the change.

(config)> save
Configuration saved.

5. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Example user configuration

Example 1: Administrator user with local authentication

Goal: To create a user with administrator rights who is authenticated locally on the device.



- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.


Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

- 3. Click Authentication > Users.
- 4. In Add User: enter a name for the user and click %

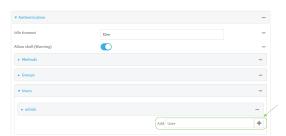

The user configuration window is displayed.



- 5. Enter a Password for the user.
- 6. Assign the user to the admin group:
 - a. Click Groups.
 - b. For **Add Group**, click **Y**_o
 - c. For Group, select the admin group.
 - d. Verify that the admin group has full administrator rights:
 - i. Click Authentication > Groups.
 - ii. Click admin.
 - Verify that the admin group has Admin access enabled. If not, click Admin access to enable.
 - iv. Verify that Access level is set to Full access. If not, select Full access.
 - e. Verify that Local users is one of the configured authentication methods:
 - i. Click Authentication > Methods.
 - ii. Verify that **Local users** is one of the methods listed in the list. If not:
 - i. For Add Method, click Yo
 - ii. For Method, select Local users.
- 7. Click **Apply** to save the configuration and apply the change.

Command line

Select the device in Remote Manager and click Actions > Open Console, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

> config (config)>

3. Verify that the **admin** group has full administrator rights:

(config)> show auth group admin acl
admin
enable true
level full
...
(config)>

If admin > enable is set to false:

(config)> auth group admin acl admin enable true (config)>

If admin > level is set to read-only:

(config)> auth group admin acl admin level full (config)>

4. Verify that **local** is one of the configured authentication methods:

(config)> show auth method 0 local

(config)>

If local is not listed:

(config)> add auth method end local (config)>

5. Create the user. In this example, the user is being created with the username adminuser:

(config)> add auth user adminuser (config auth user adminuser)>

6. Assign a password to the user:

(config auth user adminuser)> password pwd (config auth user adminuser)>

7. Assign the user to the admin group:

(config auth user adminuser)> add group end admin (config auth user adminuser)>

8. Save the configuration and apply the change.

(config auth user adminuser)> save Configuration saved.

9. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Example 2: RADIUS, TACACS+, and local authentication for one user

Goal: To create a user with administrator rights who is authenticated by using all three authentication methods.

In this example, when the user attempts to log in to the IX20 device, user authentication will occur in the following order:

- 1. The user is authenticated by the RADIUS server. If the RADIUS server is unavailable,
- 2. The user is authenticated by the TACACS+ server. If both the RADIUS and TACACS+ servers are unavailable,
- 3. The user is authenticated by the IX20 device using local authentication.

This example uses a FreeRadius 3.0 server running on ubuntu, and a TACACS+ server running on ubuntu. Server configuration may vary depending on the platforms or type of servers used in your environment.



- 1. Configure a user on the RADIUS server:
 - a. On the ubuntu machine hosting the FreeRadius server, open the /etc/freeradius/3.0/users file:

\$ sudo gedit /etc/freeradius/3.0/users

b. Add a RADIUS user to the users file:

```
admin1 Cleartext-Password := "password1"
Unix-FTP-Group-Names := "admin"
```

In this example:

- The user's username is admin1.
- The user's password is **password1**.
- The authentication group on the IX20 device, **admin**, is identified in the **Unix-FTP-Group-Names** parameter.
- c. Save and close the users file.
- 2. Configure a user on the TACACS+ server:
 - a. On the ubuntu machine hosting the TACACS+ server, open the /etc/tacacs+/tac_plus.conf file:

\$ sudo gedit /etc/tacacs+/tac_plus.conf

b. Add a TACACS+ user to the tac_plus.conf file:

```
user = admin1 {
    name ="Admin1 for TX64"
    pap = cleartext password1
    service = system {
        groupname = admin
      }
    }
}
```

In this example:

- The user's username is admin1.
- The user's password is **password1**.
- The authentication group on the IX20 device, **admin**, is identified in the **groupname** parameter.
- c. Save and close the tac_plus.conf file.
- Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 4. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.


Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

- 5. Configure the authentication methods:
 - a. Click Authentication > Methods.
 - b. For Method, select RADIUS.
 - c. For **Add Method**, click **1**/2 oto add a new method.
 - d. For the new method, select TACACS+.
 - e. Click Yoto add another new method.
 - f. For the new method, select Local users.

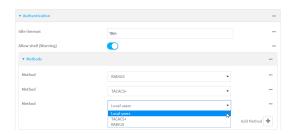

- 6. Create the local user:
 - a. Click Authentication > Users.
 - b. In Add User:, type admin1 and click 1/2




c. For password, type password1.

- d. Assign the user to the **admin** group:
 - i. Click Groups.
 - ii. For Add Group, click 1/20



iii. For **Group**, select the **admin** group.

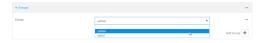

- a. Verify that the admin group has full administrator rights:
 - i. Click Authentication > Groups.
 - ii. Click admin.
 - iii. Verify that the admin group has **Admin access** enabled. If not, click **Admin access** to enable.
 - iv. Verify that Access level is set to Full access. If not, select Full access.
- 7. Click Apply to save the configuration and apply the change.

Command line

- 1. Configure a user on the RADIUS server:
 - a. On the ubuntu machine hosting the FreeRadius server, open the /etc/freeradius/3.0/users file:

\$ sudo gedit /etc/freeradius/3.0/users

b. Add a RADIUS user to the users file:

```
admin1 Cleartext-Password := "password1"
Unix-FTP-Group-Names := "admin"
```

In this example:

- The user's username is admin1.
- The user's password is **password1**.
- The authentication group on the IX20 device, **admin**, is identified in the **Unix-FTP-Group-Names** parameter.
- c. Save and close the users file.
- 2. Configure a user on the TACACS+ server:
 - a. On the ubuntu machine hosting the TACACS+ server, open the /etc/tacacs+/tac_plus.conf file:

\$ sudo gedit /etc/tacacs+/tac_plus.conf

b. Add a TACACS+ user to the tac_plus.conf file:

```
user = admin1 {
    name ="Admin1 for TX64"
    pap = cleartext password1
    service = system {
        groupname = admin
      }
    }
}
```

In this example:

- The user's username is admin1.
- The user's password is **password1**.
- The authentication group on the IX20 device, admin, is identified in the groupname parameter.
- c. Save and close the tac_plus.conf file.
- 3. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

4. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

- 5. Configure the authentication methods:
 - a. Determine the current authentication method configuration:

```
(config)> show auth method 0 local (config)>
```

This output indicates that on this example system, only local authentication is configured.

b. Add RADIUS authentication to the beginning of the list:

```
(config)> add auth method 0 radius (config)>
```

c. Add TACACS+ authentication second place in the list:

```
(config)> add auth method 1 tacacs+(config)>
```

d. Verify that authentication will occur in the correct order:

```
(config)> show auth method
0 radius
1 tacacs+
```

2 local (config)>

6. Verify that the **admin** group has full administrator rights:

(config)> show auth group admin acl admin enable true level full

(config)>

If admin > enable is set to false:

(config)> auth group admin acl admin enable true (config)>

If **admin** > **level** is set to read-only:

(config)> auth group admin acl admin level full (config)>

- 7. Configure the local user:
 - a. Create a local user with the username admin1:

(config)> add auth user admin1 (config auth user admin1)>

b. Assign a password to the user:

(config auth user adminuser)> password password1 (config auth user adminuser)>

c. Assign the user to the **admin** group:

(config auth user adminuser)> add group end admin (config auth user adminuser)>

8. Save the configuration and apply the change.

(config auth user adminuser)> save Configuration saved.

>

9. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Firewall

This chapter contains the following topics:

Firewall configuration	933
Port forwarding rules	
Packet filtering	
Configure custom firewall rules	952
Configure captive portals	
Configure Quality of Service options	
Web filtering	

Firewall configuration

Firewall configuration

Firewall configuration includes the following configuration options:

- Zones: A zone is a firewall access group to which network interfaces can be added. You then use zones to configure packet filtering and access control lists for interfaces that are included in the zone. Preconfigured zones include:
 - Any: Matches any network interface, even if they are not assigned to this zone.
 - **Loopback**: Zone for interfaces that are used for communication between processes running on the device.
 - Internal: Used for interfaces connected to trusted networks. By default, the firewall will allow most access from this zone.
 - External: Used for interfaces to connect to untrusted zones, such as the internet. This zone has Network Address Translation (NAT) enabled by default. By default, the firewall will block most access from this zone.
 - **Edge**: Used for interfaces connected to trusted networks, where the device is a client on the edge of the network rather than a router or gateway.
 - **Setup**: Used for interfaces involved in the initial setup of the device. By default, the firewall will only allow this zone to access administration services.
 - IPsec: The default zone for IPsec tunnels.
 - Dynamic routes: Used for routes learned using routing services.
- Port forwarding: A list of rules that allow network connections to the IX20 to be forwarded to other servers by translating the destination address.
- Packet filtering: A list of packet filtering rules that determine whether to accept or reject network connections that are forwarded through the IX20.
- Custom rules: A script that is run to install advanced firewall rules beyond the scope/capabilities of the standard device configuration.
- Quality Of Service: Quality of Service (QOS) options for bandwidth allocation and policybased traffic shaping and prioritizing.

Create a custom firewall zone

In addition to the preconfigured zones, you can create your custom zones that can be used to configure packet filtering and access control lists for network interfaces.

To create a zone:



- Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.

Firewall Configuration

- c. Click Settings.
- d. Click to expand Config.


Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

- 3. Click Firewall > Zones.
- 4. In Add Zone, enter a name for the zone and click %

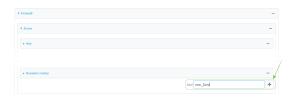

The firewall configuration window is displayed.



- 5. (Optional) If traffic on this zone will be forwarded from a private network to the internet, enable Network Address Translation (NAT).
- 6. Click Apply to save the configuration and apply the change.

See Configure the firewall zone for a network interface for information about how to configure network interfaces to use a zone.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:



3. Add the new zone. For example, to add a zone named my_zone:

(config)> add firewall zone my_zone (config firewall zone my_zone)>

Firewall Configuration

4. (Optional) Enable Network Address Translation (NAT):

```
(config firewall zone my_zone)> src_nat true (config firewall zone my_zone)>
```

5. Save the configuration and apply the change.

```
(config firewall zone my_zone)> save Configuration saved.
```

6. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

See Configure the firewall zone for a network interface for information about how to configure network interfaces to use a zone.

Configure the firewall zone for a network interface

Firewall zones allow you to group network interfaces for the purpose of packet filtering and access control. There are several preconfigured firewall zones, and you can create custom zones as well. The firewall zone that a network interfaces uses is selected during interface configuration.

This example procedure uses an existing network interface named **ETH2** and changes the firewall zone from the default zone, **Internal**, to **External**.



- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.




The **Configuration** window is displayed.

3. Click Network > Interfaces > ETH2.

Firewall configuration

4. For Zone, select External.

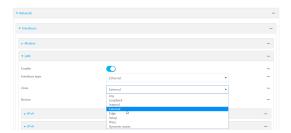

5. Click Apply to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. At the config prompt, type:

```
(config)> network interface eth2 zone my_zone
(config)>
```

4. Save the configuration and apply the change.

```
(config)> save
Configuration saved.
>
```

5. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Delete a custom firewall zone

You cannot delete preconfigured firewall zones. To delete a custom firewall zone:



- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

Firewall Configuration

 a. Locate your device as described in Use Digi Remote Manager to view and manage your device.

- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

- 3. Click Firewall > Zones.
- 4. Click the menu icon (...) next to the appropriate custom firewall zone and select Delete.



5. Click **Apply** to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:



3. Use the **del** command to delete a custom firewall rule. For example:

```
(config)> del firewall zone my_zone
```

4. Save the configuration and apply the change.

```
(config)> save
Configuration saved.
>
```

5. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Port forwarding rules

Most computers are protected by a firewall that prevents users on a public network from accessing servers on the private network. To allow a computer on the Internet to connect to a specific server on a private network, set up one or more port forwarding rules. Port forwarding rules provide mapping instructions that direct incoming traffic to the proper device on a LAN.

Configure port forwarding

Required configuration items

- The network interface for the rule.
 - Network connections will only be forwarded if their destination address matches the IP address of the selected network interface.
- The public-facing port number that network connections must use for their traffic to be forwarded.
- The IP address of the server to which traffic should be forwarded.
- The port or range of ports to which traffic should be forwarded.

Additional configuration items

- A label for the port forwarding rule.
- The IP version (either IPv4 or IPv6) that incoming network connections must match.
- The protocols that incoming network connections must match.
- A white list of devices, based on either IP address or firewall zone, that are authorized to leverage this forwarding rule.

To configure a port forwarding rule:



- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.


Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

- 3. Click Firewall > Port forwarding.
- 4. For Add port forward, click %

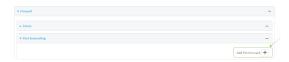

The port forwarding rule configuration window is displayed.



Port forwarding rules are enabled by default. To disable, toggle off **Enable**.

- 5. (Optional) Type a **Label** that will be used to identify the rule.
- 6. For Interface, select the network interface for the rule.

Network connections will only be forwarded if their destination address matches the IP address of the selected network interface.

7. For IP version, select either IPv4 or IPv6.

Network connections will only be forwarded if they match the selected IP version.

- For **Protocol**, select the type of internet protocol.
 Network connections will only be forwarded if they match the selected protocol.
- 9. For **Incoming port(s)**, type the public-facing port number that network connections must use for their traffic to be forwarded.
- For To Address, type the IP address of the server to which traffic should be forwarded.
- 11. For **Destination Port(s)**, type the port number, comma-separated list of port numbers, or range of port numbers on the server to which traffic should be forwarded. For example, to forward traffic to ports one, three, and five through ten, enter: **1**, **3**, **5-10**.
- 12. (Optional) Click **Access control list** to create a white list of devices that are authorized to leverage this forwarding rule, based on either the IP address or firewall zone:
 - To white list IP addresses:
 - a. Click Addresses.
 - b. For Add Address, enter an IP address and click %
 - c. Repeat for each additional IP address that should be white listed.

- To specify firewall zones for white listing:
 - a. Click Zones.
 - b. For **Add zone**, click **1**/₂o
 - c. For **Zone**, select the appropriate zone.
 - d. Repeat for each additional zone.
- 13. Click **Apply** to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

```
> config (config)>
```

At the config prompt, type:

```
(config)> add firewall dnat end (config firewall dnat 0)>
```

Port forwarding rules are enabled by default. To disable the rule:

```
(config firewall dnat 0)> enable false (config firewall dnat 0)>
```

4. Set the network interface for the rule.

```
(config firewall dnat 0)> interface (config firewall dnat 0)>
```

Network connections will only be forwarded if their destination address matches the IP address of this network interface.

a. Use the ?to determine available interfaces:

```
(config firewall dnat 0)> interface?
```

Interface: Network connections will only be forwarded if their destination address matches the IP address of this network interface.

Format:
setupip
setuplinklocalip
eth1
eth2
loopback
Current value:

(config firewall dnat 0)> interface

b. Set the interface. For example:

(config firewall dnat 0)> interface eth1 (config firewall dnat 0)>

5. Set the IP version. Allowed values are ipv4 and ipv6. The default is ipv4.

(config firewall dnat 0)> ip_version ipv6 (config firewall dnat 0)>

Set the public-facing port number that network connections must use for their traffic to be forwarded.

(config firewall dnat 0)> port port (config firewall dnat 0)>

7. Set the type of internet protocol.

(config firewall dnat 0)> protocol *value* (config firewall dnat 0)>

Network connections will only be forwarded if they match the selected protocol. Allowed values are **custom**, **tcp**, **tcpudp**, or **upd**. The default is **tcp**.

- 8. Set the IP address of the server to which traffic should be forwarded:
 - For IPv4 addresses:

(config firewall dnat 0)> to_address *ip-address* (config firewall dnat 0)>

■ For IPv6 addresses:

(config firewall dnat 0)> to_address6 *ip-address* (config firewall dnat 0)>

9. Set the public-facing port number(s) that network connections must use for their traffic to be forwarded.

(config firewall dnat 0)> to_port value (config firewall dnat 0)>

where *value* is the port number, comma-separated list of port numbers, or range of port numbers on the server to which traffic should be forwarded. For example, to forward traffic to ports one, three, and five through ten, enter **1**, **3**, **5-10**.

10. (Optional) To create a white list of devices that are authorized to leverage this forwarding rule, based on either the IP address or firewall zone, change to the acl node:

(config firewall dnat 0)> acl (config firewall dnat 0 acl)>

- To white list an IP address:
 - · For IPv4 addresses:

(config firewall dnat 0 acl> add address end *ip-address* (config firewall dnat 0 acl)>

· For IPv6 addresses:

(config firewall dnat 0 acl> add address6 end *ip-address* (config firewall dnat 0 acl)>

Repeat for each appropriate IP address.

To specify the firewall zone for white listing:

(config firewall dnat 0 acl)> add zone end zone

Repeat for each appropriate zone.

To view a list of available zones:

(config firewall dnat 0 acl)> zone?

Zones: A list of groups of network interfaces that can be referred to by packet filtering rules and access control lists.

Additional Configuration

.....

any

dynamic_routes

edge

external

hotspot

internal

ipsec

loopback

setup

(config firewall dnat 0 acl)>

11. Save the configuration and apply the change.

(config)> save
Configuration saved.

12. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Delete a port forwarding rule

To delete a port forwarding rule:



 Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.

2. Access the device configuration:

Remote Manager:

- a. Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The Configuration window is displayed.

- 3. Click Firewall > Port forwarding.
- 4. Click the menu icon (...) next to the appropriate port forwarding rule and select **Delete**.



5. Click Apply to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Determine the index number of the port forwarding rule you want to delete:

```
(config)> show firewall dnat
0
acl
no address
no zone
enable true
```

```
interface
   ip_version ipv4
   label IPv4 port forwarding rule
   port 10000
   protocol tcp
   to_address6 10.10.10.10
   to_port 10001
1
   acl
       no address6
       no zone
   enable false
   interface
   ip_version ipv6
   label IPv6 port forwarding rule
   port 10002
   protocol tcp
   to_address6 c097:4533:bd63:bb12:9a6f:5569:4b53:c29a
   to_port 10003
(config)>
```

4. To delete the rule, use the index number with the **del** command. For example:

```
(config)> del firewall dnat 1
```

5. Save the configuration and apply the change.

```
(config)> save
Configuration saved.
```

6. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Packet filtering

By default, there are two preconfigured packet filtering rules:

Allow all outgoing traffic: Monitors traffic going to and from the IX20 device. The predefined settings are intended to block unauthorized inbound traffic while providing an unrestricted flow of outgoing data.

Allow Hotspot to External: Allows traffic that uses the hotspot firewall zone to be forwarded to interfaces that use the External zone. You should not modify this packet filtering rule.

Configure packet filtering

Required configuration items

- The action that the packet filtering rule will perform, either **Accept**, **Reject**, or **Drop**.
- The source firewall zone: Packets originating from interfaces on this zone will be monitored by this rule.
- The destination firewall zone: Packets destined for interfaces on this zone will be accepted, rejected, or dropped by this rule.

Additional configuration requirements

- A label for the rule.
- The IP version to be matched, either IPv4, IPv6, or Any.
- The protocol to be matched, one of:
 - TCP
 - UDP
 - ICMP
 - ICMP6
 - Any

To configure a packet filtering rule:



- Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- a. Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.

d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

- 3. Click Firewall > Packet filtering.
 - To create a new packet filtering rule, for Add packet filter, click %



To edit the default packet filtering rule or another existing packet filtering rule, click to expand the rule.

The packet filtering rule configuration window is displayed.



Packet filters are enabled by default. To disable, toggle off **Enable**.

- 4. (Optional) Type a Label that will be used to identify the rule.
- 5. For **Action**, select one of:
 - Accept: Allows matching network connections.
 - Reject: Blocks matching network connections, and sends an ICMP error if appropriate.
 - Drop: Blocks matching network connections, and does not send a reply.
- 6. Select the IP version.
- 7. Select the Protocol.
- 8. For **Source zone**, select the firewall zone that will be monitored by this rule for incoming connections from network interfaces that are a member of this zone.
 - See Firewall configuration for more information about firewall zones.
- 9. For **Destination zone**, select the firewall zone. Packets destined for network interfaces that are members of this zone will either be accepted, rejected or dropped by this rule.
 - See Firewall configuration for more information about firewall zones.
- 10. Click **Apply** to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

To edit the default packet filtering rule or another existing packet filtering rule:

a. Determine the index number of the appropriate packet filtering rule:

```
(config)> show firewall filter
0
  action accept
  dst_zone any
  enable true
 ip_version any
  label Allow all outgoing traffic
 protocol any
 src_zone internal
  action drop
  dst_zone internal
  enable true
 ip_version any
 label myfilter
  protocol any
  src_zone external
(config)>
```

b. Select the appropriate rule by using its index number:

```
(config)> firewall filter 1
(config firewall filter 1)>
```

To create a new packet filtering rule:

```
(config)> add firewall filter end (config firewall filter 1)>
```

Packet filtering rules are enabled by default. To disable the rule:

```
(config firewall filter 1)> enable false (config firewall filter 1)>
```

3. (Optional) Set the label for the rule.

```
(config firewall filter 1)> label "My filter rule" (config firewall filter 1)>
```

4. Set the action to be performed by the filter rule.

```
(config firewall filter 1)> action value (config firewall filter 1)>
```

where value is one of:

- accept: Allows matching network connections.
- reject: Blocks matching network connections, and sends an ICMP error if appropriate.
- drop: Blocks matching network connections, and does not send a reply.
- 5. Set the firewall zone that will be monitored by this rule for incoming connections from network interfaces that are a member of this zone:

See Firewall configuration for more information about firewall zones.

```
(config firewall filter 1)> src_zone my_zone (config firewall filter 1)>
```

6. Set the destination firewall zone. Packets destined for network interfaces that are members of this zone will either be accepted, rejected or dropped by this rule.

See Firewall configuration for more information about firewall zones.

```
(config firewall filter 1)> dst_zone my_zone
(config firewall filter 1)>
```

7. Set the IP version.

```
(config firewall filter 1)> ip_version value
(config firewall filter 1)>
```

where value is one of:

- any
- ipv4
- ipv6
- The default is any.
- 8. Set the protocol.

```
(config firewall filter 1)> protocol value
(config firewall filter 1)>
```

where value is one of:

- any
- icmp
- icmpv6
- tcp
- upd

The default is any.

9. Save the configuration and apply the change.

(config)> save
Configuration saved.

10. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Enable or disable a packet filtering rule

To enable or disable a packet filtering rule:



- Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

- 3. Click Firewall > Packet filtering.
- 4. Click the appropriate packet filtering rule.
- 5. Click **Enable** to toggle the rule between enabled and disabled.



6. Click Apply to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Determine the index number of the appropriate port forwarding rule:

```
(config)> show firewall filter
  action accept
  dst_zone any
  enable true
  ip_version any
  label Allow all outgoing traffic
  protocol any
  src_zone internal
  action drop
  dst_zone internal
  enable true
  ip_version any
  label My packet filter
  protocol any
  src_zone external
(config)>
```

4. To enable a packet filtering rule, use the index number with the **enable true** command. For example:

```
(config)> firewall filter 1 enable true
```

5. To disable a packet filtering rule, use the index number with the **enable false** command. For example:

```
(config)> firewall filter 1 enable false
```

6. Save the configuration and apply the change.

```
(config)> save
Configuration saved.
```

7. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Delete a packet filtering rule

To delete a packet filtering rule:



1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.

2. Access the device configuration:

Remote Manager:

- a. Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

- 3. Click Firewall > Packet filtering.
- 4. Click the menu icon (...) next to the appropriate packet filtering rule and select **Delete**.



5. Click Apply to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type config to enter configuration mode:

> config (config)>

3. Determine the index number of the packet filtering rule you want to delete:

(config)> show firewall filter
0
action accept

```
dst_zone any
enable true
ip_version any
label Allow all outgoing traffic
protocol any
src_zone internal

action drop
dst_zone internal
enable true
ip_version any
label My packet filter
protocol any
src_zone external
(config)>
```

4. To delete the rule, use the index number with the **del** command. For example:

(config)> del firewall filter 1

5. Save the configuration and apply the change.

```
(config)> save
Configuration saved.
>
```

6. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configure custom firewall rules

Custom firewall rules consist of a script of shell commands that can be used to install firewall rules, ipsets, and other system configuration. These commands are run whenever system configuration changes occur that might cause changes to the firewall.

To configure custom firewall rules:



- Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The Configuration window is displayed.

3. Click Firewall > Custom rules.



- 4. Enable the custom rules.
- (Optional) Enable Override to override all preconfigured firewall behavior and rely solely on the custom firewall rules.
- 6. For Rules, type the shell command that will execute the custom firewall rules script.
- 7. Click Apply to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:



3. Enable custom firewall rules:

(config)> firewall custom enable true

(Config.)>
(Optional) Instruct the device to override all preconfigured firewall behavior and rely sold

4. (Optional) Instruct the device to override all preconfigured firewall behavior and rely solely on the custom firewall rules:

(config)> firewall custom override true (config)>

5. Set the shell command that will execute the custom firewall rules script:

(config)> firewall custom rules "shell-command"
(config)>

6. Save the configuration and apply the change.

(config)> save Configuration saved.

7. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configure captive portals

Captive portals are commonly used on public-access networks to require users to login or accept terms and conditions before accessing the internet.

Note Captive portals are available on the IX20W Wi-Fi enabled model only.

To configure captive portals:



- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.


Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

- 3. Click Firewall > Captive portals.
- 4. For Add captive portal:, enter a name for the portal and click %

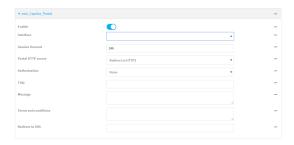

The captive portal configuration window is displayed.

The captive portal is enabled by default. To disable, toggle off **Enable**.

- 5. For **Interface**, select the network interface for the portal.
 - Traffic received on this interface's network device will not be forwarded unless the client has been granted access.
- 6. For **Session timeout**, type the amount of time that a user session remains valid. After the session times out, the user will be required to log in again.
 - Allowed values are any number of weeks, days, hours, minutes, or seconds, and take the format *number*(w|d|h|m|s).
 - For example, to set Session timeout to ten minutes, enter 10m or 600s.
- 7. For **Portal HTTP access**, configure whether the portal can be accessed over an insecure connection.
 - Allow: Allows access to the portal page over an insecure connection (HTTP port 80).
 - Redirect to HTTPS: Automatically redirects the request to a secure connection (HTTPS port 443).
 - Disallow: Does not allow access over an insecure connection (HTTP port 80).

Note This setting does not affect access to HTTP port 80 after the client has been granted access to the portal.

- 8. For **Authorization**, select the method that will be used to authorize the user:
 - None: Users are not required to enter any information to access the portal.
 - **User login**: Users are required to authenticate with an account on this device. Users must be part of a user group that allows access to this portal.
 - Collect user information: Users are required to complete a form to continue. The form fields may be customize.
- 9. (Optional) For **Title**, enter the title of the portal page that the user will see when accessing the portal.
- 10. (Optional) For **Message**, enter a message that will appear on the portal page.
- 11. (Optional) For Terms and Conditions, enter the terms and conditions that ill appear on the portal page. Users will be required to agree to the terms and conditions before being granted access to the portal.
- (Optional) For Redirect to URL, enter the URL to which the user will be directed when granted access to the portal. If left blank, the user will be directed to the domain of the URL in the original access request.
- 13. Click **Apply** to save the configuration and apply the change.

Command line

- Select the device in Remote Manager and click Actions > Open Console, or log into the IX20 local command line as a user with full Admin access rights.
 - Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

> config (config)>

3. To create an active portal called portal1:

(config)> add firewall portal portal1 (config firewall portal portal1)>

Captive portals are enabled by default. To disable the portal:

(config firewall portal portal1)> enable false (config firewall portal portal1)>

- 4. Set the network interface for the portal. Traffic received on this interface's network device will not be forwarded unless the client has been granted access.
 - Use the ?to determine available interfaces:

(config firewal portal 1) > interface ?

Interface: The network interface to run the portal on. Traffic received on this interface's network device will not be forwarded unless the client has been granted access.

Format:

/network/interface/setupip

/network/interface/setuplinklocalip

/network/interface/eth1

/network/interface/eth2

/network/interface/loopback

Current value:

(config firewal portal 1)> interface

b. Set the interface. For example:

(config firewal portal portal1)> interface /network/interface/eth1 (config firewal portal portal1)>

Set the amount of time that a user session remains valid. After the session times out, the user will be required to log in again.

(config firewall portal portal1)> timeout *value* (config firewall portal portal1)>

where *value* is any number of weeks, days, hours, minutes, or seconds, and takes the format *number*(w|d|h|m|s).

For example, to set **Session timeout** to ten minutes, enter either **10m** or **600s**:

(config firewall portal portal1)> timeout 600s (config firewall portal portal1)>

6. Configure whether the portal can be accessed over an insecure connection.

(config firewall portal portal 1)> http value (config firewall portal portal 1)>

where value is one of:

- allow: Allows access to the portal page over an insecure connection (HTTP port 80).
- redirect: Automatically redirects the request to a secure connection (HTTPS port 443).
- disallow: Does not allow access over an insecure connection (HTTP port 80).

Note This setting does not affect access to HTTP port 80 after the client has been granted access to the portal.

7. Set the method that will be used to authorize the user:

(config firewall portal portal 1)> auth *value* (config firewall portal portal 1)>

where value is one of:

- **none**: Users are not required to enter any information to access the portal.
- **login**: Users are required to authenticate with an account on this device. Users must be part of a user group that allows access to this portal.
- info: Users are required to complete a form to continue. The form fields may be customize.
- 8. (Optional) Set the title of the portal page that the user will see when accessing the portal:

(config firewall portal portal1)> title "Corporate portal" (config firewall portal portal1)>

9. (Optional) Set a message that will appear on the portal page:

(config firewall portal portal1)> message "Welcome to the corporate web portal" (config firewall portal portal1)>

10. (Optional) Set the terms and conditions that ill appear on the portal page. Users will be required to agree to the terms and conditions before being granted access to the portal.

(config firewall portal portal1)> terms "Accept the terms and conditions of this portal" (config firewall portal portal1)>

11. (Optional) Set the URL to which the user will be directed when granted access to the portal. If left blank, the user will be directed to the domain of the URL in the original access request.

(config firewall portal portal1)> url https://myportal.com (config firewall portal portal1)>

12. Save the configuration and apply the change.

(config)> save Configuration saved.

13. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Delete captive portals

To delete captive portals:



- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

- 3. Click Firewall > Captive portals.
- 4. Click the down caret (◄) next to the appropriate captive portal and select **Delete**.
- 5. Click Apply to save the configuration and apply the change.

Command line

Select the device in Remote Manager and click Actions > Open Console, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

> config (config)>

3. To delete a captive portal, use the **del** command. For example:

(config)> del firewall portal portal1

4. Save the configuration and apply the change.

(config)> save
Configuration saved.

5. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configure Quality of Service options

Quality of Service (QoS) options allow you to manage the traffic performance of various services, such as Voice over IP (VoIP), cloud computing, traffic shaping, traffic prioritizing, and bandwidth allocation. When configuring QOS, you can only control the queue for outgoing packets on each interface (egress packets), not what is received on the interface (packet ingress).

A QoS *binding* contains the policies and rules that apply to packets exiting the IX20 device on the binding's interface. By default, the IX20 device has two preconfigured QoS bindings, **Outbound** and **Inbound**. These bindings are an example configuration designed for a typical VoIP site:

- Outbound provides an example of matching packets as they are routed from the device onto the WAN interface.
- Inbound provides an example of matching packets as they are routed from the device onto a LAN interface.

These example bindings are disabled by default.

Enable the preconfigured bindings



- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

- 3. Click Firewall > Quality of Service.
- 4. Click to expand either Outbound or Inbound.
- 5. Enable the binding.
- 6. Select an Interface.
- 7. Examine the remaining default settings and modify as appropriate for your network.
- 8. Click **Apply** to save the configuration and apply the change.

Command line

Select the device in Remote Manager and click Actions > Open Console, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

> config (config)>

- 3. Enable one of the preconfiged bindings:
 - To enable the Outbound binding:

(config)> firewall qos 0 enable true (config)>

To enable the Inbound binding:

(config)> firewall qos 1 enable true (config)>

- 4. Set the interface for the binding. Use the index number of the binding; for example, to set the interface for the Outbound binding:
 - a. Use the ?to determine available interfaces:

(config)> firewall gos 0 interface?

Interface: The network interface.

Format:

/network/interface/setupip

/network/interface/setuplinklocalip

/network/interface/eth1

/network/interface/eth2

/network/interface/loopback

Current value:

(config)> firewall gos 0 interface

b. Set the interface. For example:

(config)> firewall qos 0 interface /network/interface/eth1 (config)>

- 5. Examine the remaining default settings and modify as appropriate for your network.
- 6. Save the configuration and apply the change.

(config)> save Configuration saved. >

7. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Create a new binding



- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

3. Click Firewall > Quality of Service.

4. For Add Binding, click Yo



The quality of service binding configuration window is displayed.




- 5. Enable the binding.
- 6. (Optional) Type a Label for the binding.
- 7. Select an **Interface** to queue egress packets on. The binding will only match traffic that is being sent out on this interface.
- 8. (Optional) For **Interface bandwidth (Mbit)**, set the maximum egress bandwidth of the interface, in megabits, allocated to this binding. Typically, this should be 95% of the available bandwidth. Allowed value is any integer between **1** and **1000**.
- 9. Create a policy for the binding:

At least one policy is required for each binding. Each policy can contain up to 30 rules.

- a. Click to expand Policy.
- b. For Add Policy, click Yo



The QoS binding policy configuration window is displayed.

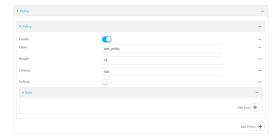

New QoS binding policies are enabled by default. To disable, toggle off **Enable**.

c. (Optional) Type a Label for the binding policy.

- d. For **Weight**, type a value for the amount of available bandwidth allocated to the policy, relative to other policies for this binding.
 - The larger the weight, with respect to the other policy weights, the larger portion of the maximum bandwidth is available for this policy. For example, if a binding contains three policies, and each policy contains a weight of 10, each policy will be allocated one third of the total interface bandwidth.
- e. For **Latency**, type the maximum delay before the transmission of packets. A lower latency means that the packets will be scheduled more quickly for transmission.
- f. Select **Default** to identify this policy as a fall-back policy. The fall-back policy will be used for traffic that is not matched by any other policy. If there is no default policy associated with this binding, packets that do not match any policy rules will be dropped.
- g. If **Default** is disabled, you must configure at least one rule:
 - Click to expand Rule.
 - ii. For Add Rule, click 1/30



The QoS binding policy rule configuration window is displayed.



New QoS binding policy rules are enabled by default. To disable, toggle off **Enable**.

- iii. (Optional) Type a **Label** for the binding policy rule.
- iv. For **Type Of Service**, type the value of the Type of Service (ToS) packet header that defines packet priority. If unspecified, this field is ignored.
 - See https://www.tucny.com/Home/dscp-tos for a list of common TOS values.
- v. For **Protocol**, select the IP protocol matching criteria for this rule.
- vi. For Source port, type the port, or any, as a source traffic matching criteria.
- vii. For **Destination port**, type the port, or **any**, as a destination traffic matching criteria.
- viii. Click to expand Source address and select the Type:
 - Any: Source traffic from any address will be matched.
 - Interface: Only traffic from the selected Interface will be matched.
 - IPv4 address: Only traffic from the IP address typed in IPv4 address will be matched. Use the format IPv4_address[/ netmask], or use any to match any IPv4 address.

- IPv6 address: Only traffic from the IP address typed in IPv6 address will be matched. Use the format IPv6_address[/ prefix_length], or use any to match any IPv6 address.
- MAC address: Only traffic from the MAC address typed in MAC address will be matched.
- ix. Click to expand **Destination address** and select the **Type**:
 - Any: Traffic destined for anywhere will be matched.
 - Interface: Only traffic destined for the selected Interface will be matched.
 - IPv4 address: Only traffic destined for the IP address typed in IPv4 address will be matched. Use the format IPv4_address[/ netmask], or use any to match any IPv4 address.
 - IPv6 address: Only traffic destined for the IP address typed in IPv6 address will be matched. Use the format IPv6_address[/ prefix_length], or use any to match any IPv6 address.

Repeat to add a new rule. Up to 30 rules can be configured.

10. Click **Apply** to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Add a binding:

```
(config)> add firewall qos end (config firewall qos 2)>
```

New binding are enabled by default. To disable:

```
(config firewall qos 2)> enable false (config firewall qos 2)>
```

4. (Optional) Set a label for the new binding:

```
(config firewall qos 2)> label my_binding (config firewall qos 2)>
```

5. Set the interface to queue egress packets on. The binding will only match traffic that is being sent out on this interface:

a. Use the ?to determine available interfaces:

(config firewall gos 2)> interface?

Interface: The network interface.

Format:

/network/interface/setupip

/network/interface/setuplinklocalip

/network/interface/eth1

/network/interface/eth2

/network/interface/loopback

Current value:

(config firewall qos 2)> interface

b. Set the interface. For example:

(config firewall qos 2)> interface /network/interface/eth1 (config firewall qos 2)>

6. (Optional) Set the maximum egress bandwidth of the interface, in megabits, allocated to this binding.

```
(config firewall qos 2)> bandwidth int (config firewall qos 2)>
```

where *int* is an integer between **1** and **1000**. Typically, this should be 95% of the available bandwidth. The default is **95**.

7. Create a policy for the binding:

At least one policy is required for each binding. Each policy can contain up to 30 rules.

a. Change to the policy node of the configuration:

```
(config firewall qos 2)> policy (config firewall qos 2 policy)>
```

b. Add a policy:

(config firewall qos 2 policy)> add end (config firewall qos 2 policy 0)>

New QoS binding policies are enabled by default. To disable:

```
(config firewall qos 2 policy 0)> enable false (config firewall qos 2 policy 0)>
```

c. (Optional) Set a label for the new binding policy:

```
(config firewall qos 2 policy 0)> label my_binding_policy (config firewall qos 2 policy 0)>
```

d. Set a value for the amount of available bandwidth allocated to the policy, relative to other policies for this binding.

The larger the weight, with respect to the other policy weights, the larger portion of the maximum bandwidth is available for this policy. For example, if a binding contains three policies, and each policy contains a weight of 10, each policy will be allocated one third of the total interface bandwidth.

```
(config firewall qos 2 policy 0)> weight int (config firewall qos 2 policy 0)>
```

where int is any integer between 1 and 65535. The default is 10.

e. Set the maximum delay before the transmission of packets. A lower number means that the packets will be scheduled more quickly for transmission.

```
(config firewall qos 2 policy 0)> latency int (config firewall qos 2 policy 0)>
```

where int is any integer, 1 or greater. The default is 100.

f. To identify this policy as a fall-back policy:

```
(config firewall qos 2 policy 0)> default true (config firewall qos 2 policy 0)>
```

The fall-back policy will be used for traffic that is not matched by any other policy. If there is no default policy associated with this binding, packets that do not match any policy rules will be dropped. If the policy is not a fall-back policy, you must configure at least one rule:

i. Change to the rule node of the configuration:

```
(config firewall qos 2 policy 0)> rule
(config firewall qos 2 policy 0 rule)>
```

ii. Add a rule:

```
(config firewall qos 2 policy 0 rule)> add end (config firewall qos 2 policy 0 rule 0)>
```

New QoS binding policy rules are enabled by default. To disable:

```
(config firewall qos 2 policy 0 rule 0)> enable false (config firewall qos 2 policy 0 rule 0)>
```

iii. (Optional) Set a label for the new binding policy rule:

```
(config firewall qos 2 policy 0 rule 0)> label my_binding_policy_rule (config firewall qos 2 policy 0 rule 0)>
```

iv. Set the value of the Type of Service (ToS) packet header that defines packet priority. If unspecified, this field is ignored.

```
(config firewall qos 2 policy 0 rule 0)> tos value (config firewall qos 2 policy 0 rule 0)>
```

where value is a hexadecimal number. See https://www.tucny.com/Home/dscp-tos for a list of common TOS values.

v. Set the IP protocol matching criteria for this rule:

(config firewall qos 2 policy 0 rule 0)> protocol *value* (config firewall qos 2 policy 0 rule 0)>

where value is one of tcp, udp, or any.

vi. Set the source port to define a source traffic matching criteria:

(config firewall qos 2 policy 0 rule 0)> srcport *value* (config firewall qos 2 policy 0 rule 0)>

where *value* is the IP port number, a range of port numbers using the format *IP_port-IP_port*, or **any**.

vii. Set the destination port to define a destination matching criteria:

(config firewall qos 2 policy 0 rule 0)> dstport *value* (config firewall qos 2 policy 0 rule 0)>

where *value* is the IP port number, a range of port numbers using the format *IP_port-IP_port*, or **any**.

viii. Set the source address type:

(config network qos 2 policy 0 rule 0)> src type *value* (config network qos 2 policy 0 rule 0)>

where value is one of:

- any: Source traffic from any address will be matched.
 See Firewall configuration for more information about firewall zones.
- interface: Only traffic from the selected interface will be matched. Set the interface:
 - i. Use the ?to determine available interfaces:

(config network gos 2 policy 0 rule 0)> src interface?

Interface: Match the IP address with the specified interface's network address. Format:

/network/interface/setupip

/network/interface/setuplinklocalip

/network/interface/eth1

/network/interface/eth2

/network/interface/loopback

Current value:

(config network gos 2 policy 0 rule 0)> src interface

ii. Set the interface. For example:

(config network qos 2 policy 0 rule 0)> src interface /network/interface/eth1 (config network qos 2 policy 0 rule 0)>

address: Only traffic from the IP address typed in IPv4 address will be matched. Set the address that will be matched:

(config network qos 2 policy 0 rule 0)> src address *value* (config network qos 2 policy 0 rule 0)>

where value uses the format *IPv4_address[I netmask]*, or any to match any IPv4 address.

address6: Only traffic from the IP address typed in IPv6 address will be matched. Set the address that will be matched:

(config network qos 2 policy 0 rule 0)> src address6 *value* (config network qos 2 policy 0 rule 0)>

where value uses the format *IPv6_address[/ prefix_length]*, or any to match any IPv6 address.

mac: Only traffic from the MAC address typed in MAC address will be matched. Set the MAC address to be matched:

(config network qos 2 policy 0 rule 0)> src mac *MAC_address* (config network qos 2 policy 0 rule 0)>

ix. Set the destination address type:

(config network qos 2 policy 0 rule 0)> dst type *value* (config network qos 2 policy 0 rule 0)>

where value is one of:

- any: Traffic destined for anywhere will be matched.
 See Firewall configuration for more information about firewall zones.
- interface: Only traffic destined for the selected Interface will be matched. Set the interface:
 - i. Use the ?to determine available interfaces:

(config network qos 2 policy 0 rule 0)> dst interface?

Interface: Match the IP address with the specified interface's network address. Format:

/network/interface/setupip

/network/interface/setuplinklocalip

/network/interface/eth1

/network/interface/eth2

/network/interface/loopback

Current value:

Firewall Web filtering

(config network qos 2 policy 0 rule 0)> dst interface

ii. Set the interface. For example:

(config network qos 2 policy 0 rule 0)> dst interface /network/interface/eth1 (config network qos 2 policy 0 rule 0)>

address: Only traffic destined for the IP address typed in IPv4 address will be matched. Set the address that will be matched:

(config network qos 2 policy 0 rule 0)> src address *value* (config network qos 2 policy 0 rule 0)>

where value uses the format *IPv4_address[/ netmask]*, or any to match any IPv4 address.

address6: Only traffic destined for the IP address typed in IPv6 address will be matched. Set the address that will be matched:

(config network qos 2 policy 0 rule 0)> src address6 *value* (config network qos 2 policy 0 rule 0)>

where value uses the format *IPv6_address*[/*prefix_length*], or any to match any IPv6 address.

Repeat to add a new rule. Up to 30 rules can be configured.

8. Save the configuration and apply the change.

(config)> save Configuration saved.

>

9. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Web filtering

Web filtering allows you to control access to services that can be accessed through the IX20 device by forwarding all Domain Name System (DNS) traffic to a web filtering service. This allows the network security administrator to configure a set of policies with the web filtering service that are applied to all routing devices with web filtering enabled. For example, a policy may allow or deny access to a specific service or type of service such as social media, gaming, and so on.

Your IX20 device supports two methods for configuring web filtering:

- Cisco Umbrella (formally known as OpenDNS).
- Manual DNS server entry.

Firewall Web filtering

Configure web filtering with Cisco Umbrella

Required configuration items

- Enable web filtering.
- A Cisco Umbrella account.

See https://umbrella.cisco.com for information about how to create a Osco Umbrella account. A 14 day trial account is available.

■ A customer-specific API token.

Task one: Generate a Cisco Umbrella API token

- 1. Log into the Cisco Umbrella Dashboard (https://dashboard.umbrella.com).
- 2. On the menu, select Admin > API Keys.

The API Keys page displays.

- 3. Click & (Create).
- 4. Select Legacy Network Devices.
- 5. Click Create.
- 6. Copy the token.

Task two: Configure web filtering



- Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The Configuration window is displayed.

Firewall Web filtering

3. Click Firewall > Web filtering service.



- 4. Click Enable web filtering to enable.
- 5. For Web filtering service, select Cisco Umbrella.
- 6. Paste the API token that was generated in Task one: Generate a Cisco Umbrella API token.
- 7. Click Apply to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

> config (config)>

3. Enable web filtering:

(config)> firewall web-filter enable true (config)>

4. Set the web filter service type to umbrella:

(config)> firewall web-filter service umbrella (config)>

5. Set umbrella_token to the API token generated in Task one: Generate a Cisco Umbrella API token:

(config)> firewall web-filter umbrella_token token (config)>

6. Save the configuration and apply the change.

(config)> save Configuration saved.

7. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Clear the Cisco Umbrella device ID

If the Osco Umbrella device ID being used by your IX20 is invalid, you can clear the device ID.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the Admin CLI prompt, use the rm command to delete the **web-filter-id** file, and confirm the deletion:

```
> rm /etc/config/web-filter-id
rm: remove '/etc/config/web-filter-id'? yes
```

3. Restart the web filtering service:

```
config firewall web-filter enable falseconfig firewall web-filter enable true
```

Configure web filtering with manual DNS servers

Required configuration items

- Enable web filtering.
- The IP address of one or more DNS servers. Cisco provides two open DNS servers for web filtering:
 - 208.67.222.222
 - 208.67.220.220

Note These two IP addresses do not work with the OpenDNS option. See https://www.opendns.com/setupguide/ for more information about using Osco DNS servers for web filtering.

To configure web filtering with manual DNS servers:



- Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.

- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

3. Click Firewall > Web filtering service.



- 4. Click Enable web filtering to enable.
- 5. For Web filtering service, select Manual.
- 6. Click to expand Servers.
- 7. Click %to add a server.



8. For IP address, enter the IP address of the DNS server.



- 9. (Optional) Repeat for additional DNS servers.
- 10. Click Apply to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode: > config (config)> 3. Enable web filtering: (config)> firewall web-filter enable true (config)> 4. Set the web filter service type to manual: (config)> firewall web-filter service manual (config)> 5. Add a DNS server: (config)> add firewall web-filter server end (config firewall web-filter server 0)> 6. Set the DNS server's IP address: (config firewall web-filter server 0)> ip *ip_address* (config firewall web-filter server 0)> 7. (Optional) Repeat for additional DNS servers. For example, to configure manual web-filtering using Cisco's open DNS servers: a. Enable web filtering: (config)> firewall web-filter enable true (config)> b. Set the web filter service type to manual: (config)> firewall web-filter service manual (config)> c. Add the first DNS server: i. Add the server: (config)> add firewall web-filter server end (config firewall web-filter server 0)> ii. Set the server's IP address: (config firewall web-filter server 0)> ip 208.67.222.220 (config firewall web-filter server 0)>

d. Add the second DNS server:

i. Move back one node in the configuration tree:

(config firewall web-filter server 0)> .. (config firewall web-filter server)>

ii. Add the server:

(config firewall web-filter server)> add end (config firewall web-filter server 1)>

iii. Set the server's IP address:

(config firewall web-filter server 1)> ip 208.67.222.222 (config firewall web-filter server 0)>

8. Save the configuration and apply the change.

(config)> save Configuration saved.

9. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Verify your web filtering configuration

If your web filtering implementation has the service set to Osco Umbrella, or if it is configured to use manual DNS servers and uses the Osco open DNS servers, you can verify the web filtering implementation by using the Osco test site www.internetbadguys.com.

To verify the implementation:



This procedure assumes you have already configured web filtering to use either Cisco Umbrella or the Cisco open DNS servers.

- See Configure web filtering with Cisco Umbrella for information about configuring web filtering with Cisco Umbrella.
- See Configure web filtering with manual DNS servers for information about configuring web filtering to use Cisco open DNS servers.
- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- a. Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.

- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

- 3. Disable web filtering:
 - a. Click Firewall > Web filtering service.
 - b. Click Enable web filtering to disable.



- c. Click **Apply** to save the configuration and apply the change.
- 4. From a new tab in your browser, attempt to connect to the Cisco test URL http://www.internetbadguys.com.

The connection should be successful.

- 5. Return to the IX20 WebUI and enable web filtering:
 - a. Click Firewall > Web filtering service.
 - b. Click Enable web filtering to enable.
 - c. Click **Apply** to save the configuration and apply the change.
- 6. From your browser, attempt to connect to http://www.internetbadguys.com again.

 The connection attempt should fail with the message. "This site is blocked due to a phi

The connection attempt should fail with the message, "This site is blocked due to a phishing threat."

Command line

This procedure assumes you have already configured web filtering to use either Cisco Umbrella or the Cisco open DNS servers.

- See Configure web filtering with Cisco Umbrella for information about configuring web filtering with Cisco Umbrella.
- See Configure web filtering with manual DNS servers for information about configuring web filtering to use Osco open DNS servers.
- 1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. Disable web filtering:

```
> config firewall web-filter enable false
```

3. Attempt to connect to the Cisco test URL http://www.internetbadguys.com by using either a web browser or the **curl** command from a Linux shell:

\$ curl -I http://www.internetbadguys.com

HTTP/1.1 200 OK

Server: Apache

Content-Type: text/html; charset=UTF-8

Accept-Ranges: bytes

Date: Thu, Jan 11, 2024 12:10:00

X-Varnish: 4201397492

Age: 0

Via: 1.1 varnish

Connection: keep-alive

\$

You should receive an "HTTP/1.1 200 OK" message, as highlighted above.

4. Return to the Admin CLI and enable web filtering:

```
> config firewall web-filter enable true
```

5. Attempt to connect to http://www.internetbadguys.com again:

\$ curl -I www.internetbadguys.com

HTTP/1.1 403 Forbidden

Server: openresty/1.9.7.3

Date: Thu, Jan 11, 2024 12:10:00

Content-Type: text/html Connection: keep-alive

\$

You should receive an "HTTP/1.1 403 Forbidden" message, as highlighted above.

Show web filter service information

To view information about the web filter service:

Command line

 Select the device in Remote Manager and click Actions > Open Console, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the Admin CLI prompt, use the show web-filtercommand to view information about the web-filter service:

> show web-filter

Enabled : true Service : umbrella

Device ID: 0004b5s63f5e2de7aa

>

If the device is configured to use Gsco Umbrella for web filtering, a device ID is displayed. The device ID is a unique ID assigned to the device by Gsco Umbrella. If there is a problem with the device ID, you can clear the ID. See Gear the Gsco Umbrella device ID for instructions.

Containers

The IX20 device includes support for LXC Linux containers. LXC containers are a lightweight, operating system level method of virtualization that allows you to run one or more isolated Linux instances on a the same host using the host's Linux kernal.

Note Container support must be enabled in Digi Remote Manager. Contact your Digi sales representative for information.

This chapter contains the following topics:

Use Digi Remote Manager to deploy and run containers	
Upload a new LXC container	
Configure a container	
Starting and stopping the container	
View the status of containers	
Schedule a script to run in the container	
Oreate a custom container	

Use Digi Remote Manager to deploy and run containers

Note Container support must be enabled in Digi Remote Manager. Contact your Digi sales representative for information.

- In Remote Manager, create a Configuration template. See the Remote Manager User Guide for instructions.
 - a. For the **Settings** step:
 - Click Import from device and import settings from an appropriate device.
 - Configure a script to run the container:
 - i. Click System.
 - ii. Click Scheduled tasks > Custom scripts.
 - iii. Click %to add a custom script.
 - iv. Click the **Label** checkbox and type an identifiable label for the script, for example, **StartContainerScript**.
 - v. To ensure that the script is always running:
 - i. Click the Run mode checkbox and select Interval.
 - ii. Click the **Interval** checkbox and enter a very short interval (for example, one minute).
 - iii. Click the Run single checkbox, and toggle on to enable.

This will configure the device to regularly check if the script is running, but only run if it is currently not running.


vi. For **Commands**, type the command to run the script. The command will vary depending on how you want to run the script, and what application you want to run inside the script. For example, to run the ping command inside a container, the command would be:

lxc container_name/bin/ping -c 30 1.1.1.1



- b. For the **Containers** step:
 - i. Click %to add a container to the configuration.

If no containers have been uploaded, or if Click 9 to upload a container file.

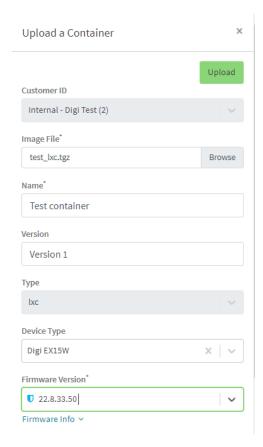

- i. Click Browse and select the container file.
- ii. Type the **Name** of the container.


The **Name** entered here must be the same name as the container .tgz file. This is absolutely necessary, otherwise the container file will not be properly configured on the local devices.

- iii. (Optional) Include a version number for the container.
- iv. (Optional) Select the **Device Type** and **Firmware Version** that applies to the container.

If set, these options will limit the container to only be included in Configuration templates that match the specified device type and firmware version. If these are left blank, the container can be included in any Configuration template.

- v. Click Upload.
- vi. Repeat to upload additional containers.
- ii. Select one or more containers to add to the configuration.
- iii. Click Done.
- iv. Click Save.
- v. Click Continue.

- c. For the Automation step:
 - i. Click to toggle on Enable Scanning.
 - ii. Click to toggle on Remediate.
- 2. Run a manual configuration scan to apply the container and configuration settings to all applicable devices.
- 3. Verify that the container is running on a device:
 - To verify by using device metrics:
 - a. From the Remote Manager main menu, click # Management > Devices.
 - b. Click the **Device ID** to open the device's **Details** page...
 - c. Click Metrics.
 - d. Information about configured containers is located under the **Container Details** heading.

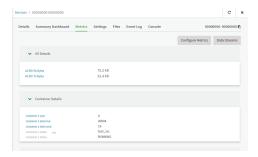


- To verify by using the **Data streams** page:
 - a. From the Remote Manager main menu, click **# Management** > **Data Streams**.
 - b. Locate the container's data stream:
 - i. Click to search using advance filtering.
 - ii. Click in the search text bar and select **Device ID** from the menu.



- iii. Type the device ID and press the Enter key.
- iv. Click in the search text bar again and select Stream ID from the menu.
- v. Type container and press the Enter key.

vi. Click the Stream ID to view container status.

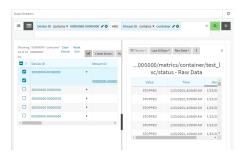

- To verify by using the **show containers** command on the local device:
 - a. From the Remote Manager main menu, click # Management > Devices.
 - b. Select the device.
 - c. From the **Actions** menu, select **Open Console**.
 - d. At the prompt, type show containers.




Use an automation to start the container

You can also use an automation to start a container:

- 1. Follow the steps in the previous procedure, except:
 - For Run mode, select Manual.
 - Do not set Interval or Run single.
- 2. Create an automationthat uses a Command Line Interface step.

For the **Command Line Message**, use the system script start command, using the label provided for the script in the previous procedure:

system script start StartContainerScript

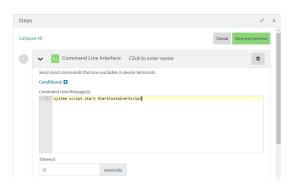


Once the automation has been created, you can:

- Run the automation manually.
- Include the automation in a Configuration template as a post-remediation or post-scan step.
 When creating or editing a Configuration template, at the **Automation** page:
 - 1. For **Post Remediation Options**, click **Run Automation** and select the automation.
 - 2. For On Successful Scan Options, click Run Automation and select the automation.
- Include a trigger for the automation.

When creating or editing an automation, at the **Triggers** page:

- Qick to enable **Triggered** to configure the automation to be triggered, either on a schedule or by device activity.
 - a. To configure the script to be run on a schedule:
 - i. Click to enable By Schedule.
 - ii. Click Start Time.
 - iii. From the calendar provided, select the date and time that the script should be started for the first time.
 - iv. By default, the script will run only once. Click to enable **Repeat** to configure the script to run on a regular basis:

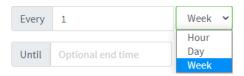

- i. Type or select the number of times, and select the time period.
- ii. (Optional) Click **Until** to select a date and time when the automation schedule will stop repeating.
- b. To configure the automation to be triggered by device activity, click to enable one or more of the following:
 - · Run when a device enters the target scope
 - Run when a device in the target scope enters a maintenance window:
 - Run when a device in the target scope leaves debug mode

Target scope refers to a device that either:

- Is member of a group that was selected on the **Target** page.
- Has a tag that was selected on the Target page.
- Is one of the devices included on the Target page.

Upload a new LXC container



Log into the IX20 WebUI as a user with full Admin access rights.

- 1. From the main menu, click Status. Under Services, click Containers.
- 2. Click Upload New Container.

From your local file system, select the container file in *.tgz format.
 You can download a simple example container file, test_lxc.tgz, from the Digi website.

- Create Configuration is selected by default. This will create a configuration on the device for the container when it is installed. If deselected, you will need to create the configuration manually.
- 5. Click Apply.
- 6. If **Create Configuration** was deselected when the container was created, click ★ to go to the container configuration.



See Configure a container for further information about configuring the container.

Configure a container

Required configuration items

- The following configuration options are completed automatically if **Create Configuration** was selected when the container was created. See Upload a new LXC container for details:
 - · Name of the container.
 - · Enable the container.
 - Whether or not the container should use the device's system libraries.
- Determine whether or not the device should including virtual networking capabilities.

Additional configuration items

- If virtual networking is enabled:
 - The bridge to be used to provide network connectivity.
 - · A static IP address for the container.
 - · The network gateway.
- Serial ports on the device that the container will have access to.



- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

 Locate your device as described in Use Digi Remote Manager to view and manage your device.

- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

- 3. Click System > Containers.
- For Add Container, type the name of the container and click η.

The Container configuration window is displayed.



New containers are enabled by default. To disable, toggle off **Enable**.

- 5. **Clone host system libraries** is enabled by default. This allows the container to use the device's system libraries.
- 6. Enable Virtual Network if the container should have network access:
 - a. Select a Network Bridge Device that will provide access to the container.
 - b. (Optional) Enter a static IP Address and netmask for the container. This must be a valid IP address for the bridge, or, if left blank, a DHCP server can assign the container an IP address.
 - c. (Optional) For **Gateway**, type the IP address of the network gateway.
- 7. Enable Start on boot to configure the container to start when the system boots.
 - a. For Restart timeout, set the amount of time to wait before restarting the container, if the container ever stops. The default timeout of 0s means that if the container stops, it will not be restarted.

Allowed values are any number of weeks, days, hours, minutes, or seconds, and take the format *number*{w|d|h|m|s}.

For example, to set **Restart timeout** to ten minutes, enter **10m** or **600s**.

8. (Optional) Type any **Optional parameters** for the container. Parameters are in the format accepted by the lxc utility.

 (Optional) Type a Working directory to configure an initial working directory for the container. The directory is an absolute path within the container and must begin with "/". The default is /.

- (Optional) Click to expand Mounted directories to configure system directories that will be mounted inside the container. Any mounted directories need to be accessible to a nonprivileged user.
 - a. For Add Directory, click 1/30
 - b. For **Directory**, type the pathname of the directory to be mounted. The leading slash should be removed, so for example to mount the /opt directory, type **opt**.
- (Optional) Click to expand Serial ports to assign serial ports that the container will have access to.
 - a. For Add Port, click Yo
 - b. For Port, select the serial port.
- 12. Click Apply to save the configuration and apply the change.

Command line

Select the device in Remote Manager and click Actions > Open Console, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

> config (config)>

3. Create a new container:

(config)> add system container *name* (config system container *name*)>

where name is the

New access points are enabled by default.

4. New containers are enabled by default. To disable:

(config system container *name*)> enable false (config system container *name*)>

5. By default, the container will use the device's system libraries. To disable:

(config system container *name*)> dal false (config system container *name*)>

- If the device will use virtual networking:
 - a. Enable virtual networking:

(config system container *name*)> network true (config system container *name*)>

b. Set the network bridge device that will be used to provide network access:

i. Use the ?to determine the available bridges:

(config system container name)> bridge?

Network Bridge Device: Containers require a bridge to access the network. Choose which bridge to connect the container to.

Format:

lan1

Current value:

(config system container name)>

ii. Set the bridge:

(config system container *name*)> bridge lan1 (config system container *name*)>

c. (Optional) Set the IP address and netmask for the container:

(config system container *name*)> address *IP_address*/ *netmask* (config system container *name*)>

d. (Optional) Set the IP address of the network gateway:

(config system container *name*)> gateway *IP_address* (config system container *name*)>

7. To configure the container to start when the device boots:

(config system container *name*)> start_on_boot true (config system container *name*)>

 Set the amount of time to wait before restarting the container, if the container ever stops:

(config system container *name*)> restart_timeout *value* (config system container *name*)>

where *value* is any number of weeks, days, hours, minutes, or seconds, and takes the format *number*{w|d|h|m|s}.

For example, to set restart_timeout to ten minutes, enter either 10m or 600s:

(config system container *name*)> restart_timeout 600s (config system container *name*)>

The default timeout of **0s** means that if the container stops, it will not be restarted.

8. Type any optional parameters for the container:

(config system container *name*)> args *parameters* (config system container *name*)>

Parameters are in the format accepted by the lxc utility.

9. (Optional) Set an initial working directory for the container.

```
(config system container name)> workdir /value (config system container name)>
```

The directory is an absolute path within the container and must begin with "/". The default is *I*.

- (Optional) Set any system directories that should be mounted inside the container. Any
 mounted directories need to be accessible to a non-privileged user.
 - a. Add a system directory to be mounted:

```
(config system container name)> system_dirs directory (config system container name)>
```

where *directory* is the pathname of the directory to be mounted. The leading slash should be removed, so for example to mount the /opt directory, type **opt**.

- b. Repeat for additional directories.
- 11. For Add Directory, click 1/20
 - a. For **Directory**, type the pathname of the directory to be mounted. The leading slash should be removed, so for example to mount the /opt directory, type **opt**.
- 12. (Optional) Assign serial ports that the container will have access to:
 - a. Determine available serial ports:

```
(config system container name)> ... serial

Serial

Additional Configuration

port1 Port 1
...

(config system container name)>
```

b. Add the port:

(config system container *name*)> add ports end port1 (config system container *name*)>

13. Save the configuration and apply the change.

(config network wireless client new_client)> save Configuration saved.

14. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Starting and stopping the container

Container commands are not available from the Admin CLI. You must access the device shell in order to run Python applications from the command line. See Authentication groups for information about configuring authentication groups that include shell access.

Note Container support must be enabled in Digi Remote Manager. Contact your Digi sales representative for information.

Starting the container

There are two methods to start containers:

- Non-persistent: Changes made to the container file system will be lost when the container is stopped.
- Persistent: Changes made to the container file system when not be lost when the container is stopped.

Starting a container in non-persistent mode

To start the container in non-persistent mode:

 Select a device in Remote Manager that is configured to allow shell access to the admin user, and click **Actions > Open Console**. Alternatively, log into the IX20 local command line as a user with shell access.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **shell** to access the device shell.

2. At the shell prompt, type:

```
# lxc container_name
lxc #

where container_name is the name of the container as configured on the device. For example:

# lxc test_lxc
lxc #
```

This will start the container by using **/bin/sh -I**, which runs the shell and loads the shell profile. The default shell profile includes an **lxc**# prompt.

Starting a container in persistent mode

To start the container in persistent mode, include the **-p** option at the command line. For example:

 Select a device in Remote Manager that is configured to allow shell access to the admin user, and click **Actions > Open Console**. Alternatively, log into the IX20 local command line as a user with shell access.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **shell** to access the device shell.

2. At the shell prompt, type:

```
# lxc test_lxc -p
lxc #
```

This will start the container by using **/bin/sh -I**, which runs the shell and loads the shell profile. The default shell profile includes an **lxc** # prompt.

Starting a container by including an executable

You can supply an executable to run when you start the container, along with any parameters. If you don't supply a parameter, the default behavior is to run the executable by using /bin/sh-I, which runs the shell and loads the shell profile. This is useful when you use the Clone DAL option when uploading the container, which includes the device's system libraries. In this case, the command without any additional parameters will use the device's shell. See Upload a new LXC container for more information.

For example, to start a container and run a python script called my_python_script.py in the default shell, type:

lxc test_lxc /usr/bin/python3 /usr/bin/my_python_sctipt.py

This will run the script from /usr/bin inside the container. If you have /usr/bin/my_python_script.py on your device's native system, it will be ignored.

Stopping the container

- Select a device in Remote Manager that is configured to allow shell access to the admin user, and click **Actions > Open Console**. Alternatively, log into the IX20 local command line as a user with shell access.
 - Depending on your device configuration, you may be presented with an **Access selection menu**. Type **shell** to access the device shell.
- 2. At the lxc shell prompt, type:

lxc	#	exit
#		

View the status of containers



- 1. Log into the IX20 WebUl as a user with full Admin access rights.
- 2. From the main menu, click Status. Under Services, click Containers.

The Containers status page displays.



Command line

Show status of all containers

Use the show containers command with no additional arguments to show the status of all containers on the system:

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the prompt, type:



3. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Show status of a specific container

Use the show containers container name command to show the status of the specified container:

Select the device in Remote Manager and click Actions > Open Console, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the prompt, type:

test_lxc True enabled RUNNING PID 19327
>

3. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Schedule a script to run in the container

This simple example will:

- 1. Start the container in non-persistent mode.
- 2. Execute a ping command every ten seconds from inside the container.



- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

- 3. Click System > Scheduled tasks > Custom scripts.
- 4. For Add Script, click Yo



The script configuration window is displayed.



- 5. (Optional) For **Label**, type **container_script**.
- 6. For Run mode, select Interval.
- 7. For Interval, type 10s.
- 8. For **Commands**, type the following:

Ixc container_name /bin/ping -c 1 IP_address

For example:

Ixc test_lxc /bin/ping -c 1 192.168.1.146

- 9. Click to disable Sandbox. Sandbox restrictions are not necessary when a container is used.
- 10. Click Apply to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

> config (config)>

Add a script:

(config)> add system schedule script end (config system schedule script 0)>

4. Provide a label for the script, for example:

(config system schedule script 0)> label test_lxc (config system schedule script 0)>

5. Set the mode to interval:

(config system schedule script 0)> when interval (config system schedule script 0)>

Containers Oreate a custom container

6. Set the interval to ten seconds:

(config system schedule script 0)> on_interval 10s (config system schedule script 0)>

7. Set the commands that will execute the script:

(config system schedule script 0)> commands "lxc script_name /bin/ping -c 1 IP_address" (config system schedule script 0)>

For example:

(config system schedule script 0)> commands "lxc test_lxc /bin/ping -c 1 192.168.1.146" (config system schedule script 0)>

8. Disable the sandbox. Sandbox restrictions are not necessary when a container is used.

(config system schedule script 0)> sandbox false (config system schedule script 0)>

9. Save the configuration and apply the change.

(config)> save Configuration saved.

10. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Create a custom container

This example creates a simple custom container that contains a python script in the /etc directory. In this example, we will use a simple container file named test_lxc.tgz. You can download test_lxc.tgz from the Digi website.

At the command line of a Linux host, we will unpack the file, add a simple python script, and create a new container file that includes the python script.

Note You will need to have the Python live image installed on your device in order to use this example container file. See Install Python for more information.

Create the custom container file

1. At the command line of a Linux host, unpack the test_lxc.tgz file:

\$ tar -xfv test_lxc.tgz rootfs/ rootfs/usr/ rootfs/etc/ rootfs/etc/group rootfs/etc/profile

rootfs/etc/passwd rootfs/tmp/ \$

2. Change to the rootfs/etc directory:

\$ cd rootfs/etc \$

3. Create a file named test.py with the following contents:

print("Hello world.\n")

4. Change directories to leave the container file structure:

\$ cd ../..

5. Change user and group permissions on all files in the container file structure:

\$ sudo chown -R 165536 rootfs \$ sudo chgrp -R 165536 rootfs

Tar and zip the directory structure to create a new container file:

\$ sudo tar -czvf python_lxc.tgz rootfs

If using macOS, include the --disable-copyfile option with this command:

\$ sudo tar --disable-copyfile -czvf python_lxc.tgz rootfs

Test the custom container file

1. Add the new container to your IX20 device:

Log into the IX20 WebUI as a user with full Admin access rights.

- a. From the main menu, click Status. Under Services, click Containers.
- b. Click Upload New Container.
- c. From your local file system, select the container file.
 You can download a simple example container file, test_lxc.tgz, from the Digi website.
- d. Create Configuration is selected by default. This will create a configuration on the device for the container when it is installed. If deselected, you will need to create the configuration manually.
- e. Click Apply.
- Select a device in Remote Manager that is configured to allow shell access to the admin user, and click **Actions > Open Console**. Alternatively, log into the IX20 local command line as a user with shell access.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **shell** to access the device shell.

Containers Create a custom container

3. At the shell	prompt,	type:
-----------------	---------	-------

lxc python_lxc lxc

4. Execute the python command:

lxc # python /etc/test.py Hello world.

Ixc#

System administration

This chapter contains the following topics:

Review device status	1000
Configure system information	
Jpdate system firmware	
Jpgrade cellular modem firmware	
Reboot your IX20 device	
Erase device configuration and reset to factory defaults	
Locate the device by using the Find Me feature	
Configure a power profile	
Enable FIPS mode	
Configuration files	
Schedule system maintenance tasks	
Disable device encryption	
Configure the speed of your Ethernet ports	
Natchdog service	
Configure the Watchdog service	
New Watchdog metrics	

System administration Review device status

Review device status

You can review the system of your device from either the **Status** page of the Web interface, or from the command line:



To display system information:

Log into the IX20 WebUI as a user with full Admin access rights.

1. On the main menu, click Status.

A secondary menu appears, along with a status panel.

2. On the secondary menu, click to display the details panel for the status you want to view.

Command line

To display system information, use the show system command.

- Show basic system information:
 - 1. Select the device in Remote Manager and click **Actions** > **Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. Enter **show system** at the prompt:

> show system

Model : Digi IX20

Serial Number : IX20xxxxxxxxyyyyxx

SKU : IX20 Hostname : IX20

MAC Address : DF:DD:E2:AE:21:18

Hardware Version : 50001947-01 1P

Firmware Version : 25.2 Alt. Firmware Version : 25.2

Alt. Firmware Build Date: Fri, Jan 12, 2024 12:10:00 Bootloader Version: 19.7.23.0-15f936e0ed

Current Time : Thu, Jan 11, 2024 12:10:00 +0000

CPU : 1.4%

Uptime : 6 days, 6 hours, 21 minutes, 57 seconds (541317s)

Temperature : 40C

Location : Contact :

Show more detailed system information:

1. Select the device in Remote Manager and click Actions > Open Console, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an Access **selection menu.** Type **admin** to access the Admin CLI.

2. Enter **show system verbose** at the prompt:

> show system verbose

: Digi IX20 Model

Serial Number : IX20xxxxxxxxyyyyxx

SKU : IX20 Hostname : IX20

MAC Address : DF:DD:E2:AE:21:18

: 50001947-01 1P Hardware Version

Firmware Version : 25.2 Alt. Firmware Version : 25.2

Alt. Firmware Build Date: Fri, Jan 12, 2024 12:10:00 Bootloader Version : 19.7.23.0-15f936e0ed

Schema Version : 715

Timezone : UTC

Current Time : Thu, Jan 11, 2024 12:10:00 +0000

CPU : 1.4%

Uptime : 6 days, 6 hours, 21 minutes, 57 seconds (541317s)

Load Average : 0.01, 0.03, 0.02

RAM Usage : 119.554MB/1878.984MB(6%)

: 40C Temperature

Location Contact

Disk

Disk /etc/config Usage : 18.421MB/4546.371MB(0%) Disk /var/log_mnt Usage : 0.104MB/14.868MB(1%) Disk /opt Usage : 215.739MB/458.328MB(50%) Disk /tmp Usage : 0.003MB/120.0MB(0%)

Disk /var Usage : 0.816MB/32.0MB(3%)

Configure system information

You can configure information related to your IX20 device, such as providing a name and location for the device.

Configuration items

- A name for the device.
- The name of a contact for the device.
- The location of the device.
- A description of the device.
- A banner that will be displayed when users access terminal services on the device.

To enter system information:



- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- a. Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

- 3. Click System.
- For Name, type a name for the device. This name will appear in log messages and at the command prompt.
- 5. For **Contact**, type the name of a contact for the device.
- 6. For **Location**, type the location of the device.
- 7. For **Banner**, type a banner message that will be displayed when users log into terminal services on the device.
- 8. Click **Apply** to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Set a name for the device. This name will appear in log messages and at the command prompt.

```
(config)> system name 192.168.3.1
192.168.3.1(config)>
```

4. Set the contact for the device:

```
192.168.3.1(config)> system contact "Jane User" 192.168.3.1(config)>
```

5. Set the location for the device:

```
192.168.3.1(config)> system location "9350 Excelsior Blvd., Suite 700, Hopkins, MN" 192.168.3.1(config)>
```

6. Set the banner for the device. This is displayed when users access terminal services on the device.

```
192.168.3.1(config)> system banner "Welcome to the Digi IX20." 192.168.3.1(config)>
```

7. Save the configuration and apply the change.

```
192.168.3.1(config)> save
Configuration saved.
192.168.3.1>
```

8. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Update system firmware

The IX20 operating system firmware images consist of a single file with the following naming convention:

platform-version.bin

For example, **IX20-25.2.54.xxx**

Manage firmware updates using Digi Remote Manager

If you have a network of many devices, you can use Digi Remote Manager **Profiles** to manage firmware updates. Profiles ensure all your devices are running the correct firmware version and that all newly installed devices are updated to that same version. For more information, see the **Profiles** section of the *Digi Remote Manager User Guide*.

Python and DAL OS firmware updates

Make sure to check the Python version you are using and that it is compatible with the DAL OS firmware version to which you want to upgrade. You may need to update any Python scripts you have so they are compatible with the Python running on the DAL OS firmware version you choose. See Python versions and corresponding DAL OS firmware versions.

Certificate management for firmware images

The system firmware files are signed to ensure that only Digi-approved firmware load onto the device. The IX20 device validates the system firmware image as part of the update process and only successfully updates if the system firmware image can be authenticated.

Downgrading

Downgrading to an earlier release of the firmware may result in the device configuration being erased.

Downgrading from firmware version 22.2.9.x

Beginning with firmware version 22.2.9.x, the IX20 device uses certificate-based communication for enhanced security when connecting to Digi Remote Manager. If you downgrade your firmware from version 22.2.9.x to version 21.11.x or previous, your device will no longer be able to communicate with Remote Manager.

To remedy this issue, select the device in Remote Manager and select **Actions > Reset Device Certificate**.

Update firmware over the air (OTA) from the Digi firmware server

Web

- 1. Log into the IX20 WebUI as a user with full Admin access rights.
- 2. On the main menu, click System. Under Administration, click Firmware Update.



3. Click Download from server.



- 4. For **Version:**, select the appropriate version of the device firmware.
- 5. Click Update Firmware.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. >Use the **system firmware ota check** command to determine if new modem firmware is available on the Digi firmware repository.

```
> system firmware ota check
Current firmware version is 23.9.74.0
Checking for latest IX20 firmware...
Newest firmware version available to download is '25.2'
Device firmware update from '23.9.74.0' to '25.2' is needed
>
```

 Use the modem firmware ota list command to list available firmware on the Digi firmware repository.

```
> system firmware ota list
23.9.74.0
25.2
>
```

- 4. Perform an OTA firmware update:
 - To perform an OTA firmware update by using the most recent available firmware from the Digi firmware repository:
 - a. Update the firmware:

```
> system firmware ota update
Downloading firmware version '25.2'...
Downloaded firmware /tmp/cli_firmware.bin remaining
Applying firmware version '25.2'...
41388K
netflash: got "/tmp/cli_firmware.bin", length=42381373
netflash: authentication successful
netflash: vendor and product names are verified.
netflash: programming FLASH device /dev/flash/image1
41408K 100%
Firmware update completed, reboot device
>
```

b. Reboot the device:

```
> reboot
>
```

To perform an OTA firmware update by using a specific version from the Digi firmware repository, use the version parameter to identify the appropriate firmware version as determined by using system firmware ota list command. For example:

a. Update the firmware:

```
> system firmware ota update version 25.2

Downloading firmware version '25.2'...

Downloaded firmware /tmp/cli_firmware.bin remaining

Applying firmware version '25.2'...

41388K

netflash: got "/tmp/cli_firmware.bin", length=42381373

netflash: authentication successful

netflash: vendor and product names are verified.

netflash: programming FLASH device /dev/flash/image1

41408K 100%

Firmware update completed, reboot device

>
```

b. Reboot the device:

> reboot >

Update firmware from a local file



 Download the IX20 operating system firmware from the Digi Support FTP site to your local machine

Log into the IX20 WebUI as a user with full Admin access rights.

2. On the main menu, click System. Under Administration, click Firmware Update.



- 3. Click Choose file.
- 4. Browse to the location of the firmware on your local file system and select the file.
- 5. Click **Update Firmware**.

Command line

1. Download the IX20 operating system firmware from the Digi Support FTP site to your local machine.

2. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

3. Load the firmware image onto the device. We recommend using the /tmp directory.

> scp host hostname-or-ip user username remote remote-path local local-path to local

where:

- hostname-or-ip is the hostname or IP address of the remote host.
- username is the name of the user on the remote host.
- remote-path is the path and filename of the file on the remote host that will be copied to the IX20 device.
- local-path is the location on the IX20 device where the copied file will be placed.

For example:

```
> scp host 192.168.4.1 user admin remote /home/admin/bin/IX20-25.2.bin local /tmp/ to local admin@192.168.4.1's password: adminpwd IX20-25.2.bin 100% 36MB 11.1MB/s 00:03 >
```

4. Verify that the firmware file has been successfully uploaded to the device:

```
> Is /tmp
-rw-r--r-- 1 root root 37511229 May 16 20:10 IX20-25.2.bin
-rw-r--r-- 1 root root 2580 May 16 16:44 blank.json
...
```

5. Update the firmware by entering the system firmware update command, specifying the path and file name to the firmware file:

```
> system firmware update file /tmp/IX20-25.2.bin
36632K
netflash: got "/tmp/IX20-25.2.bin", length=37511229
netflash: authentication successful
netflash: programming FLASH device /dev/flash/image
36633K 100%
Firmware update completed, reboot device
>
```

Reboot the device to run the new firmware image using the reboot command.

```
> reboot
Rebooting system
>
```

7. Once the device has rebooted, log into the IX20's command line as a user with Admin access and verify the running firmware version by entering the show system command.

> show system	
Hostname FW Version MAC Model Current Time Uptime	: IX20 : 25.2 : 0040FF800120 : Digi IX20 : Thu, Jan 11, 2024 12:10:00 +0000 : 42 seconds (42s)
>	2 5555.145 (1.25)

Dual boot behavior

By default, the IX20 device stores two copies of firmware in two flash memory banks:

- The current firmware version that is used to boot the device.
- A copy of the firmware that was in use prior to your most recent firmware update.

When the device reboots, it will attempt to use the current firmware version. If the current firmware version fails to load after three consecutive attempts, it is marked as invalid and the device will use the previous firmware version stored in the alternate memory bank.

If the device consistently loses power during the boot process, this may result in the current firmware being marked as invalid and the device downgrading to a previous version of the firmware. As a result of this behavior, you can use the following procedure to guarantee that the same firmware is stored in both memory banks:



Log into the IX20 WebUI as a user with full Admin access rights.

1. On the main menu, click **System**. Under **Administration**, click **Firmware Update**.



2. Click Duplicate firmware.



3. Click Duplicate Firmware.

Command line

- 1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.
 - Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
- 2. Duplicate the firmware:

```
> system duplicate-firmware
>
```

Upgrade cellular modem firmware

You can upgrade modem firmware by downloading firmware from the Digi firmware repository, or by uploading firmware from your local storage onto the device. You can also schedule modem firmware updates. See Schedule system maintenance tasks for details.


Note Before attempting to update cellular module firmware, you should either ensure that there is a SIM card in the module, or disable SIM failover. See Configure a Wireless Wide Area Network (WWAN) for details about SIM failover.



- (Optional) Download the appropriate modem firmware from the Digi repository to your local machine.
 - Log into the IX20 WebUI as a user with full Admin access rights.
- 2. From the main menu, click Status > Modems.
- 3. Click the modern firmware version.



The **Modem firmware update** window opens.

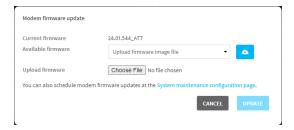

- 4. To update using firmware from the Digi firmware repository:
 - a. Click to view available versions.
 - b. For Available firmware, select the firmware.
- 5. To update using firmware from your local file system:
 - a. Click Choose File.
 - Select the firmware.

> modem firmware ota check

- To schedule firmware updates, click System maintenance configuration page. See Schedule system maintenance tasks for details.
- 7. Click Update.

Command line

Update modem firmware over the air (OTA)

You can update your modem firmware by querying the Digi firmware repository to determine if there is new firmware available for your modem and performing an OTA modem firmware update:

- Select the device in Remote Manager and click Actions > Open Console, or log into the IX20 local command line as a user with full Admin access rights.
 - Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
- Use the modem firmware ota check command to determine if new modem firmware is available on the Digi firmware repository.

```
Checking for latest ATT firmware ...
Retrieving modem firmware list ...
Newest firmware version available to download is '24.01.5x4_ATT'
Modem firmware update from '24.01.544_ATT' to '24.01.5x4_ATT' is needed 24.01.5x4_ATT
24.01.544_ATT
```

3. Use the **modem firmware ota list** command to list available firmware on the Digi firmware repository.

```
> modem firmware ota list

Retrieving modem firmware list ...
25.20.664_CUST_044_3
25.20.666_CUST_067_1
25.20.663_CUST_040
>
```

- 4. Perform an OTA firmware update:
 - A firmware bundle includes images for each carrier supported by a specific modem. To perform an OTA update by choosing a firmware bundle based on the type of modem in your device:

modem firmware bundle ota [check|list|download|update]

 To perform an OTA firmware update by using the most recent available modem firmware from the Digi firmware repository, type:

> modem firmware ota update

Checking for latest Generic firmware ...

Retrieving modem firmware list ...

Newest firmware version available to download is '25.20.666_CUST_067_1'

Retrieving download location for modem firmware '25.20.666_CUST_067_1' ...

>

To perform an OTA firmware update by using a specific version from the Digi firmware repository, use the version parameter to identify the appropriate firmware version as determined by using modem firmware ota list command. For example::

> modem firmware ota update version 24.01.5x4_ATT

Retrieving download location for modem firmware '24.01.5x4_ATT' ...

Downloading modem firmware '24.01.5x4_ATT' to '/opt/LE910C4_NF/Custom_Firmware' ...

Modem firmware '24.01.5x4_ATT' downloaded

Updating modem firmware ...

Programming modem firmware ...

Found modem ...

Validate modem firmware ...

Getting ready for update ...

Stopping services ...

Running update pass 1 of 3 ...

Restarting services ...

Successfully updated firmware

Modem firmware update complete

>

5. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Update modem firmware by using a local firmware file

You can update your modem firmware by uploading a modem firmware file to your IX20 device. Firmware should be uploaded to /opt/MODEM_MODEL/Custom_Firmware, for example, /opt/LM940/Custom_Firmware.

Modem firmware can be downloaded from Digi here. Follow instructions on this page to determine the cellular module used by your device. After downloading, use tar or a similar unzipping tool to extract the firmware prior to uploading to the device. Note that the firmware file may not have a tar.gz extension, but it is a tar file and can be unzipped with tar or a similar tool. See Use the scp command for information about uploading files to the IX20 device.

Select the device in Remote Manager and click Actions > Open Console, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

Use the modem firmware check command to determine if new modem firmware is available on local device.

> modem firmware check

Checking for latest ATT firmware in flash ...

Newest firmware version available in flash is '05.05.58.00_ATT_005.026_000'

Modem firmware up to date

05.05.58.00_ATT_005.026_000

> modem firmware check

3. Use the modern firmware list command to list available firmware on the IX20 device.

> modem firmware list

ATT, 24.01.544_ATT, current Generic, 24.01.514_Generic, image Verizon, 24.01.524_Verizon, image ATT, 24.01.544_ATT, image Sprint, 24.01.531-B003_Sprint, image

>

4. To perform a firmware update by using a local file, use the version parameter to identify the appropriate firmware version as determined using the modem firmware check or modem firmware list command. For example, to update a Telit modem to firmware version 24.01.5x4_ATT:

> modem firmware update version 24.01.5x4_ATT name [modem_name]

Updating modem firmware ...

Successfully updated firmware Modem firmware update complete

>

Or, to update a Sierra modern firmware using the firmware files loaded into the /opt/MODEM_ MODEL/Custom_Firmware directory:

> modem firmware update version /opt/MODEM_MODEL/Custom_Firmware name [modem_name] Updating modem firmware...

Successfully updated firmware Modem firmware update complete

>

Where **[modem_name]** is the name of the modem you would like to update (e.g. modem, wwan1, wwan2). If you don't know the modem name, you can use tab-completion in the above command, or run the **show modem** CLI command to see a list of available modems in the device.

5. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Reboot your IX20 device

You can reboot the IX20 device immediately or schedule a reboot for a specific time every day.

Note You may want to save your configuration settings to a file before rebooting. See Save configuration to a file.

Reboot your device immediately



Log into the IX20 WebUI as a user with full Admin access rights.

- 1. From the main menu, click System.
- 2. Click Reboot.



3. Click Reboot to confirm that you want to reboot the device.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the prompt, type:

> reboot

Schedule reboots of your device



- Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

- 3. Select System > Scheduled tasks.
- 4. For **Reboot time**, enter the time of the day that the device should reboot, using the format *HH.MM*. The device will reboot at this time every day.
 - If **Reboot time** is set, but the device is unable to synchronize its time with an NTP server, the device will reboot after it has been up for 24 hours. See System time synchronization for information about configuring NTP servers. If **Reboot window** is set, the reboot will occur during a random time within the reboot window.
- For Reboot window, enter the maximum random delay that will be added to Reboot Time.
 Allowed values are any number of hours, minutes, or seconds, and take the format number {h|m|s}.
 - For example, to set **parameter name** to ten minutes, enter **10m** or **600s**. The default is **10m**, and the maximum allowed time is **24h**.
- 6. Click **Apply** to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

Set the reboot time:

```
(config>> system schedule reboot_time time
(config)>
```

where *time* is the time of the day that the device should reboot, using the format *HH.MM*. For example, the set the device to reboot at two in the morning every day:

```
(config>> system schedule reboot_time 02:00
(config)>
```

If **reboot_time** is set, but the device is unable to synchronize its time with an NTP server, the device will reboot after it has been up for 24 hours. See System time synchronization for information about configuring NTP servers. If **reboot_window** is set, the reboot will occur during a random time within the reboot window.

4. Set the maximum random delay that will be added to **reboot_time**:

```
(config>> system schedule reboot_window value (config)>
```

where *value* is any number of hours, minutes, or seconds, and takes the format *number* {h|m|s}.

For example, to set **reboot_window** to ten minutes, enter either **10m** or **600s**:

```
(config)> system schedule reboot_window 600s (config)>
```

5. Save the configuration and apply the change.

```
(config)> save
Configuration saved.
>
```

6. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Erase device configuration and reset to factory defaults

You can erase the device configuration in the WebUI, at the command line, or by using the **ERASE** button on the device. Erasing the device configuration performs the following actions:

- Clears all configuration settings. When the device restarts, it uses the factory default configuration.
- Deletes all user files including Python scripts.
- Clears event and system log files.

Additionally, if the **ERASE** button is used to erase the configuration, pressing the **ERASE** button a second time immediately after the device has rebooted:

- Erases all automatically generated certificates and keys.
- With firmware release 22.2.9.x and newer, erases the client-side certificate used for communication with Digi Remote Manager.
 - If you are using Digi Remote Manager with firmware release 22.2.9.x and newer, by default the device uses a client-side certificate for communication with Remote Manager. If the client-side certificate is erased, you must use the Remote Manager interface to reset the certificate.
- If your device uses a custom factory default, the custom factory default will be removed and the device will reboot using standard factory default settings.

You can also reset the device to the default configuration without removing scripts, keys, and logfiles by using the **revert** command.

Reset the device by using the ERASE button

1. Locate the **ERASE** button on your device.



- 2. Press the **ERASE** button perform a device reset. The **ERASE** button has the following modes:
 - Configuration reset:
 - Press and release the ERASE button.
 - The device reboots automatically and resets to factory defaults. This does not remove any automatically generated certificates and keys.
 - Full device reset:
 - After the device reboots from the first button press, immediately press and release the **ERASE** button again.
 - The device reboots again and resets to factory defaults, as well as also removing generated certificates and keys.
 - Firmware reversion: Press and hold the ERASE button and then power on the device to boot the version of firmware that was used prior to the current version.

- 3. After resetting the device:
 - a. Connect to the IX20 by using the serial port or by using an Ethernet cable to connect the IX20 **ETH2** port to your PC.
 - b. Log into the IX20:

User name: Use the default user name: admin.

Password: Use the unique password printed on the bottom label of the device (or the printed label included in the package).


c. (Optional) Reset the default password for the admin account. See Change the default password for the admin user for further information.



- 1. Log into the IX20 WebUI as a user with full Admin access rights.
- 2. On the main menu, click System. Under Configuration, click Configuration Maintenance.



The **Configuration Maintenance** windows is displayed.

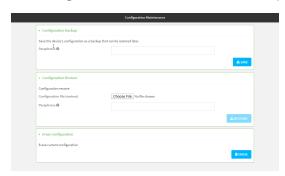

3. In the Erase configuration section, click ERASE.



- 4. Click CONFIRM.
- 5. After resetting the device:
 - a. Connect to the IX20 by using the serial port or by using an Ethernet cable to connect the IX20 ETH2 port to your PC.
 - b. Log into the IX20:

User name: Use the default user name: admin.

Password: Use the unique password printed on the bottom label of the device (or the printed label included in the package).

c. (Optional) Reset the default password for the admin account. See Change the default password for the admin user for further information.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. Enter the following:

> system factory-erase

A confirmation message appears.

- 3. Type yes to confirm that you want all configurations deleted, the factory configuration reset, and the device rebooted.
- 4. After resetting the device:
 - a. Connect to the IX20 by using the serial port or by using an Ethernet cable to connect the IX20 ETH2 port to your PC.
 - b. Log into the IX20:

User name: Use the default user name: admin.

Password: Use the unique password printed on the bottom label of the device (or the printed label included in the package).

c. (Optional) Reset the default password for the admin account. See Change the default password for the admin user for further information.

Reset the device with the revert command

You can reset the device to the default configuration without removing scripts, keys, and logfiles by using the **revert** command:

Select the device in Remote Manager and click Actions > Open Console, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

> config (config)>

3. At the config prompt, enter revert:

(config)> revert (config)>

4. Set the password for the admin user prior to saving the changes:

(config)> auth user admin password pwd (config)>

5. Save the configuration and apply the change.

```
(config)> save
Configuration saved.
>
```

6. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Custom factory default settings

You can configure your IX20 device to use a custom factory default configuration file. This way, when you erase the device's configuration, the device will reset to your custom configuration rather than to the original factory defaults.

Required configuration items

Custom factory default configuration (bin) file.

Configure the IX20 device to use custom factory default settings




Log into the IX20 WebUI as a user with full Admin access rights.

- Configure your IX20 device to match the desired custom factory default configuration.
 For example, you may want to configure the device to use a custom APN or a particular network configuration, so that when you reset the device to factory defaults, it will automatically have your required network configuration.
- 2. On the main menu, click System. Under Configuration, click Configuration Maintenance.



The **Configuration Maintenance** windows is displayed.

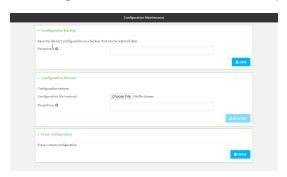

3. In the Configuration backup section, click SAVE.




Do not set a **Passphrase** for the configuration backup. The file will be downloaded using your browser's standard download process.

4. After the configuration backup file has been downloaded, rename the file to:

custom-default-config.bin

- 5. Upload the file to the device:
 - a. From the main menu, select **System > Filesystem**.
 - b. Under Default device configuration, click 3.

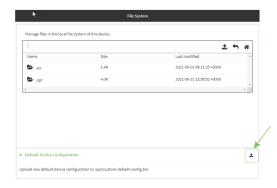

- c. Select the file from your local file system.
- 6. Reboot the device.

Note After configuring a device to use custom factory default settings, wait five minutes after restoring to defaults before:

- Powering off the device.
- Performing any additional configuration restoration activities.

If you do not wait five minutes after restoring to custom factory defaults before performing these activities, the device will clear the custom factory defaults and reboot to standard factory defaults.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. The table below lists the available commands.

Commands Description

<pre>system custom- default-config file [file name]</pre>	Set the file you specify as the custom factory default configuration file (custom-default-config.bin). The SHA file is also created. Where filename is the name of the file created using the system backup command.
system custom- default-config current	Save the current configuration as a <i>custom-default-config.bin</i> file. The SHA file is also created.
system custom- default-config remove	Remove the custom-default-config.bin and SHA files.

3. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Note After configuring a device to use custom factory default settings, wait five minutes after restoring to defaults before:

- Powering off the device.
- Performing any additional configuration restoration activities.

If you do not wait five minutes after restoring to custom factory defaults before performing these activities, the device will clear the custom factory defaults and reboot to standard factory defaults.

Clear the custom factory default settings

After configuring the device to use custom factory default settings, to clear the custom default configuration and reset the device to standard factory defaults:

- 1. Press the device's ERASE button.
- 2. Wait for the device to reboot.
- 3. Press the ERASE button a second time.

You must press the ERASE the second time within five minutes of the first in order to clear the custom default configuration.

Locate the device by using the Find Me feature

Use the **Find Me** feature to cause LEDs on the device to blink, which can help you to identify the specific device.

To use this feature:



Log into the IX20 WebUI as a user with full Admin access rights.

1. On the menu, click **System**. Under **Administration**, click **Find Me**.

A notification message appears, noting that the LED is flashing on the device. Gick the ${\bf x}$ in the message to close it.



- 2. On the menu, click **System** again. Ablue circle next to **Find Me** is blinking, indicating that the **Find Me** feature is active.
- To deactivate the Find Me feature, click System and click Find Me again.
 A notification message appears, noting that the LED is no longer flashing on the device. Click the x in the message to close it.



Command line

- 1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.
 - Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
- 2. To activate the **Find Me** feature, at the prompt, type the following at the command prompt:

```
> system find-me on >
```

3. To deactivate the **Find Me** feature, type the following at the command prompt:

```
> system find-me off
>
```

4. To determine the status of the Find Me feature, type the following at the command prompt:

```
> system find-me status
off
>
```

Configure a power profile

A power profile is a group of settings that determine how the system will behave in terms of power consumption during standard operating mode. You can choose to preserve power, performance or to balance both. You can also disable the IX20's LEDs to save power and reduce light pollution.

To change the active power profile:



 Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.

2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

3. Click **System > Power** to display the power settings.



- 4. The **Profile** setting displays the active power profile and allows you to change it. The available options are:
 - Performance: The CPU clock frequency is scaled up to work in the highest available frequency and provide a better system performance.
 - Auto: The CPU clock frequency is dynamically scaled up and down to provide better performance during high demanding conditions and also to save power during inactivity periods.
 - **Power save**: The CPU clock frequency is scaled down to work in the lowest available frequency and save power.
 - Manual: Allows you to manually set the working frequency of the CPU. When this option is selected, the setting Custom frequency is available to set the CPU working frequency manually:
 - 198 MHz
 - 396 MHz
 - 528 MHz
 - 792 MHz
- Toggle off LEDs enabled to disable all LEDs on the device except for the Power LED, which will remain lit green, indicating that the device has power. If disabled, one or more LEDs will flash periodically to indicate that the device is still active.
- 6. Click Apply to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

Set the profile you prefer:

```
(config)> system power profile profile_name
(config)>
```

where *profile_name* is one of:

- auto: The CPU clock frequency is dynamically scaled up and down to provide better performance during high demanding conditions and also to save power during inactivity periods.
- manual: Allows you to manually set the working frequency of the CPU.
- performance: The CPU clock frequency is scaled up to work in the highest available frequency and provide a better system performance.
- powersave: The CPU clock frequency is scaled down to work in the lowest available frequency and save power.

The default is performance.

4. If **profile** is set to **manual**, set the CPU working frequency:

```
(config)> system power custom_freq frequency
(config)>
```

where frequency is one of:

- **198000**
- **396000**
- **528000**
- **792000**

The default is 792000.

5. Set **leds_enabled** to **false** to disable all LEDs on the device except for the Power LED, which will remain lit green, indicating that the device has power:

```
(config)> system power leds_enabled false (config)>
```

If disabled, one or more LEDs will flash periodically to indicate that the device is still active.

6. Save the configuration and apply the change.

```
(config)> save
Configuration saved.
>
```

System administration Enable FIPS mode

7. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Enable FIPS mode

You can enable your device to be Federal Information Processing Standard (FIPS) 140-2 compliant. With FIPs 140-2 compliance, only FIPS 140-2 cipher and MAC algorithms are available. As a result, features like stunnel, ssh, and openvpn are limited in what they can use. For example, in FIPS mode ssh will only offer and negotiate AES based ciphers.

When the FIPS setting is changed, the device will reboot automatically. Disabling FIPS after it has been enabled will cause the current configuration to be erased.



- Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:


a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

System administration Enable FIPS mode

3. Expand System.

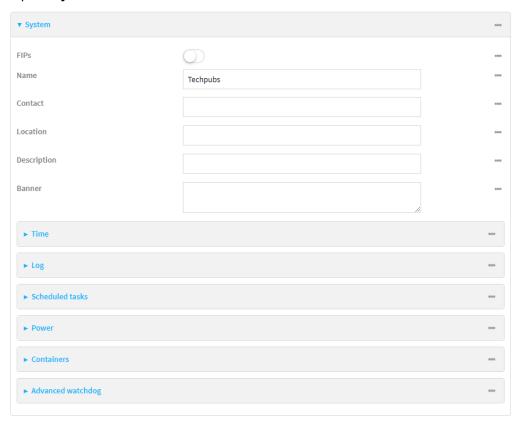

- 4. Click to enable FIPs.
- 5. Click **Apply** to save the configuration and apply the change. The the device will reboot automatically.

Command line

Select the device in Remote Manager and click Actions > Open Console, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. Enable FIPS:

(config)> system fips true >

3. Save the change. The the device will reboot automatically.

(config)> save
>

Configuration files

The IX20 configuration file, /etc/config/accns.json, contains all configuration changes that have been made to the device. It does not contain the complete device configuration; it only contains changes to the default configuration. Both the default configuration and the changes contained in the accns.json file are applied when the device reboots.

Save configuration changes

When you make changes to the IX20 configuration, the changes are not automatically saved. You must explicitly save configuration changes, which also applies the changes. If you do not save configuration changes, the system discards the changes.



- Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The Configuration window is displayed.

- 3. Make any necessary configuration changes.
- 4. Click **Apply** to save the configuration and apply the change.

Command line

Select the device in Remote Manager and click Actions > Open Console, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

- 3. Make any necessary configuration changes.
- 4. Save the configuration and apply the change.

```
(config)> save
Configuration saved.
>
```

5. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Save configuration to a file

You can save your IX20 device's configuration to a file and use this file to restore the configuration, either to the same device or to similar devices.



This procedure creates a binary archive file containing the device's configuration, certificates and keys, and other information.

Log into the IX20 WebUI as a user with full Admin access rights.

1. On the main menu, click System. Under Configuration, click Configuration Maintenance.



The Configuration Maintenance windows is displayed.



- 2. In the Configuration backup section:
 - a. (Optional) To encrypt the configuration using a passphrase, for **Passphrase** (save/restore), enter the passphrase.
 - b. Click SAVE.

The file will be downloaded using your browser's standard download process.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. Enter the following:

> system backup path [passphrase passphrase] type type

where

- path is the location on the IX20's filesystem where the configuration backup file should be saved.
- passphrase (optional) is a passphrase used to encrypt the configuration backup.
- *type* is the type of backup, either:
 - **archive**: Oreates a binary archive file containing the device's configuration, certificates and keys, and other information.
 - **cli-config**: Creates a text file containing only the configuration changes.

For example:

> system backup /etc/config/scripts/ type archive

3. (Optional) Use scp to copy the file from your device to another host:

> scp host hostname-or-ip user username remote remote-path local local-path to remote

where:

- hostname-or-ip is the hostname or IP address of the remote host.
- username is the name of the user on the remote host.
- remote-path is the location on the remote host where the file will be copied.
- local-path is the path and filename on the IX20 device.

For example:

> scp host 192.168.4.1 user admin remote /home/admin/bin/ local /etc/config/backup-archive-0040FF800120-19.05.17-19.01.17.bin to remote

Restore the device configuration

You can restore a configuration file to your IX20 device by using a backup from the device, or a backup from a similar device.



Log into the IX20 WebUI as a user with full Admin access rights.

1. On the main menu, click System. Under Configuration, click Configuration Maintenance.



The **Configuration Maintenance** windows is displayed.



- 2. In the Configuration Restore section:
 - a. If a passphrase was used to create the configuration backup, for Passphrase (save/restore), enter the passphrase.
 - b. Under Configuration Restore, click Choose File.
 - c. Browse to the system firmware file location on your local computer and select the file.
 - d. Click **RESTORE**.
- Click CONFIRM.

The configuration will be restored and the device will be rebooted.

Command line

- 1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.
 - Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
- If the configuration backup is on a remote host, use scp to copy the file from the host to your device:

> scp host hostname-or-ip user username remote remote-path local local-path to local

where:

- hostname-or-ip is the hostname or IP address of the remote host.
- username is the name of the user on the remote host.
- remote-path is the path and filename of the file on the remote host that will be copied to the IX20 device.
- local-path is the location on the IX20 device where the copied file will be placed.

For example:

> scp host 192.168.4.1 user admin remote /home/admin/bin/backup-archive-0040FF800120-25.2-19.23.42.bin local /opt to local

3. Enter the following:

> system restore filepath [passphrase passphrase]

where

- *filepath* is the the path and filename of the configuration backup file on the IX20's filesystem (*local-path* in the previous step).
- passphrase (optional) is the passphrase to restore the configuration backup, if a passphrase was used when the backup was created.

For example:

> system restore /opt/backup-archive-0040FF800120-25.2-19.23.42.bin

Schedule system maintenance tasks

You can configure tasks to be run during a specified maintenance window. When the device is within its maintenance window, firmware updates and Digi Remote Manager configuration checks will be performed.

You can also schedule custom scripts to run during the maintenance window. See Configure scripts to run automatically for more information.

Required configuration items

- Events that trigger the maintenance window to begin.
- Whether all configured triggers, or only one of the triggers, must be met.
- The tasks to be performed. Options are:
 - Firmware updates.
 - Digi Remote Manager configuration check.
- Whether the device will check for updates to the device firmware.
- Whether the device will check for updates to the modem firmware.
- The frequency (daily, weekly, or monthly) that checks for firmware updates will run.



- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.


Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

3. Click System > Scheduled tasks > System maintenance.

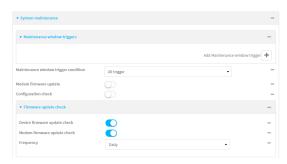

- 4. Click to expand Maintenance window triggers.
- Gick Yoto add a maintenance window trigger.



- 6. For Maintenance window trigger type, select one of the following:
 - Check if interface is up, for Test Interface, select the interface.
 - Time period for maintenance window:
 - a. Click to expand Maintenance window.
 - b. For **Start time**, type the time of day that the maintenance window should start, using the syntax *HH.MM*. If **Start time** is not set, maintenance tasks are not scheduled and will not be run.

The behavior of **Start time** varies depending on the setting of **Duration window**, which is configured in the next step.

- If **Duration window** is set to **Immediately**, all scheduled tasks will begin at the exact time specified in **Start time**.
- If Duration window is set to 24 hours, Start time is effectively obsolete and the
 maintenance tasks will be scheduled to run at any time. Setting Duration
 window to 24 hours can potentially overstress the device and should be used
 with caution.
- If Duration window is set to any value other than to Immediately or 24 hours, the maintenance tasks will run at a random time during the time allotted for the duration window.
- If Duration window is set to one or more hours, the minutes field in Start time
 is ignored and the duration window will begin at the beginning of the
 specified hour.
- c. For **Duration window**, select the amount of time that the maintenance tasks will be run. If **Immediately** is selected, all scheduled tasks will begin at the exact time specified in **Start time**.
- d. For **Frequency**, select whether the maintenance window will be started every day, or once per week.
- If Check if Python Out-of-Service is set, the maintenance window will only start if the Python Out-of-Service is set. See Use Python to set the maintenance window for

further information.

Note Beginning with firmware release 21.11.x, Python is no longer included as part of the base firmware for the IX20 device. If you require Python in your environment and your device is running firmware 21.11.x or newer, see Install Python for information about installing Python on your device.

- 7. If **Central Management** is disabled, click **Device firmware update** to instruct the system to look for any updated device firmware during the maintenance window. If updated firmware is found, it will then be installed. This options is only available if **Central Management** is disabled; see Central management for more information.
- 8. The **Modem firmware update** option, which is only available if **Central Management** is disabled, is not used with the IX20.
- 9. If Central Management is disabled, click to enable Modem firmware update to instruct the system to look for any updated modem firmware during the maintenance window. If updated firmware is found, it will then be installed. Modem firmware update looks for updated firmware both on the local device and over the network, using either a WAN or cellular connection. This options is only available if Central Management is disabled; see Central management for more information.
- 10. (Optional) Configure automated checking for device and modem firmware updates:
 - a. Click to expand Firmware update check.
 - b. **Device firmware update check** is enabled by default. This enables the automated checking for device firmware updates.
 - c. **Modem firmware update check** is enabled by default. This enables the automated checking for modem firmware updates.

Note The **Modem firmware update** option is not used with the IX20. Any selection is ignored.

- d. For **Frequency**, select how often automated checking for device and modem firmware should take place. Allowed values are **Daily**, **Weekly**, and **Monthly**. The default is **Daily**.
- 11. Click **Apply** to save the configuration and apply the change.

Command line

- Select the device in Remote Manager and click Actions > Open Console, or log into the IX20 local command line as a user with full Admin access rights.
 - Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
- 2. At the command line, type **config** to enter configuration mode:

> config	
(config)>	

- 3. Configure a system maintenance trigger:
 - a. Add a trigger:

(config)> add system schedule maintenance trigger end (config)>

b. Set the type of trigger:

(config add system schedule maintenance trigger)> type value (config)>

where value is one of:

- interface_up: If interface_up is set:
 - i. Set the interface:

(config add system schedule maintenance trigger)> interface *value* (config)>

ii. Use the ?to determine available interfaces:

(config system schedule maintenance trigger 0)> interface?

Test interface: Test the status of this interface to see if it is up.

Format:

/network/interface/setupip

/network/interface/setuplinklocalip

/network/interface/eth1

/network/interface/eth2

/network/interface/loopback

Current value:

(config system schedule maintenance trigger 0)> interface

ii. Set the interface. For example:

(config system schedule maintenance trigger 0)> interface /network/interface/eth1 (config system schedule maintenance trigger 0)>

- out_of_service: The maintenance window will only start if the Python Out-of-Service is set. See Use Python to set the maintenance window for further information.
- time: Configure a time period for the maintenance window:
 - i. Configure the time of day that the maintenance window should start, using the syntax HH.MM. If the start time is not set, maintenance tasks are not scheduled and will not be run.

(config system schedule maintenance trigger 0)> time from *HH:MM* (config system schedule maintenance trigger 0)>

The behavior of the start time varies depending on the setting of the duration length, which is configured in the next step.

- If the duration length is set to 0, all scheduled tasks will begin at the exact time specified in the start time.
- If the duration length is set to 24 hours, the start time is effectively
 obsolete and the maintenance tasks will be scheduled to run at any time.
 Setting the duration length to 24 hours can potentially overstress the
 device and should be used with caution.
- If the duration length is set to any value other than to 0 or 24 hours, the maintenance tasks will run at a random time during the time allotted for the duration window.
- If the duration length is set to one or more hours, the minutes field in the start time is ignored and the duration window will begin at the beginning of the specified hour.
- ii. Configure the duration length (the amount of time that the maintenance tasks will be run). If **0** is used, all scheduled tasks will begin at the start time, defined in the previous step.

(config system schedule maintenance trigger 0)> length *num* (config system schedule maintenance trigger 0)>

where *num* is any whole number between **0** and **24**.

iii. Configure the frequency that the maintenance tasks should be run:

(config system schedule maintenance trigger 0)> frequency *value* (config system schedule maintenance trigger 0)>

where value is either daily or weekly. Daily is the default.

4. If Central Management is disabled, configure the device to look for any updated device firmware during the maintenance window. If updated firmware is found, it will then be installed. The device will look for updated firmware both on the local device and over the network, using either a WAN or cellular connection.

This options is only available if **Central Management** is disabled; see Central management for more information.

(config)> system schedule maintenance device_fw_update true (config)>

5. If Central Management is disabled, configure the device to look for any updated modem firmware during the maintenance window. If updated firmware is found, it will then be installed. The device will look for updated firmware both on the local device and over the network, using either a WAN or cellular connection.

This options is only available if **Central Management** is disabled; see Central management for more information.

(config)> system schedule maintenance modem_fw_update true (config)>

6. (Optional) Configure automated checking for device and modem firmware updates:

 a. Device firmware update check is enabled by default. This enables to automated checking for device firmware updates. To disable: (config)> system schedule maintenance firmware_update_check device false (config)> b. Modem firmware update check is enabled by default. This enables to automated checking for modem firmware updates. (config)> system schedule maintenance firmware_update_check modem false (config)> c. Set how often automated checking for device and modem firmware should take place: (config)> system schedule maintenance frequency value (config)> where *value* is either **daily**, **weekly**, or **monthly**. **daily** is the default. 7. Save the configuration and apply the change. (config)> save Configuration saved. 8. Type **exit** to exit the Admin CLI. Depending on your device configuration, you may be presented with an **Access selection** menu. Type quit to disconnect from the device. 7. (Optional) Configure automated checking for device and modem firmware updates: a. Device firmware update check is enabled by default. This enables to automated checking for device firmware updates. To disable: (config)> system schedule maintenance firmware_update_check device false (config)> b. Modem firmware update check is enabled by default. This enables to automated checking for modem firmware updates. (config)> system schedule maintenance firmware_update_check modem false (config)> c. Set how often automated checking for device and modem firmware should take place: (config)> system schedule maintenance frequency value

where *value* is either **daily**, **weekly**, or **monthly**. **daily** is the default. 8. Save the configuration and apply the change.

(config)> save Configuration saved.

(config)>

>

9. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Disable device encryption

You can disable the cryptography on your IX20 device. This can be used to ship unused devices from overseas without needing export licenses from the country from which the device is being shipped. When device encryption is disabled, the following occurs:

- The device is reset to the default configuration and rebooted.
- After the reboot:
 - · Access to the device via the WebUI and SSH are disabled.
 - All internet connectivity is disabled, including WAN and WWAN. Connectivity to central management software is also disabled.
 - All IP networks and addresses are disabled except for the default 192.168.210.1/24 network on the local LAN Ethernet port. DHCP server is also disabled.

The device can only be accessed by using telnet from a local machine connecting to the 192.168.210.1/24 network.

Disabling device encryption is not available in the WebUI. It can only be performed from the Admin CLI.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. Disable encryption with the following command:

> system disable-cryptography


3. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Re-enable cryptography after it has been disabled.


To re-enable cryptography:

 Configure your PC network to connect to the 192.168.210 subnet. For example, on a Windows PC:

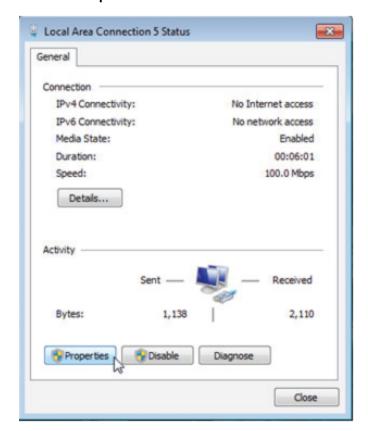

a. Select the Properties of the relevant network connection on the Windows PC.

- b. Click the Internet Protocol Version 4 (TCP/IPv4) parameter.
- c. Click Properties. The Internet Protocol Version 4 (TCP/IPv4) Properties dialog appears.
- d. Configure with the following details:
 - **IP address** for PC: 192.168.210.2
 - **Subnet**: 255.255.255.0
 - Gateway: 192.168.210.1

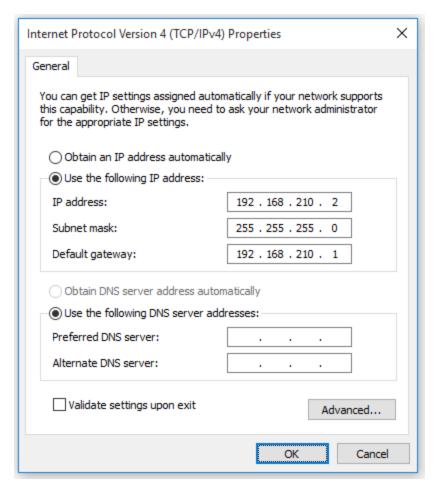

- 2. Connect the PC's Ethernet port to the ETH1 Ethernet port on your IX20 device.
- 3. Open a telnet session and connect to the IX20 device at the IP address of 192.168.210.1.
- 4. Log into the device:
 - Username: admin
 - Password: The default unique password for your device is printed on the device label.
- 5. At the shell prompt, type:

```
# rm /etc/config/.nocrypt
# flatfsd -i
```

This will re-enable encryption and leave the device at its factory default setting.

Configure the speed of your Ethernet ports

You can configure the speed of your IX20 device's Ethernet ports.



- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- a. Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The Configuration window is displayed.

- 3. Click Network > Device.
- 4. Click to expand the Ethernet port to be configured.
- For Speed, select the appropriate speed for the Ethernet port, or select Auto to automatically detect the speed. The default is Auto.
- 6. Click Apply to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:



3. At the config prompt, type:

(config)> network device eth_port value

where:

- eth_port is the name of the Ethernet port (for example, eth1)
- value is one of:
 - 10—Sets the speed to 10 Mbps.
 - 100—Sets the speed to 100 Mbps.

System administration Watchdog service

 1000—Sets the speed to 1 Gbps. Available only for devices with Gigabit Ethernet ports.

auto—Configures the device to automatically determine the best speed for the Ethernet port.

The default is auto.

4. Save the configuration and apply the change.

```
(config)> save
Configuration saved.
```

5. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Watchdog service

The Watchdog service can monitor the operation of your device, test the system for problems, and automatically restart that device if it detects a fault or failure. You can also see metrics for the Watchdog service and performance results of the tests performed.

When the Watchdog service has been enabled, the service name and green check mark displays in the dashboard.

Configure the Watchdog service

To configure the Watchdog service on your IX20:



- Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

- 3. Click System > Advanced Watchdog.
- 4. The watchdog is enabled by default. To disable, click to toggle off **Enable**.
- For Watchdog test interval, type the amount of time between running system tests.
 Allowed values are any number of days, hours, minutes, or seconds, and take the format number(d|h|m|s).

For example, to set **Watchdog test interval** to ten minutes, enter **10m** or **600s**. The maximum is two days (**2d**), and the default is five minutes (**5m**).

- 6. Type or select the Number of test failures before a reboot.
- 7. Configure the tests that the watchdog will perform:
 - a. Click to expand Fault detection tests.
 - b. Click to expand **Memory usage**.
 - The memory check is enabled by default. To disable, click the Enable memory check toggle.
 - ii. For **RAM** usage threshold to trigger a warning, type or select the percentage of RAM usage that will trigger a warning. The minimum value is **60** percent, the maximum is **100** percent. The default is **90** percent.
 - iii. Type or select the Percentage of system memory used before triggering a reboot. The minimum value is 60 percent, the maximum is 100 percent. The default is 95 percent.
 - To log memory usage with every watchdog memory usage test, click to enable Log memory usage every interval.
 - c. Click to expand Interface tests.
 - Click the Enable interface(s) down check toggle to enable. The system periodically checks the interfaces you configure here and, after the specified amount of time, reboots them.
 - ii. Click to expand Check interface(s).
 - iii. Click Yo to add a new interface.
 - iv. For Interface, choose the interface you want to test.
 - d. Click to expand **Modem down**. This configuration is enabled by default.
 - i. Click the **Enable modem check** toggle to disable.
 - ii. Click the **Enable modem power cycle** toggle if you want the modem to be power cycled after an initial timeout instead of this timeout being reported as a failure.
 - iii. For **Downtime**, type the amount of time the modem is down before it is reported.
- 8. Click **Apply** to save the configuration and apply the change.

Command line

Select the device in Remote Manager and click Actions > Open Console, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

> config (config)>

3. The watchdog is enabled by default. To disable:

(config)> system watchdog enable false (config)>

4. Set the amount of time between running system tests:

(config)> system watchdog interval *value* (config)>

where *value* is any number of days, hours, minutes, or seconds, and takes the format *number* {d|h|m|s}.

For example, to set interval to ten minutes, enter either 10m or 600s:

(config)> system watchdog interval 600s (config)>

The maximum is two days (2d), and the default is five minutes (5m).

5. Set the number of test failures before the system reboots:

(config)> system watchdog num_failures int (config)>

- 6. Configure the tests that the watchdog will perform:
 - a. The memory check is enabled by default. To disable:

(config)> system watchdog tests memory enable false (config)>

b. Set the percentage of RAM usage that will trigger a warning:

(config)> system watchdog tests memory max_memory_warning int (config)>

The minimum value is 60 percent, the maximum is 100 percent. The default is 90 percent.

c. Set the percentage of RAM usage that will trigger a reboot of the device:

(config)> system watchdog tests memory max_memory_critical int (config)>

The minimum value is 60 percent, the maximum is 100 percent. The default is 95 percent.

d. To log memory usage with every watchdog memory usage test, enable log memory:

(config)> system watchdog tests memory log_memory true (config)>

System administration View Watchdog metrics

e. To have the interface(s) checked and rebooted after the specified amount of time:

(config)> system watchdog tests interfaces interfaces add [value] (config)>

with value being the name of the interface.

f. To have the modem power cycled after an initial timeout instead of this timeout being reported as a failure:

(config)> system watchdog tests modem (config)>

7. Save the configuration and apply the change.

(config)> save Configuration saved.

8. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

View Watchdog metrics

To view metrics for the Watchdog service and the tests performed:




In the local Web UI of your IX20:


- 1. Log in to the local Web UI of your device as a user with full Admin access rights.
- 2. To access the Watchdog Service page:

From the Dashboard of the device:

a. In the **Services** card, you can see the operational status of the Watchdog service.

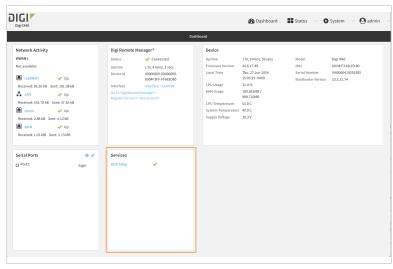

b. Click Watchdog to view metrics.

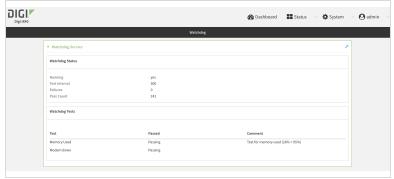


From the menu:

Click Status > Services > Watchdog to see the page.

In Digi Remote Manager, to view the test failures:

- a. Click **Devices**, and select a device from the list.
- b. Click Metrics.
- c. Click to expand Sys Details.
- d. Click Sys Watchog Failures.

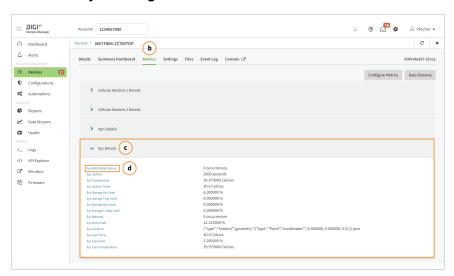

A new window opens and displays a chart showing the test failures and when they occurred.

Command line

To view the results of the Watchdog tests:

- Access the Command Line Interface for your IX20, from either the local web UI as an administrator with full access rights or from Digi Remote Manager.
- 2. At the prompt, type

show watchdog

All tests that were performed, as well as their status are listed.

3. Type **exit** to exit the CLI.

System administration

View Watchdog metrics

Monitoring


This chapter	contains the	following	topics:

intelliFlow	.1049
Configure NetFlow Probe	.1061

intelliFlow

Digi intelliFlow is a reporting and graphical presentation tool for visualizing your network's data usage and network traffic information.

intelliFlow can be enabled on Digi Remote Manager to provide a full analysis of all Digi devices on your network. Contact your Digi sales representative for information about enabling intelliFlow on Remote Manager.

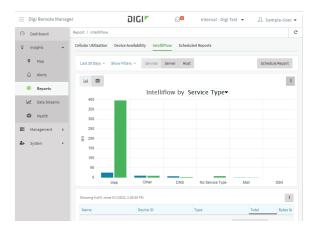

IntelliFlow is also available on the local device for device-specific visualization of network use. To use intelliFlow on the local device, you must have access to the local WebUI. Once you enable intelliFlow, the **Status** > **intelliFlow** option is available in the main menu. By default, intelliFlow is disabled on the local device.

On the local device, intelliFlow provides charts on the following information:

- System utilisation
- Top data usage by host
- Top data usage by server
- Top data usage by service
- Host data usage over time

intelliFlow charts are dymanic; at any point, you can click inside the chart to drill down to view more granular information, and menu options allow you to change various aspects of the information being displayed.

This section contains the following topics:

Enable intelliFlow	1050
Configure service types	1052
Configure domain name groups	
Use intelliFlow to display average CPU and RAM usage	
Use intelliFlow to display top data usage information	1058
Use intelliFlow to display data usage by host over time	1060

Enable intelliFlow

Required configuration items

■ Enable intelliFlow.

Additional configuration items

■ The firewall zone for internal clients being monitored by intelliFlow.

To enable intelliFlow:



- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click **System**. Under **Configuration**, click **Device Configuration**.



The **Configuration** window is displayed.

3. Click Monitoring > intelliFlow.

The intelliFlow configuration window is displayed.



- 4. Click Enable intelliFlow.
- 5. For **Zone**, select the firewall zone. Internal clients that are being monitored by IntelliFlow should be present on the specified zone.
- 6. Click Apply to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

3. Enable IntelliFlow:

(config)> monitoring intelliflow enable true

- 4. Set the firewall zone. Internal clients that are being monitored by IntelliFlow should be present on the specified zone:
 - a. Determine available zones:

```
(config)> monitoring intelliflow zone?
```

Zone: The firewall zone which is assigned to the network interface(s) that intelliFlow will see as internal clients. intelliFlow relies on an internal to external relationship, where the internal clients are present on the zone specified.

Format:

any

dynamic_routes

edge

external

hotspot

internal

ipsec

loopback

setup

Default value: internal Current value: internal

(config)>

b. Set the zone to be used by IntelliFlow:

(config)> monitoring intelliflow zone my_zone

5. Save the configuration and apply the change.

```
(config)> save
Configuration saved.
```

6. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configure service types

The service type is used to categorize several ports under one service. For example, port numbers 80, 443, and 8080 are included in the **Web** service type.

There are several predefined service types:

- Web: Ports 80, 443, and 8080.
- FTP: Ports 20, 21, 989, and 990.
- SSH: Port 22.
- Telnet: Ports 23 and 992.
- Mail: Ports 25, 110, 143, 220, 993 and 995.
- DNS: Port 53.
- IRC: Ports 194 and 994.
- RSYNC: Ports 873.

You can add and remove ports from the predefined service port types, and you can also define your own service types. For example, to define a service type called "MyService" using ports 9000 and 9001:



- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The Configuration window is displayed.

- 3. Click Monitoring > intelliFlow.
- 4. Click to expand Ports.

5. At the bottom of the list of ports, click %to add a port.



- 6. Label is optional.
- 7. For Port number, type 9000.
- 8. For **Service name**, type **MyService**.



- 9. Click %to add a another port.
- 10. For Port number, type 9001.
- 11. For Service name, type MyService.
- 12. Click Apply to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

> config (config)>

3. Add a port:

(config)> add monitoring intelliflow ports end (config monitoring intelliflow ports 20)>

4. Set the port number:

(config monitoring intelliflow ports 20)> port 9000 (config monitoring intelliflow ports 20)>

5. Set the service type:

(config monitoring intelliflow ports 20)> service MyService (config monitoring intelliflow ports 20)>

6. Add another port:

(config monitoring intelliflow ports 20)> add .. end (config monitoring intelliflow ports 21)>

7. Set the port number:

(config monitoring intelliflow ports 21)> port 9001 (config monitoring intelliflow ports 21)>

8. Set the service type:

(config monitoring intelliflow ports 21)> service MyService (config monitoring intelliflow ports 21)>

9. Save the configuration and apply the change.

(config)> save
Configuration saved.

10. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configure domain name groups

Domain name groups are used to categorize serveral domains names in one group. For example, digi.com and devicecloud.com could be grouped together in an intelliFlow group called Digi.



- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The Configuration window is displayed.

- 3. Click Monitoring > intelliFlow > Groups.
- 4. Click %to add a domain.



- 5. Label is optional.
- 6. For **Domain name**, type **digi.com**.
- 7. For **Group**, type **Digi**.
- 8. Click %to add a another port.
- 9. For **Domain name**, type **devicecloud.com**.
- For Group, type Digi.
- 11. Click **Apply** to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

> config (config)>

3. Add a group:

(config)> add monitoring intelliflow groups end (config monitoring intelliflow groups 1)>

4. Set the domain name:

(config monitoring intelliflow groups 1)> domian digi.com (config monitoring intelliflow groups 1)>

5. Set the group name:

(config monitoring intelliflow groups 1)> group Digi (config monitoring intelliflow groups 1)>

6. Add another port:

(config monitoring intelliflow groups 1)> add .. end (config monitoring intelliflow groups 2)>

7. Set the port number:

(config monitoring intelliflow groups 2)> domain devicecloud.com (config monitoring intelliflow groups 2)>

8. Set the service type:

(config monitoring intelliflow groups 2)> group Digi (config monitoring intelliflow groups 2)>

9. Save the configuration and apply the change.

(config)> save
Configuration saved.

10. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Use intelliFlow to display average CPU and RAM usage

This procedure is only available from the WebUI.

To display display average CPU and RAM usage:



Log into the IX20 WebUI as a user with full Admin access rights.

- 1. If you have not already done so, enable intelliFlow. See Enable intelliFlow.
- 2. From the menu, click Status > intelliFlow.

The System Utilisation chart is displayed:



- Display more granular information:
 - 1. Click and drag over an area in the chart to zoom into that area and provide more granular information.



2. Release to display the selected portion of the chart:







Change the time period displayed by the chart.

By default, the **System utilisation** chart displays the average CPU and RAM usage over the last minute. You can change this to display the average CPU and RAM usage:

- · Over the last hour.
- · Over the last day.
- · Over the last 30 days.
- · Over the last 180 days.
 - Click the menu icon (ℰ).
 - 2. Select the time period to be displayed.



- Save or print the chart.
 - 1. Click the menu icon (ℰ).
 - 2. To save the chart to your local filesystem, select Export to PNG.
 - 3. To print the chart, select **Print chart**.

Use intelliFlow to display top data usage information

With intelliFlow, you can display top data usage information based on the following:

- Top data usage by host
- Top data usage by server
- Top data usage by service

To generate a top data usage chart:



Log into the IX20 WebUI as a user with full Admin access rights.

- 1. If you have not already done so, enable intelliFlow. See Enable intelliFlow.
- 2. From the menu, click Status > intelliFlow.

- 3. Display a data usage chart:
 - To display the **Top Data Usage by Host** chart, click **Top Data Usage by Host**.



■ To display the **Top Data Usage by Server** chart, click **Top Data Usage by Server**.



■ To display the **Top Data Usage by Service** chart, click **Top Data Usage by Service**.




- 4. Change the type of chart that is used to display the data:
 - a. Click the menu icon (49).
 - b. Select the type of chart.



Change the number of top users displayed.
 You can display the top five, top ten, or top twenty data users.

- a. Click the menu icon (49).
- b. Select the number of top users to displayed.

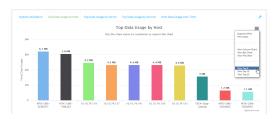

- 6. Save or print the chart.
 - a. Click the menu icon (49).
 - b. To save the chart to your local filesystem, select **Export to PNG**.
 - c. To print the chart, select Print chart.

Use intelliFlow to display data usage by host over time

To generate a chart displaying a host's data usage over time:





Log into the IX20 WebUI as a user with full Admin access rights.

- 1. If you have not already done so, enable intelliFlow. See Enable intelliFlow.
- 2. From the menu, click **Status** > **intelliFlow**.
- 3. Click Host Data Usage Over Time.



- Display more granular information:
 - a. Click and drag over an area in the chart to zoom into that area and provide more granular information.

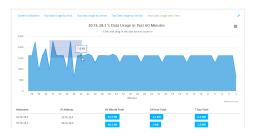

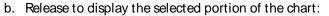



c. Click Reset zoom to return to the original display:



- Save or print the chart.
 - a. Click the menu icon (49).
 - b. To save the chart to your local filesystem, select Export to PNG.
 - c. To print the chart, select Print chart.

Configure NetFlow Probe

NetFlow probe is used to probe network traffic on the IX20 device and export statistics to NetFlow collectors.

Required configuration items

- Enable NetFlow.
- The IP address of a NetFlow collector.

Additional configuration items

- The NetFlow version.
- Enable flow sampling and select the flow sampling technique.
- The number of flows from which the flow sampler can sample.
- The number of seconds that a flow is inactive before it is exported to the NetFlow collectors.
- The number of seconds that a flow is active before it is exported to the NetFlow collectors.
- The maximum number of simultaneous flows.
- Alabel for the NetFlow collector.
- The port of the NetFlow collector.
- Additional NetFlow collectors.

To probe network traffic and export statistics to NetFlow collectors:



- Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- a. Locate your device as described in Use Digi Remote Manager to view and manage your device
- b. Click the **Device ID**.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

3. Click Monitoring > NetFlow probe.



- 4. Enable NetFlow probe.
- 5. Protocol version: Select the Protocol version. Available options are:
 - **NetFlow v5**—Supports IPv4 only.
 - NetFlow v9—Supports IPv4 and IPv6.
 - NetFlow v10 (IPFIX)—Supports both IPv4 and IPv6 and includes IP Flow Information Export (IPFIX).

The default is **NetFlow v10 (IPFIX)**.

- 6. Enable Flow sampler by selecting a sampling technique. Flow sampling can reduce flow processing and transmission overhead by providing a representative subset of all flows. Available options are:
 - None—No flow sampling method is used. Each flow is accounted.
 - Deterministic—Selects every nth flow, where n is the value of Flow sampler population.

- Random—Randomly selects one out of every *n* flows, where *n* is the value of **Flow** sampler population.
- **Hash**—Randomly selects one out of every *n* flows using the hash of the flow key, where *n* is the value of **Flow sampler population**.
- 7. For **Flow sampler population**, if you selected a flow sampler, enter the number of flows for the sampler. Allowed value is any number between **2** and **16383**. The default is **100**.
- 8. For **Inactive timeout**, type the the number of seconds that a flow can be inactive before sent to a collector. Allowed value is any number between 1 and 15. The default is 15.
- For Active timeout, type the number of seconds that a flow can be active before sent to a collector. Allowed value is any number between 1 and 1800. The default is 1800.
- 10. For **Maximum flows**, type the maximum number of flows to probe simultaneously. Allowed value is any number between **0** and **2000000**. The default is **2000000**.
- 11. Add collectors:
 - a. Click to expand Collectors.
 - b. For Add Collector, click Yo
 - c. (Optional) Type a Label for the collector.
 - d. For Address, type the IP address of the collector.
 - e. (Optional) For **Port**, enter the port number used by the collector. The default is 2055. Repeat to add additional collectors.
- 12. Click Apply to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

> config			
(config)>			

3. Enable NetFlow:

(config)> monitoring netflow enable true (config)>

4. Set the protocol version:

(config)> monitoring netflow protocol *version* (config)>

where version is one of:

- **v5**—NetFlow v5 supports IPv4 only.
- **v9**—NetFlow v9 supports IPv4 and IPv6.
- v10—NetFlow v10 (IPFIX) supports both IPv4 and IPv6 and includes IP Flow Information Export (IPFIX).

The default is v10.

 Enable flow sampling by selecting a sampling technique. Flow sampling can reduce flow processing and transmission overhead by providing a representative subset of all flows.

```
(config)> monitoring netflow sampler type (config)>
```

where type is one of:

- none—No flow sampling method is used. Each flow is accounted.
- deterministic—Selects every nth flow, where n is the value of the flow sample population.
- random—Randomly selects one out of every n flows, where n is the value of the flow sample population.
- hash—Randomly selects one out of every n flows using the hash of the flow key, where n is the value of the flow sample population.
- 5. If you are using a flow sampler, set the number of flows for the sampler:

```
(config)> monitoring netflow sampler_population value (config)>
```

where value is any number between 2 and 16383. The default is 100.

6. Set the number of seconds that a flow can be inactive before sent to a collector:

```
(config)> monitoring netflow inactive_timeout value (config)>
```

where value is any is any number between 1 and 15. The default is 15.

7. Set the number of seconds that a flow can be active before sent to a collector:

```
(config)> monitoring netflow active_timeout value
(config)>
```

where value is any is any number between 1 and 1800. The default is 1800.

8. Set the maximum number of flows to probe simultaneously:

```
(config)> monitoring netflow max_flows value
(config)>
```

where value is any is any number between 0 and 2000000. The default is 2000000.

- 9. Add collectors:
 - a. Add a collector:

(config)> add monitoring netflow collector end (config monitoring netflow collector 0)>

b. Set the IP address of the collector:

(config monitoring netflow collector 0)> address *ip_address* (config monitoring netflow collector 0)>

c. (Optional) Set the port used by the collector:

(config monitoring netflow collector 0)> port *port* (config monitoring netflow collector 0)>

d. (Optional) Set a label for the collector:

(config monitoring netflow collector 0)> label "This is a collector." (config monitoring netflow collector 0)>

Repeat to add additional collectors.

10. Save the configuration and apply the change.

(config monitoring netflow collector 0)> save Configuration saved.

11. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

File system

This chapter contains the following topics:

The IX20 local file system	1067
Display directory contents	
Create a directory	
Display file contents	
Copy a file or directory	
Move or rename a file or directory	
Delete a file or directory	
Upload and download files	

The IX20 local file system

The IX20 local file system has approximately 150 MB of space available for storing files, such as Python programs, alternative configuration files and firmware versions, and release files, such as cellular module images. The writable directories within the file system are:

- /tmp
- /opt
- /etc/config

Files stored in the /tmp directory do not persist across reboots. Therefore, /tmp is a good location to upload temporary files, such as files used for firmware updates. Files stored in /opt and /etc/config do persist across reboots, but are deleted if a factory reset of the system is performed. See Erase device configuration and reset to factory defaults for more information.

Display directory contents

To display directory contents by using the WebUI or the Admin CLI:



Log into the IX20 WebUI as a user with full Admin access rights.

1. On the menu, click System. Under Administration, click File System.



The File System page appears.



2. Highlight a directory and click \triangle to open the directory and view the files in the directory.

Command line

Select the device in Remote Manager and click Actions > Open Console, or log into the IX20 local command line as a user with full Admin access rights.

File system Create a directory

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

At the Admin CLI prompt, type Is / path dir_name. For example, to display the contents of the /etc/config directory:

```
> Is /etc/config
-rw-r--r- 1 root root 856 Nov 20 20:12 accns.json
drw----- 2 root root 160 Sep 23 04:02 analyzer
drwxr-xr-x 3 root root 224 Sep 23 04:02 cc_acl
-rw-r--r- 1 root root 47 Sep 23 04:02 dhcp.leases
...
>
```

3. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Create a directory

Command line

This procedure is not available through the WebUI. To make a new directory, use the mkdir command, specifying the name of the directory.

For example:

- 1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.
 - Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
- At the Admin CLI prompt, type mkdir / pathl dir_name. For example, to create a directory named temp in /etc/config:

```
> mkdir /etc/config/temp
>
```

3. Verify that the directory was created:

```
> Is /etc/config
...
-rw-r--r-- 1 root root 1436 Aug 12 21:36 ssl.crt
-rw------ 1 root root 3895 Aug 12 21:36 ssl.pem
-rw-r--r-- 1 root root 10 Aug 5 06:41 start
drwxr-xr-x 2 root root 160 Aug 25 17:49 temp
>
```

4. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

File system Display file contents

Display file contents

This procedure is not available through the WebUI. To display the contents of a file by using the Admin CLI, , use the more command, specifying the name of the directory.

For example:

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the Admin CLI prompt, type **more** / path filename. For example, to view the content of the file accns.json in /etc/config:

3. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Copy a file or directory

This procedure is not available through the WebUI. To copy a file or directory by using the Admin CLI, use the cp command, specifying the existing path and filename followed by the path and filename of the new file, or specifying the existing path and directory name followed by the path and directory name of the new directory.

Command line

Select the device in Remote Manager and click Actions > Open Console, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

- 2. At the Admin CLI prompt, type **cp / pathl filename**| **dir_name / path[filename**] | **dir_name**. For example:
 - To copy the file /etc/config/accns.json to a file named backup_cfg.json in a directory named /etc/config/test, enter the following:

```
> cp /etc/config/accns.json /etc/config/test/backup_cfg.json
>
```

To copy a directory named /etc/config/test to /opt:

```
> cp /etc/config/test/ /opt/
>
```

3. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Move or rename a file or directory

This procedure is not available through the WebUI. To move or rename a file or directory by using the Admin CLI, use the my command.

Command line

To rename a file named test.py in /etc/config/scripts to final.py:

Select the device in Remote Manager and click Actions > Open Console, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the Admin CLI prompt, type:

```
> mv /etc/config/scripts/test.py /etc/config/scripts/final.py
>
```

3. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

To move test.py from /etc/config/scripts to /opt:

Select the device in Remote Manager and click Actions > Open Console, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the Admin CLI prompt, type:

```
> mv /etc/config/scripts/test.py /opt/
>
```

3. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Delete a file or directory

To delete a file or directory by using the WebUI or the Admin CLI:



Log into the IX20 WebUI as a user with full Admin access rights.

1. On the menu, click System. Under Administration, click File System.



The File System page appears.



- 2. Highlight the directory containing the file to be deleted and click \triangle to open the directory.
- 3. Highlight the file to be deleted and click .
- 4. Click OK to confirm.

Command line

To delete a file named test.py in /etc/config/scripts:

Select the device in Remote Manager and click Actions > Open Console, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the Admin CLI prompt, type:

```
> rm /etc/config/scripts/test.py
rm: remove '/etc/config/scripts/test.py'? yes
>
```

3. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

To delete a directory named temp from /opt:

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the Admin CLI prompt, type:

```
> rm /opt/temp/
rm: descend into directory '/opt/temp'? yes
rm: remove directory '/opt/temp'? yes
>
```

3. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Upload and download files


You can download and upload files by using the WebUI or from the command line by using the scp Secure Copy command, or by using a utility such as SSH File Transfer Protocol (SFTP) or an SFTP application like FileZilla.

Upload and download files by using the WebUI

Upload files

Log into the IX20 WebUI as a user with full Admin access rights.

1. On the menu, click System. Under Administration, click File System.

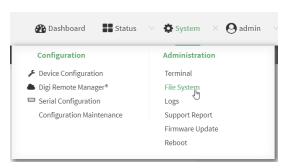

The File System page appears.

1)20 User Guide 1072



- 2. Highlight the directory to which the file will be uploaded and click to open the directory.
- 3. Click 6 (upload).
- 4. Browse to the location of the file on your local machine. Select the file and click **Open** to upload the file.

Download files

Log into the IX20 WebUI as a user with full Admin access rights.

1. On the menu, click System. Under Administration, click File System.



The File System page appears.



- Highlight the directory to which the file will be uploaded and click

 to open the directory.
- 3. Highlight the appropriate file and click (download).

Upload and download files by using the Secure Copy command

Copy a file from a remote host to the IX20 device

To copy a file from a remote host to the IX20 device, use the scp command as follows:

> scp host hostname-or-ip user username remote remote-path local local-path to local

where:

- hostname-or-ip is the hostname or IP address of the remote host.
- username is the name of the user on the remote host.
- remote-path is the path and filename of the file on the remote host that will be copied to the IX20 device.
- local-path is the location on the IX20 device where the copied file will be placed.

For example:

To copy firmware from a remote host with an IP address of 192.168.4.1 to the /etc/config directory on the IX20 device, issue the following command:

```
> scp host 192.168.4.1 user admin remote /home/admin/bin/IX20-25.2.bin local /etc/config/scripts to local admin@192.168.4.1's password: adminpwd IX20-25.2.bin 100% 36MB 11.1MB/s 00:03 >
```

Transfer a file from the IX20 device to a remote host

To copy a file from the IX20 device to a remote host, use the scp command as follows:

> scp host hostname-or-ip user username remote remote-path local local-path to remote

where:

- hostname-or-ip is the hostname or IP address of the remote host.
- username is the name of the user on the remote host.
- remote-path is the location on the remote host where the file will be copied.
- local-path is the path and filename on the IX20 device.

For example:

To copy a support report from the IX20 device to a remote host at the IP address of 192.168.4.1:

1. Use the **system support-report** command to generate the report:

```
> system support-report path /var/log/
Saving support report to /var/log/support-report-0040D0133536-24-01-12-12:10:00.bin
Support report saved.
>
```

2. Use the **scp** command to transfer the report to a remote host:

```
> scp host 192.168.4.1 user admin remote /home/admin/temp/ local /var/log/support-report-00:40:D0:13:35:36-24-01-12-12:10:00.bin to remote admin@192.168.4.1's password: adminpwd support-report-0040D0133536-24-01-12-12:10:00.bin >
```

Upload and download files using SFTP

Transfer a file from a remote host to the IX20 device

This example uploads firmware from a remote host to the IX20 device with an IP address of **192.168.2.1**, using the username **ahmed**:

\$

\$ sftp ahmed@192.168.2.1 Password: Connected to 192.168.2.1 sftp> put IX20-25.2 Uploading IX20-25.2 to IX20-25.2 IX20-25.2 sftp> exit

100% 24M 830.4KB/s 00:00

Transfer a file from the IX20 device to a remote host

This example downloads a file named **test.py** from the IX20 device at the IP address of **192.168.2.1** with a username of **ahmed** to the local directory on the remote host:

\$ sftp ahmed@192.168.2.1 Password: Connected to 192.168.2.1 sftp> get test.py Fetching test.py to test.py test.py sftp> exit \$

100% 254 0.3KB/s 00:00

Diagnostics

This chapter contains the following topics:

Perform a speedtest	1077
Generate a support report	
View system and event logs	
Configure syslog servers	
Configure options for the event and system logs	
Configure an email notification for a system event	
Configure an SNMP trap for a system event	
Analyze network traffic	
Use the ping command to troubleshoot network connections	
Use the traceroute command to diagnose IP routing problems	

Diagnostics Perform a speedtest

Perform a speedtest

To perform a speedtest:

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. Use the **iperf** command to generate the report:

```
> iperf host
```

where *host* is the hostname or IP address of a speedtest host. For example:

```
> iperf speedtest.accns.com
Tx (upload) average: 50.1110 Mbps
Tx latency: 31.45 ms
Rx (download) average: 44.7588 Mbps
Rx latency: 30.05 ms
```

>_____

```
> iperf host output json {"tx_avg": "51.8510", "tx_avg_units": "Mbps", "tx_latency": "31.07", "tx_latency_units": "ms", "rx_avg": "39.5770", "rx_avg_units": "Mbps", "rx_latency": "34.19", "rx_latency_units": "ms" }
```

4. To change the size of the speedtest packet, use the **size** parameter:

3. To output the result in json format, use the **output** parameter:

```
> iperf host size int
```

5. By default, the speedtest uses *nuttcp* for the mode. To change this setting from *nuttcp* to *iperf*, use the **mode** parameter:

```
> iperf host mode iperf
```

6. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Generate a support report

To generate and download a support report:



Log into the IX20 WebUI as a user with full Admin access rights.

1. On the main menu, click System. Under Administration, click Support Report.



2. Click to generate and download the support report.



Attach the support report to any support requests.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. Use the **system support-report** command to generate the report:

```
> system support-report path /var/log/
Saving support report to /var/log/support-report-0040D0133536-24-01-12-12:10:00.bin
Support report saved.
>
```

3. Use the **scp** command to transfer the report to a remote host:

```
> scp host 192.168.4.1 user admin remote /home/admin/temp/ local /var/log/support-report-00:40:D0:13:35:36-24-01-12-12:10:00.bin to remote admin@192.168.4.1's password: adminpwd support-report-0040D0133536-24-01-12-12:10:00.bin >
```

4. Type **exit** to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

See Support report overview for an overview of what is contained in the support report.

Support report overview

Generating a Support Report

Support reports provide a snapshot of a device's current settings and connection status at the time of the report's generation. The relevant log files are packaged into a **.bin** file that can be downloaded from the local (web) UI. For more information about generating support reports, see Generate a support report.

Note Information logged on the device will be erased when the device is powered off or rebooted to avoid unnecessary wear to the flash memory. See Configure options for the event and system logs for more information on how to enable persistent system logs.

Use 7-Zip or any other file-archiving utility to extract a support report. Its contents are organized into the following directories:

/etc

This folder most notably contains a running list of the cellular connections that have been registered by the device's radio.

Directory	Filename	Notes
/etc	version	Active firmware version
/etc/config	mn.json	Cellular connections logged as having been engaged by the radio; establishes previous APN associations

/opt

Information stored here persists between reboots and system resets.

Directory	Filename	Notes
/opt/log_last	messages	With persistent system logs enabled, syslog info will be stored in the /opt directory which isn't erased after reboots or system resets

/tmp

Output from a series of diagnostic queries is stored in a randomly generated sub-directory within /tmp. When combing through these logs, pay particular attention to config_dump-public (to verify local device settings) and mmdi-dump (to validate the cellular connection status).

Directory	Filename	Notes
/tmp/#*		*# is generated at random
	arpnv	The table of IP-address to MAC-address translations used by the address resolution protocol (ARP)
	arptablesnvvL	The tables of ARP packet filter rules in the Linux kernel
	cat_procmeminfo	A breakdown of memory utilization at the time when the support report was generated
	config_dump- public	The device's current settings, scrubbed of passwords and preshared keys
	conntrackL	A list of all currently tracked connections through the system

Directory	Filename	Notes
	conntrackS	A summary of currently tracked connections
	date	Local system time. If the device isn't online when the support report is generated, the date will be based on the date/month/year that the firmware running on the device was created (e.g. 18.4.54.41 was created 2018-07-05)
	dfh	A report of the file system disk space usage
	event_list	A list of events leveraged for syslog messages
	fw_printenv	The entire environment for the bootloader U-Boot
	ip_addr_list	IP addresses listed per interface
	ip_route_list	Default routing information per interface
	ip6tablesnvL	A list of IPv6 routing tables
	ip6tablesnvL_ -t_mangle	Firewall table used when handling mangled/fragmented IPv6 packets
	ip6tablesnvL_ -t_nat	Firewall table used to direct NAT'd traffic
	iptablesnvL	A list of IPv4 firewall tables
	iptablesnvL t_mangle	Firewall table used when handling mangled/fragmented IPv4 packets
	iptablesnvL t_nat	Firewall table used to direct NAT'd traffic
	sRlhA_etcconfig	An index of items in /etc/config (and its sub-directories)
	IsRIhA_opt	An index of items in /opt (and its sub-directories)
	IsRIhA_tmp	An index of items in /tmp (and its sub-directories)
	lsRlhA_var	An index of items in /var (and its sub-directories)
	mmcli-dump	A repository of critical information about the cellular radio based off of the cited modem-manager output and defined set of AT commands
	netstati	Interface statistics for transmitted/ received packets
	netstatna	List of both listening and non-listening network sockets on the device
	ps_l	A snapshot of the current processes running at the time of generating the report

Directory	Filename	Notes
	runt_json	Storage for active/ engaged system variables
	sprite_config_ dump	Not used for cellular devices
	ubus-dump	A log of ubus calls for network devices and interfaces
	uptime	The device's uptime at the time of generating the report, along with CPU load averages for the past 1, 5, and 15 minutes

/var/log

The running system log is stored in "messages" until reaching a set line count (1,000 lines by default). Once this limit is exceeded, that file is renamed to "messages.0" and a new running log is written to the now-empty "messages" log.

Directory	Filename	Notes
/var/log	messages	Current syslog information
	messages.0	Rollover syslog information

/var/run

This directory can be disregarded for most troubleshooting/ diagnostic purposes.

Directory	Filename	Notes
/var/run	all files	Runtime settings for the device referenced in the syslog data gathered in /tmp (see above)

View system and event logs

See Configure options for the event and system logs for information about configuring the information displayed in event and system logs.

View System Logs



Log into the IX20 WebUI as a user with full Admin access rights.


1. On the main menu, click System > Logs.



The system log displays:



2. Limit the display in the system log by using the **Find** search tool.

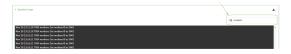

3. Use filters to configure the types of information displayed in the system logs.



4. Click to download the system log.



Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. Use the show log command at the Admin CLI prompt:

```
> show log

Timestamp Message
-----
Nov 26 21:54:34 IX20 netifd: Interface 'interface_wan' is setting up now
Nov 26 21:54:35 IX20 firewalld[621]: reloading status
...
>
```

3. (Optional) Use the **show log number** *num* command to limit the number of lines that are displayed. For example, to limit the log to the most recent ten lines:

```
> show log number 10

Timestamp Message
------
Nov 26 21:54:34 IX20 netifd: Interface 'interface_wan' is setting up now
Nov 26 21:54:35 IX20 firewalld[621]: reloading status
...
>
```

4. (Optional) Use the **show log filter** *value* command to limit the number of lines that are displayed. Allowed values are **critical**, **warning**, **info**, and **debug**. For example, to limit the event list to only info messages:

5. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

View Event Logs




Log into the IX20 WebUI as a user with full Admin access rights.

1. On the main menu, click **System > Logs**.



- 2. Click **System Logs** to collapse the system logs viewer, or scroll down to **Events**.
- 3. Click **Events** to expand the event viewer.

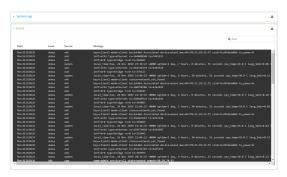

4. Limit the display in the event log by using the **Find** search tool.



5. Click to download the event log.



Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. Use the show event command at the Admin CLI prompt:

```
Timestamp Type Category Message

Nov 26 21:42:37 status stat intf=eth1~type=ethernet~rx=11332435~tx=5038762

Nov 26 21:42:35 status system local_time=Thu, 08 Aug 2019 21:42:35 +0000~uptime=3 hours, 0 minutes, 48 seconds

...
>
```

3. (Optional) Use the **show event number** *num* command to limit the number of lines that are displayed. For example, to limit the event list to the most recent ten lines:

4. (Optional) Use the **show event table** value command to limit the number of lines that are displayed. Allowed values are **error**, **info**, and **status**. For example, to limit the event list to only info messages:

5. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configure syslog servers

You can configure remote syslog servers for storing event and system logs.



- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- a. Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.




The **Configuration** window is displayed.

3. Click System > Log.



- 4. Add and configure a remote syslog server:
 - a. Click to expand Server list.
 - b. For Add Server, click 1/30

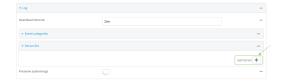

The log server configuration window is displayed.



Log servers are enabled by default. To disable, toggle off **Enable**.

- c. Type the host name or IP address of the Server.
- d. Select the event categories that will be sent to the server. By default, all event categories are enabled. You can disable logging for error, informational, and status event categories by clicking to toggle off the category.
- e. For **Syslog egress port**, type the port number to use for the syslog server. The default is **514**.
- f. For **Protocol**, select the IP protocol to use for communication with the syslog server. Available options are **TCP** and **UPD**. The default is **UPD**.
- 5. Click Apply to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

> config (config)>

- 3. (Optional) To configure remote syslog servers:
 - a. Add a remote server:

(config)> add system log remote end (config system log remote 0)>

b. Enable the server:

(config system log remote 0)> enable true (config system log remote 0)>

c. Set the host name or IP address of the server:

(config system log remote 0)> server *hostname* (config system log remote 0)>

d. The event categories that will be sent to the server are automatically enabled when the server is enabled.

To disable informational event messages:

(config system log remote 0)> info false (config system log remote 0)>

To disable status event messages:

(config system log remote 0)> status false (config system log remote 0)>

To disable informational event messages:

(config system log remote 0)> error false (config system log remote 0)>

4. Set the port number to use for the syslog server:

(config system log remote 0)> port *value* (config system log remote 0)>

where value is any integer between 1 and 65535. The default is 514.

5. Set the IP protocol to use for communication with the syslog server:

(config system log remote 0)> protocol *value* (config system log remote 0)>

where value is either tcp or udp. The default is udp.

6. Save the configuration and apply the change.

(config)> save Configuration saved.

7. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configure options for the event and system logs

The default configuration for event and system logging is:

- The heartbeat interval, which determines the amount of time to wait before sending a heartbeat event if no other events have been sent, is set to 30 minutes.
- All event categories are enabled.

To change or disable the heartbeat interval, or to disable event categories, and to perform other log configuration:

∜ Web

- 1. Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- a. Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.


Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

3. Click System > Log.

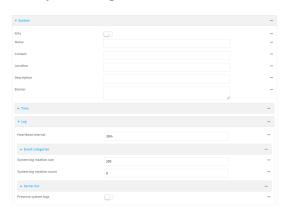

4. (Optional) To change the **Heartbeat interval** from the default of 30 minutes, type a new value. The heartbeat interval determines the amount of time to wait before sending a heartbeat event if no other events have been sent.

Allowed values are any number of weeks, days, hours, minutes, or seconds, and take the format *number*{w|d|h|m|s}.

For example, to set Heartbeat interval to ten minutes, enter 10m or 600s.

To disable the **Heartbeat interval**, enter **0s**.

- 5. (Optional) To disable event categories, or to enable them if they have been disabled:
 - a. Click to expand Event Categories.
 - b. Click an event category to expand.

- c. Depending on the event category, you can enable or disable different types of events.
 - Enable error events: Enable to generate an event whenever an error occurs.
 - Enable status events: Enable to generate periodic reports of the current status. These events are generated at specific time intervals, rather than when changes occur, and are only sent if a change has occurred since the previous report. Status events may also be generated in response to remote control commands.
 - Status interval: The minimum time interval between periodic status events. The limitation does not apply to events generated in response to remove control commands. Set this field to blank to only send events generated in response to remote control command.

Syntax: number{w|d|h|m|s}
Default: 30m (30 minutes)

This field works with the **Enable status events** option.

- Enable informational events: Enable to generate an event whenever a significant change occurs.
- Enable email notifications: Enable to email a system log event notification to a specified email address. The email address must also be specified before a notification can be sent. To configure, see Configure an email notification for a system event.
- Enable SNMP traps: Enable to save system log event information to an SNMP trap. At least one SNMP destination must be defined before event information can be saved. To configure, see Configure an SNMP trap for a system event.
- 6. (Optional) See Configure syslog servers for information about configuring remote syslog servers to which log messages will be sent.
- 7. (Optional) To change the system log settings from the defaults, type in a new value.
 - System log rotation size: Specify the maximum size (measured in kilobytes) the system log file can reach before log rotation. When the specified size is reached, the system log rotates.

Default is 200 kb. Minimum is 10 kb.

- System log rotation count: Specify the number of system log files to keep.
 Default is 8. Minimum is 1; maximum is 20.
- Enable Preserve system logs to save the current session's system log after a reboot.
 By default, the IX20 device erases system logs each time the device is powered off or rebooted.

Note You should only enable **Preserve system logs** temporarily to debug issues. Once you are finished debugging, immediately disable **Preserve system logs** to avoid unnecessary wear to the flash memory.

- (Optional) Configure Email notifications to send an email notification of a system event. See Configure an email notification for a system event.
- (Optional) Configure SNMP traps destinations for a IX20 to save system event information.
 See Configure an SNMP trap for a system event.
- 11. Click **Apply** to save the configuration and apply the change.

Command line

Select the device in Remote Manager and click Actions > Open Console, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

> config (config)>

(Optional) To change the heartbeat interval from the default of 30 minutes, set a new value.
 The heartbeat interval determines the amount of time to wait before sending a heartbeat event if no other events have been sent.

(config)> system log heartbeat_interval value (config)>

where *value* is any number of weeks, days, hours, minutes, or seconds, and takes the format *number*(w|d|h|m|s).

For example, to set the heartbeat interval to ten minutes, enter either 10m or 600s:

(config)> system log heartbeat_interval 600s (config)>

To disable the heartbeat interval, set the value to 0s

Enable preserve system logs functionality to save the current session's system log after a
reboot. By default, the IX20 device erases system logs each time the device is powered off or
rebooted.

Note You should only enable **Preserve system logs** temporarily to debug issues. Once you are finished debugging, immediately disable **Preserve system logs** to avoid unnecessary wear to the flash memory.

(config)> system log persistent true (config)>

- 5. (Optional) To disable event categories, or to enable them if they have been disabled:
 - a. Use the question mark (?) to determine available event categories:

(config)> system log event?

Event categories: Settings to enable individual event categories.

Additional Configuration

arping ARP ping
config Configuration
dhcpserver DHCP server
firmware Firmware

location Location modem Modem netmon Active recovery network Network interfaces openvpn OpenVPN portal Captive portal Remote control remote restart Restart Serial serial sms SMS commands Speed speed Network statistics stat User user watchdog Watchdog wifi Wi-Fi wol Wake-On-LAN

(config)> system log event

- b. Depending on the event category, you can enable or disable informational events, status events, and error events. Some categories also allow you to set the status interval, which is the time interval between periodic status events. For example, to configure DHCP server logging:
 - i. Use the question mark (?) to determine what events are available for DHCP server logging configuration:

(config)> system log event dhcpserver?

...

DHCP server: Settings for DHCP server events. Informational events are generated when a lease is obtained or released. Status events report the current list of leases.

Parameters	Current Value		
info status status_interva	true true I 30r	Enable informational events Enable status events n Status interval	

(config)> system log event dhcpserver

ii. To disable informational messages for the DHCP server:

(config)> system log event dhcpserver info false (config)>

iii. To change the status interval:

(config)> system log event dhcpserver status_interval *value* (config)>

where *value* is any number of weeks, days, hours, minutes, or seconds, and takes the format *number*{w|d|h|m|s}.

For example, to set the status interval to ten minutes, enter either 10m or 600s:

(config)> system log event dhcpserver status_interval 600s (config)>

- 6. (Optional) See Configure syslog servers for information about configuring remote syslog servers to which log messages will be sent.
- 7. Save the configuration and apply the change.

```
(config)> save
Configuration saved.
>
```

8. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Configure an email notification for a system event

You can configure the IX20 to send an email notification of a system event.

Step 1: Configure the SMTP server that is used to send email notifications when a system log event occurs by enabling the **Email notifications** system log feature.

Step 2: Review the system log event categories and select the type of information that you want to save to the system log: errors, informational events, or status events, depending on the event category. To ensure the notification is sent, enable the **Enable email notification** option for the event category.

- 1. Log in to the web UI.
- Click System > Device Configuration. The Configuration page displays.
- 3. Expand System > Log.
- 4. Expand Email notifications.
- 5. Click **Enable**. The slider is blue when enabled.
 - a. From the Server type list box, select the method used to connect and authenticate with the SMTP server.
 - b. In the **SMTP server name** field, enter the host name or IP address of the SMTP server.
 - c. In the SMTP server port field, enter the TCP port of the SMTP server.
 - d. In the Server user name field, enter the server login name.
 - e. In the Server password field, enter the server password.
 - f. In the **Email from address** field, enter the email address that should be placed in the **From** field on an email.
 - g. the **Email to address** field, enter the email address that should be place in the **To** field on an email.
 - h. In the **Email subject** field, enter the text for the subject line of the email.
- 6. Click **Apply** to save the configuration and apply the change.

 Review the system log event categories and select the type of information that you want to save to the system log, and enable the **Enable email notification** option. To configure these options, see Configure options for the event and system logs.

Configure an SNMP trap for a system event

You can configure an SNMP trap destination for a IX20 to save system event information.

Step 1: Configure an SNMP trap by enabling the SNMP traps system log feature.

Step 2: Review the system log event categories and select the type of information that you want to save to the system log and the SNMP trap: errors, informational events, or status events, depending on the event category. To ensure the log information is saved to an SNMP trap, enable the **Enable SNMP traps** option for the event category.

- 1. Log in to the web UI.
- 2. Click System > Device Configuration. The Configuration page displays.
- 3. Expand **System** > **Log**.
- 4. Expand SNMP traps.
- 5. Click **Enable**. The slider is blue when enabled.
- 6. Add a destination.
 - a. Click Add Destination.
 - b. In the **Host Name** field, enter the host name or IP address of the SNMP destination.
 - c. In the Port field, enter the UDP port of the SNMP destination. The default is 162.
 - d. In the **Community name** field, enter the SNMP destination community name. The default is **public**.
 - e. Repeat this process to add an additional destination, if needed.
- 7. Click **Apply** to save the configuration and apply the change.
- Review the system log event categories and select the type of information that you want to save to the system log, and enable the **Enable SNMP traps** option. To configure these options, see Configure options for the event and system logs.

Analyze network traffic

The IX20 device includes a network analyzer tool that captures data traffic on any interface and decodes the captured data traffic for diagnostics. You can capture data traffic on multiple interfaces at the same time and define capture filters to reduce the captured data. You can capture up to 10 MB of data traffic in two 5 MB files per interface.

To perform a more detailed analysis, you can download the captured data traffic from the device and view it using a third-party application.

Note Data traffic is captured to RAM and the captured data is lost when the device reboots unless you save the data to a file. See Save captured data traffic to a file.

This section contains the following topics:

Configure packet capture for the network analyzer	1096
Example filters for capturing data traffic	
Capture packets from the command line	
Stop capturing packets	
Show captured traffic data	
Save captured data traffic to a file	
Download captured data to your PC	
Gear captured data	

Configure packet capture for the network analyzer

To use the network analyzer, you must create one or more packet capture configuration.

Required configuration items

■ The interface used by this packet capture configuration.

Additional configuration items

- The filter expression for this packet capture configuration.
- Schedule the analyzer to run based on a specified event or at a particular time:
 - The events or time that will trigger the analyzer to run, using this capture configuration.
 - The amount of time that the analyzer session will run.
 - The frequency with which captured events will be saved.

To configure a packet capture configuration:



- Log into Digi Remote Manager, or log into the local Web UI as a user with full Admin access rights.
- 2. Access the device configuration:

Remote Manager:

- Locate your device as described in Use Digi Remote Manager to view and manage your device.
- b. Click the Device ID.
- c. Click Settings.
- d. Click to expand Config.

Local Web UI:

a. On the menu, click System. Under Configuration, click Device Configuration.



The **Configuration** window is displayed.

3. Click Network > Analyzer.

4. For **Add Capture settings**, type a name for the capture filter and click %



The new capture filter configuration is displayed.



- 5. (Optional) Add a filter type:
 - a. Click to expand Filter.



You can select from preconfigured filters to determine which types of packets to capture or ignore, or you can create your own Berkeley packet filter expression.

- b. To create a filter that either captures or ignores packets from a particular IP address or network:
 - i. Click to expand Filter IP addresses or networks.
 - ii. Click Yoto add an IP address/network.



- iii. For IP address or network, type the IPv4 or IPv6 address (and optional netmask).
- iv. For **Source or destination IP address**, select whether the filter should apply to packets when the IP address/network is the source, the destination, or both.
- v. Click **Ignore this IP address or network** if the filter should ignore packets from this IP address/network. By default, is option is disabled, which means that the filter will capture packets from this IP address/network.
- vi. Click Yoto add additional IP address/network filters.

c. To create a filter that either captures or ignores packets that use a particular IP protocol:

- i. Click to expand Filter IP protocols.
- ii. Click Yoto add an IP protocol.
- iii. For **IP protocol to capture or ignore**, select the protocol. If **Other protocol** is selected, type the number of the protocol.
- iv. Click **Ignore this protocol** if the filter should ignore packets that use this protocol. By default, is option is disabled, which means that the filter will capture packets that use this protocol.
- v. Click Yoto add additional IP protocols filters.
- d. To create a filter that either captures or ignores packets from a particular port:
 - i. Click to expand Filter TCP/UDP port.
 - ii. Click Yoto add a TCP/UDP port.
 - iii. For **IP TCP/UDP port to capture or ignore**, type the number of the port to be captured or ingored.
 - iv. For TCP or UDP port, select the type of transport protocol.
 - v. For **Source or destination TCP/UDP port**, select whether the filter should apply to packets when the port is the source, the destination, or both.
 - vi. Click **Ignore this TCP/UDP port** if the filter should ignore packets that use this port. By default, is option is disabled, which means that the filter will capture packets that use this port.
 - vii. Click %to add additional port filters.
- e. To create a filter that either captures or ignores packets from one or more specified MAC addresses:
 - i. Click to expand Filter Ethernet MAC addresses.
 - ii. Click 16 to add a MAC address.
 - iii. For Ethernet MAC address, type the MAC address to be captured or ingored.
 - iv. For Source or destination Ethernet MAC address, select whether the filter should apply to packets when the Ethernet MAC address is the source, the destination, or both.
 - v. Click Ignore this MAC address if the filter should ignore packets that use this port. By default, is option is disabled, which means that the filter will capture packets that use this port.
 - vi. Click Yoto add additional MAC address filters.
- f. To create a filter that either captures or ignores packets from one or more VLANs:
 - i. Click to expand Filter VLANs.
 - ii. Click Yoto add a VLAN.
 - iii. For The VLAN to capture or ignore, type the number of the VLAN.
 - iv. Click **Ignore this VLAN** if the filter should ignore packets that use this port. By default, is option is disabled, which means that the filter will capture packets that use this port.
 - v. Click Yoto add additional VLAN filters.

g. For Berkeley packet filter expression, type a filter using Berkeley Packet Filter (BPF) syntax. See Example filters for capturing data traffic for examples of filters using BPF syntax.

- 6. Add one or more interface to the capture filter:
 - a. Click to expand Device.
 - b. Click %to add an interface to the capture setting instance.



- c. For Device, select an interface.
- d. Repeat to add additional interfaces to the capture filter.
- (Optional) For Berkeley packet filter expression, type a filter using Berkeley Packet Filter (BPF) syntax. See Example filters for capturing data traffic for examples of filters using BPF syntax.
- 8. (Optional) Schedule the analyzer to run, using this capture filter, based on a specified event or at a particular time:
 - For Run mode, select the mode that will be used to run the capture filter. Available
 options are:
 - On boot: The capture filter will run once each time the device boots.
 - Interval: The capture filter will start running at the specified interval, within 30 seconds after the configuration change is saved.
 - If Interval is selected, in Interval, type the interval.
 Allowed values are any number of weeks, days, hours, minutes, or seconds, and take the format number(w|d|h|m|s).
 - For example, to set **Interval** to ten minutes, enter **10m** or **600s**.
 - Set time: Runs the capture filter at a specified time of the day.
 - If Set Time is selected, specify the time that the capture filter should run in Run time, using the format HH.MM.
 - During system maintenance: The capture filter will run during the system maintenance time window.
 - b. **Enable** the capture filter schedule.
 - c. For **Duration**, type the amount of time that the scheduled analyzer session will run. Allowed values are any number of weeks, days, hours, minutes, or seconds, and take the format **number**{w|d|h|m|s}.
 - For example, to set **Duration** to ten minutes, enter **10m** or **600s**.
 - d. For **Save interval**, type the frequency with which captured events will be saved. Allowed values are any number of weeks, days, hours, minutes, or seconds, and take the format *number*{w|d|h|m|s}.
 - For example, to set Save interval to ten minutes, enter 10m or 600s.
- 9. Click Apply to save the configuration and apply the change.

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type config to enter configuration mode:

> config (config)>

Add a new capture filter:

(config)> add network analyzer *name* (config network analyzer *name*)>

4. Add an interface to the capture filter:

(config network analyzer *name*)> add device end *device* (config network analyzer *name*)>

Determine available devices and the proper syntax.

To determine available devices and proper syntax, use the space bar autocomplete feature:

(config network analyzer name)> add device end <space>

/network/device/eth1 /network/device/eth2 /network/device/loopback /network/bridge/lan

/network/interface/setupip /network/interface/defaultlinklocal

/network/interface/eth1 /network/interface/eth2 /network/interface/loopback /network/interface/modem (config network analyzer name)> add interface end /network/

Repeat to add additional interfaces.

- 5. (Optional) Set a filter for the capture filter:
 - To create a filter that either captures or ignores packets from a particular IP address or network:
 - i. Add a new IP address/network filter:

(config network analyzer *name*)> add filter address end (config network analyzer *name* filter address 0)>

ii. Set the IPv4 or IPv6 address (and optional netmask):

(config network analyzer *name* filter address 0)> address *ip_address*[/netmask] (config network analyzer *name* filter address 0)>

iii. Set whether the filter should apply to packets when the IP address/network is the source, the destination, or both:

(config network analyzer *name* filter address 0)> match *value* (config network analyzer *name* filter address 0)>

where value is one of:

- source: The filter will apply to packets when the IP address/network is the source.
- destination: The filter will apply to packets when the IP address/network is the destination.
- either: The filter will apply to packets when the IP address/network is either the source or the destination.
- iv. (Optional) Set the filter should ignore packets from this IP address/network:

```
(config network analyzer name filter address 0)> ignore true (config network analyzer name filter address 0)>
```

By default, is option is set to **false**, which means that the filter will capture packets from this IP address/network.

- v. Repeat these steps to add additional IP address filters.
- b. To create a filter that either captures or ignores packets that use a particular IP protocol:
 - i. Add a new IP protocol filter:

```
(config network analyzer name)> add filter protocol end (config network analyzer name filter protocol 0)>
```

ii. Use the ?to determine available protocols and the appropriate format:

(config network analyzer name filter protocol 0)> protocol ?

IP protocol to capture or ignore: IP protocol to capture or ignore.

Format:

ah

esp

gre

icmp

icmpv6

igmp

ospf

other

tcp

udp

vrrp

Current value:

(config network analyzer name filter protocol 0)>

iii. Set the protocol:

(config network analyzer *name* filter protocol 0)> protocol *value* (config network analyzer *name* filter protocol 0)>

iv. If other is set for the protocol, set the number of the protocol:

(config network analyzer *name* filter protocol 0)> protocol_other *value* (config network analyzer *name* filter protocol 0)>

where *value* is an integer between 1 and 255 and represents the the number of the protocol.

v. (Optional) Set the filter should ignore packets from this protocol:

(config network analyzer *name* filter protocol 0)> ignore true (config network analyzer *name* filter protocol 0)>

By default, is option is set to **false**, which means that the filter will capture packets from this protocol.

- vi. Repeat these steps to add additional protocol filters.
- c. To create a filter that either captures or ignores packets from a particular port:
 - i. Add a new port filter:

(config network analyzer *name*)> add filter port end (config network analyzer *name* filter port 0)>

ii. Set the transport protocol that should be filtered for the port:

(config network analyzer *name* filter port 0)> protocol *value* (config network analyzer *name* filter port 0)>

where value is one of tcp, udp, or either. The default is either.

iii. Set whether the filter should apply to packets when the port is the source, the destination, or both:

(config network analyzer *name* filter port 0)> match *value* (config network analyzer *name* filter port 0)>

where value is one of:

- source: The filter will apply to packets when the port is the source.
- destination: The filter will apply to packets when the port is the destination.
- either: The filter will apply to packets when the port is either the source or the destination.
- iv. (Optional) Set the filter should ignore packets from this port:

(config network analyzer *name* filter port 0)> ignore true (config network analyzer *name* filter port 0)>

By default, is option is set to **false**, which means that the filter will capture packets from this port.

- Repeat these steps to add additional port filters.
- d. To create a filter that either captures or ignores packets from one or more specified MAC addresses:
 - i. Add a new MAC address filter:

(config network analyzer *name*)> add filter mac_address end (config network analyzer *name* filter mac_address 0)>

ii. Set the MAC address that should be be captured or ignored:

(config network analyzer *name* filter mac_address 0)> address *value* (config network analyzer *name* filter mac_address 0)>

where *value* is the MAC address to be filtered, using colon-hexadecimal notation with lower case, for example, **00:aa:11:bb:22:cc**.

iii. Set whether the filter should apply to packets when the MAC address is the source, the destination, or both:

(config network analyzer *name* filter mac_address 0)> match *value* (config network analyzer *name* filter mac_address 0)>

where value is one of:

- source: The filter will apply to packets when the MAC address is the source.
- destination: The filter will apply to packets when the MAC address is the destination.
- **either**: The filter will apply to packets when the MAC address is either the source or the destination.
- iv. (Optional) Set the filter should ignore packets from this port:

(config network analyzer *name* filter mac_address 0)> ignore true (config network analyzer *name* filter mac_address 0)>

By default, is option is set to **false**, which means that the filter will capture packets from this MAC address.

- v. Repeat these steps to add additional MAC addresses.
- To create a filter that either captures or ignores packets from one or more specified VLANs:
 - i. Add a new VLAN filter:

(config network analyzer *name*)> add filter vlan end (config network analyzer *name* filter vlan 0)>

ii. Set the VLAN that should be be captured or ignored:

(config network analyzer *name* filter vlan 0)> vlan *value* (config network analyzer *name* filter vlan 0)>

where value is number o the VLAN.

iii. (Optional) Set the filter should ignore packets from this VLAN:

(config network analyzer *name* filter vlan 0)> ignore true (config network analyzer *name* filter vlan 0)>

By default, is option is set to **false**, which means that the filter will capture packets from this MAC address.

- iv. Repeat these steps to add additional VLANs.
- f. To create a filter using Berkeley Packet Filter (BPF) syntax:

(config network analyzer *name*)> filter custom *value* (config network analyzer *name*)>

where *value* is a filter using Berkeley Packet Filter (BPF) syntax. Values that contain spaces must be enclosed in double quotes (").

See Example filters for capturing data traffic for examples of filters using BPF syntax.

- (Optional) Schedule the analyzer to run, using this capture filter, based on a specified event or at a particular time:
 - a. Enable scheduling for this capture filter:

(config network analyzer *name*)> schedule enable true (config network analyzer *name*)>

b. Set the mode that will be used to run the capture filter:

(config network analyzer *name*)> when *mode* (config network analyzer *name*)>

where mode is one of the following:

- boot: The script will run once each time the device boots.
- **interval**: The script will start running at the specified interval, within 30 seconds after the configuration change is saved. If **interval** is selected, set the interval:

(config add network analyzer *name*)> on_interval *value* (config add network analyzer *name*)>

where *value* is any number of weeks, days, hours, minutes, or seconds, and takes the format *number*{w|d|h|m|s}.

For example, to set on_interval to ten minutes, enter either 10m or 600s:

(config network analyzer name)> on_interval 600s (config network analyzer name)>

set_time: Runs the script at a specified time of the day. If set_time is set, set the time that the script should run, using the format HH.MM.

(config network analyzer *name*)> run_time *HH:MM* (config network analyzer *name*)>

- maintenance_time: The script will run during the system maintenance time window.
- c. Set the amount of time that the scheduled analyzer session will run:

(config network analyzer *name*)> duration *value* (config network analyzer *name*)>

where *value* is any number of weeks, days, hours, minutes, or seconds, and takes the format *number*{w|d|h|m|s}.

For example, to set duration to ten minutes, enter either 10m or 600s:

(config network analyzer name)> save_interval 600s (config network analyzer name)>

d. Set the frequency with which captured events will be saved:

(config network analyzer *name*)> save_interval *value* (config network analyzer *name*)>

where *value* is any number of weeks, days, hours, minutes, or seconds, and takes the format *number*{w|d|h|m|s}.

For example, to set save_interval to ten minutes, enter either 10m or 600s:

(config network analyzer name)> save_interval 600s (config network analyzer name)>

7. Save the configuration and apply the change.

(config)> save
Configuration saved.

8. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Example filters for capturing data traffic

The following are examples of filters using Berkeley Packet Filter (BPF) syntax for capturing several types of network data. See https://biot.com/capstats/bpf.html for detailed information about BPF syntax.

Example IPv4 capture filters

Capture traffic to and from IP host 192.168.1.1:

ip host 192.168.1.1

■ Capture traffic from IP host 192.168.1.1:

ip src host 192.168.1.1

Capture traffic to IP host 192.168.1.1:

ip dst host 192.168.1.1

Capture traffic for a particular IP protocol:

ip proto protocol

where *protocol* is a number in the range of **1** to **255** or one of the following keywords: **icmp**, **icmp6**, **igmp**, **pim**, **ah**, **esp**, **vrrp**, **udp**, or **tcp**.

Capture traffic to and from a TCP port 80:

ip proto tcp and port 80

Capture traffic to UDP port 53:

ip proto udp and dst port 53

Capture traffic from UDP port 53:

ip proto udp and src port 53

Capture to and from IP host 10.0.0.1 but filter out ports 22 and 80:

ip host 10.0.0.1 and not (port 22 or port 80)

Example Ethernet capture filters

Capture Ethernet packets to and from a host with a MAC address of 00:40:D0:13:35:36:

ether host 00:40:D0:13:35:36

Capture Ethernet packets from host 00:40:D0:13:35:36:

ether src 00:40:D0:13:35:36:

Capture Ethernet packets to host 00:40:D0:13:35:36:

ether dst 00:40:D0:13:35:36

Capture packets from the command line

You can start packet capture at the command line with the analyzer start command. Alternatively, you can schedule the network analyzer to run based on a specified event or at a particular time. See Configure packet capture for the network analyzer for information about scheduling packet capturing.

Additional analyzer commands allow you to:

- Stop capturing packets.
- Save captured data traffic to a file.
- Clear captured data.

Required configuration items

 A configured packet capture. See Configure packet capture for the network analyzer for packet capture configuration information.

To start packet capture from the command line:

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. Type the following at the Admin CLI prompt:

```
> analyzer start name capture_filter
```

where *capture_filter* is the name of a packet capture configuration. See Configure packet capture for the network analyzer for more information.

To determine available packet capture configurations, use the ?

```
> analyzer start name?
```

name: Name of the capture filter to use.

Format: test_capture capture_ping

> analyzer start name

You can capture up to 10 MB of data traffic in two 5 MB files per interface.

Note Data traffic is captured to RAM and the captured data is lost when the device reboots unless you save the data to a file. See Save captured data traffic to a file.

Stop capturing packets

You can stop packet capture at the command line with the analyzer stop command.

To stop packet capture from the command line:

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. Type the following at the Admin CLI prompt:

```
> analyzer stop name capture_filter
>
```

where *capture_filter* is the name of a packet capture configuration. See Configure packet capture for the network analyzer for more information.

To determine available packet capture configurations, use the ?

```
> analyzer stop name?
```

```
name: Name of the capture filter to use.

Format:
test_capture
capture_ping

> analyzer stop name
```

Show captured traffic data

To view captured data traffic, use the show analyzer command. The command output show the following information for each packet:

- The packet number.
- The timestamp for when the packet was captured.
- The length of the packet and the amount of data captured.
- Whether the packet was sent or received by the device.
- The interface on which the packet was sent or received.
- A hexadecimal dump of the packet of up to 256 bytes.
- Decoded information of the packet.

To show captured data traffic:

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. Type the following at the Admin CLI prompt:

```
> show analyzer name capture_filter
Packet 1: Sept-29-2023 12:10:00.287682, Length 60 bytes (Captured Length 60 bytes)
Received on interface eth1
   00 40 ff 80 01 20 b4 b6 86 21 b5 73 08 00 45 00 .@.....!.s..E.
   00 28 3d 36 40 00 80 06 14 bc 0a 0a 4a 82 0a 0a .(=6@.....J..
   4a 48 cd ae 00 16 a4 4b ff 5f ee 1f d8 23 50 10 JH.....K ._...#P.
   08 02 c7 40 00 00 00 00 00 00 00 00
                                            ...@....
 Ethernet Header
  Destination MAC Addr: 00:40:D0:13:35:36
  Source MAC Addr : fb:03:53:05:11:2f
  Ethernet Type : IP (0x0800)
 IP Header
   IP Version
  Header Length : 20 bytes
   ToS
               : 0x00
```

Total Length : 40 bytes

ID : 15670 (0x3d36)

Flags : Do not fragment

Fragment Offset : 0 (0x0000)

TTL : 128 (0x80)

Protocol : TCP (6)

Checksum : 0x14bc

Source IP Address : 10.10.74.130 Dest. IP Address : 10.10.74.72

TCP Header

Source Port : 52654 Destination Port : 22

Sequence Number : 2756443999 Ack Number : 3995064355

Data Offset : 5
Flags : ACK
Window : 2050
Checksum : 0xc740
Urgent Pointer : 0

TCP Data

00 00 00 00 00 00

.....

>

where *capture_filter* is the name of a packet capture configuration. See Configure packet capture for the network analyzer for more information.

To determine available packet capture configurations, use the ?.

> show anaylzer name?

name: Name of the capture filter to use.

Format: test_capture capture_ping

> show anaylzer name

Save captured data traffic to a file

Data traffic is captured to RAM and when the device reboots, the data is lost. To retain the captured data, first save the data to a file and then upload the file to a PC.

To save captured traffic data to a file, use the analyzer save command:

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. Type the following at the Admin CLI prompt:

```
> analyzer save filename filename path path
>
```

where:

• *filename* is the name of the file that the captured data will be saved to.

Determine filenames already in use:

Use the tab autocomplete feature to determine filenames that are currently in use:

```
> analyzer save name <tab>
test1_analyzer_capture test2_analyzer_capture
> analyzer save name
```

path is the path and filename to save captured traffic to. If a relative path is provided, /etc/config/analyzer will be used as the root directory for the path and file.

To transfer the file to your PC, see Download captured data to your PC.

Download captured data to your PC

After saving captured data to a file (see Save captured data traffic to a file), you can download the file from the WebUI or from the command line by using the scp (secure copy file) command.



Log into the IX20 WebUI as a user with full Admin access rights.

1. On the menu, click System. Under Administration, click File System.



The File System page appears.



- 2. Highlight the **analyzer** directory and click \triangle to open the directory.
- 3. Select the saved analyzer report you want to download and click (download).

Command line

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. Type scp to use the Secure Copy program to copy the file to your PC:

> scp host hostname-or-ip user username remote remote-path local local-path to remote

where:

- hostname-or-ip is the hostname or IP address of the remote host.
- username is the name of the user on the remote host.
- remote-path is the location on the remote host where the file will be copied.
- local-path is the path and filename on the IX20 device.

For example:

To download the traffic saved in the file **/etc/config/analyzer/eth0.pcpng** to a PC with the IP **192.168.210.2**, for a user named **maria**, to the **/home/maria** directory:

> scp host 192.168.210.2 user maria remote /home/maria local /etc/config/analyzer/eth0.pcpng to remote

```
maria@192.168.210.2's password:
eth0.pcpng 100% 11KB 851.3KB/s 00:00
```

Clear captured data

To clear captured data traffic in RAM, use the analyzer clear command:

Command line

Format:

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. Type the following at the Admin CLI prompt:

```
> analyzer clear name capture_filter
>
```

where *capture_filter* is the name of a packet capture configuration. See Configure packet capture for the network analyzer for more information.

To determine available packet capture configurations, use the ?

```
> anaylzer clear name ?

name: Name of the capture filter to use.
```

test_capture capture_ping

> anaylzer clear name

Note You can remove data traffic saved to a file using the rm command.

Use the ping command to troubleshoot network connections

Use the ping command troubleshoot connectivity problems.

Ping to check internet connection

To check your internet connection:

- 1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.
 - Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
- 2. At the Admin CLI prompt, type the ping command followed by the host name or IP address of the server to be pinged:

```
> ping 8.8.8.8
PING 8.8.8.8 (8.8.8.8) 56(84) bytes of data.
64 bytes from 8.8.8.8: icmp_seq=1 ttl=54 time=11.1 ms
64 bytes from 8.8.8.8: icmp_seq=2 ttl=54 time=10.8 ms
64 bytes from 8.8.8.8: icmp_seq=3 ttl=54 time=10.7 ms
...
>
```

3. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Stop ping commands

To stop pings when the number of pings to send (the **count** parameter) has been set to a high value, enter **Ctrl+C**.

Use the traceroute command to diagnose IP routing problems

Use the **traceroute** command to diagnose IP routing problems. This command traces the route to a remote IP host and displays results. The **traceroute** command differs from ping in that traceroute shows where the route fails, while ping simply returns a single error on failure.

See the traceroute command description for command syntax and examples. The traceroute command has several parameters. Only **host** is required.

- host: The IP address of the destination host.
- **bypass**: Send directly to a host on an attached network.
- debug: Enable socket level debugging.
- dontfragment: Do not fragment probe packets.
- first_ttl: Specifies with what TTL to start. (Default: 1)
- **gateway**: Route the packet through a specified gateway.
- icmp: Use ICMP ECHO for probes.
- interface: Specifies the interface.

- ipchecksums: Calculate ip checksums.
- max_ttl: Specifies the maximum number of hops. (Default: 30)
- nomap: Do not map IP addresses to host names
- nqueries: Sets the number of probe packets per hop. (Default: 3)
- **packetlen**: Total size of the probing packet. (Default: -1)
- **pausemsecs**: Minimal time interval between probes (Default: 0)
- port: Specifies the destination port. (Default: -1)
- src_addr: Chooses an alternative source address.
- tos: Set Type of Service. (Default: -1)
- verbose: Verbose output.
- waittime: Max wait for a response to a probe. (Default: 5)

Example

This example shows using **traceroute** to verify that the IX20 device can route to host **8.8.8.8** (www.google.com) through the default gateway. The command output shows that **15** routing hops were required to reach the host:

- Select the device in Remote Manager and click Actions > Open Console, or log into the IX20 local command line as a user with full Admin access rights.
 - Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.
- 2. At the Admin CLI prompt, use the **traceroute** command to view IP routing information:

```
> traceroute 8.8.8.8

traceroute to 8.8.8.8 (8.8.8.8), 30 hops max, 52 byte packets

1 192.168.8.1 (192.168.8.1) 0 ms 0 ms 0 ms

2 10.10.10.10 (10.10.10.10) 0 ms 2 ms 2 ms

3 * 10.10.8.23 (10.10.8.23) 1 ms 1 ms

4 96.34.84.22 (96.34.84.22) 1 ms 1 ms 1 ms

5 96.34.81.190 (96.34.81.190) 2 ms 2 ms 2 ms

6 ***

7 96.34.2.12 (96.34.2.12) 11 ms 11 ms 11 ms

8 ***

9 8.8.8.8 (8.8.8.8) 11 ms 11 ms 11 ms
```

By entering a whois command on a Unix device, the output shows that the route is as follows:

- 1. 192/8: The local network of the IX20 device.
- 2. **192.168.8.1**: The local network gateway to the Internet.
- 3. 96/8: Charter Communications, the network provider.
- 4. 216/8: Google Inc.

Stop the traceroute process

To stop the traceroute process, enter Ctrl-C.

Digi IX20 regulatory and safety statements

RF exposure statement

In order to comply with RF exposure limits established in the ANSI C95.1 standards, the distance between the antenna or antennas and the user should not be less than **20 cm**.

Federal Communication (FCC) Part 15 Class B

Radio Frequency Interference (RFI) (FCC 15.105)

The Digi IX20 has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet that is on a circuit different from the receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Labeling Requirements (FCC 15.19)

IX20 complies with Part 15 of FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

If the FCC ID is not visible when installed inside another device, then the outside of the device into which the module is installed must also display a label referring to the enclosed module FCC ID.

Modifications (FCC 15.21)

Changes or modifications to this equipment not expressly approved by Digi may void the user's authority to operate this equipment.

FCC ID

Digi IX20 with CMG4 CORE module utilizes a cellular modem by Quectel, model EG25-G with FCC ID: XMR201903EG25G and Type Allocation Code (TAC): 86769804, assigned by the GSMA.

European Community - CE Mark Declaration of Conformity (DoC)

Digi has issued Declarations of Conformity for the IX20 concerning emissions, EMC, and safety. For more information, see www.digi.com/resources/certifications.

Important note

Digi customers assume full responsibility for learning and meeting the required guidelines for each country in their distribution market. Refer to the radio regulatory agency in the desired countries of operation for more information.

IFETEL

La operación de este equipo está sujeta a las siguientes dos condiciones: (1) es posible que este equipo o dispositivo no cause interferencia perjudicial y (2) este equipo o dispositivo debe aceptar cualquier interferencia, incluyendo la que pueda causar su operación no deseada.

Maximum transmit power for radio frequencies

The following tables show the maximum transmit power for frequency bands.

Cellular frequency bands

Frequency bands	Maximum transmit power
Cellular LTE 700 MHz Cellular LTE 800 MHz Cellular LTE 850 MHz Cellular LTE 900 MHz Cellular LTE 1700 MHz Cellular LTE 1800 MHz Cellular LTE 1900 MHz Cellular LTE 2100 MHz	200 mW
Cellular LTE 2600 MHz Cellular LTE 2300 MHz Cellular LTE 2500 MHz	158.49 mW

Wi-Fi frequency bands

Frequency bands	Maximum transmit power
13 overlapping channels at 22 MHz or 40 MHz wide spaced at 2.4 GHz Centered at 2.412 MHz to 2.472 MHz	651.784 mW
165 overlapping channels at 22 MHz or 40 MHz or 80 MHz wide spaced at 5 GHz Centered at 5180 MHz to 5825 MHz	351.295 mW

Innovation, Science, and Economic Development Canada (IC) certifications

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus set out in the Radio Interference Regulations of the Canadian Department of Communications.

Le present appareil numerique n'emet pas de bruits radioelectriques depassant les limites applicables aux appareils numeriques de la class B prescrites dans le Reglement sur le brouillage radioelectrique edicte par le ministere des Communications du Canada.

RoHS compliance statement

All Digi International Inc. products that are compliant with the RoHS Directive (EU Directive 2002/95/EC and subsequent amendments) are marked as **RoHS COMPLIANT**. RoHS COMPLIANT means that the substances restricted by the EU Directive 2002/95/EC and subsequent amendments of the European Parliament are not contained in a finished product above threshold limits mandated by EU Directive 2002/95/EC and subsequent amendments, unless the restrictive substance is subject of an exemption contained in the RoHS Directive. Digi International Inc., cannot guarantee that inventory held by distributors or other third parties is RoHS compliant.

Safety notices

- Read all instructions before installing and powering the router. You should keep these instructions in a safe place for future reference.
- If the power supply shows signs of damage or malfunction, stop using it immediately, turn off the power and disconnect the power supply before contacting your supplier for a repair or replacement.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Use only the accessories, attachments, and power supplies provided by the manufacturer-connecting non-approved antennas or power supplies may damage the router, cause interference or create an electric shock hazard, and will void the warranty.
- Do not attempt to repair the product. The router contains no electronic components that can be serviced or replaced by the user. Any attempt to service or repair the router by the user will void the product warranty.
- Ports that are capable of connecting to other apparatus are defined as SELV ports. To ensure conformity with IEC60950 ensure that these ports are only connected to ports of the same type on other apparatus.

Special safety notes for wireless routers

Digi International products are designed to the highest standards of safety and international standards compliance for the markets in which they are sold. However, cellular-based products contain radio devices which require specific consideration. Take the time to read and understand the following guidance. Digi International assumes no liability for an end user's failure to comply with these precautions.



Wreless routers incorporate a wireless radio module. Users should ensure that the antenna(s) is (are) positioned at least 1 meter away from themselves and other persons in normal operation.

When in a hospital or other health care facility, observe the restrictions on the use of mobile phones. Do not use the router in areas where guidelines posted in sensitive areas instruct users to switch off mobile phones. Medical equipment may be sensitive to RF energy.

The operation of cardiac pacemakers, other implanted medical equipment and hearing aids can be affected by interference from cellular terminals such as the wireless routers when places close to the device. If in doubt about potential danger, contact the physician or the manufacturer of the device to verify that the equipment is properly shielded. Pacemaker patients are advised to keep the wireless router away from the pacemaker while it is on.



Wreless routers must NOT be operated on aircraft. The operation of wireless appliances in an aircraft is forbidden to prevent interference with communications systems. Failure to observe these instructions may lead to the suspension or denial of cellular services to the offender, legal action, or both.



As with any electrical equipment, do not operate the router in the presence of flammable gases, fumes or potentially explosive atmospheres. Do not use radio devices anywhere that blasting operations occur.



Wireless routers receive and transmit radio frequency energy when power is on. Interference can occur when using the router close to TV sets, radios, computers or inadequately shielded equipment. Follow any special regulations and always power off your router wherever forbidden or when it may cause interference or danger.



SOS IMPORTANT! Wireless routers operate using radio signals and cellular networks cannot be guaranteed to connect in all possible conditions. Therefore, never rely solely upon any wireless device for life critical communications.

Product disposal instructions

The WEEE (Waste Electrical and Electronic Equipment: 2002/96/EC) directive has been introduced to ensure that electrical/ electronic products are recycled using the best available recovery techniques to minimize the impact on the environment.



This product contains high quality materials and components which can be recycled. At the end of its life this product MUST NOT be mixed with other commercial waste for disposal. Check with the terms and conditions of your supplier for disposal information.

Digi International Ltd WEEE Registration number: WEE/HF1515VU

Safety warnings

English



Ensure that the power cord is connected to a socket-outlet with earthing connection.



To comply with FCC/IC RF exposure limits at least 20 cm separation distance must be maintained between any antenna of the unit and any part of the user at all times.



This appliance does not contain any user-serviceable parts. Never open the equipment. For safety reasons, the equipment should be opened only by qualified personnel.



The unit must be powered off where blasting is in progress, where explosive atmospheres are present, or near medical or life support equipment. Do not power on the unit in any aircraft.



Operation of this equipment in a residential environment could cause radio interference.



For ambient temperatures above 60° C, this equipment must be installed in a Restricted Access Location only.

Bulgarian--български



Уверете се, че захранващият кабел е свързан към контакт със заземителна връзка.



За да се спази FCC/ IC границите на излагане на радиочестота, трябва да се поддържа поне 20 cm разстояние на разделяне между която и да е антена на устройството и която и да е част от потребителя по всяко време.

Safety warnings Oroatian--Hrvatski



Този уред не съдържа части, които обслужват потребителя. Никога не отваряйте оборудването. От съображения за безопасност оборудването трябва да се отваря само от квалифициран персонал.



Уредът трябва да се изключи там, където се извършва взривяване, където има експлозивна атмосфера или в близост до медицинско оборудване или оборудване за поддържане на живота. Не включвайте устройството в самолет.



Работата с това оборудване в жилищна среда може да причини радиосмущения.



За околни температури над 60 ° C, това оборудване трябва да се инсталира само на място с ограничен достъп.

Croatian--Hrvatski



Provjerite je li kabel za napajanje spojen na utičnicu s uzemljenjem.



Da bi se udovoljilo FCC/ IC ograničenjima izlaganja RF, mora se održavati najmanje 20 cm udaljenosti odvojenosti od bilo koje antene uređaja i bilo kojeg dijela korisnika u svakom trenutku.



Ovaj uređaj ne sadrži dijelove koje korisnik može servisirati. Nikada ne otvarajte opremu. Iz sigurnosnih razloga opremu bi trebalo otvarati samo kvalificirano osoblje.



Uređaj se mora isključiti tamo gdje je u tijeku miniranje, gdje su prisutne eksplozivne atmosfere ili u blizini medicinske opreme ili opreme za održavanje života. Nemojte uključivati jedinicu ni u jednom zrakoplovu.



Rad ove opreme u stambenom okruženju mogao bi prouzročiti radio smetnje.



Za okolne temperature iznad 60 ° C, ova oprema mora biti instalirana samo na mjestu s ograničenim pristupom.

Safety warnings French--Français

French--Français



Assurez-vous que le cordon d'alimentation est connecté à une prise de courant avec mise à la terre.



Pour se conformer aux limites d'exposition RF FCC/IC, une distance de séparation d'au moins 20 cm doit être maintenue entre toute antenne de l'unité et toute partie de l'utilisateur à tout moment.



Cet appareil ne contient aucune pièce réparable par l'utilisateur. Ne jamais ouvrir l'équipement. Pour des raisons de sécurité, l'équipement ne doit être ouvert que par du personnel qualifié.



L'unité doit être éteinte là où le dynamitage est en cours, où des atmosphères explosives sont présentes, ou à proximité d'équipements médicaux ou de survie. N'allumez pas l'appareil dans un avion.



L'utilisation de cet équipement dans un environnement résidentiel peut provoquer des interférences radio.



Pour des températures ambiantes supérieures à 60 °C, cet équipement doit être installé uniquement dans un emplacement à accès restreint.

Greek--Ελληνικά



Βεβαιωθείτε ότι το καλώδιο τροφοδοσίας είναι συνδεδεμένο σε πρίζα με σύνδεση γείωσης.



Για συμμόρφωση με τα FCC / IC RF όρια έκθεσης πρέπει να διατηρείται τουλάχιστον 20 cm απόσταση διαχωρισμού μεταξύ οποιασδήποτε κεραίας της μονάδας και οποιουδήποτε μέρους του χρήστη ανά πάσα στιγμή.



Αυτή η συσκευή δεν περιέχει εξαρτήματα που μπορούν να επισκευαστούν από το χρήστη. Μην ανοίγετε ποτέ τον εξοπλισμό. Για λόγους ασφαλείας, ο εξοπλισμός πρέπει να ανοίγει μόνο από εξειδικευμένο προσωπικό.

Safety warnings Hungarian--Magyar



Η μονάδα πρέπει να είναι απενεργοποιημένη όταν βρίσκεται σε εξέλιξη η έκρηξη, όπου υπάρχουν εκρηκτικές ατμόσφαιρες ή κοντά σε ιατρικό εξοπλισμό ή εξοπλισμό υποστήριξης της ζωής. Μην ενεργοποιείτε τη μονάδα σε κανένα αεροσκάφος.



Η λειτουργία αυτού του εξοπλισμού σε οικιστικό περιβάλλον μπορεί να προκαλέσει παρεμβολές ραδιοφώνου.



Για θερμοκρασίες περιβάλλοντος άνω των 60 ° C, αυτός ο εξοπλισμός πρέπει να εγκατασταθεί μόνο σε θέση περιορισμένης πρόσβασης

Hungarian--Magyar



Győződjön meg arról, hogy a tápkábel csatlakozik egy földelő csatlakozóaljzathoz.



Az FCC/ IC rádiófrekvenciás expozíciós határértékeinek betartása érdekében a berendezés bármely antennája és a felhasználó bármely része között legalább 20 cm távolságot kell tartani.



Ez a készülék nem tartalmaz a felhasználó által javítható alkatrészeket. Soha ne nyissa ki a berendezést. Biztonsági okokból a berendezést csak szakképzett személyzet nyithatja meg.



Az egységet ki kell kapcsolni, ha robbantás folyik, ahol robbanásveszélyes környezet van, vagy orvosi vagy életmentő berendezések közelében. Semmilyen repülőgépen ne kapcsolja be az egységet.



A berendezés lakókörnyezetben történő működtetése rádiózavarokat okozhat.



 $60\,^\circ$ C feletti környezeti hőmérséklet esetén ezt a berendezést csak korlátozott hozzáférésű helyre kell telepíteni.

Italian--Italiano



Assicurarsi che il cavo di alimentazione sia collegato ad una presa con messa a terra.

Safety warnings Latvian--Latvietis



Per rispettare i limiti di esposizione RF FCC/IC è necessario mantenere sempre una distanza di separazione di almeno 20 cm tra qualsiasi antenna dell'unità e qualsiasi parte dell'utente.



Questo apparecchio non contiene parti riparabili dall'utente. Non aprire mai l'apparecchiatura. Per motivi di sicurezza, l'apparecchiatura deve essere aperta solo da personale qualificato.



L'unità deve essere spenta dove sono in corso esplosioni, dove sono presenti atmosfere esplosive o vicino ad apparecchiature mediche o di supporto vitale. Non accendere l'unità in nessun aereo.



Il funzionamento di questa apparecchiatura in un ambiente residenziale potrebbe causare interferenze radio.



Per temperature ambiente superiori a 60° C, questa apparecchiatura deve essere installata solo in un luogo ad accesso limitato.

Latvian--Latvietis



Pārliecinieties, ka strāvas vads ir pievienots kontaktligzdai ar zemējuma savienojumu.



Lai ievērotu FCC/ IC radiofrekvenču iedarbības robežas, vienmēr jābūt vismaz 20 cm attālumam starp jebkuru ierīces antenu un jebkuru lietotāja daļu.



Šajā ierīcē nav nevienas lietotāja apkalpojamas daļas. Nekad neatveriet aprīkojumu. Drošības apsvērumu dēļ aprīkojumu drīkst atvērt tikai kvalificēts personāls.



lekārtai jābūt izslēgtai, ja notiek spridzināšana, sprādzienbīstama vide vai medicīnas vai dzīvības uzturēšanas aprīkojuma tuvumā. Nevienā lidmašīnā neieslēdziet ierīci.



Šīs ierīces darbība dzīvojamā vidē var izraisīt radio traucējumus.

Safety warnings Lithuanian--Lietuvis



Ja apkārtējā temperatūra pārsniedz 60 ° C, šī iekārta jāuzstāda tikai ierobežotas piekļuves vietā.

Lithuanian--Lietuvis



Įsitikinkite, kad maitinimo laidas yra prijungtas prie lizdo su įžeminimu.



Kad būtų laikomasi FCC/ IC radijo dažnių apšvitos ribų, tarp bet kurios įrenginio antenos ir bet kurios vartotojo dalies visada turi būti išlaikytas bent 20 cm atstumas.



Šiame prietaise nėra naudotojui prižiūrimų dalių. Niekada neatidarykite įrangos. Saugumo sumetimais įrangą turėtų atidaryti tik kvalifikuotas personalas.



Įrenginys turi būti išjungtas ten, kur vyksta sprogdinimas, sprogi aplinka arba šalia medicinos ar gyvybės palaikymo įrangos. Neįjunkite įrenginio jokiuose orlaiviuose.



Naudojant šią įrangą gyvenamojoje aplinkoje, gali kilti radijo trukdžių.



Esant aukštesnei nei 60 ° Caplinkos temperatūrai, ši įranga turi būti montuojama tik riboto patekimo vietoje.

Polish--Polskie



Upewnij się, że przewód zasilający jest podłączony do gniazdka z uziemieniem.



Aby zachować zgodność z limitami ekspozycji FCC/IC RF, między anteną urządzenia a jakąkolwiek częścią użytkownika musi być zachowana odległość co najmniej 20 cm.



To urządzenie nie zawiera żadnych części, które mogą być naprawiane przez użytkownika. Nigdy nie otwieraj urządzenia. Ze względów bezpieczeństwa urządzenie powinno być otwierane wyłącznie przez wykwalifikowany personel.



Urządzenie musi być wyłączone w miejscach, w których trwają prace wybuchowe, w atmosferze wybuchowej lub w pobliżu sprzętu medycznego lub podtrzymującego życie. Nie włączaj urządzenia w żadnym samolocie.



Praca tego sprzętu w środowisku mieszkalnym może powodować zakłócenia radiowe.



W przypadku temperatur otoczenia powyżej 60°C urządzenie to należy instalować wyłącznie w miejscach o ograniczonym dostępie.

Portuguese--Português



Certifique-se de que o cabo de alimentação esteja conectado a uma tomada com conexão de aterramento.



Para cumprir os limites de exposição à RF da FCC / IC, pelo menos 20 cm de distância de separação deve ser mantida entre qualquer antena da unidade e qualquer parte do usuário o tempo todo.



Este aparelho não contém peças cuja manutenção possa ser feita pelo usuário. Nunca abra o equipamento. Por razões de segurança, o equipamento deve ser aberto apenas por pessoal qualificado.



A unidade deve ser desligada onde houver detonações em andamento, onde houver presença de atmosferas explosivas ou próximo a equipamentos médicos ou de suporte à vida. Não ligue a unidade em nenhuma aeronave.



A operação deste equipamento em um ambiente residencial pode causar interferência de rádio.



Para temperaturas ambientes acima de 60 ° C, este equipamento deve ser instalado apenas em locais de acesso restrito.

Slovak--Slovák



Uistite sa, že je napájací kábel pripojený k zásuvke so zemniacim pripojením.

Safety warnings Slovenian--Esloveno



Aby boli dodržané limity vystavenia vysokofrekvenčným lúčom FCC / IC, musí byť medzi anténou jednotky a akoukoľvek časťou používateľa neustále udržiavaná vzdialenosť najmenej 20 cm.



Toto zariadenie neobsahuje žiadne diely opraviteľné používateľom. Nikdy neotvárajte zariadenie. Z bezpečnostných dôvodov by malo zariadenie otvárať iba kvalifikovaný personál.



Jednotka musí byť vypnutá tam, kde prebiehajú trhacie práce, kde je prítomné výbušné prostredie, alebo v blízkosti lekárskych prístrojov alebo zariadení na podporu života. Jednotku nezapínajte v žiadnom lietadle.



Prevádzka tohto zariadenia v obytnom prostredí by mohla spôsobiť rádiové rušenie.



Pri teplotách okolia nad 60 ° C musí byť toto zariadenie inštalované iba na mieste s obmedzeným prístupom.

Slovenian--Esloveno



Prepričajte se, da je napajalni kabel priključen v vtičnico z ozemljitvenim priključkom.



Da bi izpolnili omejitve izpostavljenosti FCC/ IC RF, mora biti med katero koli anteno enote in katerim koli delom uporabnika ves čas vzdrževana najmanj 20 cm razdalja.



Ta naprava ne vsebuje nobenih delov, ki bi jih lahko uporabljal uporabnik. Nikoli ne odpirajte opreme. Iz varnostnih razlogov naj opremo odpira samo usposobljeno osebje.



Enoto je treba izklopiti tam, kjer poteka razstreljevanje, kjer so prisotne eksplozivne atmosfere ali v bližini medicinske opreme ali opreme za vzdrževanje življenja. Enote ne vklopite v nobenem letalu.



Delovanje te opreme v stanovanjskem okolju lahko povzroči radijske motnje.

Digi IX20 Certifications Spanish--Español



Pri temperaturah okolice nad 60 ° C mora biti ta oprema nameščena samo na lokaciji z omejenim dostopom.

Spanish--Español



Asegúrese de que el cable de alimentación esté conectado a una toma de corriente con conexión a tierra.



Para cumplir con los límites de exposición a RF de la FCC / IC, se debe mantener una distancia de separación de al menos 20 cm entre cualquier antena de la unidad y cualquier parte del usuario en todo momento.



Este aparato no contiene ninguna pieza que pueda reparar el usuario. Nunca abra el equipo. Por razones de seguridad, el equipo debe ser abierto únicamente por personal calificado.



La unidad debe estar apagada donde se estén realizando explosiones, cuando haya atmósferas explosivas o cerca de equipos médicos o de soporte vital. No encienda la unidad en ningún avión.



☐ funcionamiento de este equipo en un entorno residencial puede provocar interferencias de radio.



Para temperaturas ambiente superiores a 60 $^{\circ}$ C, este equipo debe instalarse únicamente en una ubicación de acceso restringido.

Digi IX20 Certifications

You can review certification information for the IX20 on the Digi Certifications page.

International EMC (Electromagnetic Compatibility) and safety standards

This product complies with the requirements of the following Electromagnetic Compatibility standards.

There are no user-serviceable parts inside the product. Contact your Digi representative for repair information.

Certification category	Standards
Electromagnetic Compatibility (EMC)	■ EN 300 328 v1.8.1
compliance standards	■ EN 301 893 v1.7.2
	■ EN 301 489
	■ FCC Part 15 Subpart B Class B
Safety compliance standards	EN 62368
E-UTRA CA, E-UTRA FDD, E-UTRA TDD, UMTS FDD	PTCRB
Cellular carriers	See the current list of carriers on the IX20 datasheet, available on the Digi IX20 Specifications page.

Command line interface

This chapter contains the following topics:

Access the command line interface	113 ²
Log in to the command line interface	
Exit the command line interface	
Execute a command from the web interface	1132
Display help for commands and parameters	1134
Auto-complete commands and parameters	
Available commands	
Use the scp command	
Display status and statistics using the show command	
Device configuration using the command line interface	
Execute configuration commands at the root Admin CLI prompt	
Configuration mode	
Command line reference	

Access the command line interface

You can access the IX20 command line interface using an SSH connection, a telnet connection, or a serial connection. You can use an open-source terminal software, such as PuTTY or TeraTerm, to access the device through one of these mechanisms.

You can also access the command line interface in the WebUI by using the **Terminal**, or the Digi Remote Manager by using the **Console**.

To access the command line, your device must be configured to allow access, and you must log in as a user who has been configured for the appropriate access.

For further information about configuring access to these services, see:

Serial: Serial port

■ WebUI: Configure the web administration service

SSH: Configure SSH accessTelnet: Configure telnet access

Log in to the command line interface

Command line

 Connect to the IX20 device by using a serial connection, SSH or telnet, or the Terminal in the WebUI or the Console in the Digi Remote Manager. See Access the command line interface for more information.

Note Telnet is not available when Primary Responder mode has been enabled for the device. For information about Primary Responder mode, see Differences between standard firmware operation and Primary Responder mode.

- For serial connections, the default configuration is:
 - 9600 baud rate
 - 8 data bits
 - no parity
 - 1 stop bit
 - · no flow control
- For SSH and telnet connections, the Setup IP address of the device is 192.168.2.1 on the.
- 2. At the login prompt, enter the username and password of a user with Admin access:

login: admin
Password: *********

The default username is **admin**. The default unique password for your device is printed on the device label.

3. Depending on the device configuration, you may be presented with another menu, for example:

Access selection menu:

- a: Admin CLI
- s: Shell
- q: Quit

Select access or quit [admin]:

Type a or admin to access the IX20 command line.

You will now be connected to the Admin CLI:

Connecting now...

Press Tab to autocomplete commands

Press '?' for a list of commands and details

Type 'help' for details on navigating the CLI

Type 'exit' to disconnect from the Admin CLI

>

See Command line interface for detailed instructions on using the command line interface.

Exit the command line interface

Command line

1. At the command prompt, type exit.

> exit

Depending on the device configuration, you may be presented with another menu, for example:

Access selection menu:

- a: Admin CLI
- s: Shell
- q: Quit

Select access or quit [admin]:

Type q or quit to exit.

Execute a command from the web interface

Log into the IX20 WebUI as a user with full Admin access rights.

1. At the main menu, click Terminal. The device console appears.

IX20 login:

Select the device in Remote Manager and click Actions > Open Console, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

The Admin CLI prompt appears.

>

Display help for commands and parameters

The help command

When executed from the root command prompt, **help** displays information about autocomplete operations, how to move the cursor on the IX20 command line, and other keyboard shortcuts:

```
> help
Commands
         Show commands help
            Tab completion, displays all valid commands to complete command,
<Tab>
        if only one command is possible, it is used
<Space>
             Like tab except shortest prefix is used if command is valid
<Enter>
            Enter an input. If quoting then a new line is created instead. If
        the input is invalid then characters will be deleted until a
        prefix for a valid command is found.
Ctrl + A Move cursor to start of line
Ctrl + E Move cursor to end of line
Ctrl + W Delete word under cursor until start of line or [\',", \\./..]
Ctrl + R If the current input is invalid then characters will be deleted
        until a prefix for a valid command is found.
Ctrl + left Jump cursor left until start of line or [\',", ,\,/,.]
Ctrl + right Jump cursor right until start of line or [\',", ,\,/,.]
```

The question mark (?) command

When executed from the root command prompt, ? displays available commands:

```
>?
Commands
       View and modify the configuration
config
exit
       Exit the CLI
analyzer Analyzer commands.
       Copy a file or directory.
        Grep a file.
grep
        Show CLI editing and navigation commands.
help
      List a directory.
ls
        Create a directory.
mkdir
modem
          Modem commands.
        View a file.
more
        Move a file or directory.
mν
        Ping a host.
ping
reboot Reboot the system.
        Remove a file or directory.
rm
        Copy a file or directory over SSH.
scp
         Show instance statistics.
show
system
          System commands.
      Tail a file.
tail
traceroute Print the route packets trace to network host.
```

update Update firmware.

Display help for individual commands

When included with a command name, both ? and **help** provide further information about the command. For example:

1. To display further information about the **show** command, type either **show** ?or **show help**:

```
> show?
Commands
arp
         Show ARP tables
cloud
          Show drm statistics
config
          Show config deltas.
containers Show container statistics.
dhcp-lease Show DHCP leases.
dns
          Show DNS servers.
event
          Show event list
hotspot
           Show hotspot statistics.
ipsec
          Show IPsec statistics.
l2tp
         Show L2TP statistics.
12tppeth
           Show L2TPv3 ethernet statistics.
location
           Show loction information.
log
         Show syslog.
manufacture Show manufacturer information.
modbus-gateway Show modbus gateway status & statistics.
modem
             Show modem statistics.
mqtt
          Show MQTT broker information
nemo
           Show NEMO statistics.
network
            Show network interface statistics.
         Show NTP information.
ntp
            Show OpenVPN statistics.
openvpn
route
          Show IP routing information.
scep-client Show SCEP client statistics.
          Show scheduled scripts.
scripts
serial
          Show serial statistics.
surelink
           Show Surelink statistics.
system
           Show system statistics.
version
           Show firmware version.
         Show VRRP statistics.
vrrp
web-filter Show web filter information.
wifi
         Show Wi-Fi statistics.
> show
```

Use the Tab key or the space bar to display abbreviated help

When executed from the root command prompt, pressing the **Tab** key or the space bar displays an abbreviated list of available commands:

Similar behavior is available with any command name:

```
> config network interface <space>
.. ... setupip setuplinklocalip lan loopback
> config network interface
```

Auto-complete commands and parameters

When entering a command and parameter, press the **Tab** key to cause the command line interface to auto-complete as much of the command and parameter as possible. Typing the space bar has similar behavior. If multiple commands are available that will match the entered text, auto-complete is not performed and the available commands are displayed instead.

Auto-complete applies to these command elements only:

- Command names. For example, typing net<Tab> auto-completes the command as network.
- Parameter names. For example:
 - ping hostname int<Tab> auto-completes the parameter as interface.
 - system b<Tab> auto-completes the parameter as backup.
- Parameter values, where the value is one of an enumeration or an on|off type; for example:

```
(config)> serial port1 enable t<Tab>
auto-completes to

(config)> serial port1 enable true
```

Auto-complete does not function for:

- Parameter values that are string types.
- Integer values.
- File names.
- Select parameters passed to commands that perform an action.

Command line interface Available commands

Available commands

The following commands are available from the Admin CLI prompt:

Command	Description
config	Used to view and modify the configuration.
	See Device configuration using the command line interface for more information about using the config command.
exit	Exits the CLI.
analyzer	Analyzer commands.
cat	View a file.
clear	Commands to clear the device's status or systems.
container	Create, delete, or interact with a container.
ср	Copies a file or directory.
grep	Grep a file.
help	Displays:
	 CLI editing and navigation commands, when executed from the root of the Admin CLI prompt. Available commands, syntax diagram, and parameter information, when executed in conjunction with another command. See Display help for commands and parameters for information about the help command.
ls	Lists the contents of a directory.
mkdir	Creates a directory.
modem	Executes modem commands.
monitoring	Monitoring commands.
more	Displays the contents of a file.
mv	Moves a file or directory.
ping	Pings a remote host using Internet Control Message Protocol (ICMP) Echo Request messages.
poweroff	Powers off the system.
reboot	Reboots the IX20 device.
rm	Removes a file.
scp	Uses the secure copy protocol (SCP) to transfer files between the IX20 device and a

Command line interface Use the scp command

Command	Description
	remote host.
	See Use the scp command for information about using the scp command.
show	Displays information about the device and the device's configuration.
	See Display status and statistics using the show command for more information about the show command.
iperf	Perform a speedtest.
ssh	SSH login to a remote server.
system	Issues commands related to system functionality.
tail	Tail a file.
telnet	Telnet login to a remote server.
traceroute	Sends and tracks route packets to a destination host.

Note For commands that operate on the IX20's file system, such as the **cp**, **Is**, and **mkdir** commands, see File system for information about the file system, including how to copy, move and delete files and directories.

Use the scp command

The **scp** command uses Secure Copy Protocol (SCP) to transfer files between the IX20 device and a remote host.

Required configuration items

- The hostname or IP address of the remote host.
- The username and password of the user on the remote host.
- Whether the file is being copied to the IX20 device from a remote host, or to the remote host from the IX20 device.
 - If the file is being copied to the IX20 device from a remote host:
 - The path and filename of the file on the remote host that will be copied to the IX20 device.
 - The location on the IX20 device where the file will be copied.
 - If the file is being copied to a remote host from the IX20 device:
 - The path and filename of the file on the IX20 device that will be copied to the remote host.
 - The location on the remote host where the file will be copied.

Copy a file from a remote host to the IX20 device

To copy a file from a remote host to the IX20 device, use the scp command as follows:

> scp host hostname-or-ip user username remote remote-path local local-path to local

where:

- hostname-or-ip is the hostname or IP address of the remote host.
- username is the name of the user on the remote host.
- remote-path is the path and filename of the file on the remote host that will be copied to the IX20 device.
- local-path is the location on the IX20 device where the copied file will be placed.

For example:

To copy firmware from a remote host with an IP address of 192.168.4.1 to the /etc/config directory on the IX20 device, issue the following command:

```
> scp host 192.168.4.1 user admin remote /home/admin/bin/IX20-25.2.bin local /etc/config/scripts to local admin@192.168.4.1's password: adminpwd IX20-25.2.bin 100% 36MB 11.1MB/s 00:03 >
```

Transfer a file from the IX20 device to a remote host

To copy a file from the IX20 device to a remote host, use the scp command as follows:

> scp host hostname-or-ip user username remote remote-path local local-path to remote

where:

- hostname-or-ip is the hostname or IP address of the remote host.
- username is the name of the user on the remote host.
- remote-path is the location on the remote host where the file will be copied.
- local-path is the path and filename on the IX20 device.

For example:

To copy a support report from the IX20 device to a remote host at the IP address of 192.168.4.1:

1. Use the **system support-report** command to generate the report:

```
> system support-report path /var/log/
Saving support report to /var/log/support-report-0040D0133536-24-01-12-12:10:00.bin
Support report saved.
```

2. Use the **scp** command to transfer the report to a remote host:

```
> scp host 192.168.4.1 user admin remote /home/admin/temp/ local /var/log/support-report-00:40:D0:13:35:36-24-01-12-12:10:00.bin to remote admin@192.168.4.1's password: adminpwd support-report-0040D0133536-24-01-12-12:10:00.bin >
```

Display status and statistics using the show command

The IX20 **show** command display status and statistics for various features. For example:

show config

The show config command displays all the configuration settings for the device that have been changed from the default settings. This is a particularly useful when troubleshooting the device.

```
> show config

auth tacacs+ service "login"
auth user admin password "$2a$05$WIJQhquI7BgsytkpobKhaeLPtWraGANBcrlEaJX/wJv63JENW/HOu"
add auth user test
add auth user test group end "admin"
add auth user test group end "serial"
auth user test password "$2a$05$RdGYz1sLKbWrqe6cZjlsd.otg03JZR6n9939XV6EYWUSP0tMAzO5W"
network interface lan ipv4 type "dhcp"
network interface lan zone "external"
network interface modem modem apn 0 apn "00000.000"
network interface modem modem apn_lock "true"
schema version "445"
```

show system

The show system command displays system information and statistics for the device, including CPU usage.

```
> show system
Model
                : Digi IX20
                   : IX20xxxxxxxxyyyyxx
Serial Number
SKU
               : IX20
                : IX20
Hostname
MAC Address
                   : DF:DD:E2:AE:21:18
                     : 50001947-01 1P
Hardware Version
                    : 25.2
Firmware Version
Alt. Firmware Version : 25.2
Alt. Firmware Build Date: Fri, Jan 12, 2024 12:10:00
Bootloader Version : 19.7.23.0-15f936e0ed
Current Time
                  : Thu, Jan 11, 2024 12:10:00 +0000
CPU
               : 1.4%
Uptime
                : 6 days, 6 hours, 21 minutes, 57 seconds (541317s)
Temperature
                   : 40C
Location
Contact
```

show network

The show network command displays status and statistics for network interfaces.

```
setupip IPv4 up 192.168.210.1/24

setuplinklocalip IPv4 up 169.254.100.100/16

lan IPv4 up 192.168.2.1

lan IPv6 up 0:0:0:0:0:ffff:c0a8:301

loopback IPv4 up 127.0.0.1/8

wan IPv4 up 192.168.3.1/24

wan IPv6 up fd00:2704::240:ffff:fe80:120/64
```

Device configuration using the command line interface

The **config** command allows for device configuration from the command line. All configuration tasks that can be performed by using the WebUI can also be performed by using the **config** command. There are two ways to invoke the **config** command from the CLI:

- Execute the **config** command and parameters at the root prompt. See Execute configuration commands at the root Admin CLI prompt for more information.
- Enter configuration mode by executing the config command without any parameters. See Configuration mode for more information.

Execute configuration commands at the root Admin CLI prompt

You can execute the **config** command at the root Admin CLI prompt with any appropriate parameters. When the **config** command is used in this way, changes to the device's configuration are automatically saved when the command is executed.

For example, to disable the SSH service from the root prompt, enter the following command:

```
> config service ssh enable false
>
```

The IX20 device's ssh service is now disabled.

Note When the **config** command is executed at the root prompt, certain configuration actions that are available in configuration mode cannot be performed. This includes validating configuration changes, canceling and reverting configuration changes, and performing actions on elements in lists. See Configuration mode for information about using configuration mode.

Display help for the config command from the root Admin CLI prompt

Display additional configuration commands, as well as available parameters and values, by entering the question mark (?) character after the **config** command.

1. For example:
> config ?
Will display the following help information:
> config ?

Additional Configuration

application Custom scripts auth Authentication cloud Central management

firewall Firewall
monitoring Monitoring
network Network
serial Serial
service Services
system VPN

Run "config" with no arguments to enter the configuration editing mode.

> config

2. You can then display help for the additional configuration commands. For example, to display help for the **config service** command:

> config service ?

Services

Additional Configuration

dns DNS

mdns Service Discovery (mDNS)

multicast Multicast

ntp NTP

remote_control Remote control

snmp SNMP ssh SSH telnet Telnet

web_admin Web administration

> config service

3. Next, display help for the **config service ssh** command:

> config service ssh?

SSH: An SSH server for managing the device.

Parameters Current Value

enable true Enable key [private] Private key

port 22 Port

Additional Configuration

acl Access control list
mdns
> config service ssh

4. Lastly, display the allowed values and other information for the enable parameter:

```
> config service ssh enable?
```

Enable: Enable the service. Format: true, false, yes, no, 1, 0

Default value: true Current value: true

> config service ssh enable

Configuration mode

Configuration mode allows you to perform multiple configuration tasks and validate the changes prior to saving them. You can cancel all changes without saving them at any time. Configuration changes do not take effect until the configuration is saved.

Enable configuration mode

To enable configuration mode, at the root prompt, enter the **config** command without any parameters:

```
> config
(config)>
```

When the command line is in configuration mode, the prompt will change to include (config), to indicate that you are currently in configuration mode.

Enter configuration commands in configuration mode

There are two ways to enter configuration commands while in configuration mode:

Enter the full command string from the config prompt.
For example, to disable the ssh service by entering the full command string at the config prompt:

```
(config)> service ssh enable false (config)>
```

Execute commands by moving through the configuration schema.

For example, to disable the ssh service by moving through the configuration and then executing the **enable false** command:

1. At the config prompt, enter service to move to the service node:

```
(config)> service
(config service)>
```

2. Enter **ssh** to move to the **ssh** node:

(config service)> ssh (config service ssh)>

3. Enter enable false to disable the ssh service:

(config service ssh)> enable false (config service ssh)>

See Move within the configuration schema for more information about moving within the configuration.

Save changes and exit configuration mode

To save changes that you have made to the configuration while in configuration mode, use **save**. The save command automatically validates the configuration changes; the configuration will not be saved if it is not valid. Note that you can also validate configuration changes at any time while in configuration mode by using the **validate** command.

(config)> save Configuration saved.

After using **save** to save changes to the configuration, you will automatically exit configuration mode. To return to configuration mode, type **config** again.

Exit configuration mode without saving changes

You can discard any unsaved configuration changes and exit configuration mode by using the **cancel** command:

(config)> cancel

After using **cancel** to discard unsaved changes to the configuration, you will automatically exit configuration mode.

Configuration actions

In configuration mode, configuration actions are available to perform tasks related to saving or canceling the configuration changes, and to manage items and elements in lists. The commands can be listed by entering a question mark (?) at the **config** prompt.

The following actions are available:

Configuration actions	Description
cancel	Discards unsaved configuration changes and exits configuration mode.
save	Saves configuration changes and exits configuration mode.

Configuration actions	Description
validate	Validates configuration changes.
revert	Reverts the configuration to default settings. See The revert command for more information.
show	Displays configuration settings.
add	Adds a named element, or an element in a list. See Manage elements in lists for information about using the add command with lists.
del	Deletes a named element, or an element in a list. See Manage elements in lists for information about using the del command with lists.
move	Moves elements in a list. See Manage elements in lists for information about using the move command with lists.

Display command line help in configuration mode

Display additional configuration commands, as well as available parameters and values, by entering the question mark (?) character at the **config** prompt. For example:

1. Enter ?at the config prompt:

(config)>? This will display the following help information: (config)>? Additional Configuration application Custom scripts Authentication auth cloud Central management firewall Firewall monitoring Monitoring network Network Serial serial service Services system System vpn **VPN** (config)>

2. You can then display help for the additional configuration commands. For example, to display help for the **config service** command, use one of the following methods:

■ At the **config** prompt, enter **service** ?

(config)> service?

■ At the **config** prompt:

a. Enter service to move to the service node:

(config)> service (config service)>

b. Enter ?to display help for the service node:

(config service)>?

Either of these methods will display the following information:

config> service ?

Services

Additional Configuration

dns DNS

mdns Service Discovery (mDNS)

multicast Multicast

ntp NTP

remote_control Remote control

snmp SNMP ssh SSH telnet Telnet

web_admin Web administration

(config)> service

- 3. Next, to display help for the **service ssh** command, use one of the following methods:
 - At the **config** prompt, enter **service ssh**?

(config)> service ssh?

- At the **config** prompt:
 - a. Enter service to move to the service node:

(config)> service (config service)>

b. Enter ssh to move to the ssh node:

(config service)> ssh (config service ssh)>

c. Enter ?to display help for the ssh node:

(config service ssh)>?

Either of these methods will display the following information:

(config)> service ssh?

SSH: An SSH server for managing the device.

Parameters	Current Value
enable key port	true Enable [private] Private key 22 Port
Additional Configuration	
acl mdns	Access control list

(config)> service ssh

4. Lastly, to display allowed values and other information for the **enable** parameter, use one of the following methods:

At the config prompt, enter service ssh enable ?:

(config)> service ssh enable?

- At the **config** prompt:
 - a. Enter service to move to the service node:

(config)> service (config service)>

b. Enter ssh to move to the ssh node:

(config service)> ssh (config service ssh)>

c. Enter **enable** ?to display help for the **enable** parameter:

(config service ssh)> enable ?
(config service ssh)>

Either of these methods will display the following information:

(config)> service ssh enable?

Enable: Enable the service. Format: true, false, yes, no, 1, 0

Default value: true Current value: true

(config)> service ssh enable

Move within the configuration schema

You can perform configuration tasks at the CLI by moving within the configuration.

Move forward one node in the configuration by entering the name of an Additional Configuration option:

1. At the **config** prompt, type **service** to move to the **service** node:

```
(config)> service
(config service)>
```

2. Type ssh to move to the ssh node:

```
(config service)> ssh
(config service ssh)>
```

3. Type acl to move to the acl node:

```
(config service ssh)> acl (config service ssh acl)>
```

4. Type **zone** to move to the **zone** node:

```
(config service ssh acl)> zone (config service ssh acl zone)>
```

You can also enter multiple nodes at once to move multiple steps in the configuration:

```
(config)> service ssh acl zone
(config service ssh acl zone)>
```

Move backward one node in the configuration by entering two periods (..):

```
(config service ssh acl zone)> .. (config service ssh acl)>
```

You can also move back multiples nodes in the configuration by typing multiple sets of two periods:

```
(config service ssh acl zone)> .....
(config service)>
```

• Move to the root of the config prompt from anywhere within the configuration by entering three periods (...):

```
(config service ssh acl zone)> ... (config)>
```

Manage elements in lists

While in configuration mode, you can use the **add**, **del**, and **move** action commands to manage elements in a list. When working with lists, these actions require an index number to identify the list item that will be acted on.

Add elements to a list

When used with parameters that contains lists of elements, the **add** command is used to add an element to the list.

For example, to add an authentication method:

1. Display current authentication method by using the **show** command:

```
(config)> show auth method
0 local
(config)>
```

- 2. Add an authentication method by using the add index_item command. For example:
 - To add the TACACS+ authentication method to the beginning of the list, use the index number **0**:

```
(config)> add auth method 0 tacacs+
(config)> show auth method
0 tacacs+
1 local
(config)>
```

To add the TACACS+ authentication method to the end of the list, use the end keyword:

```
(config)> add auth method end tacacs+
(config)> show auth method
0 local
1 tacacs+
(config)>
```

The end keyword

As demonstrated above, the **end** keyword is used to add an element to the end of a list. Additionally, the **end** keyword is used to add an element to a list that does not have any elements.

For example, to add an authentication group to a user that has just been created:

1. Use the **show** command to verify that the user is not currently a member of any groups:

```
(config)> show auth user new-user group (config)>
```

2. Use the **end** keyword to add the admin group to the user's configuration:

```
(config)> add auth user new-user group end admin (config)>
```

Use the **show** command again to verify that the admin group has been added to the user's configuration:

```
(config)> show auth user new-user group
0 admin
(config)>
```

Delete elements from a list

When used with parameters that contains lists of elements, the **del** command is used to delete an element in the list.

For example, to delete an authentication method:

1. Use the **show** command to display current authentication method configuration:

```
(config)> show auth method
0 local
1 tacacs+
2 radius
(config)>
```

- Delete one of the authentication methods by using the del index_number command. For example:
 - a. To delete the local authentication method, use the index number 0:

```
(config)> del auth method 0 (config)>
```

b. Use the **show** command to verify that the local authentication method was removed:

```
(config)> show auth method
0 tacacs+
1 radius
(config)>
```

Move elements within a list

Use the move command to reorder elements in a list.

For example, to reorder the authentication methods:

1. Use the **show** command to display current authentication method configuration:

```
(config)> show auth method
0 local
1 tacacs+
2 radius
(config)>
```

2. To configure the device to use TACACS+ authentication first to authenticate a user, use the move index_number_1 index_number_2 command:

```
(config)> move auth method 1 0 (config)>
```

3. Use the **show** command again to verify the change:

```
(config)> show auth method
0 tacacs+
1 local
2 radius
(config)>
```

The revert command

The **revert** command is used to revert changes to the IX20 device's configuration and restore default configuration settings. The behavior of the revert command varies depending on where in the configuration hierarchy the command is executed, and whether the optional **path** parameter is used. After executing the revert command, you must save the configuration changes by using the **save** command. You can also discard the configuration changes by using the **cancel** command.



CAUTION! The **revert** command reverts all changes to the default configuration, not only unsaved changes.

Revert all configuration changes to default settings

To discard all configuration changes and revert to default settings, use the **revert** command at the config prompt without the optional **path** parameter:

1. At the config prompt, enter **revert**:

(config)> revert (config)>

2. Set the password for the admin user prior to saving the changes:

(config)> auth user admin password *pwd* (config)>

Save the configuration and apply the change.

(config)> save Configuration saved.

4. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Revert a subset of configuration changes to the default settings

There are two methods to revert a subset of configuration changes to the default settings.

- Enter the **revert** command with the **path** parameter. For example, to revert all changes to the authentication methods configuration:
 - 1. Enter the **revert** command with the **path** set to **auth method**:

(config)> revert auth method (config)>

2. Save the configuration and apply the change.

(config)> save
Configuration saved.

3. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Move to the location in the configuration and enter the revert command without the path parameter. For example:

1. Change to the auth method node:

(config)> auth method (config auth method)>

2. Enter the revert command:

(config auth method)> revert (config auth method)>

3. Save the configuration and apply the change.

(config auth method)> save Configuration saved.

>

4. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

- You can also use a combination of both of these methods:
 - 1. Change to the auth node:

(config)> auth (config auth)>

2. Enter the revert command with the path set to method:

(config auth)> revert method (config auth)>

3. Save the configuration and apply the change.

(config auth)> save Configuration saved.

.

4. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **quit** to disconnect from the device.

Enter strings in configuration commands

For string parameters, if the string value contains a space, the value must be enclosed in quotation marks. For example, to assign a descriptive name for the device using the **system** command, enter:

(config)> system description "Digi IX20"

Command line interface Configuration mode

Example: Create a new user by using the command line

In this example, you will use the IX20 command line to create a new user, provide a password for the user, and assign the user to authentication groups.

1. Select the device in Remote Manager and click **Actions > Open Console**, or log into the IX20 local command line as a user with full Admin access rights.

Depending on your device configuration, you may be presented with an **Access selection menu**. Type **admin** to access the Admin CLI.

2. At the command line, type **config** to enter configuration mode:

```
> config
(config)>
```

- 3. At the config prompt, create a new user with the username user1:
 - Method one: Create a user at the root of the config prompt:

```
(config)> add auth user user1
(config auth user user1)>
```

- Method two: Create a user by moving through the configuration:
 - a. At the config prompt, enter auth to move to the auth node:

```
(config)> auth
(config auth)>
```

b. Enter user to move to the user node:

```
(config auth)> user (config auth user)>
```

c. Create a new user with the username user1:

```
(config auth user)> add user1
(config auth user user1)>
```

4. Configure a password for the user:

```
(config auth user user1)> password pwd1 (config auth user user1)>
```

5. List available authentication groups:

```
(config auth user user1)> show .... group

admin
acl
admin
enable true
nagios
enable false
openvpn
enable false
```

Command line interface Configuration mode

```
no tunnels
        portal
          enable false
          no portals
        serial
          enable false
          no ports
        shell
          enable false
    serial
      acl
        admin
          enable true
        nagios
          enable false
        openvpn
          enable false
          no tunnels
        portal
          enable false
          no portals
        serial
          enable true
            ports
               0 port1
        shell
          enable false
    (config auth user user1)>
6. Add the user to the admin group:
```

```
(config auth user user1)> add group end admin
(config auth user user1)>
```

7. Save the configuration and apply the change.

```
(config auth user user1)> save
Configuration saved.
```

8. Type exit to exit the Admin CLI.

Depending on your device configuration, you may be presented with an Access selection menu. Type quit to disconnect from the device.

Command line reference

ain calibrate

Measure current value of analog input, and set it as zero offset.

Syntax

ain calibrate <name> <type> <setpoint>

Parameters

name: Name of the analog input.

type: Calibrate low or high-end of analog input range.

setpoint: Reference voltage/current connected on the analog input (in mV/uA). (Minimum: 0)

ain calibration-reset

Reset both voltage and current calibration of analog input.

Syntax

ain calibration-reset <name>

Parameters

name: Name of the analog input.

analyzer clear

Clears the traffic captured by the analyzer.

Syntax

analyzer clear <name>

Parameters

name: Name of the capture filter to use.

analyzer save

Saves the current captured traffic to a file.

Syntax

analyzer save <name> <path>

Parameters

name: Name of the capture filter to use.

path: The path and filename to save captured traffic to. If a relative path is provided, /etc/config/analyzer will be used as the root directory for the path and file.

analyzer start

Start a capture session of packets on this devices interfaces.

Syntax

analyzer start <name>

Parameters

name: Name of the capture filter to use.

analyzer stop

Stops the traffic capture session.

Syntax

analyzer stop <name>

Parameters

name: Name of the capture filter to use.

cat

View the contents of a file.

Syntax

cat <path>

Parameters

path: The file to view.

clear dhcp-lease ip-address

Clear the DHCP lease for the specified IP address.

Syntax

clear dhcp-lease ip-address <address>

Parameters

address: An IPv4 or IPv6 address.

clear dhcp-lease mac

Clear the DHCP lease for the specified MAC address.

Syntax

clear dhcp-lease mac ADDRESS

Parameters

address: 12-digit, colon-delimited MAC address [00:11:22:AA:BB:CC]

container create

Create a LXC container from a given image. This process creates a copy of the image, so the original image may be deleted after creating the container without breaking the container.

Syntax

container create <path>

Parameters

path: Filepath for container image to be created. .

container delete

Delete a LXC container. This will remove the LXC container configuration and the container image.

Syntax

container delete <container>

Parameters

container: Filepath for container image to be deleted. This process also removes any associated configuration.

ср

Copy a file or directory.

Syntax

cp <source> <destination> [force]

Parameters

source: The source file or directory to copy.

destination: The destination path to copy the source file or directory to.

force: Do not ask to overwrite the destination file if it exists.

dio state

Set digital I/O.

Syntax

dio state <name> <state>

Parameters

name: Name of the digital I/O. state: State of the digital I/O.

grep

Grep the contents of a file.

Syntax

grep <match> <path>

Parameters

match: Output all lines in file matching string.

path: The file to grep.

help

Show CLI editing and navigation commands.

Syntax

help

Parameters

None

ls

List a directory.

Syntax

Is <path> [show-hidden]

Parameters

path: List files and directories under this path.

show-hidden: Show hidden files and directories. Hidden filenames begin with '.'.

mkdir

Create a directory. Parent directories are created as needed.

Syntax 5 1

mkdir <path>

Parameters

path: The directory path to create.

modem at

Send an AT command to the modem and display the response.

Syntax

modem at <cmd> [name STRING] [imei STRING]

Parameters

cmd: The AT command string.

name: The configured name of the modem to execute this CLI command on.

imei: The IMEI of the modem to execute this CLI command on.

modem at-interactive

Start an AT command session on the modem's AT serial port.

Syntax

modem at-interactive [name STRING] [imei STRING]

Parameters

name: The configured name of the modem to execute this CLI command on.

imei: The IMEI of the modem to execute this CLI command on.

modem firmware bundle ota check

Query the Digi firmware server for the latest remote modem firmware version.

Syntax

modem firmware bundle ota check [name STRING]

Parameters

name: The configured name of the modem to execute this CLI command on.

modem firmware bundle ota download

Downloads modem firmware from the server. The firmware will be downloaded on the device but the modem won't be updated.

Syntax

modem firmware bundle ota download [name STRING] [version STRING] [binary STRING]

Parameters

name: The configured name of the modem to execute this CLI command on.

version: Firmware version name. binary: Firmware binary position.

modem firmware bundle ota list

Query the Digi firmware server for a list of modem firmware versions.

Syntax

modem firmware bundle ota list [name STRING]

Parameters

name: The configured name of the modem to execute this CLI command on.

modem firmware bundle ota update

Perform FOTA (firmware-over-the-air) update. The modem will be updated to the latest modem firmware image unless a specific firmware version is specified.

Syntax

modem firmware bundle ota update [name STRING] [version STRING]

Parameters

name: The configured name of the modem to execute this CLI command on.

version: Firmware version name.

modem firmware check

Inspect /opt/[MODEM_MODEL]/Custom_Firmware/ directory for new modem firmware file.

Syntax

modem firmware check [name STRING] [imei STRING]

Parameters

name: The configured name of the modem to execute this CLI command on.

imei: The IMEI of the modem to execute this CLI command on.

modem firmware list

List modem firmware files found in the /opt/[MODEM_MODEL]/ directory.

Syntax

modem firmware list [name STRING] [imei STRING]

Parameters

name: The configured name of the modem to execute this CLI command on.

imei: The IMEI of the modem to execute this CLI command on.

modem firmware ota check

Query the Digi firmware server for the latest remote modem firmware version.

Syntax

modem firmware ota check [name STRING] [imei STRING]

Parameters

name: The configured name of the modem to execute this CLI command on.

imei: The IMEI of the modem to execute this CLI command on.

modem firmware ota download

Downloads modem firmware from the server. The firmware will be downloaded on the device but the modem won't be updated.

Syntax

modem firmware ota download [name STRING] [imei STRING] [version STRING]

Parameters

name: The configured name of the modem to execute this CLI command on.

imei: The IMEI of the modem to execute this CLI command on.

version: Firmware version name.

modem firmware ota list

Query the Digi firmware server for a list of modem firmware versions.

Syntax

modem firmware ota list [name STRING] [imei STRING]

Parameters

name: The configured name of the modem to execute this CLI command on.

imei: The IMEI of the modem to execute this CLI command on.

modem firmware ota update

Perform FOTA (firmware-over-the-air) update. The modem will be updated to the latest modem firmware image unless a specific firmware version is specified.

Syntax

modem firmware ota update [name STRING] [imei STRING] [version STRING]

Parameters

name: The configured name of the modem to execute this CLI command on.

imei: The IMEI of the modem to execute this CLI command on.

version: Firmware version name.

modem firmware update

Update modem firmware using local firmware file. The modem will be updated to the firmware specified in the /opt/[MODEM_MODEL]/Custom_Firmware/ directory unless a specific firmware version is specified.

Syntax

modem firmware update [name STRING] [imei STRING] [version STRING]

Parameters

name: The configured name of the modem to execute this CLI command on.

imei: The IMEI of the modem to execute this CLI command on.

version: Firmware version name.

modem pin change

Change the SIM's PIN code.

Warning: Attempting to use an incorrect PIN code may PUK lock the SIM.

Syntax

modem pin change <old-pin> <new-pin> [name STRING] [imei STRING]

Parameters

old-pin: The SIM's PIN code.

new-pin: The PIN code to change to.

name: The configured name of the modem to execute this CLI command on.

imei: The IMEI of the modern to execute this CLI command on.

modem pin disable

Disable the PIN lock on the SIM card that is active in the modem.

Warning: Attempting to use an incorrect PIN code may PUK lock the SIM.

Syntax

modem pin disable <pin> [name STRING] [imei STRING]

Parameters

pin: The SIM's PIN code.

name: The configured name of the modem to execute this CLI command on.

imei: The IMEI of the modem to execute this CLI command on.

modem pin enable

Enable the PIN lock on the SIM card that is active in the modem. The SIM card will need to be unlocked before each use.

Warning: Attempting to use an incorrect PIN code may PUK lock the SIM.

Syntax

modem pin enable <pin> [name STRING] [imei STRING]

Parameters

pin: The SIM's PIN code.

name: The configured name of the modem to execute this CLI command on.

imei: The IMEI of the modem to execute this CLI command on.

modem pin status

Print the PIN lock status and the number of PIN enable/disable/unlock attempts remaining. The SIM will be PUK locked when there are no remaining retries.

Syntax

modem pin status [name STRING] [imei STRING]

Parameters

name: The configured name of the modem to execute this CLI command on.

imei: The IMEI of the modem to execute this CLI command on.

modem pin unlock

Temporarily unlock the SIM card with a PIN code. Set the PIN field in the modem interface's configuration to unlock the SIM card automatically before use.

Warning: Attempting to use an incorrect PIN code may PUK lock the SIM.

Syntax

modem pin unlock <pin> [name STRING] [imei STRING]

Parameters

pin: The SIM's PIN code.

name: The configured name of the modem to execute this CLI command on.

imei: The IMEI of the modem to execute this CLI command on.

modem puk status

Print the PUK status and the number of PUK unlock attempts remaining.

Syntax

modem puk status [name STRING] [imei STRING]

Parameters

name: The configured name of the modem to execute this CLI command on.

imei: The IMEI of the modem to execute this CLI command on.

modem puk unlock

Unlock the SIM with a PUK code from the SIM provider.

Syntax

modem puk unlock <puk> <new-pin> [name STRING] [imei STRING]

Parameters

puk: The SIM's PUK code.

new-pin: The PIN code to change to.

name: The configured name of the modem to execute this CLI command on.

imei: The IMEI of the modem to execute this CLI command on.

modem reset

Reset the modem hardware (reboot it). This can be useful if the modem has stopped responding to the network or is behaving inconsistently.

Syntax

modem reset [name STRING] [imei STRING]

Parameters

name: The configured name of the modem to execute this CLI command on.

imei: The IMEI of the modem to execute this CLI command on.

modem scan

List of carriers present in the network.

Syntax

modem scan [name STRING] [imei STRING] [timeout INTEGER]

Parameters

name: The configured name of the modem to execute this CLI command on.

imei: The IMEI of the modem to execute this CLI command on.

timeout: The amount of time in seconds to wait for modem scan to complete. (Default: 300)

modem sim-slot

Show or change the modem's active SIM slot. This applies only to modems with multiple SIM slots.

Syntax

modem sim-slot <slot> [name STRING] [imei STRING]

Parameters

slot: The SIM slot to change to.

name: The configured name of the modem to execute this CLI command on.

imei: The IMEI of the modem to execute this CLI command on.

modem sms send

Send an SMS message to the provided phone number (MSISDN).

Syntax 5 1

modem sms send <msisdn> <message> [name STRING] [imei STRING]

Parameters

msisdn: Destination phone number (MSISDN).

message: Message to send.

name: The configured name of the modem to execute this CLI command on.

imei: The IMEI of the modem to execute this CLI command on.

modem sms send-binary

Send a binary SMS message to the provided phone number (MSISDN).

Syntax

modem sms send-binary <msisdn> <message> [name STRING] [imei STRING]

Parameters

msisdn: Destination phone number (MSISDN).

message: Message to send.

name: The configured name of the modem to execute this CLI command on.

imei: The IMEI of the modem to execute this CLI command on.

monitoring metrics upload

Immediately upload current device health metrics. Functions as if a scheduled upload was triggered.

Syntax

monitoring metrics upload

Parameters

None

monitoring

Commands to clear the device's status or systems.

monitoring metrics

Device metrics commands.

uplaod

Immediately upload current device health metrics. Functions as if a scheduled upload was triggered.

Parameters

None

monitoring metrics upload

Immediately upload current device health metrics. Functions as if a scheduled upload was triggered.

Syntax

monitoring metrics upload

Parameters

None

more

View a file.

Syntax

more <path>

Parameters

path: The file to view.

mv

Move a file or directory.

Syntax

mv <source> <destination> [force]

Parameters

source: The source file or directory to move.

destination: The destination path to move the source file or directory to.

force: Do not ask to overwrite the destination file if it exists.

ping

Ping a host using ICMP echo.

Syntax

ping <host> [interface STRING] [source STRING] [ipv6] [size INTEGER] [count INTEGER] [broadcast]

Parameters

host: The name or address of the remote host to send ICMP ping requests to. If broadcast is enabled, can be the broadcast address.

interface: The network interface to send ping packets from when the host is reachable over a default route. If not specified, the system's primary default route will be used.

source: The ping command will send a packet with the source address set to the IP address of this interface, rather than the address of the interface the packet is sent from.

ipv6: If a hostname is defined as the value of the 'host' parameter, use the hosts IPV6 address.

size: The number of bytes sent in the ICMP ping request. (Minimum: 0, Default: 56)

count: The number of ICMP ping requests to send before terminating. (Minimum: 1, Default: 100)

broadcast: Enable broadcast ping functionality.

poweroff

Power off the system.

Syntax

poweroff

Parameters

None

pyinstall

Pyinstall commands.

Syntax

pyinstall <package>

Parameters

package: Path and filename of the package to install (.zip, .whl).

reboot

Reboot the system.

Parameters

None

rm

Remove a file or directory.

Syntax

rm <path> [force]

Parameters

path: The path to remove.

force: Force the file to be removed without asking.

scp

Copy a file or directory over SSH.

Syntax

scp <local> <remote> <host> <user> <to> [port INTEGER]

Parameters

local: The path and name of the file on the local device to copy to or from.

remote: The path and name of the file on the remote host to copy to or from.

host: The hostname or IP address of the remote host.

user: The username to use when connecting to the remote host.

to: Determine whether to copy the file from the local device to the remote host, or from the remote host to the local device.

port: The SSH port to use to connect to the remote host. (Minimum: 1, Maximum: 65535, Default: 22)

config directory: show command

Show a summary of changes made to the default configuration in a format that can be copied and pasted.

Note This same information can be displayed using the show config command, but the display is not suitable for copying and pasting.

Syntax

> config (config)> show

Parameters

None

show ain

Show analog input status.

Syntax

show ain [name STRING]

Parameters

name: Name of the analog input.

show analyzer

Show packets from a specified analyzer capture.

Syntax

show analyzer <name>

Parameters

name: Name of the capture filter to use.

show arp

Show ARP tables. If no IP version is specified IPv4 & IPV6 will be displayed.

Syntax

show arp [ipv4] [ipv6] [verbose]

Parameters

ipv4: Display IPv4 routes. If no IP version is specified IPv4 & IPV6 will be displayed. ipv6: Display IPv6 routes. If no IP version is specified IPv4 & IPV6 will be displayed.

verbose: Display more information (less concise, more detail).

show bluetooth-scanner log

Show the Bluetooth scanner output log.

Syntax

show bluetooth-scanner log

Parameters

None

show bluetooth-scanner nearby

Show Bluetooth devices detected during the most recent update interval.

Syntax

show bluetooth-scanner nearby

Parameters

None

show bluetooth-scanner static-candidate

Show Bluetooth devices detected during the most recent observation period but not evaluated as static.

Syntax

show bluetooth-scanner static-candidate

Parameters

None

show bluetooth-scanner static-confirmed

Show Bluetooth devices that have been evaluated as static.

Syntax

show bluetooth-scanner static-confirmed

Parameters

None

show cloud

Show drm status & statistics.

Syntax

show cloud

Parameters

None

show config

Show a summary of changes made to the default configuration. The changes shown are not suitable for pasting into a CLI session.

Syntax

show config [cli_format]

Parameters

cli_format: Show the exact CLI commands required to configure the device from a default configuration. The changes shown are suitable for pasting into a CLI session, although individual output lines maybe context sensitive and unable to be entered in isolation.

show containers

Show container status & statistics.

Syntax

show containers [container STRING]

Parameters

container: Display more details and config data for a specific container.

show dhcp-lease

Show DHCP leases.

Syntax

show dhcp-lease [all] [verbose]

Parameters

all: Show all leases (active and inactive (not in etc/config/dhcp.*lease)).

verbose: Display more information (less concise, more detail).

show dio

Show digital I/O status.

Syntax

show dio [name STRING]

Parameters

name: Name of the digital I/O.

show dns

Show DNS servers and associated domains.

Syntax

show dns

Parameters

None

show eth

Show ethernet status & statistics.

Syntax

show eth [name STRING]

Parameters

name: Display more details and configuration data for a specific ethernet instance.

show event

Show event list (high level).

Syntax

show event [table <status|error|info>] [number INTEGER]

Parameters

table: Type of event log to be displayed (status, error, info).

number: Number of lines to retrieve from log. (Minimum: 1, Default: 20)

show hotspot

Show hotspot statistics.

Syntax

show hotspot [name STRING] [ip STRING]

Parameters

name: The configured instance name of the hotspot.

ip: IP address of a specific client, to limit the status display to only this client.

show ipsec

Show IPsec status & statistics.

Syntax

show ipsec [tunnel STRING] [all] [verbose]

Parameters

tunnel: Display more details and config data for a specific IPsec tunnel.

all: Display all tunnels including disabled tunnels.

verbose: Display status of one or all tunnels in plain text.

show I2tp lac

Show L2TP access concentrator status & statistics.

Syntax

show I2tp lac [name STRING]

Parameters

name: Display more details for a specific L2TP access concentrator.

show 12tp Ins

Show L2TP network server status & statistics.

Syntax

show I2tp Ins [name STRING]

Parameters

name: Display more details for a specific L2TP network server.

show l2tpeth

Show L2TPv3 ethernet tunnel session status and statistics.

Syntax

show I2tpeth [name STRING]

Parameters

name: Display more details for a specific L2TPv3 ethernet tunnel session.

show location

Show location information.

Syntax

show location [geofence]

Parameters

geofence: Show geofence information.

show log

Show system log (low level).

Syntax

show log [number INTEGER] [filter < critical|warning|debug|info >]

Parameters

number: Number of lines to retrieve from log. (Minimum: 1, Default: 20)

filter: Filters for type of log message displayed (critical, warning, info, debug). Note, filters from the number of messages retrieved not the whole log (this can be very time consuming). If you require more messages of the filtered type, increase the number of messages retrieved using 'number'.

show manufacture

Show manufacturer information.

Syntax

show manufacture [verbose]

Parameters

verbose: Display more information (less concise, more detail).

show modbus-gateway

Show modbus gateway status & statistics.

Syntax

show modbus-gateway [verbose]

Parameters

verbose: Display more information (less concise, more detail).

show modem

Show modem status & statistics.

Syntax

show modem [name STRING] [imei STRING] [verbose]

Parameters

name: The configured name of the modem to execute this CLI command on.

imei: The IMEI of the modem to execute this CLI command on. verbose: Display more information (less concise, more detail).

show mqtt

Show MQTT broker information.

Syntax

show mqtt [verbose]

Parameters

verbose: Display more information (less concise, more detail).

show nemo

Show NEMO status and statistics.

Syntax

show nemo [name STRING]

Parameters

name: Display more details and configuration data for a specific NEMO instance.

show network

Show network interface status & statistics.

Syntax

show network [interface STRING] [all] [verbose]

Parameters

interface: Display more details and config data for a specific network interface.

all: Display all interfaces including disabled interfaces.

verbose: Display more information (less concise, more detail).

show ntp

Show NTP status & statistics.

Syntax 5 1

show ntp

Parameters

None

show openvpn client

Show OpenVPN client status & statistics.

Syntax

show openvpn client [name STRING] [all]

Parameters

name: Display more details and config data for a specific OpenVPN client.

all: Display all clients including disabled clients.

show openvpn server

Show OpenVPN server status & statistics.

Syntax

show openvpn server [name STRING] [all]

Parameters

name: Display more details and config data for a specific OpenVPN server.

all: Display all servers including disabled servers.

show route

Show IP routing information.

Syntax

show route [ipv4] [ipv6] [verbose]

Parameters

ipv4: Display IPv4 routes. ipv6: Display IPv6 routes.

verbose: Display more information (less concise, more detail).

show scep-client

Show SCEP client status and statistics.

Syntax

show scep-client [name STRING]

Parameters

name: Display more details and configuration data for a specific SCEP client instance.

show scripts

Show scheduled system scripts.

Syntax

show scripts

Parameters

None

show serial

Show serial status and statistics.

If the

Syntax

show serial [port STRING]

Parameters

port: Display more details and configuration data for a specific serial port.

show surelink interface

Show SureLink status & statistics for network interfaces.

Syntax

show surelink interface [name STRING] [all]

Parameters

name: The name of a specific network interface.

all: Show all network interfaces.

show surelink ipsec

Show SureLink status & statistics for IPsec tunnels.

Syntax

show surelink ipsec [tunnel STRING] [all]

Parameters

tunnel: The name of a specific IPsec tunnel.

all: Show all IPsec tunnels.

show surelink openvpn

Show SureLink status & statistics for OpenVPN clients.

Syntax

show surelink openvpn [client STRING] [all]

Parameters

client: The name of the OpenVPN client.

all: Show all OpenVPN clients.

show surelink state

Show SureLink state & fail counts for each network interfaces.

Syntax

show surelink state

Parameters

None

show system

Show system status & statistics.

Syntax

show system [verbose]

Parameters

verbose: Display more information (disk usage, etc).

show version

Show firmware version.

Syntax

show version [verbose]

Parameters

verbose: Display more information (build date).

show vrrp

Show VRRP status & statistics.

Syntax

show vrrp [name STRING] [all] [verbose]

Parameters

name: Display more details and config data for a specific VRRP instance.

all: Display all VRRP instances including disabled instances.

verbose: Display all VRRP status and statistics including disabled instances.

show wan-bonding

Show WAN Bonding information.

Syntax

show wan-bonding [verbose]

Parameters

verbose: Display more information directly from the WAN Bonding bndutil tool.

show web-filter

Show web filter status & statistics.

Syntax

show web-filter

Parameters

None

show wifi ap

Display details for Wi-Fi access points.

Syntax

show wifi ap [name STRING] [all]

Parameters

name: Display more details for a specific Wi-Fi access point.

all: Display all Wi-Fi access points including disabled Wi-Fi access points.

show wifi client

Display details for Wi-Fi client mode connections.

Syntax

show wifi client [name STRING] [all]

Parameters

name: Display more details for a specific Wi-Fi client mode connection.

all: Display all Wi-Fi clients including disabled Wi-Fi client mode connections.

show wifi-scanner

Show Wi-Fi scanner information.

wifi-scanner blocklist

Show transmitters that have been evaluated as static and not included in the output log.

Parameters

None

wifi-scanner candidates

Show transmitters detected during the most recent observation period but not evaluated as static.

Parameters

None

wifi-scanner log

Show output log for the last update interval.

Parameters

None

show wifi-scanner blocklist

Show transmitters that have been evaluated as static and not included in the output log.

Syntax

show wifi-scanner blocklist

Parameters

None

show wifi-scanner candidates

Show transmitters detected during the most recent observation period but not evaluated as static.

Syntax

show wifi-scanner candidates

Parameters

None

show wifi-scanner log

Show output log for the last update interval.

Syntax

show wifi-scanner log

Parameters

None

iperf

Perform a speedtest to a remote host using nuttop or iPerf. The system's primary default route will be used. The speed test will take approximately 30 seconds to complete.

Syntax

iperf <host> [size INTEGER] [mode <nuttcp|iperf>] [output <text|json>]

Parameters

host: The name or address of the remote speed test host/server.

size: The number of kilobytes sent in the speed test packets. (Minimum: 0, Default: 1000)

mode: The type of speed test protocol to run. (Default: nuttcp)

output: The format of output to display the speed test results as. (Default: text)

ssh

Use SSH protocol to log into a remote server.

Syntax

ssh <host> <user> [port INTEGER] [command STRING]

Parameters

host: The hostname or IP address of the remote host.

user: The username to use when connecting to the remote host.

port: The SSH port to use to connect to the remote host. (Minimum: 1, Maximum: 65535, Default: 22) command: The command that will be automatically executed once the SSH session to the remote host is established.

system backup



CAUTION! This CLI command is obsolete in DAL OS firmware 24.12.x and newer versions. Use the **system custom-default-config** command.

Save the device's configuration to a file. Archives are full backups including generated SSH keys and dynamic DHCP lease information. Command backups are a list of CLI commands required to build the device's configuration.

Syntax

system backup [type < custom-defaults|cli-config|archive >] [path STRING] [passphrase STRING] [remove < custom-defaults >]

Parameters

type: The type of backup file to create. Archives are full backups including generated SSH keys and dynamic DHCP lease information. CLI configuration backups are a list of CLI commands used to build the device's configuration. (Default: archive)

path: The file path to save the backup to. (Default: /var/log/)

passphrase: Encrypt the archive with a passphrase.

remove: Remove a backup file.

system cloud register

Register with Digi Remote Manager account.

Syntax

system cloud register <username> <password> [group STRING]

Parameters

username: Digi Remote Manager username. password: Digi Remote Manager password.

group: Group to add device in Digi Remote Manager.

system custom-default-config current

Install the current configuration as a custom-default-config.bin file and generates the SHA file.

Syntax

system custom-default-config current

Parameters

None

system custom-default-config file

Sets up a backup file as a custom-default-config.bin file and generates the SHA file.

Syntax

system custom-default-config file <path>

Parameters

path: Backup file to set up as a custom-default-config.bin file.

system custom-default-config remove

Removes the current custom-default-config.bin and SHA file.

Syntax

system custom-default-config remove

Parameters

None

system disable-cryptography

Erase the device's configuration and reboot into a limited mode with no cryptography available. The device's shell will be accessible over Telnet (port 23) at IP address 192.168.210.1. To return the device to normal operation, perform the configuration erase procedure with the device's ERASE button twice consecutively.

Syntax

system disable-cryptography

Parameters

None

system duplicate-firmware

Duplicate the running firmware to the alternate partition so that the device will always boot the same firmware version.

Syntax

system duplicate-firmware

Parameters

None

system factory-erase

Erase the device to restore to factory defaults. All configuration and automatically generated keys will be erased.

Syntax

system factory-erase

Parameters

None

system find-me

Find Me function to flash LEDs on this device to help users locate the unit.

Syntax

system find-me <state>

Parameters

state: Find Me control to flash cellular-related LEDs.

system firmware ota check

Query the Digi firmware server for the latest device firmware version.

Syntax

system firmware ota check

Parameters

None

system firmware ota list

Query the Digi firmware server for a list of device firmware versions.

Syntax

system firmware ota list

Parameters

None

system firmware ota update

Perform FOTA (firmware-over-the-air) update. The device will be updated to the latest firmware version unless the version argument is used to specify the firmware version.

Syntax

system firmware ota update [version STRING]

Parameters

version: Firmware version name.

system firmware update

Update the current firmware image. Upon reboot the new firmware will be run.

Syntax

system firmware update <file>

Parameters

file: Firmware filename and path.

system power ignition off_delay

Update the current ignition off delay without changing the configuration.

Syntax

system power ignition off_delay <off_delay>

Parameters

off_delay: Ignition power off delay. Format: number{h|m|s}, Max: 18h. (Minimum: 0s, Maximum: 18h)

system restore

Restore the device's configuration from a backup archive or CLI commands file.

Syntax

system restore <path> [passphrase STRING]

Parameters

path: The path to the backup file.

passphrase: Decrypt the archive with a passphrase.

system script start

Run a manual script. Scripts that are disabled, not a manual script, or already running can not be run.

Syntax

system script start <script>

Parameters

script: Script to start.

system script stop

Stop an active running script. Scripts scheduled to run again will still run again (disable a script to prevent it from running again).

Syntax

system script stop <script>

Parameters

script: Script to stop.

system serial clear

Gears the serial log.

Syntax

system serial clear <port>

Parameters

port: Serial port.

system serial copy

Copy serial settings from a port to a list of ports.

Syntax

system serial copy <source> <destination> [all] [label] [base] [serial] [session] [monitor] [service] [hangup] [autoconnect] [framing] [modem] [ppp_dialin] [udp] [logging]

Parameters

source: The serial port to copy settings from.

destination: A list of serial ports to copy settings to. Example: 1-4,8-10 or all.

all: Copy all serial port settings.

label: Copy label setting.

base: Copy enable, mode, sharing, and signal settings.

serial: Copy baudrate, data bits, parity, stop bits, and flow control settings.

session: Copy escape, history, exclusive, and idle timeout settings.

monitor: Copy signal change monitoring settings. service: Copy SSH, TCP, and Telnet service settings.

hangup: Copy hangup on signal loss settings. autoconnect: Copy autoconnect settings. framing: Copy data framing settings. modem: Copy modem emulator settings. ppp dialin: Copy PPP dial-in settings.

udp: Copy UDP serial settings. logging: Copy logging settings.

system serial ipport

Set sequential IP port numbers for a service on a list of ports.

Syntax 5 1

system serial ipport <destination> <service> <base>

Parameters

destination: A list of serial ports to set IP port numbers. Example: 1-4,8-10 or all.

service: The service type to set IP port numbers.

base: Set service IP port numbers to base port + serial port number. (Minimum: 1, Maximum: 65535)

system serial restart

Delete and restart the serial log.

Syntax

system serial restart <port>

Parameters

port: Serial port.

system serial save

Saves the current serial log to a file.

Syntax

system serial save <port> <path>

Parameters

port: Serial port.

path: The path and filename to save captured traffic to. If a relative path is provided,

/etc/config/serial will be used as the root directory for the path and file.

system serial show

Displays the serial log on the screen.

Syntax

system serial show <port>

Parameters

port: Serial port.

system storage format

Format a device to the selected filesystem type.

Syntax

system storage format <device> <fstype>

Parameters

device: Storage device type.

fstype: Format to this filesystem type.

system storage mount

Mount a partition on the device.

Syntax

system storage mount <device> [partition INTEGER]

Parameters

device: Storage device type.

partition: The partition number to mount. (Minimum: 1, Default: 1)

system storage show

Display information about external devices.

Syntax

system storage show

Parameters

None

system storage unmount

Unmount the device.

Syntax

system storage unmount <device>

Parameters

device: Storage device type.

system support-report

Save a support report to a file and include with support requests.

Syntax

 $system\ support\text{-report}\ [\textit{path}\ \underline{STRING}]$

Parameters

path: The file path to save the support report to. (Default: /var/log/)

system time set

Set the local date and time using the timezone set in the system.time.timezone config setting.

Syntax

system time set <datetime>

Parameters

datetime: The date in year-month-day hour:minute:second format (e.g "2021-09-26 12:24:48").

system time sync

Set the local time to the first enabled time source that returns valid time information.

Syntax

system time sync

Parameters

None

system time test

Test each enabled time source. This test will not affect the device's current local date and time.

Syntax

system time test

Parameters

None

tail

Tail a file to see its contents.

Syntax

tail <path> [timeout INTEGER] [filter STRING] [match STRING]

Parameters

path: The file to tail.

timeout: The amount of time in seconds to tail the file. (Default: 10)

filter: Only see output that contains this string.

match: Stop tail when this string is detected in output.

telnet

Use Telnet protocol to log into a remote server.

Syntax

telnet <host> [port INTEGER]

Parameters

host: The hostname or IP address of the remote host.

port: The telnet port to use to connect to the remote host. (Minimum: 1, Maximum: 65535, Default: 23)

traceroute

Print the route packets trace to network host.

Syntax

traceroute <host> [ipv6] [gateway STRING] [interface STRING] [first_ttl | INTEGER] [max_ttl | INTEGER] [port | INTEGER] [nqueries | INTEGER] [src_addr STRING] [tos | INTEGER] [waittime | INTEGER] [pausemsecs | INTEGER] [packetlen | INTEGER] [debug] [dontfragment] [icmp] [nomap] [bypass]

Parameters

host: The host that we wish to trace the route packets for.

ipv6: If a hostname is defined as the value of the 'host' parameter, use the hosts IPV6 address. gateway: Tells traceroute to add an IP source routing option to the outgoing packet that tells the network to route the packet through the specified gateway.

interface: Specifies the interface through which traceroute should send packets. By default, the interface is selected according to the routing table.

first_ttl: Specifies with what TTL to start. (Minimum: 1, Default: 1)

max_ttl: Specifies the maximum number of hops (max time-to-live value) traceroute will probe. (Minimum: 1, Default: 30)

port: Specifies the destination port base traceroute will use (the destination port number will be incremented by each probe). A value of -1 specifies that no specific port will be used. (Minimum: -1, Default: -1)

nqueries: Sets the number of probe packets per hop. A value of -1 indicated. (Minimum: 1, Default: 3)

src_addr: Chooses an alternative source address. Note that you must select the address of one of the interfaces. By default, the address of the outgoing interface is used.

tos: For IPv4, set the Type of Service (ToS) and Precedence value. Useful values are 16 (low delay) and 8 (high throughput). Note that in order to use some TOS precedence values, you have to be super user. For IPv6, set the Traffic Control value. A value of -1 specifies that no value will be used. (Minimum: -1, Default: -1)

waittime: Determines how long to wait for a response to a probe. (Minimum: 1, Default: 5)

pausemsecs: Minimal time interval between probes. (Minimum: 0, Default: 0)

packetlen: Total size of the probing packet. Default 60 bytes for IPv4 and 80 for Ipv6. A value of -1 specifies that the default value will be used. (Minimum: -1, Default: -1)

debug: Enable socket level debugging.

dontfragment: Do not fragment probe packets.

icmp: Use ICMP ECHO for probes.

nomap: Do not try to map IP addresses to host names when displaying them.

bypass: Bypass the normal routing tables and send directly to a host on an attached network.

vtysh

Opens the integrated shell for FRRouting (FRR), for more information on FRRouting and VTYSH, visit the FRRouting documentation at https://docs.frrouting.org/projects/dev-guide/en/latest/vtysh.html.

Syntax 5 1

vtysh

Parameters

None